



KOR•PAK
CORPORATION

www.KOR-PAK.com

P: 847-680-0999

sales@kor-pak.com

F: 847-680-0283

**CRANE AND MILL CONTROL
REPLACEMENT PARTS CATALOG**



KOR•PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts Catalog



Table of Contents

Cutler Hammer	1
EC&M / Square D	57
General Electric	161
Clark	175
Johnson	238
Magnetek / Mondel / P&H	246
Wagner	257
Westinghouse	264



Replacement Parts Catalog for

CUTLER HAMMER

Table of Contents

SAFETY LIMIT STOPS

P-50 Safety Limit Stop.....	3
P-100 Safety Limit Switch.....	4
P-100A Safety Limit Stop.....	5
P-200 Safety Limit Stop.....	6
P-200A Safety Limit Stop.....	7-8
P-375 Simplex Safety Limit Stop.....	9-10
P-375 Duplex Safety Limit Stop	11-12

BRAKES

No. 503 8" Type "M" Brake	13
No. 503 10" Type "M" Brake	14
No. 503 14" Type "M" Brake	15
No. 503 18" Type "M" Brake	16
No. 503 21" Type "M" Brake	17
No. 503 24" Type "M" Brake	18
No. 503 30" Type "M" Brake	19
No. 505 8" D-C Magnetic Brake.....	20
No. 505 10" D-C Magnetic Brake.....	21
No. 505 13" D-C Magnetic Brake.....	22
No. 505 16" D-C Magnetic Brake.....	23
No. 505 19" D-C Magnetic Brake.....	24
No. 505 23" D-C Magnetic Brake.....	25
No. 505 30" D-C Magnetic Brake.....	26

CONTACTORS

No. 542 300 Amp D-C Contactor	27
No. 545 600 Amp D-C Contactor	28
No. 560 100 Amp Spring Closed D-C Contactor	29
No. 562 300 Amp Spring Closed D-C Contactor	30
No. 565 600 Amp Spring Closed D-C Contactor	31
No. 570 100 Amp D-C Contactor.....	32
No. 572 300 Amp D-C Contactor.....	33
No. 575 600 Amp D-C Contactor.....	34
No. 580 100 Amp Double Pole D-C Contactor	35

If you are unable to locate the part you need, call our sales department and they can further assist you.

Cutler-Hammer is a Registered Trademark of Eaton Corp.



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts Catalog for

CUTLER HAMMER

Table of Contents

No. 582 300 Amp Double Pole D-C Contactor.....	36
No. 590 100 Amp Double Pole D-C Contactor.....	37
No. 912 50 Amp Single Pole D-C Contactor.....	38
No. 913 100 Amp Single Pole D-C Contactor	39
No. 914 150 Amp Single Pole D-C Contactor.....	40
No. 915 300 Amp Single Pole D-C Contactor	41
No. 916 600 Amp Single Pole D-C Contactor.....	42
No. 920 810 Amp Single Pole D-C Contactor.....	43
No. 921 810 Amp D-C Ltl Contactor.....	44
No. 923 100 Amp Spring Closed D-C Contactor.....	45
No. 924 150 Amp Spring Closed D-C Contactor	43
No. 925 300 Amp Spring Closed D-C Contactor.....	44
No. 926 600 Amp Spring Closed D-C Contactor	45
No. 932 50 Amp Single Pole D-C Ltl Contactor.....	46
No. 933 100 Amp D-C Ltl Contactor.....	47
No. 934 150 Amp Single Pole D-C Ltl Contactor	48
No. 935 300 Amp D-C Ltl Contactor.....	49
No. 936 600 Amp Single Pole D-C Ltl Contactor	50
No. 944 150 Amp Two-Pole D-C Ltl Contactor.....	51
No. 945 300 Amp Two-Pole D-C Ltl Contactor.....	52
No. 952 50 Amp Double Pole D-C Ltl Contactor	53
No. 954 150 Amp Double Pole D-C Ltl Contactor	54
No. 955 300 Amp Two-Pole D-C Ltl Contactor	55


If you are unable to locate the part you need, call our sales department and they can further assist you.
Cutler-Hammer is a Registered Trademark of Eaton Corp.



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-50 Safety Limit Stop

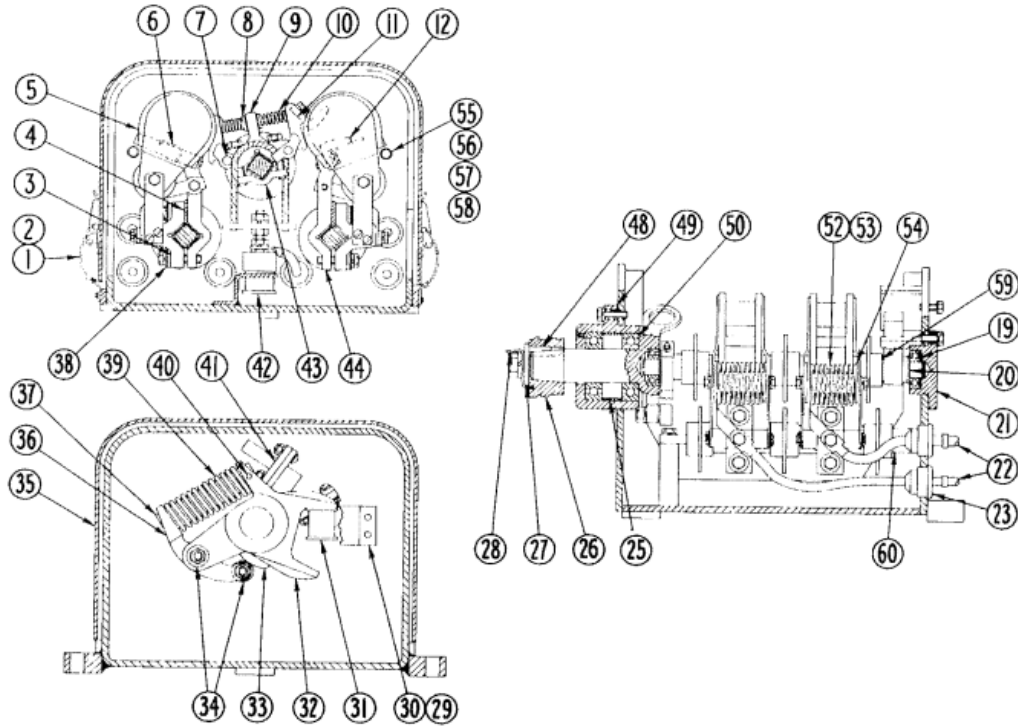

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
3	55-1492	Clamp	KP8881001	34	20-1031	Sealed Bearing	KP8881027
4	29-2957	Spacer	KP8881002	35	47-11557	Cover	KP8881028
5	62-474-5	Blowout Chute	KP8881003	36	24-4404	Lever	KP8881029
6	23-3311-3	Protecting Clip	KP5481037	37	29-1620-5	Spring Guide	KP8881030
7	13-898-9	Pin	KP8881005	38	56-1174-16	Insulating Bushing	KP8881031
7	13-3187-2	Spring Pin	KP8881006	39	69-2268	Spring	KP8881032
8	13-1445-5	Adjusting Pin	KP8881007	40	13-733-13	Pin	KP8881033
9	79-6141	Contact Support	KP8881008	41	18-1475	Stop Block	KP8881034
10	69-374	Spring	KP8881009	42	80-2405	Insulating Mounting Material	KP8881035
11	24-4406	Contact Lever	KP8881010	43	55-1488	Clamp	KP8881036
12	23-717	Contact	KP7081016	44	55-1491	Clamp	KP8881037
12	49-3408	Arc Guard	KP8881012	48	13-1403-2	Key	KP8881038
19	20-1065	Sealed Ball Bearing	KP8881013	49	20-1033	Bearing Cap	KP8881039
20	16-1870	Shim Washer	KP8881014	50	20-1034	Sealed Ball Bearing	KP8881040
21	20-1032	Bearing Cap	KP8881015	52	9-460-443	Blowout Coil	KP8881041
22	25-1472-2	Connector	KP8881016	53	56-1108-10	Insulator	KP8881042
23	29-612	Bushing	KP8881017	53	985-762	Core	KP8881043
25	29-1954-5	Spacer	KP8881018	54	16-840-11	Washer	KP8881044
26	14148H183A	Weight Lever Straight	KP8881019	55	61-439-2	Rod	KP8881045
27	16-403-15	Washer	KP8881020	56	56-1105-10	Insulator Tube	KP8881046
28	47-11575	Locking Plate	KP8881021	59	13-3830-2	Moveable Shaft w/Insulation	KP8881047
29	19-958-17	Pad	KP8881022	60	13-3830-3	Stationary Shaft w/Insulation	KP8881048
30	55-1490-2	Bumper Holder	KP8881023	65	6-207	Renewal Set of Contacts	KP8881049
31	18-1476	Bumper	KP8881024				
32	24-4407	Stop Lever	KP8881025				
33	54-5536	Cam	KP8881026				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-100 Safety Limit Switch


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
11	54-829	Cam	KP8981038	54	916-763Z	Lockwasher	KP9481028
12	29-1465	Roller	KP9481002	54	911-5606FZ	Contact Screw	KP7081018
13	11-789	Screw	KP9481003	55	916-763Z	Lockwasher	KP9481028
14	20-253	Needle Bearing	KP9481004	55	911-5605FZ	Blowout Coil Screw	KP9481053
15	11-788	Screw	KP9481005	56	79-1145	Contact Bracket	KP9481054
16	20-299	Needle Bearing	KP9481006	57	81-2405	Base	KP9481055
17	47-1673	Cover	KP9481007	58	15-330	Nut	KP9481056
18	24-1611	Cam Lever	KP9481008	59	17-1544	Mounting Block	KP9481057
19	29-1459-2	Tube	KP9081004	60	11-798	Screw	KP9481058
20	69-869	Spring	KP8981042	61	24-738	Stop Lever	KP9481059
21	13-840	Pin	KP8981048	62	29-1543-30	Bearing	KP9481060
22	11-796	Headless Set Screw	KP9481012	63	3455-9F1	Clamp	KP9481061
23	939-481	Pipe Plug	KP9481013	64	25-1473	Connector	KP9481062
24	24-1533	Stop Lever	KP9481014	65	17-5282	Frame	KP9481063
25	18-1083	Bumper	KP8981036	66	15-332	Spacer Nut	KP9481064
26	13-1403	Key	KP9481016	67	69-816	Flat Spring	KP9481065
27	24-1532	Weight Lever Straight	KP9481017	68	79-1153	Bracket	KP9481066
28	24-807	Contact Lever Left Hand	KP9481018	69	17-1531	End Plate	KP9481067
29	25-828	Connector	KP9481019	70	29-1543-29	Bronze Bearing	KP9481068
30	24-807-2	Contact Lever Right Hand	KP9481020	71	15-594-3	Nut	KP9481069
31	55-464	Bumper Holder	KP8981035	71	916-2042	Lockwasher	KP9481070
32	55-468	Clamp	KP9481022	72	47-1672	Locking Plate	KP9481071
33	911-5620Z	Screw	KP9481023	74	13-1392	Shaft	KP9481072
33	911-5622Z	Screw	KP9481024	75	13-1392-2	Shaft Insulation	KP9481073
33	11-723-6	Screw	KP9481025				
33	915-802Z	Nut	KP9481026				
33	916-801Z	Washer	KP8781008				
33	916-763Z	Lockwasher	KP9481028				
35	56-1079-3	Tube	KP8981031				
36	985-962Z	Core DC (solid)	KP9481030				
37	1016-1004	Washer	KP8981027				
38	962-1204Z	DC Pole Piece	KP9481032				
39	13-719	Pin	KP9481033				
40	2222-1485	Spacer	KP9481034				
41	933-201Z	Clip	KP9481035				
42	4973-2	Arc Shield Side Piece	KP9481036				
42	2222-386	Spacer	KP9481037				
43	956-511	Shaft	KP9481038				
44	956-334	Shaft	KP9481039				
45	15-663	Nut	KP9481040				
46	18-1157	Bumper	KP9481041				
47	914-611	Bumper Stud	KP9481042				
48	69-647	Spring	KP9481043				
49	916-1164Z	Shim Washer	KP5781017				
50	20-123	Contact Lever Support	KP9481045				
51	916-763Z	Lockwasher	KP9481028				
51	911-5606Z	Contact Screw	KP7281030				
52	1321-69	Contact Segment	KP9481048				
53	662-187	Blowout Chute DC	KP9481049				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-100 Safety Limit Switch

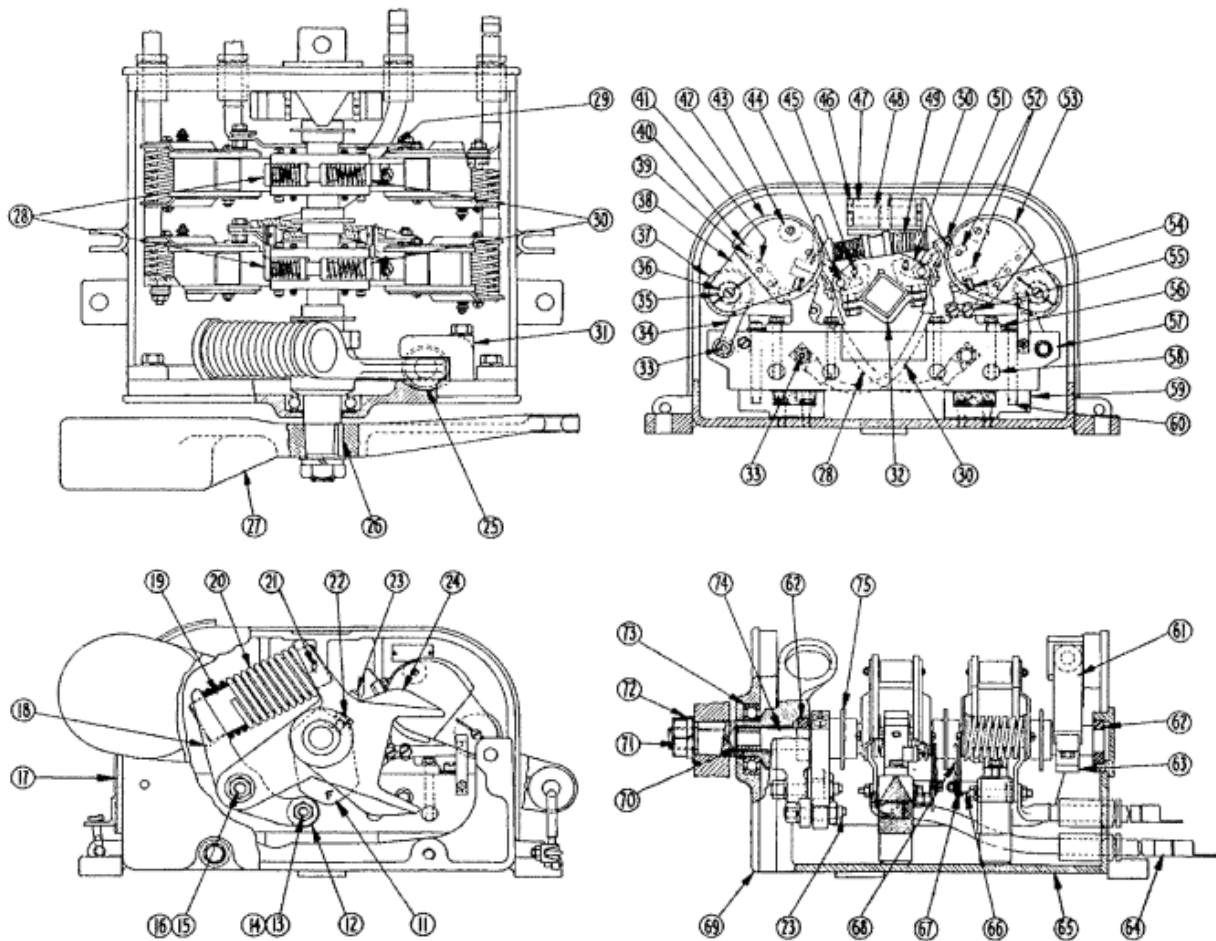




KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-100A Safety Limit Stop

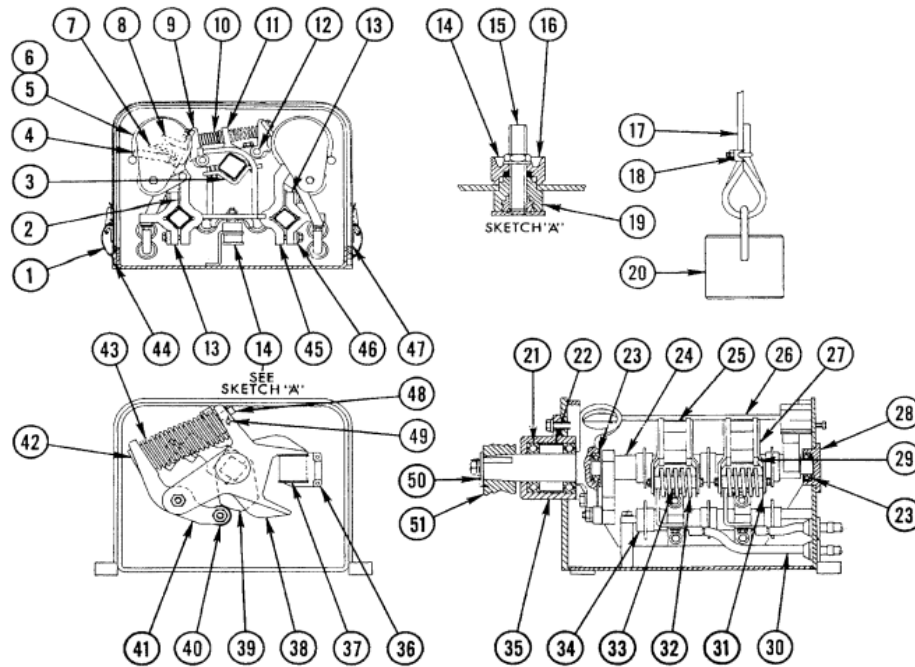

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	29-2957	Spacer	KP8881002	32	9-460-446	Blowout Coil 230 V D.C	KP8981028
3	55-1543	Clamp	KP8981002	32a	9-460-451	Blowout Coil 550 V D.C	KP8981029
4	56-3018	Spacer	KP8981003	33	18-1259-3	D.C Core	KP8981030
6	62-479	Blowout Complete	KP8981004	33a	56-1079-3	Tube	KP8981031
7	49-99	Arc Guard	KP5781011	33b	56-2672-12	Insulator	KP8981032
8	23-435	Contact	KP5581021	34	13-3883	Stationary Shaft Complete	KP8981033
8a	911-5646Z	Contact Mounting Screw	KP5581023	35	20-1047	Bearing Cap	KP8981034
8b	916-231	Lock washer	KP7181045	36	55-464	Bumper Holder	KP8981035
8c	49-99	Arc Guard	KP5781011	37	18-1083	Bumper	KP8981036
9	24-4446-2	Contact Lever	KP8981010	38	24-4443	Stop Lever	KP8981037
10	69-2347	Spring	KP8981011	39	54-829	Cam	KP8981038
11	55-1537	Support	KP8981012	40	20-1031-2	Bearing	KP8981039
12	13-441-5	Pin	KP8981013	41	24-4448	Cam Lever	KP8981040
13	55-1535	Clamp	KP8981014	42	29-1459-3	Tube	KP8981041
20	20-1051	Sealed Bearing	KP8981015	43	69-869	Spring	KP8981042
21	20-1052	Sealed Bearing	KP8981016	44	55-1397	Clamp	KP8981043
22	29-1954-6	Spacer	KP8981017	45	55-1536	Clamp	KP8981044
24	13-3883-2	Movable Shaft Complete	KP8981018	46	56-1174-17	Insulator	KP8981045
25	56-2910	Spacer	KP8981019	47	47-11740	Cover	KP8981046
26	69-2350	Spring	KP8981020	48	18-1491	Stop Block	KP8981047
26a	61-1394-3	Locking Rod Length 10.44	KP8981021	49	13-840	Pin	KP8981048
26b	61-1394-4	Locking Rod Length 13.50	KP8981022	50	16-645-21	Washer	KP8981049
27	62-483	Pole Piece D.C	KP8981023	50a	47-11734	Locking Plate	KP8981050
28	20-1048	Bearing Cap	KP8981024	51	14148H184A	Weight Lever Straight	KP8981051
28a	25-1472-3	Connector	KP8981025				
30	25-1472-3	Connector	KP8981025				
31	1016-1004	Washer	KP8981027				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-200 Safety Limit Stop


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
5	54-829	Cam	KP8981038	58	15-594-3	Nut	KP9481069
6	20-253	Needle Bearing	KP9481004	58	916-2042	Lockwasher	KP9481070
6	24-1611	Cam Lever	KP9481008	59	47-1672	Locking Plate	KP9481071
7	11-788	Screw	KP9481005	60	17-5625	End Plate	KP9381057
8	20-299	Needle Bearing	KP9481006	61	18-548	Post	KP9381058
9	18-1187	Stop Block	KP9381006	62	69-2350	Spring	KP8981020
10	47-1994	Cover	KP9381007	63	13-3187-5	Roll Pin	KP9381060
11	24-3607	Weight Lever (straight)	KP9381008	64	13-1466	Shaft	KP9381061
12	18-1198	Stop Block	KP9381009	65	13-1466-3	Shaft Insulation	KP9381062
13	18-1196	Stop Post	KP9381010	66	29-550	Insulator Tube	KP9381063
14	29-1459-2	Tube	KP9081004	69	829-505	Spacer	KP9381064
15	69-1832	Spring	KP9081071	70	61-439	Rod	KP9381065
16	13-840	Pin	KP8981048	71	16-687-6	Insulating Washer	KP9081048
17	13-3186-1	Roll Pin	KP9381014	72	29-1543-30	Bearing	KP9481060
18	11-796	Headless Set Screw	KP9481012	73	25-1474	Connector	KP9381068
19	24-1533	Stop Lever	KP9481014	75	11-789	Screw	KP9481003
20	55-464	Mubper Holder	KP8981035	77	29-1465	Roller	KP9481002
21	18-1083	Bumper	KP8981036	78	54-3538-2	Weight	KP9381071
22	13-1403	Key	KP9481016				
23	20-755	Seal Bearing	KP9381020				
24	911-4872Z	Screw	KP9381021				
25	25-861	Connector	KP9381022				
26	79-4304	Contact Bracket	KP9381023				
27	55-1609	Clamp	KP9381024				
28	815-1128	Nut	KP9381025				
28	1314-845	Stud for 1.5" Panel	KP9381026				
28	911-5912Z	Screw	KP9381027				
28	816-1005	Washer	KP9381028				
29	17-1544	Mounting Block	KP9481057				
30	19-359	Shim	KP9381030				
31	911-5890z	Screw	KP5881009				
32	79-4305	Stop Bracket	KP9381032				
33	29-2607-9	Core	KP9081047				
34	9-460-232	Blowout Coil	KP9381034				
35	56-1111-13	Insulating Tube	KP9081045				
36	916-199	Lockwasher	KP3005021				
36	911-5892Z	Contact Screw	KP0803029				
37	3462-183F1	Pole Piece	KP9081040				
38	62-109-14	Blowout Complete	KP9081009				
39	73-1268	Arc Guard	KP5881012				
40	1321-829	Contact Segment	KP9381041				
41	13-3962	Adjusting Pin	KP9081016				
42	13-3961	Shaft	KP5881017				
43	3479-236F1	Contact Support	KP9381044				
44	69-1831	Spring	KP9381045				
45	24-1615	Contact Lever with Connector	KP9381046				
47	55-173	Protecting Clip	KP9381047				
48	29-1537	Spacer	KP9381048				
49	4973-3	Arc Shield Side Piece	KP9081039				
50	813-159	Pin	KP9081018				
51	15-330-2	Nut	KP9381051				
52	81-2513	Base	KP9381052				
57	29-1543-29	Bronze Bearing	KP9481068				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-200 Safety Limit Stop

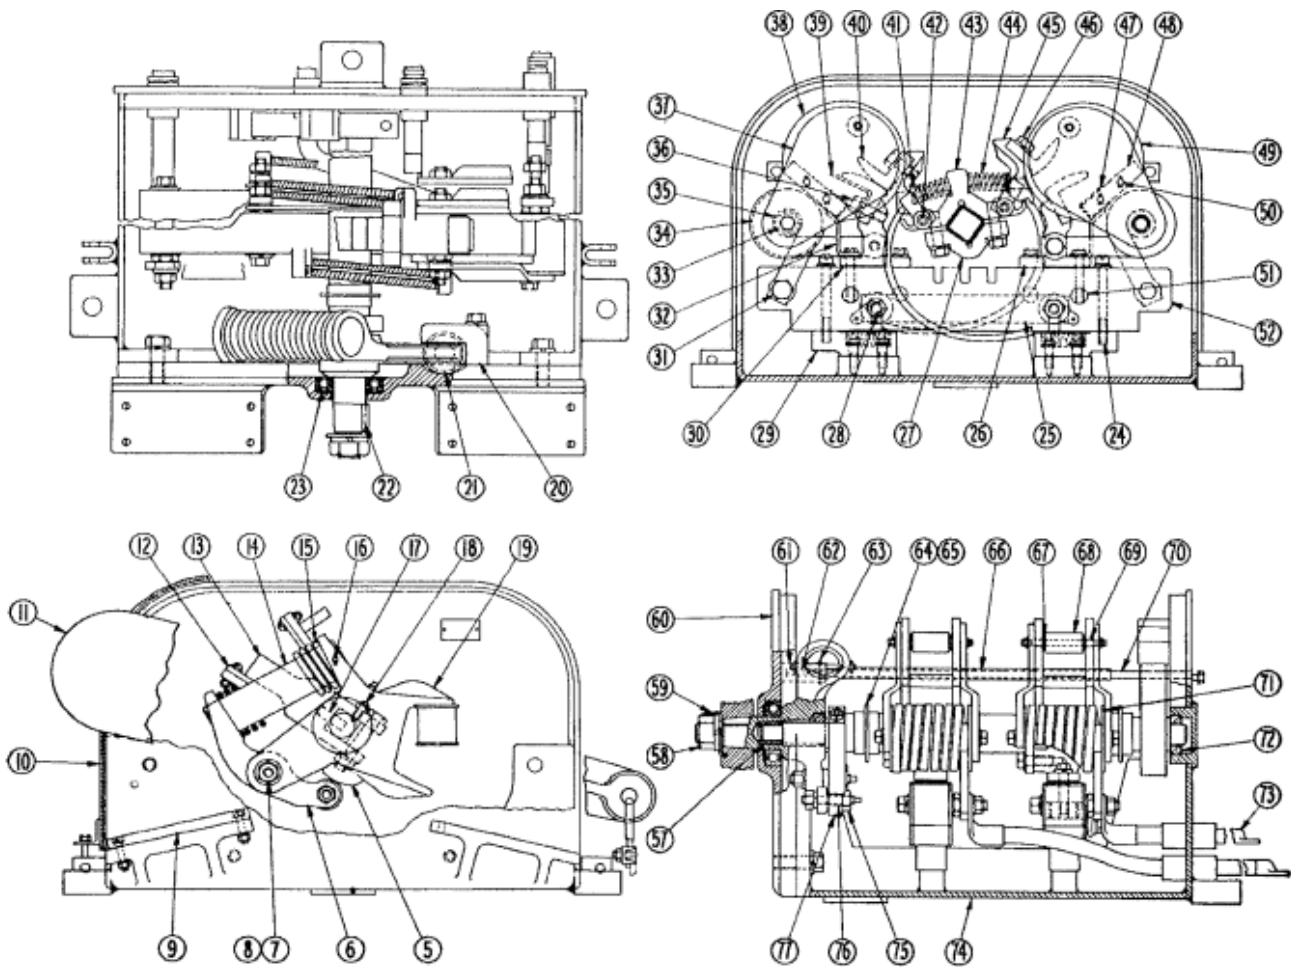




KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:

P-200A Safety Limit Stop

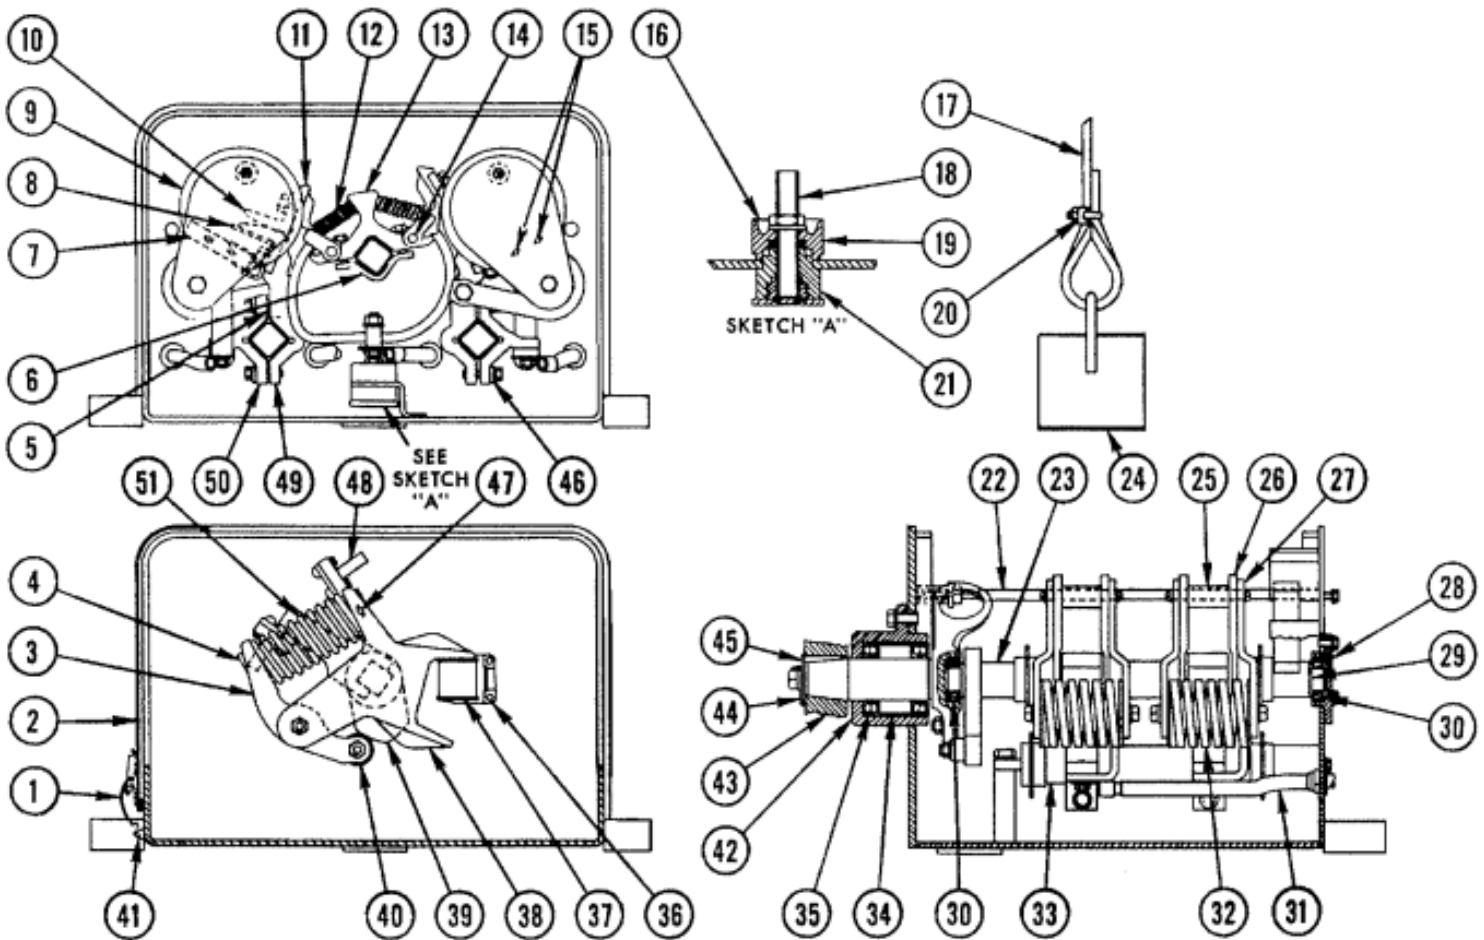



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:

P-200A Safety Limit Stop


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	55-1396	Clamp	KP9081001	32	9-460-445	Blowout Coil, AC	KP9081049
2	47-11733	Cover	KP9081002	33	13-3879-7	Insulation Assembly	KP9081050
3	24-4448	Cam Lever	KP8981040	33	13-3879	Stationary Shaft Complete	KP9081051
4	29-1459-2	Tube	KP9081004	34	29-1954-6	Spacer	KP8981017
5	29-2957-2	Spacer	KP9081005	35	20-1052	Sealed Bearing	KP8981016
6	55-1539	Clamp	KP9081006	36	55-464	Bumper Holder	KP8981035
7	56-3018-2	Spacer	KP9081007	37	18-1398-2	Bumper	KP9081055
8	73-1241	Arc Guard	KP9081008	38	24-4443	Stop Lever	KP8981037
9	62-109-14	Blowout complete	KP9081009	39	54-6121	Cam	KP9081057
10	23-1225	Contact	KP5881014	40	20-1031-2	Bearing	KP8981039
10	916-199	Lock washer	KP3005021	41	55-1397	Clamp	KP8981043
10	911-5890Z	Screw	KP5881009	42	20-1047	Bearing Cap	KP8981034
11	24-4441-2	Contact Lever	KP9081013	43	14148H172A	Weight Lever, LH	KP9081061
12	69-721	Spring	KP9081014	43	14148H170A	Weight Lever, Straight	KP9081062
13	79-6284	Support	KP9081015	43	14148H171A	Weight Lever, RH	KP9081063
13	13-3962	Adjusting Pin	KP9081016	44	47-11734	Locking Plate	KP8981051
14	13-441-4	Shaft	KP9081017	45	16-645-21	Washer	KP8981049
15	813-159	Pin	KP9081018	46	56-1174-17	Insulator	KP8981045
16	80-2464	Insulated Mounting complete	KP9081019	47	13-840	Pin	KP8981048
17	86-1456	Hoist Rope	KP9081020	48	18-1491	Stop Block	KP8981047
18	14-403-30	Stud	KP9081021	49	55-1533	Clamp	KP9081069
19	32-239-20	O Ring	KP9081022	50	55-1534	Clamp	KP9081070
19	56-2736	Molded Insulator	KP9081023	51	69-1832	Spring	KP9081071
20	999-119	Elliptical Clip	KP9081024				
20	3433-3	Crosby Clip	KP9081025				
21	56-2759	Insulator	KP9081026				
22	61-1394	Locking Rod Complete	KP9081027				
22	69-2350	Spring	KP8981020				
22	13-3187-12	Spring Pin	KP9081029				
23	13-3879-8	Insulation assembly (moveable)	KP9081030				
23	13-131-3	Key	KP9081031				
23	13-3879-2	Movable Shaft Complete	KP9081032				
24	14148H169A	Weight	KP9081033				
25	56-1288-9	Spacer	KP9081034				
25	916-682Z	Lock washer	KP6881005				
25	814-1685	Stud	KP9081036				
25	1216-4	Washer	KP9081037				
25	915-24F3	Nut	KP9081038				
26	4973-3	Arc Shield	KP9081039				
27	3462-183F1	Pole Piece	KP9081040				
28	20-1048	Bearing Cap	KP8981024				
29	16-357	Shim Washer	KP9081042				
30	20-1051	Sealed Bearing	KP8981015				
31	25-2006	Connector	KP9081044				
32	56-1111-13	Insulating Tube	KP9081045				
32	9-460-450	Blowout Coil, DC	KP9081046				
32	29-2607-9	Core	KP9081047				
32	16-687-6	Insulating Washer	KP9081048				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-375 Simplex Safety Limit Stop

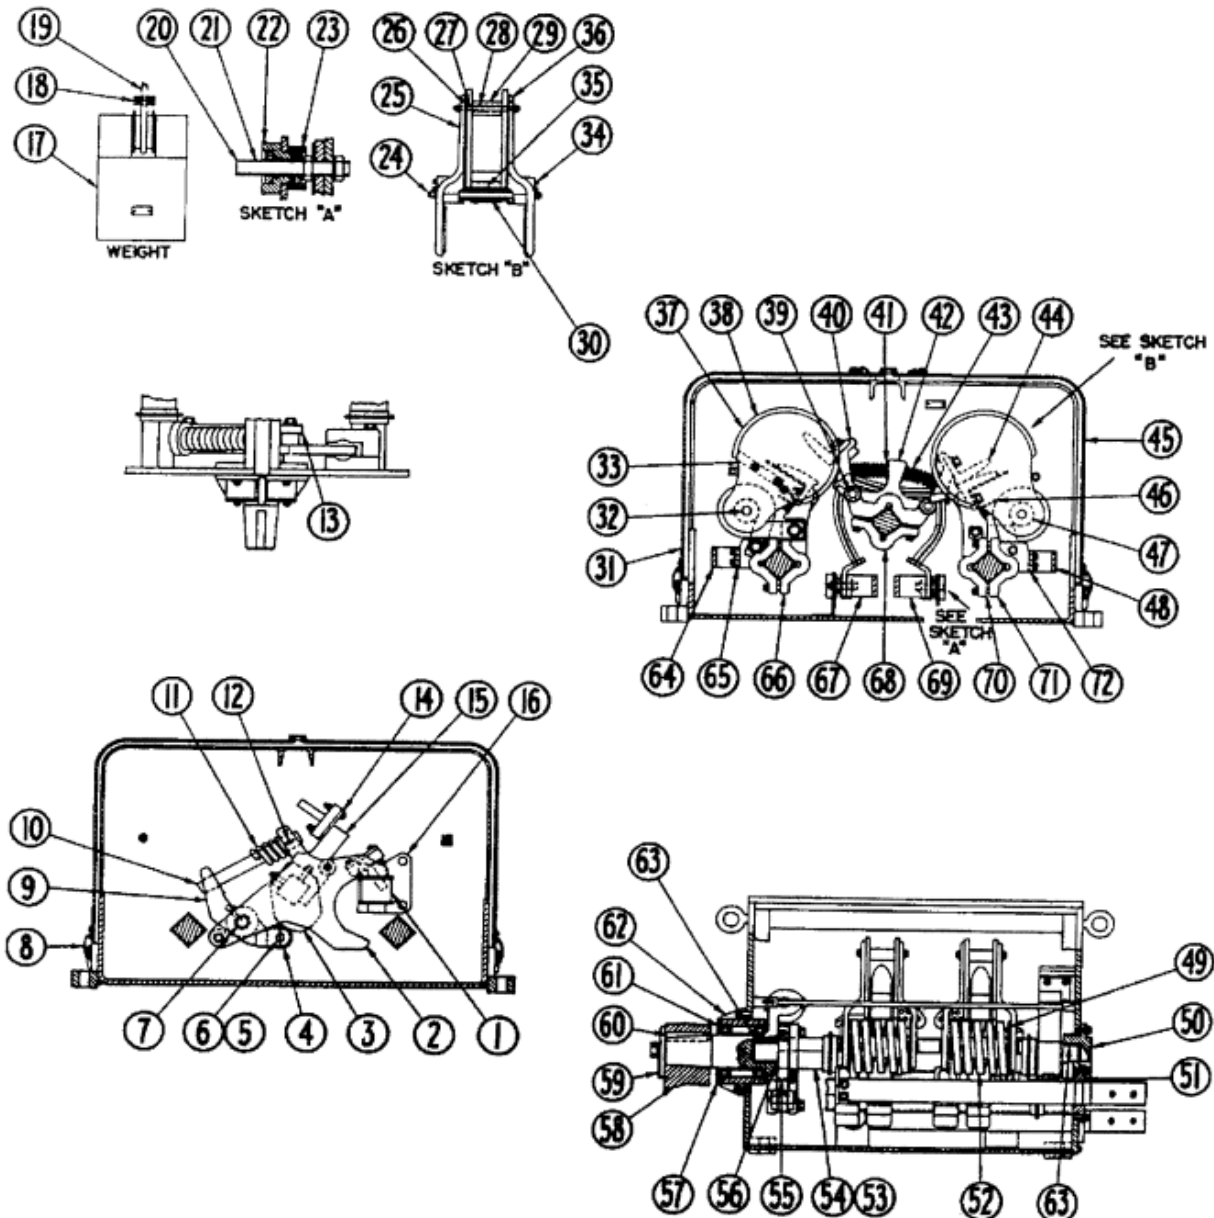



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:

P-375 Simplex Safety Limit Stop


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	18-1398	Bumper	KP9181014	45	47-11059-4	Cover (LH)	KP9281049
2	24-4170	Stop Lever	KP9181007	46	79-4180-23	Bracket	KP9281050
4	20-1011	Roller Bearing	KP9181010	47	29-368	Tube	KP9181035
5	13-3187-6	156 Spring Pin	KP9181012	48	25-1814	Bus Bar	KP9281052
6	13-197-5	Pin	KP9181011	49	16-168	Washer	KP9181036
7	13-3663	Pin	KP9181001	50	20-961	Bearing Cap	KP9181037
8	55-1396	Clamp	KP9081001	51	56-2741	Bus Insulator	KP9181040
9	24-4173	Cam Lever	KP9181005	52	9-460-435	Blowout Coil	KP9181033
10	29-1620-4	Spacer	KP9181004	55	20-1027	Sealed Bearing	KP9181043
11	69-2199	Compression Spring	KP9281010	56	16-807-31	Washer	KP9181044
12	13-1017-10	Pin	KP9181008	57	16-1294-8	Steel Washer	KP9181045
14	18-1404	Stop Block	KP9181009	58	24-4317	Weight Lever, Straight	KP9281060
15	13-3656	Movable Assembly Shaft	KP9281013	58a	24-4317-2	Weight Lever, LH	KP9281061
16	55-1371	Bumper Holder	KP9181015	58a	24-4317-3	Weight Lever, RH	KP9281062
17	54-5339	Weight	KP9281015	59	47-11313	Locking Plate	KP9281063
18	55-1448	Wire Rope Clamp	KP9181016	60	13-1412	Key	KP9281064
19	86-2205	Wire Rope (10 Feet Long)	KP9181017	61	20-964	Ball Bearing	KP9181079
20	99-468	Insulating Mounting Material	KP9181074	62	20-960	Bearing Cap	KP9181078
21	14-512-13	Stud	KP9181022	63	20-1027-2	Sealed Bearing	KP9181039
22	56-2736-2	Molded Insulator	KP9181019	64	25-1814-2	Bus Bar	KP9281068
22a	32-239-20	O Ring	KP9081022	65	25-1819-2	Bus Bar	KP9181061
23	56-2978	Insulator	KP9181021	66	55-1373	Contact Clamp	KP9281070
24	14-117	Stud	KP9181023	67	25-1818-2	Bus Bar	KP9281071
25	62-29	Pole Piece	KP9181025	68	55-1375	Clamp	KP9181064
26	16-414	Spring Washer	KP9181026	69	25-1818	Bus Bar	KP9281073
27	29-697	Spacer	KP9181029	70	55-1374	Left Side Clamp	KP9181076
28	29-698	Tube	KP9181028	71	55-1372	Right Side Clamp	KP9181075
29	29-699	Spacer	KP9181027	72	25-1819	Bus Bar	KP9181049
30	29-695	Tube	KP9181024				
31	47-11059-2	Cover	KP9281030				
32	51-84	Core	KP9181034				
33	29-219	Spacer	KP9181062				
34	13-285	Pin	KP9181063				
35	29-696	Spacer	KP9181032				
36	62-28	Pole Piece	KP9181031				
37	62-450	Arc Shield, Complete	KP9181066				
38	73-125	Arc Shield	KP9181065				
39	13-418	Pin	KP9281038				
40	24-4172	Contact Lever	KP9181067				
41	13-1445-4	Pivot Pin	KP9181070				
42	79-5666	Support	KP9181069				
43	69-774	Compression Spring	KP9181071				
44	23-713	Contact	KP9181072				
44a	49-367	Arc Guard	KP9181073				
44a	911-6047Z	Contact Screw	KP9281045				
44a	916-1602Z	Lock washer	KP9281046				
45	47-11059	Cover	KP9281047				
45	47-11059-3	Cover (RH)	KP9281048				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: P-375 Duplex Safety Limit Stop

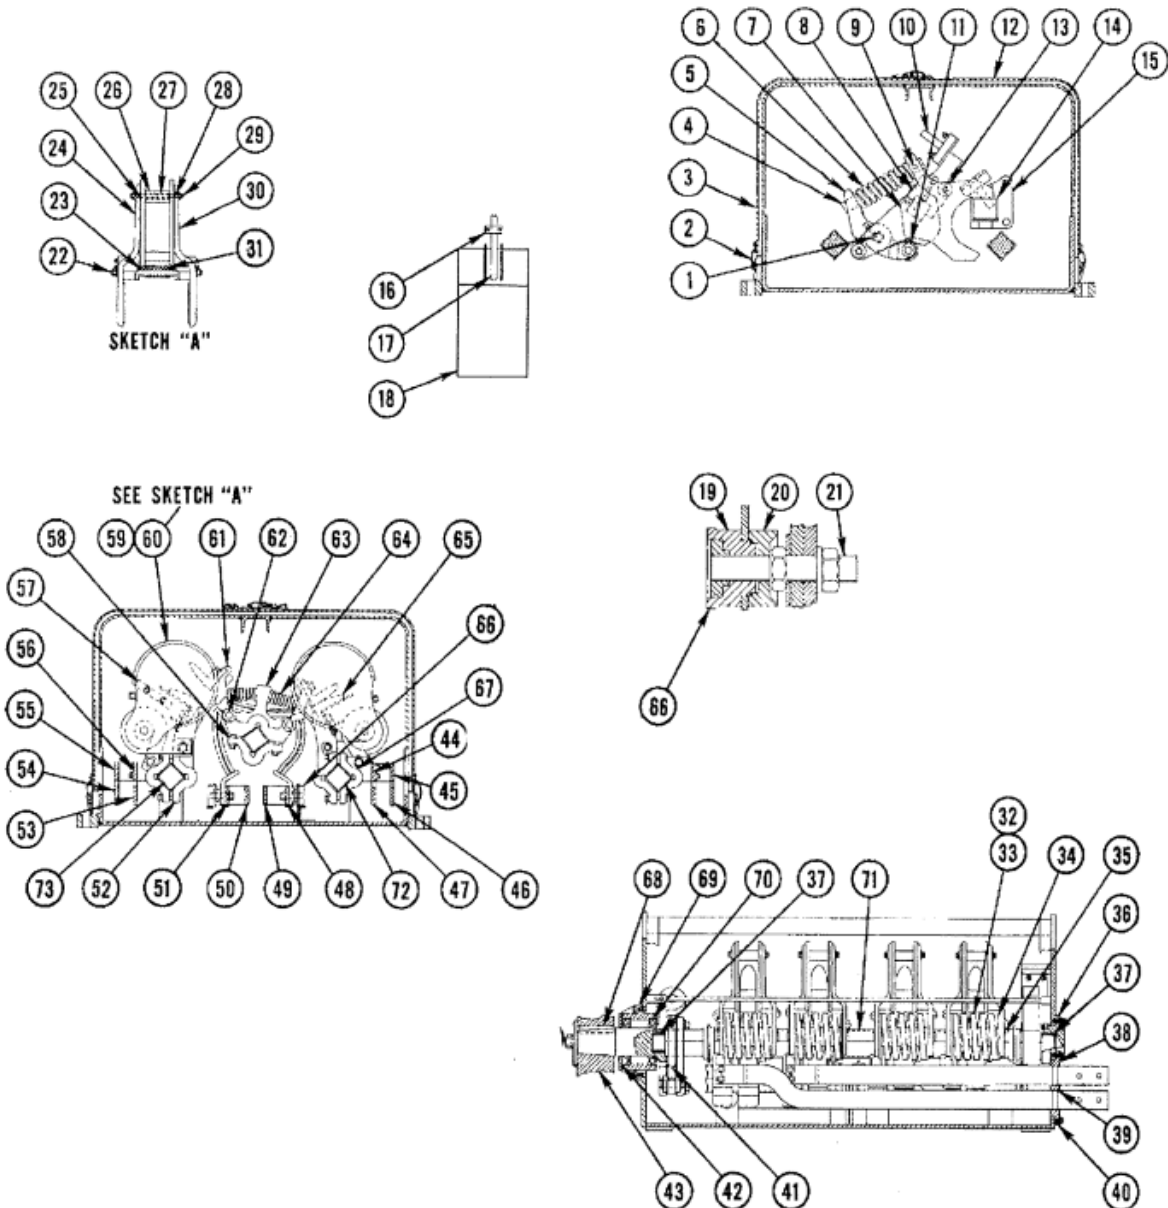



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:

P-375 Duplex Safety Limit Stop


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	13-3663	Pin	KP9181001	44	25-1819	Bus Bar	KP9181049
2	55-1396	Clamp	KP9081001	45	25-1814-3	Bus Bar	KP9181050
3	47-11301-4	Cover	KP9181003	46	25-1907	Bus Bar	KP9181051
4	29-1620-4	Spacer	KP9181004	47	25-1906	Bus Bar	KP9181052
5	24-4173	Cam Lever	KP9181005	48	25-1911	Bus Bar	KP9181053
6	69-2236	Compression Spring	KP9181006	49	25-1818-3	Bus Bar	KP9181054
8	24-4170	Stop Lever	KP9181007	50	25-1818-4	Bus Bar	KP9181055
9	13-1017-10	Pin	KP9181008	51	25-1911-2	Bus Bar	KP9181056
10	18-1404	Stop Block	KP9181009	52	55-1373	Contact Clamp	KP9281070
11	20-1011	Roller Bearing	KP9181010	53	25-1906-2	Bus Bar	KP9181058
11a	13-197-5	Pin	KP9181011	54	25-1817	Bus Bar	KP9181059
11b	13-3187-6	156 Spring Pin	KP9181012	55	25-1814-4	Bus Bar	KP9181060
12	47-11301-3	Cover	KP9181013	56	25-1819-2	Bus Bar	KP9181061
14	18-1398	Bumper	KP9181014	57	29-219	Spacer	KP9181062
15	55-1371	Bumper Holder	KP9181015	57a	13-285	Pin	KP9181063
16	55-1448	Wire Rope Clamp	KP9181016	58	55-1375	Clamp	KP9181064
17	86-2205	Wire Rope (10 Feet Long)	KP9181017	59	73-125	Arc Shield	KP9181065
18	14148H139A	Weight	KP9181018	60	62-450	Arc Shield, Complete	KP9181066
19	56-2736-2	Molded Insulator	KP9181019	61	24-4172	Contact Lever	KP9181067
19a	32-239-20	O Ring	KP9081022	62	13-4928-2	Shaft	KP9181068
20	56-2978	Insulator	KP9181021	63	79-5666	Support	KP9181069
21	14-512-13	Stud	KP9181022	63a	13-1445-4	Pivot Pin	KP9181070
22	14-117	Stud	KP9181023	64	69-774	Compression Spring	KP9181071
23	29-695	Tube	KP9181024	65	23-713	Contact	KP9181072
24	62-29	Pole Piece	KP9181025	65a	49-367	Arc Guard	KP9181073
25	16-414	Spring Washer	KP9181026	66	99-468	Insulating Mounting Material	KP9181074
26	29-699	Spacer	KP9181027	67a	55-1372	Right Side Clamp	KP9181075
27	29-698	Tube	KP9181028	67b	55-1374	Left Side Clamp	KP9181076
28	29-697	Spacer	KP9181029	68	13-1412	Key	KP9181077
29	814-492	Stud	KP9181030	69	20-960	Bearing Cap	KP9181078
30	62-28	Pole Piece	KP9181031	70	20-964	Ball Bearing	KP9181079
31	29-696	Spacer	KP9181032	71	13-3656-2	Movable Shaft Assembly	KP9181080
32	9-460-435	Blowout Coil	KP9181033	71a	99-638-3	Shaft Insulation Repair Kit	KP9181081
33	51-84	Core	KP9181034	72	99-638-5	Shaft Insulation Repair Kit	KP9181082
33a	29-368	Tube	KP9181035	73	99-638-4	Shaft Insulation Repair Kit	KP9181083
34	16-168	Washer	KP9181036	78	6-207-4	Contact Set	KP9181084
36	20-961	Bearing Cap	KP9181037				
36a	19-1307	Shim	KP9181038				
37	20-1027-2	Sealed Bearing	KP9181039				
38	56-2741	Bus Insulator	KP9181040				
39	56-2745	Bus Insulator	KP9181041				
40	56-2740	Bus Insulator	KP9181042				
41	20-1027	Sealed Bearing	KP9181043				
41a	16-807-3I	Washer	KP9181044				
42	16-1294-8	Steel Washer	KP9181045				
43	14148H140A	Weight Lever, Straight	KP9181046				
43a	14148H142A	Weight Lever, Left Hand	KP9181047				
43b	14148H141A	Weight Lever, Right Hand	KP9181048				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: 8" No. 503 Type "M" Brake

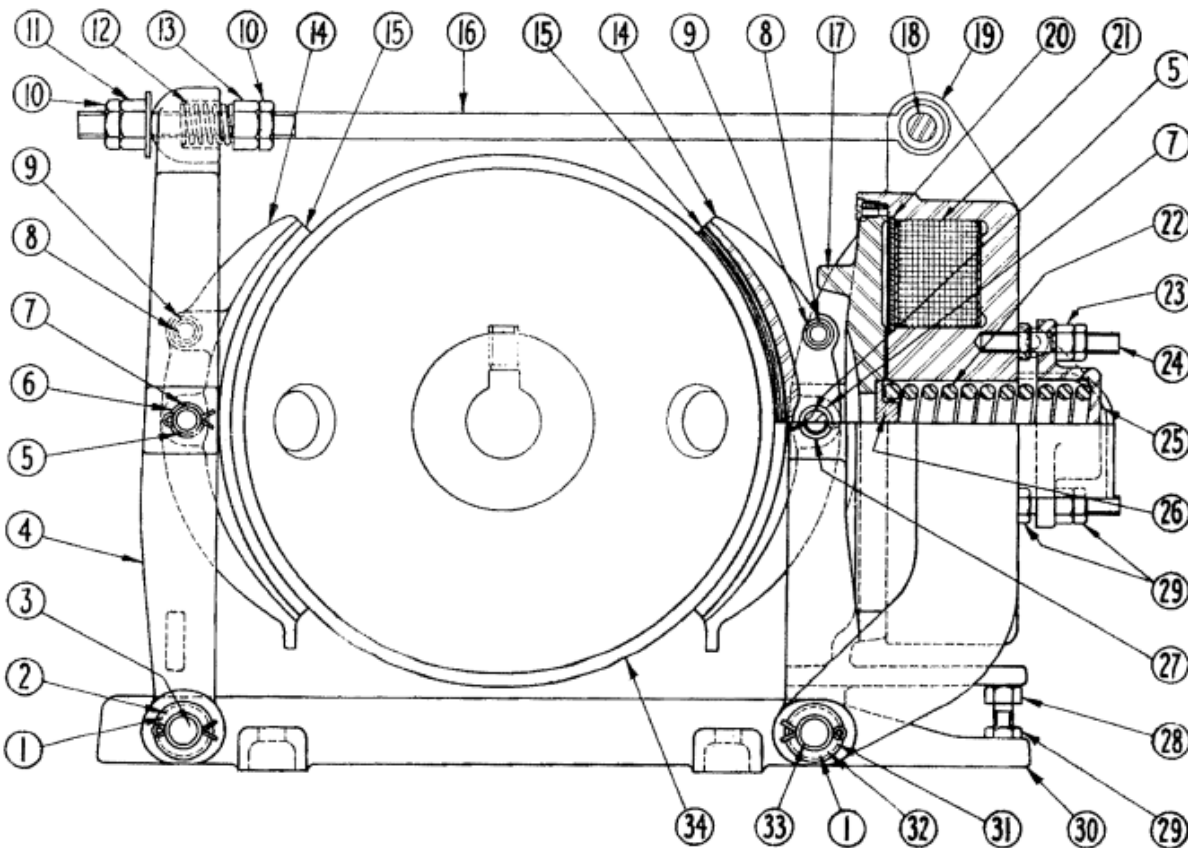


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	29-468	Base Bushing	KP0803001	18	913-855	Pin	KP0803019
2	29-1890-6	Shoe Lever Bushings	KP0803002	20	630-54	String Babitt	KP0803020
3	913-854	Pin	KP0803003	20	873-6	Coil Shield	KP0803021
4	624-488	Shoe Lever w/Bushings	KP0803004	21		Magnet Coil	
5	913-856	Pin	KP0803005	22	69-489	Main Spring	KP0803023
6	29-466	Shoe Lever Bushings	KP0803006	23	915-1403Z	Nut	KP0803024
7	29-466	Shoe Lever Bushings	KP0803006	24	914-624	Stud	KP0803025
8	51-210	Plug for Brake Shoe	KP0803008	25	3679-88F1	Spring Support	KP0803026
9	969-26J	Spring in Brake Shoe	KP0803009	26	879-43	Spring Gland	KP0803027
10	915-1443Z	Nut	KP0803010	27	29-466	Shoe Lever Bushings	KP0803006
11	15-152	Nut	KP0803011	28	911-5892Z	Contact Screw	KP0803029
12	969-461	Spring for Pull Rod	KP0803012	29	915-1401Z	Nut	KP0803030
13	915-1442Z	Nut	KP0803013	30	17-709-2	Base	KP0803031
14	48-320	Brake Shoes w/Lining	KP0803014	31	29-1890-6	Shoe Lever Bushings	KP0803002
15	48-338-5	Brake Lining	KP0803015	32	29-1890-6	Shoe Lever Bushings	KP0803002
15	1312-441	Rivets	KP0803016	33	913-853	Pin	KP0803034
16	61-135-3	Pull Rod	KP0803017				
17	624-431	Armature Lever w/Bushings	KP0803018				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: 10" No. 503 Type "M" Brake

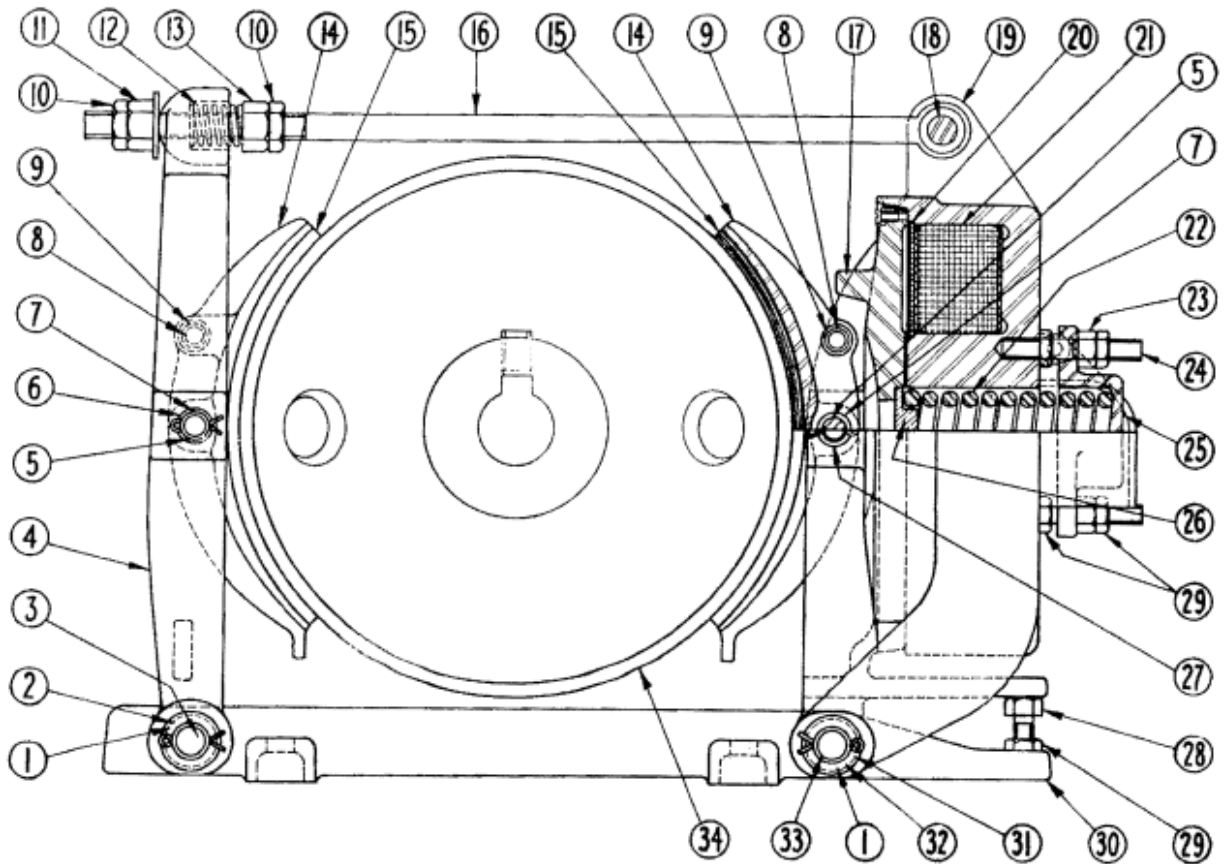


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	29-468	Base Bushing	KP0803001	18	13-506-9	Pin (For Pull Rod)	KP0805010
2	929-759	Shoe Lever Bushing	KP1003002	20	873-8	Coil Shield	KP1003019
3	913-862	Pin (For Shoe Lever)	KP1003003	20	630-54	String Babitt	KP0803020
4	624-489	Shoe Lever With Bushings	KP1003004	21		Magnet Coil	
5	913-863	Pin (For Brake Shoe)	KP1003005	22	69-490	Main Spring	KP1003022
6	29-467	Armature Bushings Only	KP1003006	23	915-1403Z	Nut	KP0803024
8	51-211	Plug For Aligning Brake Shoe	KP1003007	24	914-624	Stud	KP0803025
9	969-75J	Spring in Brake Shoe	KP1003008	25	3679-89F1	Spring Support	KP1003025
10	915-1443Z	Nut	KP0803010	26	879-3	Spring Gland	KP1003026
11	15-152	Nut	KP0803011	27	29-467	Armature Bushings Only	KP1003006
12	69-2806	Spring For Pull Rod	KP1003011	28	911-444	Adjusting Screw	KP1003028
13	915-1442Z	Nut	KP0803013	29	915-1401Z	Nut	KP0803030
14	623-134	Brake Shoe w/Lining Assembled	KP1003013	30	17-710-2	Base	KP1003030
15	1312-441	Rivets	KP0803016	31	929-759	Shoe Lever Bushing	KP1003002
15	48-338-6	Brake Lining	KP1003015	32	929-760	Armature Bushings (Base)	KP1003032
16	61-136-3	Pull Rod	KP1003016	33	913-861	Pin (For Armature)	KP1003033
17	624-441	Armature Lever With Bushings	KP1003017	*	19-972-16	Stop Plate	KP1003034



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

xReplacement Parts for:
14" No. 503 Type "M" Brake

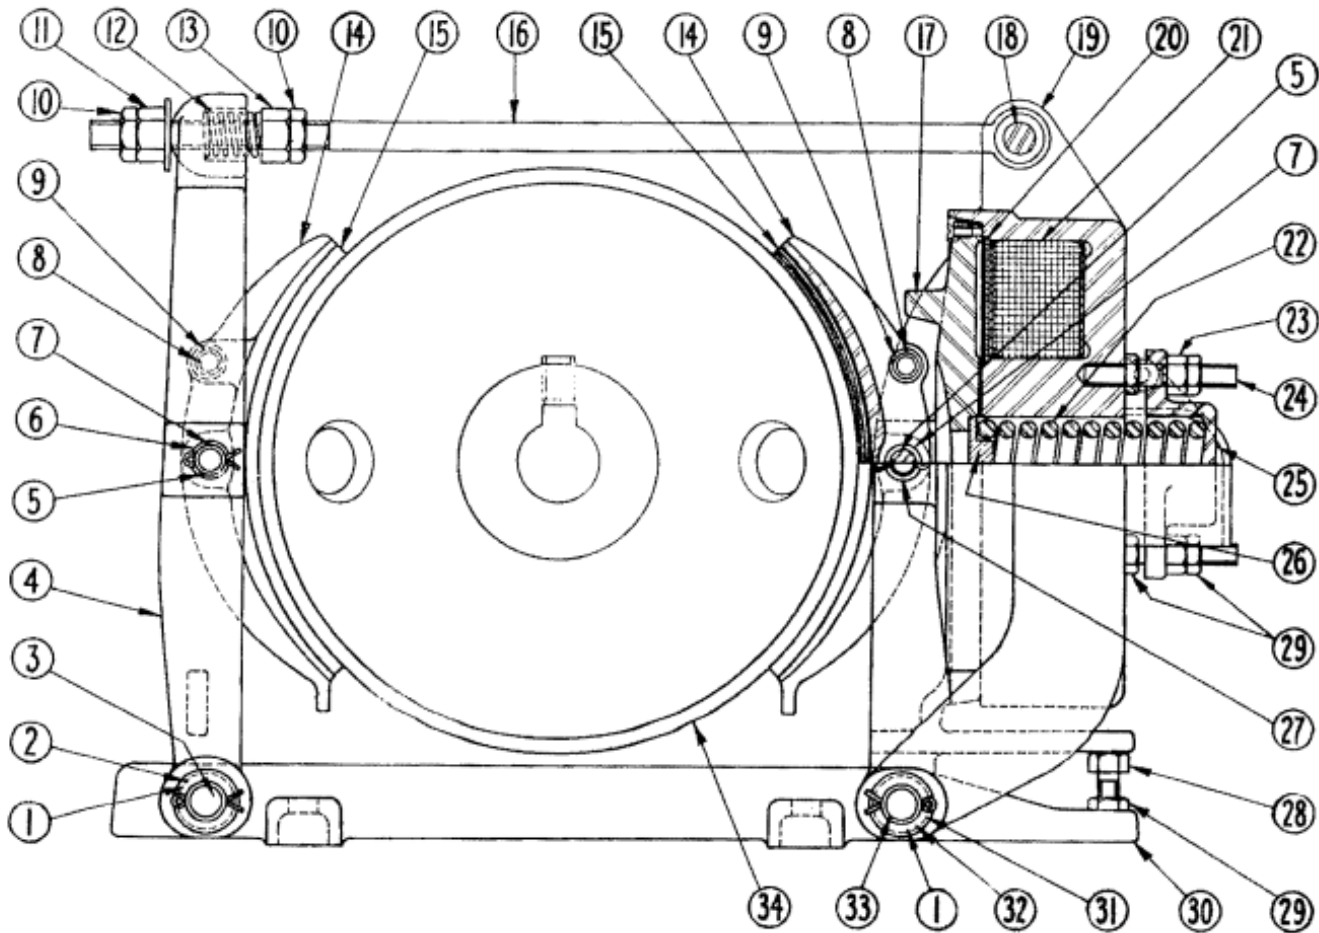


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	29-470	Base Bushing	KP1403001	20	873-7	Coil Shield	KP1403018
2	929-789	Bushings	KP1403002	21		Magnet Coil	
3	913-869	Pin (For Shoe Lever)	KP1403003	22	69-491	Main Spring	KP1403020
4	624-490	Shoe Lever With Bushings	KP1403004	23	915-1442Z	Nut	KP0803013
5	913-870	Pin (For Brake Shoe)	KP1403005	24	914-599	Stud	KP1403022
6	29-469	Bushings	KP1403006	25	3679-90F1	Spring Support	KP1403023
8	51-212	Plug For Aligning Brake Shoe	KP1403007	26	49-2286-2	Spring Gland	KP1403024
9	969-265	Spring In Brake Shoe	KP1403008	27	29-469	Bushings	KP1403006
10	915-1682Z	Lock Nut	KP1403009	28	911-6007Z	Adjusting Screw	KP1403026
11	15-153	Nut	KP1403010	29	915-1443Z	Nut	KP0803010
12	969-3841J	Spring For Pull Rod	KP1403011	30	17-711-2	Base	KP1403028
13	915-1681Z	Nut	KP1403012	31	929-789	Bushings	KP1403002
14	48-321	Brake Shoes w/Lining Assembled	KP1403013	32	929-788	Armature Bushings (Base)	KP1403030
15	48-338-10	Brake Lining	KP1403014	33	913-871	Pin (For Armature)	KP1403031
16	61-137-3	Pull Rod	KP1403015				
17	624-435	Armature Lever w/Bushings	KP1403016				
18	913-868	Pin (For Pull Rod)	KP1403017				



KOR-PAK
CORPORATION


Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: 18" No. 503 Type "M" Brake

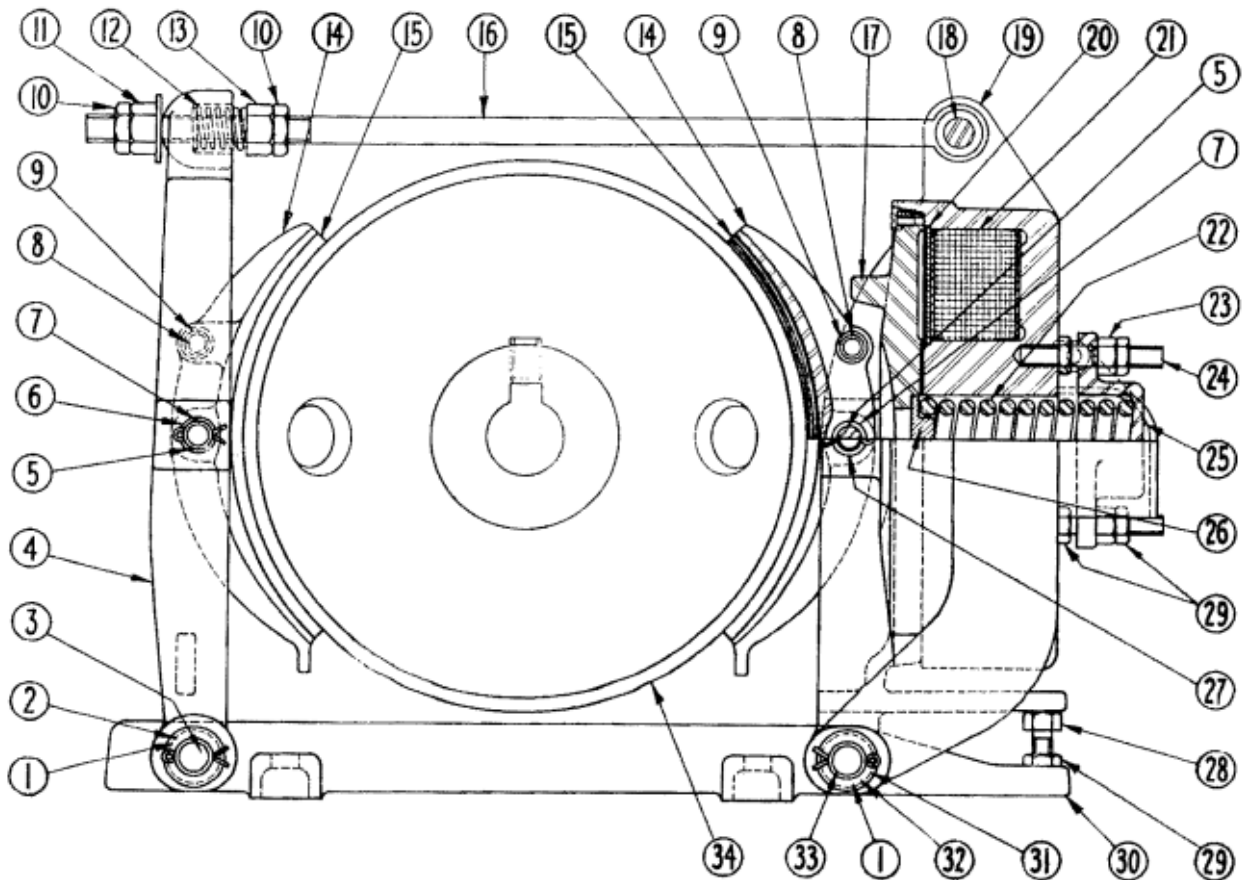

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	29-472	Base Bushing	KP1803001	18	13-3978	Pin (For Pull Rod)	KP1605010
2	929-791	Bushings	KP1803002	20	873-10	Coil Shield	KP1803019
3	913-873	Pin (For Shoe Lever)	KP1803003	21		Magnet Coil	
4	624-491	Shoe Lever With Bushings	KP1803004	22	69-492	Main Spring	KP1803021
5	913-875	Pin (For Brake Shoe)	KP1803005	23	915-1442Z	Nut	KP0803013
6	29-469	Bushings	KP1403006	24	914-599	Stud	KP1403022
7	29-469	Bushings	KP1403006	25	3679-91F1	Spring Support	KP1803024
8	51-213	Plug For Aligning Brake Shoe	KP1803008	26	49-2286	Spring Gland	KP1803025
9	969-433	Spring in Brake Shoe	KP1803009	27	29-469	Bushings	KP1403006
10	915-1682Z	Lock Nut	KP1403009	28	911-6009Z	Adjusting Screw	KP1803027
11	15-153	Nut	KP1403010	29	915-1443Z	Nut	KP0803010
12	969-3841J	Spring For Pull Rod	KP1403011	30	17-712-2	Base	KP1803029
13	915-1681Z	Nut	KP1403012	31	929-791	Bushings	KP1803002
14	623-161	Brake Shoes w/Lining Assembled	KP1803014	32	929-790	Armature Bushings (Base)	KP1803031
15	48-338-13	Brake Lining	KP1803015	33	913-872	Pin (For Armature)	KP1803032
16	61-138-3	Pull Rod	KP1803016				
17	624-438	Armature Lever With Bushings	KP1803017				

Replacement Parts for: 21" No. 503 Type "M" Brake

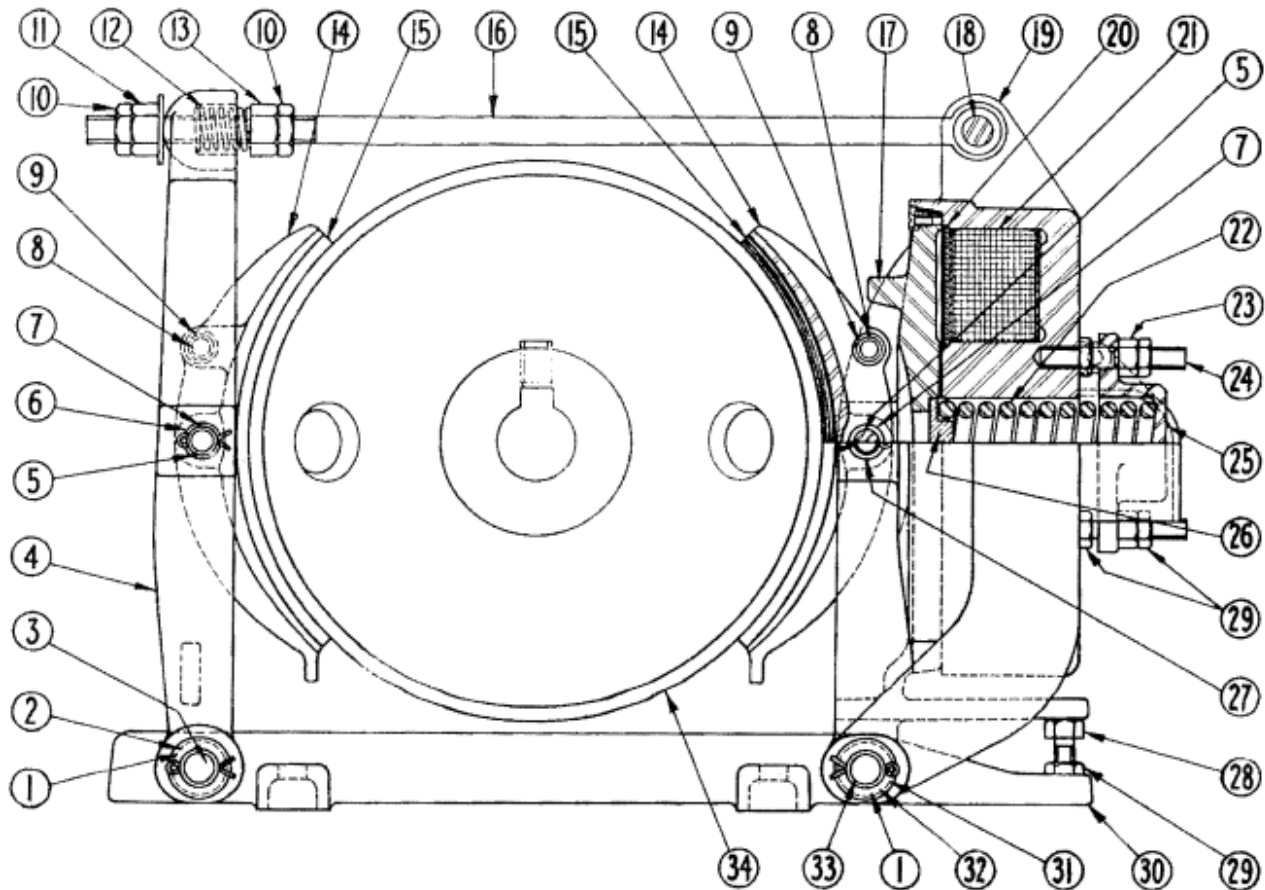


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	29-473	Base Bushing	KP2103001	18	913-948	Pin	KP2103018
2	929-802	Bushing	KP2103002	20	873-12	Coil Shield	KP2103019
3	913-888	Pin (For Shoe Lever)	KP2103003	21		Magnet Coil	
4	624-492	Shoe Lever With Bushings	KP2103004	22	69-493	Main Spring	KP2103021
5	913-887	Pin (For Brake Shoe)	KP2103005	23	915-1561Z	Nut	KP2103022
6	29-471	Bushings	KP2103006	24	914-738	Stud	KP2103023
7	29-471	Bushings	KP2103006	25	3679-92F1	Spring Support	KP2103024
8	51-214	Plug For Aligning Brake Shoe	KP2103008	26	49-2287	Spring Gland	KP2103025
9	969-434	Spring in Brake Shoe	KP2103009	27	29-471	Bushings	KP2103006
10	915-2142Z	Lock Nut	KP2103010	28	11-356	Adjusting Screw	KP2103027
11	15-154	Nut	KP2103011	29	915-1562Z	Nut	KP2103028
12	69-711	Spring For Pull Rod	KP2103012	30	17-713-2	Base	KP2103029
13	915-2141Z	Nut	KP2103013	31	929-802	Bushing	KP2103002
14	623-166	Brake Shoes w/Lining Assembled	KP2103014	32	929-800	Armature Bushings (Base)	KP2103031
15	48-338-15	Brake Lining	KP2103015	33	913-880	Pin (For Armature)	KP2103032
16	61-139-3	Pull-Rod	KP2103016				
17	624-433	Armature Lever w/Bushings	KP2103017				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: 24" No. 503 Type "M" Brake

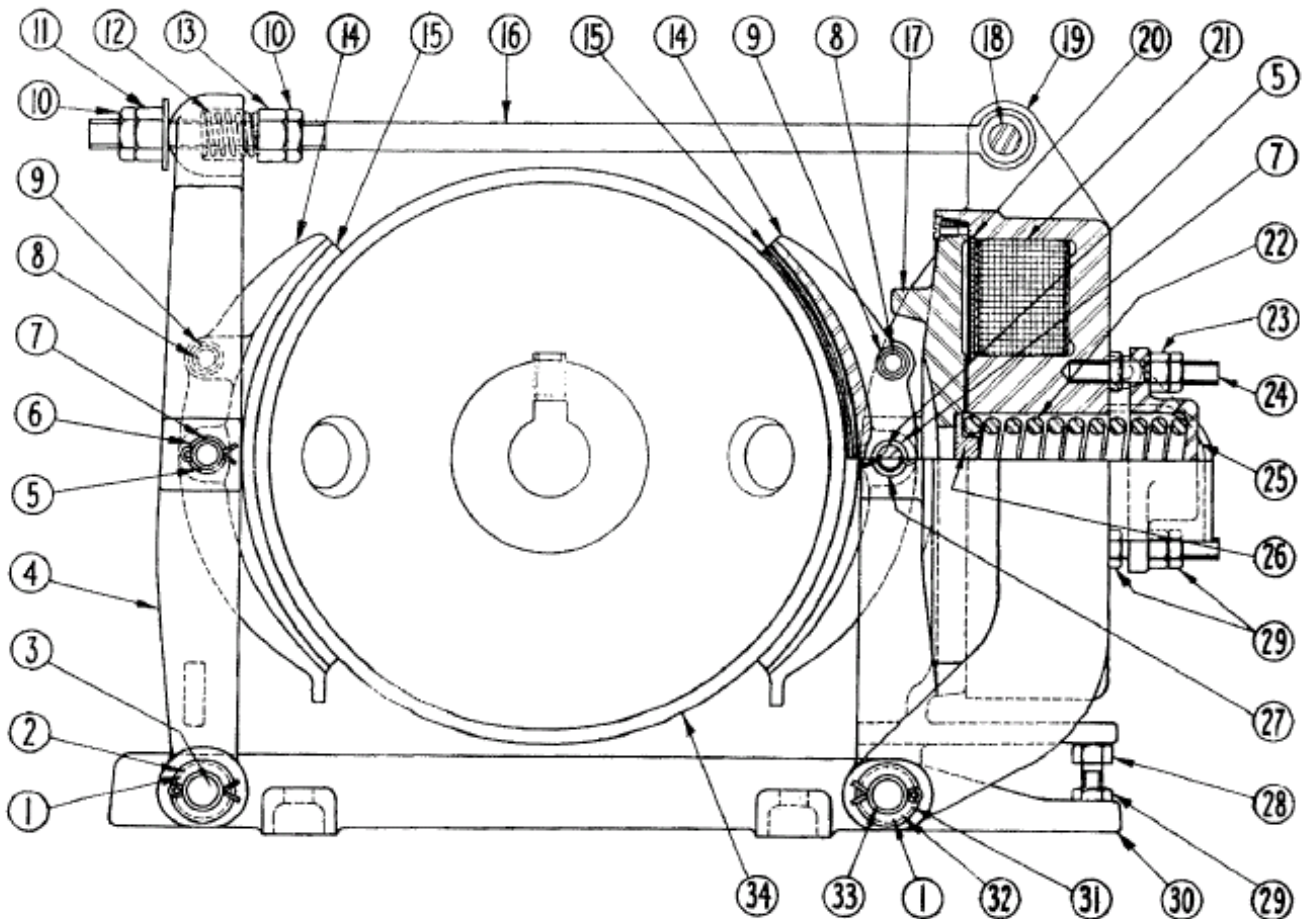


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	29-473	Base Bushing	KP2103001	18	913-948	Pin (For Pull Rod)	KP2403018
2	929-802	Bushing	KP2103002	20	873-12	Coil Shield	KP2103019
3	913-888	Pin (For Shoe Lever)	KP2103003	21		Magnet Coil	
4	624-492	Shoe Lever With Bushings	KP2103004	22	69-493	Main Spring	KP2103021
5	913-887	Pin (For Brake Shoe)	KP2103005	23	915-1561Z	Nut	KP2103022
6	29-471	Bushings	KP2103006	24	914-738	Stud	KP2103023
7	29-471	Bushings	KP2103006	25	3679-92F1	Spring Support	KP2103024
8	51-214	Plug For Aligning Brake Shoe	KP2103008	26	49-2287	Spring Gland	KP2103025
9	969-434	Spring in Brake Shoe	KP2103009	27	29-471	Bushings	KP2103006
10	915-2142Z	Lock Nut	KP2103010	28	11-356	Adjusting Screw	KP2103027
11	15-154	Nut	KP2103011	29	915-1562Z	Nut	KP2103028
12	69-711	Spring For Pull Rod	KP2103012	30	17-714-2	Base	KP2403029
13	915-2141Z	Nut	KP2103014	31	929-802	Bushing	KP2103002
14	48-322	Brake Shoes w/Lining Assembled	KP2403014	32	929-800	Armature Bushings (Base)	KP2103031
15	48-338-16	Brake Lining	KP2403015	33	913-880	Pin (For Armature)	KP2103032
16	61-140-3	Pull Rod	KP2403016				
17	624-433	Armature Lever/Bushings	KP2103017				



KOR-PAK
CORPORATION


Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:
30" No. 503 Type "M" Brake

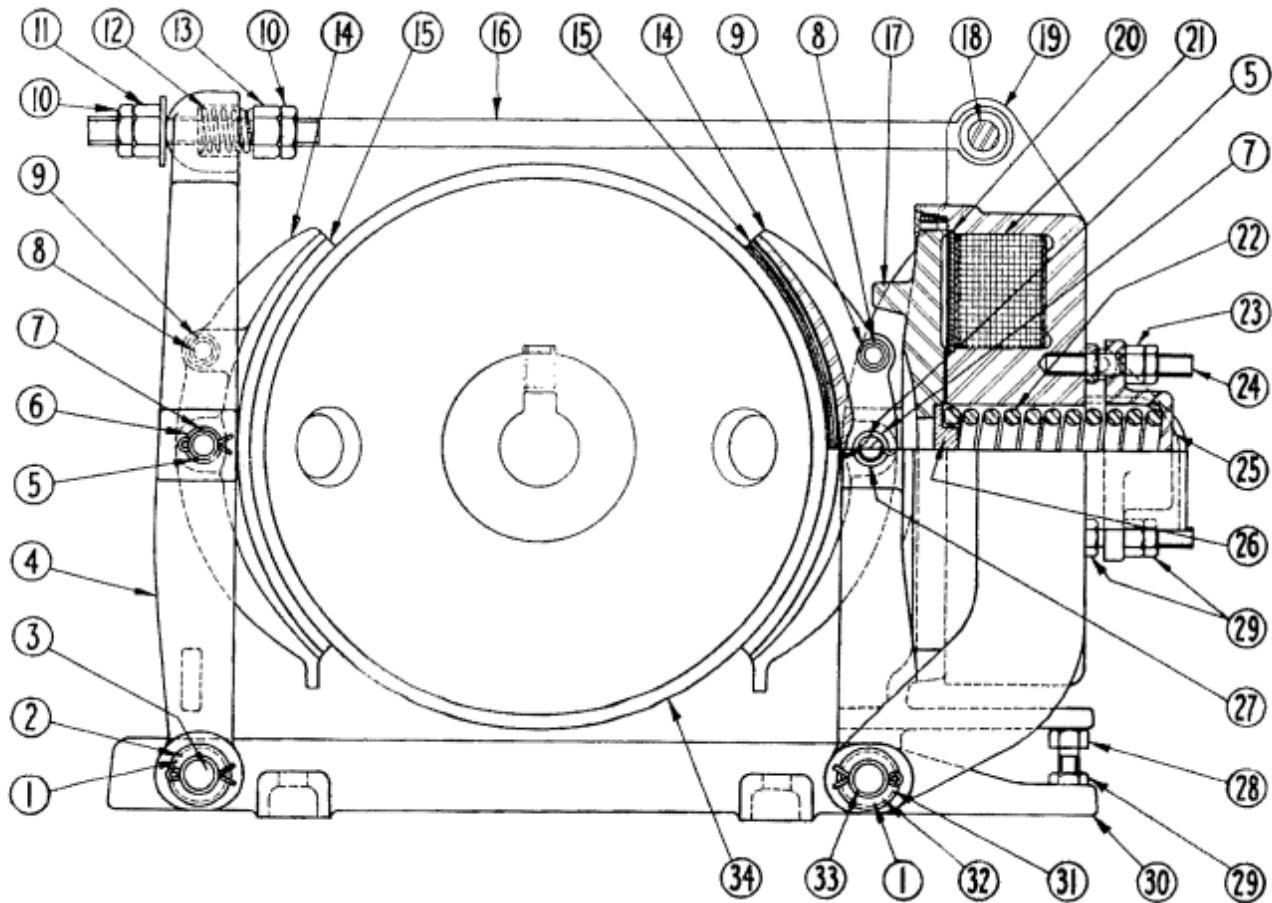


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	29-474	Bushing	KP3003001	24	914-738	Stud	KP2103023
2	929-805	Bushing	KP3003002	25	3679-92F1	Spring Support	KP2103024
3	913-896	Pin	KP3003003	26	49-2287-2	Spring Gland	KP3003020
4	624-493	Shoe Lever with Bushings	KP3003004	27	29-472	Base Bushing	KP1803001
5	913-895	Pin	KP3003005	28	911-6056Z	Adjusting Screw	KP3003022
7	29-472	Bushing	KP1803001	29	915-1562Z	Nut	KP2103028
8	51-215	Plug	KP3003007	30	17-715-2	Base	KP3003024
9	969-651	Spring in Brake Shoe	KP3003008	14	623-167	Brake Shoes w/Lining	KP3003025
10	915-2382Z	Lock Nut	KP3003009	31	929-805	Bushing	KP3003002
11	15-155	Nut	KP3003010	15	48-338-18	Brake Lining	KP3003027
12	969-463	Spring	KP3003011	32	929-806	Armature Bushings (Base)	KP3003028
13	915-2381Z	Nut	KP3003012	16	61-141-3	Pull Rod	KP3003029
18	913-894	Pin	KP3003013	33	913-890	Pin	KP3003030
20	873-11	Coil Shield	KP3003014	17	624-454	Armature Lever	KP3003031
21		Magnet Coil					
22	69-494	Main Spring	KP3003016				
23	915-1561Z	Nut	KP2103022				

Replacement Parts for: 8" No. 505 D-C Magnetic Brake

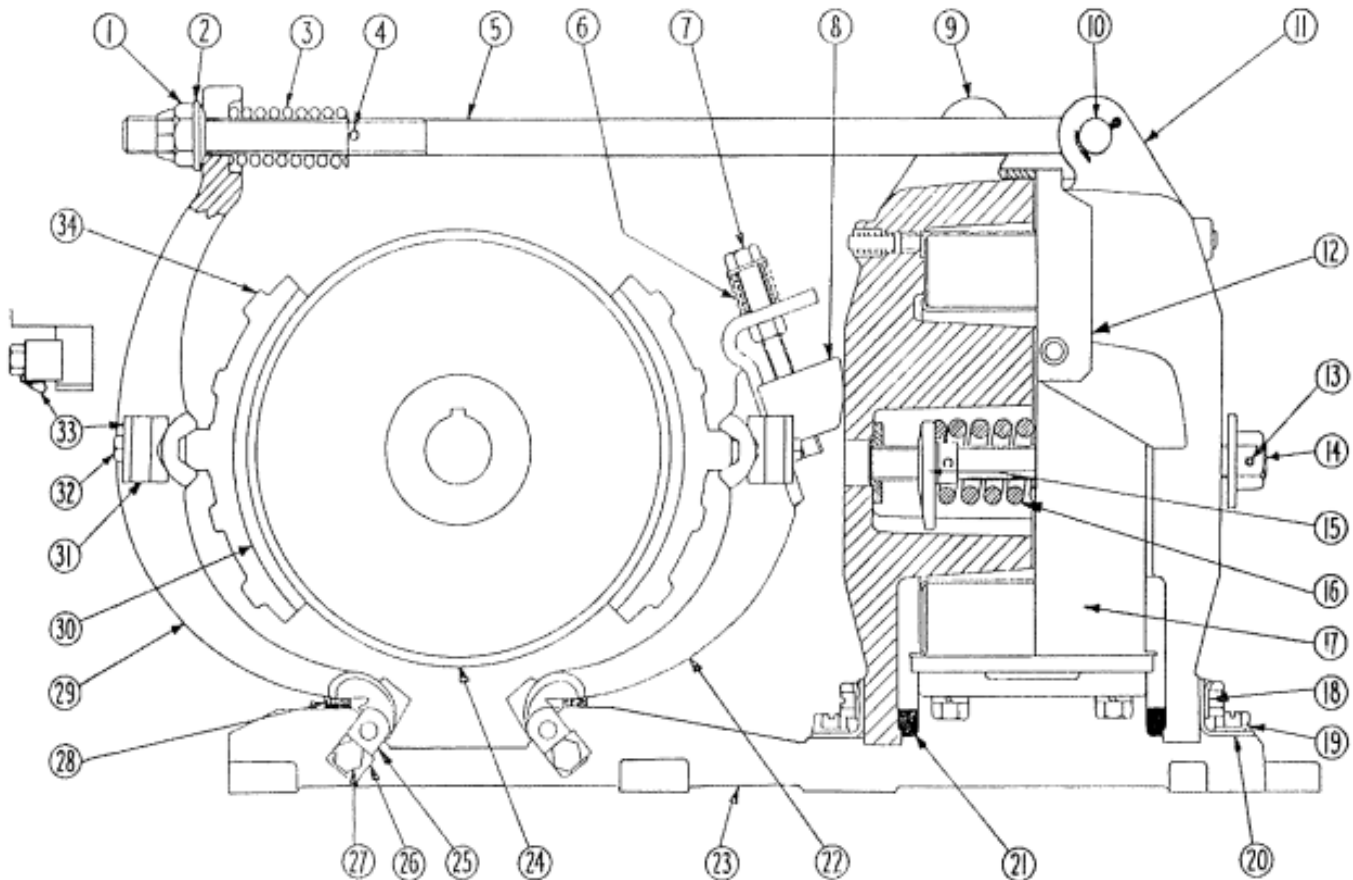


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	15-670	Nut	KP0805001	18	19-982-27	Lock Strip	KP0805018
2	16-1598	Spherical Washer	KP0805002	19	19-982-26	Lock Strip	KP0805019
3	69-2024	Spring	KP0805003	20	99-2058	Retro-fit Kit	KP0805020
4	13-3186-7	Spring Pin	KP0805004	21	32-50-9	Felt	KP0805021
5	61-1013	Pull Rod	KP0805005	22	24-3320-8	Shoe Lever (Inner)	KP0805022
6	969-482	Spring	KP0805006	23	17-6371-2	Base	KP0805023
7	54-4020	Wedge Adjustment Assembly	KP0805007	25	55-1650	Retainer	KP0805024
8	54-2863	Adjusting Wedge	KP0805008	26	79-6783-5	Lock Bracket	KP0805025
9	48-641-5	Armature (Inner)	KP0805009	28	32-467	Dacron Felt	KP0805026
10	13-506-9	Pin	KP0805010	29	24-3321-4	Shoe Lever (Outer)	KP0805027
11	48-641-6	Armature (Outer)	KP0805011	30	48-338-24	Shoe Lining	KP0805028
12	73-1017	Rubber Guard	KP0805012	31	55-1037	Clamp	KP0805029
13	13-3186-5	Spring Pin	KP0805013	32	11-1788	Cap Screw	KP0805030
14	11-1746	Adjusting Screw Assembly	KP0805014	33	69-1975	Lock Spring	KP0805031
15	49-2212	Gland	KP0805015	34	48-1267-4	Shoe	KP0805032
16	69-1694	Compression Spring	KP0805016				
17		Coil					

Replacement Parts for: 10" No. 505 D-C Magnetic Brake

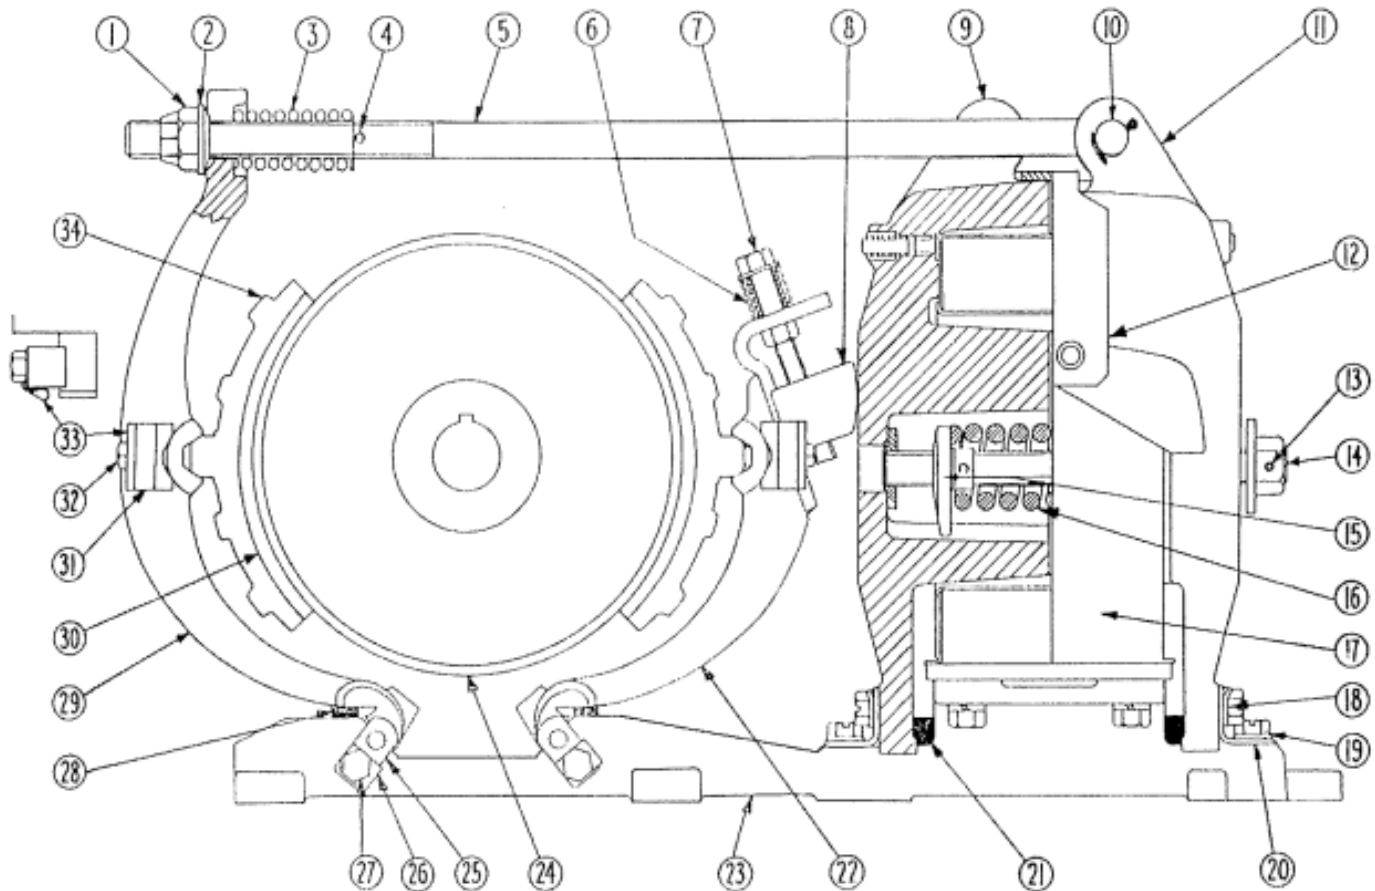


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	15-670	Nut	KP0805001	20	99-2058-2	Retro-Fit Kit	KP1005018
2	16-1598	Spherical Washer	KP0805002	21	32-50-8	Felt	KP1005019
3	69-2024	Spring	KP0805003	22	24-3288-9	Shoe Lever (Inner)	KP1005020
4	13-3186-7	Spring Pin	KP0805004	23	17-6934	Base	KP1005021
5	61-1006	Pull Rod	KP1005005	25	55-1650	Retainer	KP0805024
6	69-290	Spring	KP1005006	26	79-6783-5	Lock Bracket	KP0805025
7	54-4020-2	Wedge Adjustment Assembly	KP1005007	27	55458	Screw	KP1005024
8	54-2813	Adjustment Wedge	KP1005008	28	32-467-2	Dacron Felt	KP1005025
9	48-627-5	Armature (Inner)	KP1005009	29	24-3289-4	Shoe Lever (Outer)	KP1005026
10	13-506-9	Pin (For Pull Rod)	KP0805010	30	48-338-22	Lining	KP1005027
11	48-627-6	Armature (Outer)	KP1005011	31	55-1037	Clamp	KP0805029
12	73-1017-2	Rubber Guard	KP1005012	32	11-1788	Cap Screw	KP1005029
13	13-3186-5	Spring Pin	KP0805013	33	69-1975	Lock Spring	KP0805031
14	11-1746-2	Adjustment Assembly	KP1005014	34	48-1268-4	Shoe with Lining	KP1005031
15	49-2194-2	Gland	KP1005015				
16	69-1680	Compression Spring	KP1005016				
17		Coil					

Replacement Parts for: 13" No. 505 D-C Magnetic Brake

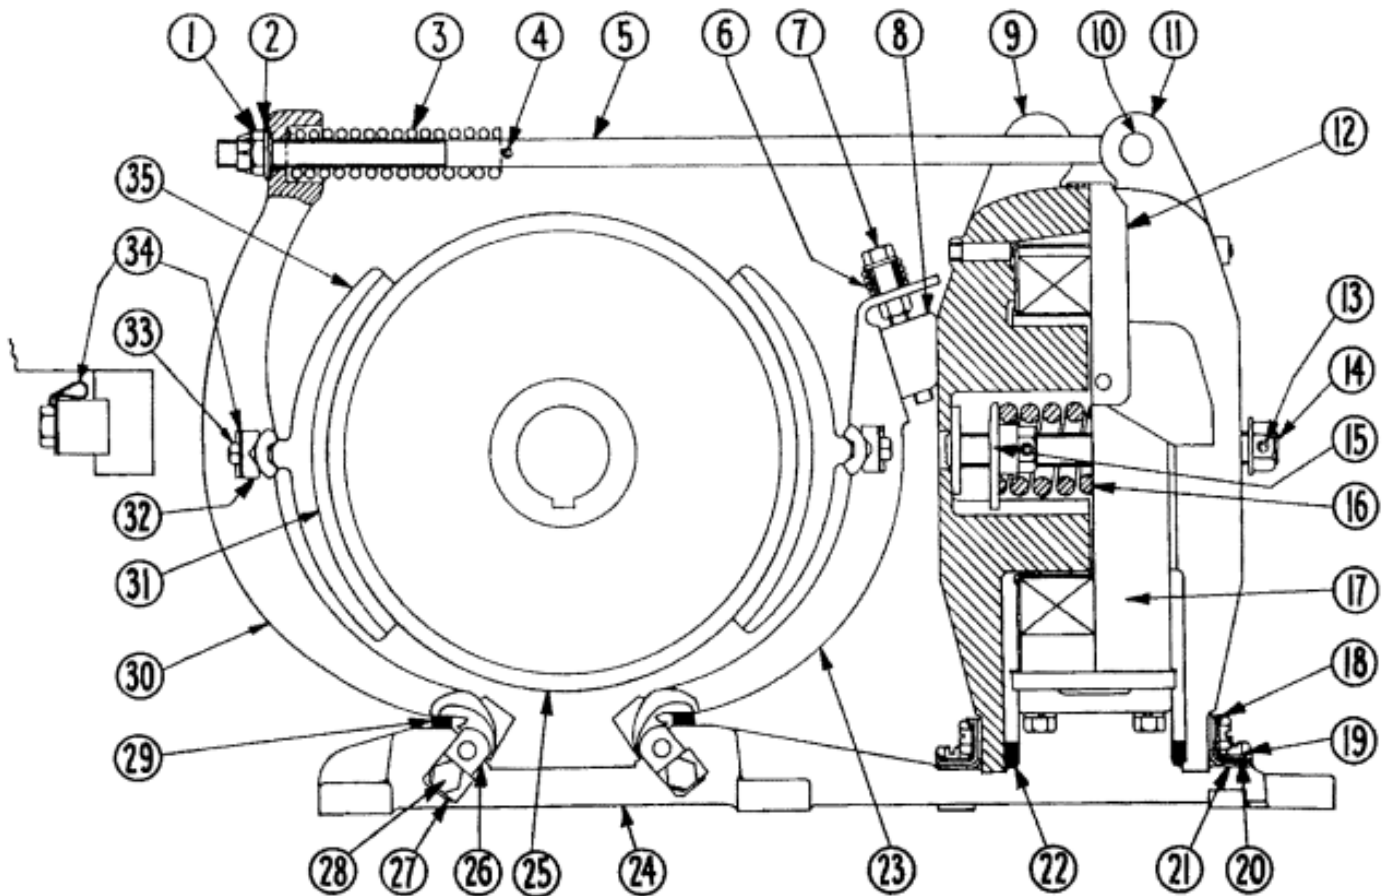


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	15-680	Locknut	KP1305001	19	19-982-19	Lock Strip	KP1305019
2	16-1598-2	Spherical Washer	KP1305002	20	99-2058-3	Retro-Fit Kit	KP1305020
3	69-2029	Spring	KP1305003	22	32-50-10	Felt	KP1305021
4	13-3186-7	Spring Pin	KP0805004	23	24-3226-12	Shoe Lever (Inner)	KP1305022
5	61-985	Pull Rod	KP1305005	24	17-6934-2	Base	KP1305023
6	69-942	Spring	KP1305006	26	55-1649	Retainer	KP1305024
7	54-4020-7	Wedge Adjusting Assembly	KP1305007	27	79-6783-5	Lock Bracket	KP0805025
8	54-2652-2	Adjusting Wedge	KP1305008	28	55458	Screw	KP1005024
9	48-602-5	Armature (Inner)	KP1305009	29	32-467-3	Dacron Felt	KP1305027
10	13-506-9	Pin (For Pull Rod)	KP0805010	30	24-3227-4	Shoe Lever (Outer)	KP1305028
11	48-602-11	Armature (Outer)	KP1305011	32	55-1037	Clamp	KP0805029
12	73-1017-3	Rubber Guard	KP1305012	33	11-1788	Screw	KP0805030
13	13-3186-9	Spring Pin	KP1305013	34	69-1975	Lock Spring	KP0805031
14	11-1746-3	Adjusting Screw Assembly	KP1305014	35	48-603-7	Shoe	KP1305032
15	49-2153-2	Gland	KP1305015				
16	69-1652	Compression Spring	KP1305016				
17		Coil					
18	19-982-20	Lock Strip	KP1305018				

Replacement Parts for: 16" No. 505 D-C Magnetic Brake

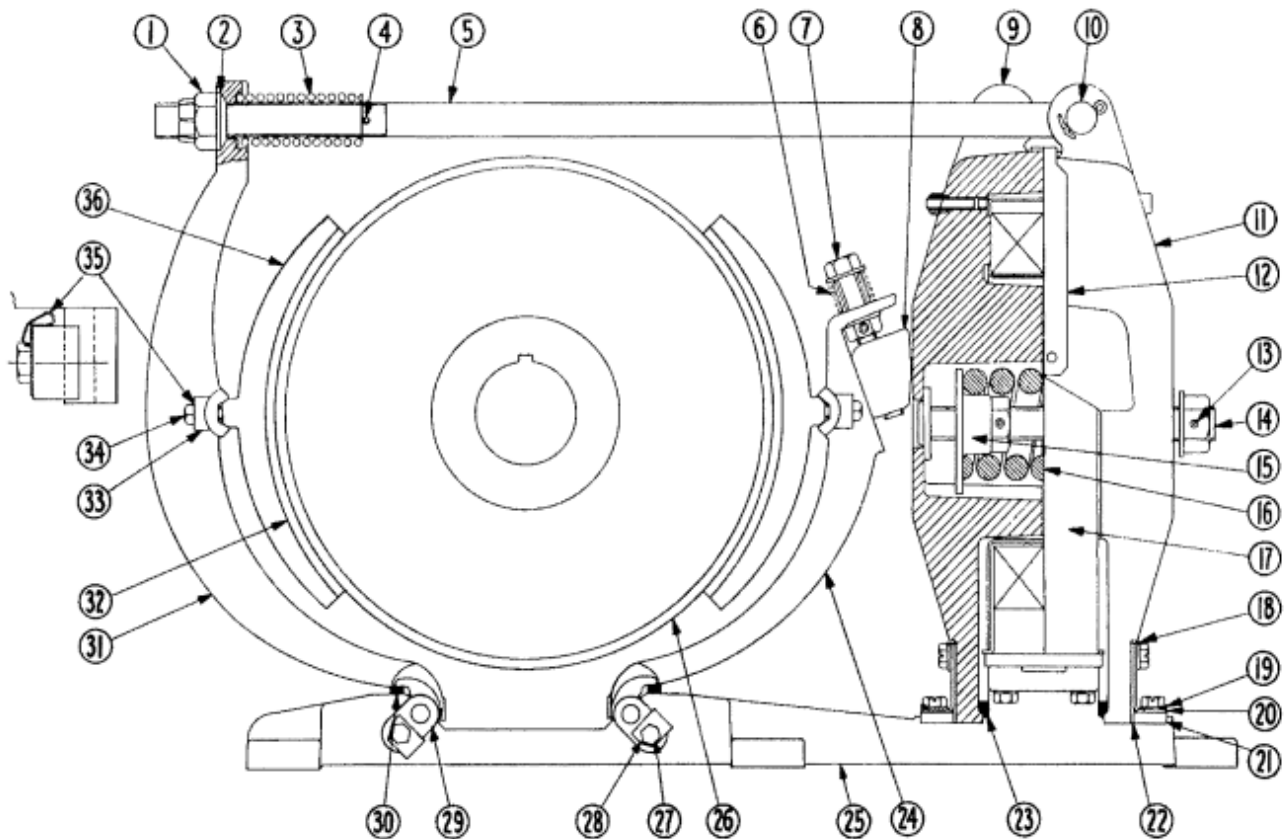


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	15-681	Nut (Hug lock)	KP1605001	21	19-972-8	Stop Block	KP1605021
2	16-1598-3	Spherical Washer	KP1605002	22	19-972-9	Stop Plate 093 Thick	KP1605022
3	69-2225	Compression Spring	KP1605003	22	19-972-18	Stop Plate 105 Thick	KP1605023
4	13-3186-7	Spring Pin	KP0805004	22	19-1688-5	Stop Plate 102 Thick	KP1605024
5	61-912	Pull Rod	KP1605005	23	32-50-11	Felt	KP1605025
6	69-942	Spring	KP1305006	24	24-2951-9	Shoe Lever (Inner)	KP1605026
7	54-4020-8	Wedge Adjustment Assembly	KP1605007	25	17-8050	Base	KP1605027
8	54-4524	Adjusting Wedge	KP1605008	27	55458	Screw	KP1605024
9	48-555-5	Armature (Inner)	KP1605009	28	79-4180-27	Locking Bracket	KP1605029
10	13-3978	Pin (For Pull Rod)	KP1605010	29	55-1551	Retainer	KP1605030
11	48-555-6	Armature (Outer)	KP1605011	30	32-467-4	Dacron Felt	KP1605031
12	73-1017-4	Rubber Guard	KP1605012	31	24-2950-3	Shoe Lever (Outer)	KP1605032
13	13-3186-9	Spring Pin	KP1305013	32	48-338-12	Lining	KP1605033
14	11-1746-4	Adjusting Screw Assembly	KP1605014	33	55-1079	Clamp	KP1605034
15	49-2036	Gland	KP1605015	34	11-1787	Cap Screw	KP1605035
16	69-1554	Compression Spring	KP1605016	35	69-1976	Lock Spring	KP1605036
17	Coil			36	48-554-3	Shoe	KP1605037
18	19-1164-2	Lock Strip	KP1605018				
19	19-1164	Lock Strip	KP1605019				
20	99-2059	Retro-Fit Kit	KP1605020				

Replacement Parts for: 19" No. 505 D-C Magnetic Brake

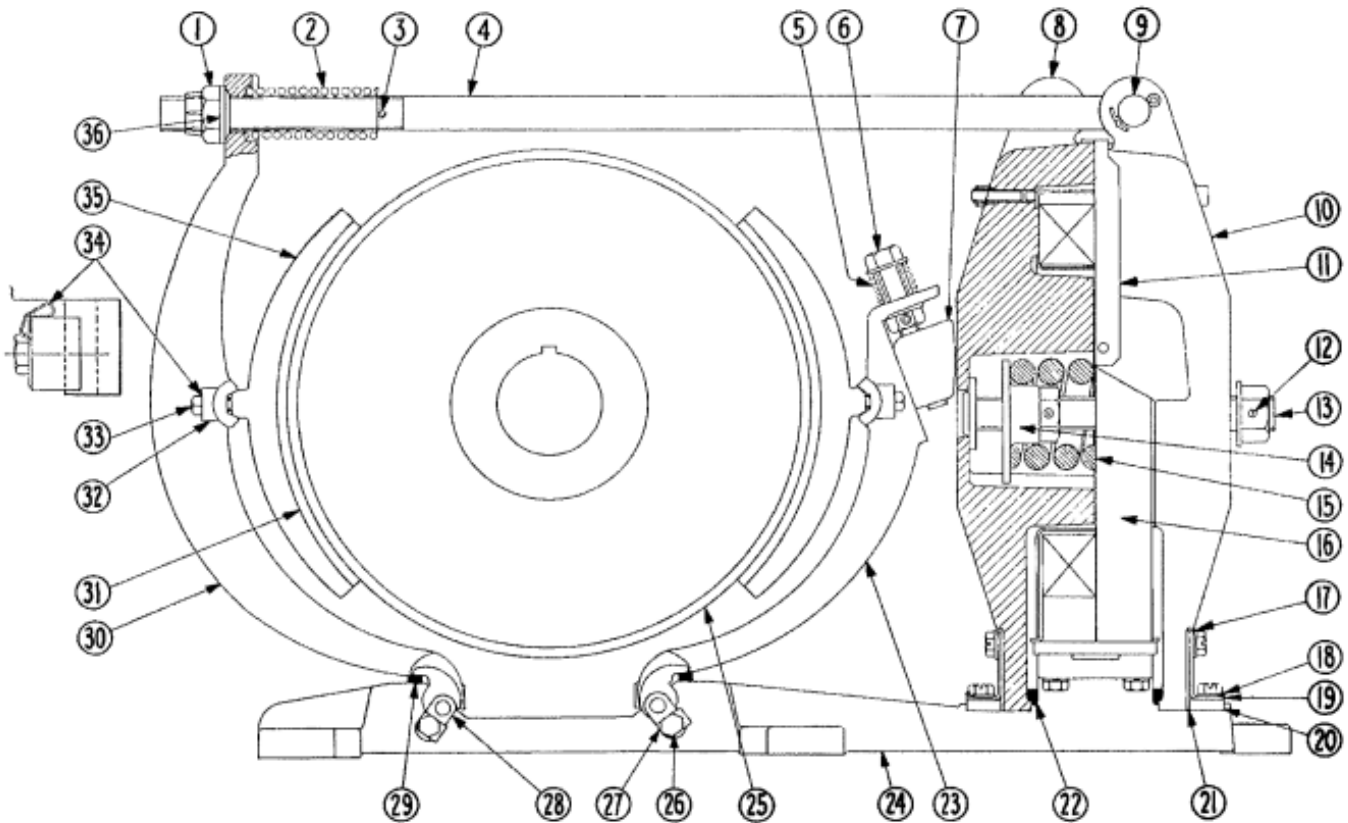


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	15-682	Nut (Hug lock)	KP1905001	21	19-972-16	Stop Plate 105 Thick	KP1003034
2	69-2226	Compression Spring	KP1905002	21	19-1688-3	Stop Plate 102 Thick	KP1905022
3	13-3186-13	Spring Pin	KP1905003	21	19-972-5	Stop Plate 093 Thick	KP1905023
4	61-994-4	Pull Rod	KP1905004	22	32-50-12	Felt	KP1905024
5	69-1470	Spring	KP1905005	23	24-3262-5	Shoe Lever (Inner)	KP1905025
6	54-4020-4	Wedge Adjustment Assembly	KP1905006	24	17-8050-2	Base	KP1905026
7	54-2764	Adjusting Wedge	KP1905007	26	55458	Screw	KP1005024
8	48-612-4	Armature (Inner)	KP1905008	27	79-4180-27	Locking Bracket	KP1605029
9	13-1181-11	Pin	KP1905009	28	55-1551	Retainer	KP1605030
10	48-612-5	Armature (Outer)	KP1905010	29	32-467-5	Dacron Felt	KP1905030
11	73-1017-5	Rubber Guard	KP1905011	30	24-3263-4	Shoe Lever (Outer)	KP1905031
12	13-3186-12	Spring Pin	KP1905012	31	48-338-21	Shoe Lining	KP1905032
13	11-1746-5	Adjusting Screw Assembly	KP1905013	32	55-1079	Clamp	KP1605034
14	49-2172-2	Gland	KP1905014	33	11-1787	Cap Screw	KP1605035
15	69-1664	Compression Spring	KP1905015	34	69-1976	Lock Spring	KP1605036
16		Coil		35	48-611	Shoe, Complete	KP1905036
17	19-982-24	Lock Strip	KP1905017	36	16-1598-4	Washer	KP1905037
18	19-982-23	Lock Strip	KP1905018				
19	99-2059-2	Retro-Fit Kit	KP1905019				
20	19-972-4	Stop Block	KP1905020				

Replacement Parts for: 23" No. 505 D-C Magnetic Brake

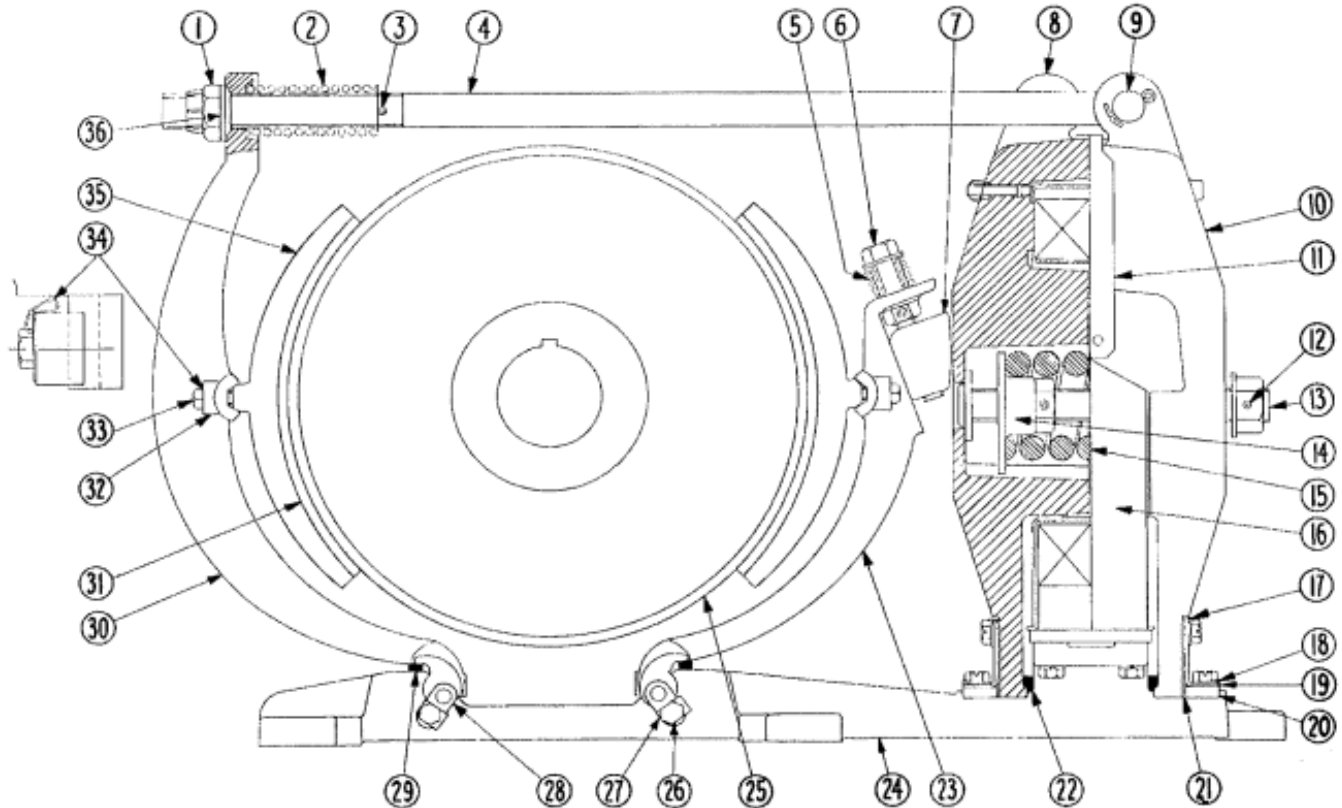



REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	15-673	Nut (Hug lock)	KP2305001	21	19-1688-4	Stop Plate 102 Thick	KP2305021
2	69-1987	Compression Spring	KP2305002	21	19-972-7	Stop Plate 093 Thick	KP2305022
3	13-3186-13	Spring Pin	KP1905003	21	19-972-17	Stop Plate 105 Thick	KP2305023
4	61-1008	Pull Rod	KP2305004	22	32-50-13	Felt	KP2305024
5	69-1470	Spring	KP1905005	23	24-3304-5	Shoe Lever (Inner)	KP2305025
6	54-4020-5	Wedge Adjustment Complete	KP2305006	24	17-8047	Base	KP2305026
7	54-2764	Adjusting Wedge	KP1905007	26	11-2051-2	Screw	KP2305027
8	48-636-4	Armature (Inner)	KP2305008	27	79-4180-28	Locking Bracket	KP2305028
9	13-1181-16	Pin	KP2305009	28	55-1548	Plate	KP2305029
10	48-636-5	Armature (Outer)	KP2305010	29	32-467-6	Dacron Felt	KP2305030
11	73-1017-6	Rubber Guard	KP2305011	30	24-3305-4	Shoe Lever (Outer)	KP2305031
12	13-3186-12	Spring Pin	KP1905012	31	48-338-23	Shoe Lining	KP2305032
13	11-1746-6	Adjusting Screw Complete	KP2305013	32	55-1039	Clamp	KP2305033
14	49-2201-2	Gland	KP2305014	33	11-1786	Cap Screw	KP1005029
15	69-1692	Compression Spring	KP2305015	34	69-1977	Lock Spring	KP2305035
16		Coil		35	48-633-4	Shoe Complete	KP2305036
17	19-982-28	Locking Strip	KP2305017	36	16-1598-5	Washer	KP2305037
18	19-982-29	Locking Strip	KP2305018				
19	99-2059-3	Retro-Fit Kit	KP2305019				
20	19-972-6	Stop Block	KP2305020				

Replacement Parts for: 30" No. 505 D-C Magnetic Brake

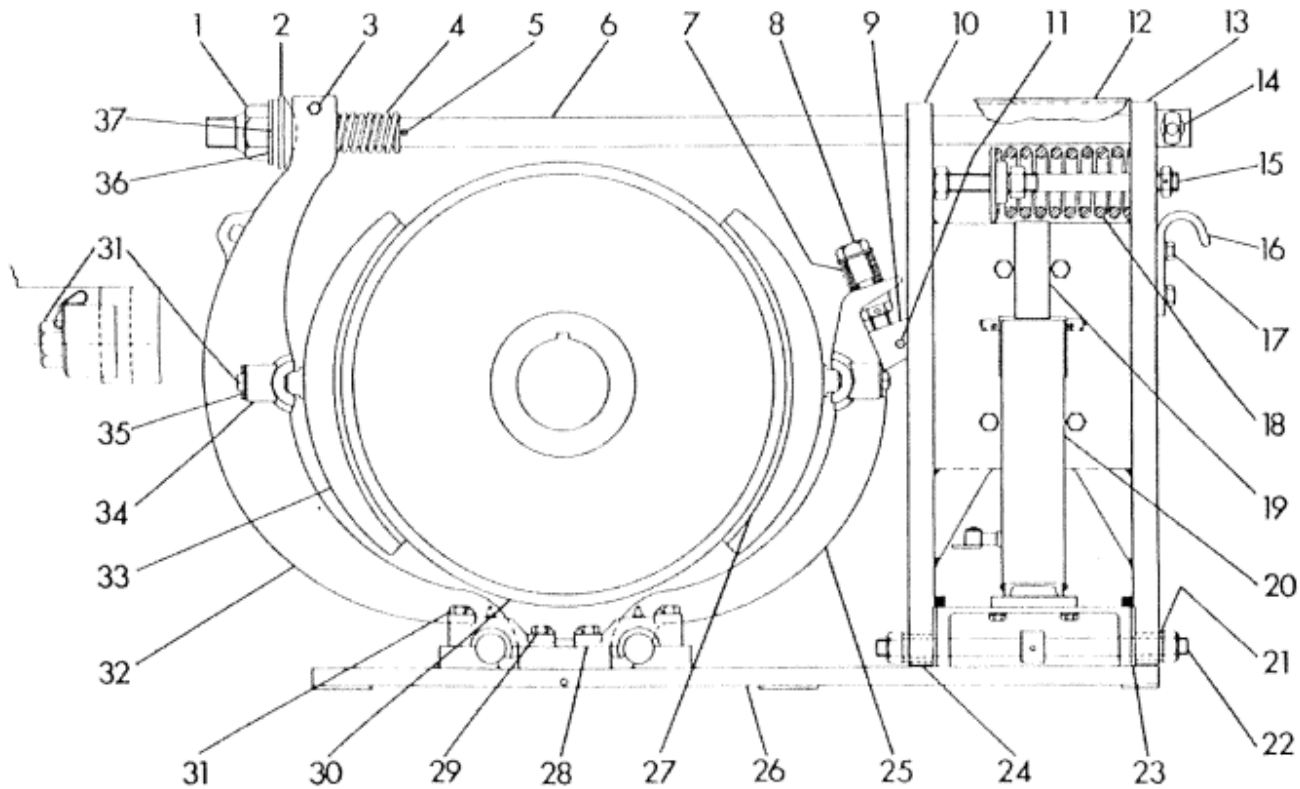



REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	15-958	Hug lock Nut	KP3005001	18	69-2090	Compression Spring	KP3005022
2	16-1981	Washer	KP3005002	19	73-1210	Guard	KP3005023
3	3228	Hex Head Screw	KP3005003	20		Coil	
3	15-610	Locknut	KP3005004	21	16-1747	Spring Plate	KP3005025
4	69-2091	Compression Spring	KP3005005	22	14-527	Stud	KP3005026
5	13-3186-21	Spring Pin	KP3005006	23	18-59-9	Shim	KP3005027
6	61-1869	Pull Rod	KP3005007	23	18-59-5	Strap	KP3005028
7	69-1931	Spring	KP3005008	24	29-2779-5	Bushing	KP3005029
8	54-4020-6	Wedge Adjusting Screw	KP3005009	25	24-4113	Inner Shoe Lever	KP3005030
9	54-4986	Adjusting Wedge	KP3005010	26	17-7102	Base	KP3005031
10	48-896	Magnet Armature (Inner)	KP3005011	27	48-338-25	Shoe Lining	KP3005032
11	27-82	Grease Fitting	KP3005012	28	20-1067	Bearing Cap	KP3005033
12	47-11498	Cover	KP3005013	29	79-4180-18	Lock Bracket	KP3005034
13	48-1260	Magnet Armature (Outer)	KP3005014	29	58746	Hex Head Screw	KP3005035
14	13-5065	Pin	KP3005015	31	59111	Hex Head Screw	KP3005036
14	18-1962	Stop Plate	KP3005016	32	24-4112	Outer Shoe Lever	KP3005037
14	911-5888Z	Screw	KP3005017	33	48-830	Shoe Complete	KP3005038
15	345096	Adjusting Screw Assembly	KP3005018	34	55-1352	Clamp	KP3005039
16	52-1079	Hook	KP3005019	35	69-2092	Locking Spring	KP3005040
17	11-327	Hex Head Screw	KP3005020	36	16-1982	Washer	KP3005041
17	916-199	Lock washer	KP3005021	37	16-1983	Fabreeka Washer	KP3005042

Replacement Parts for: No. 542 300 Amp D-C Contactor

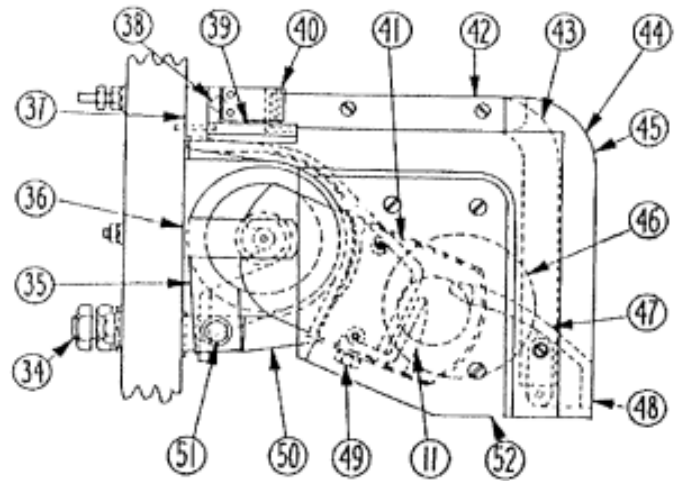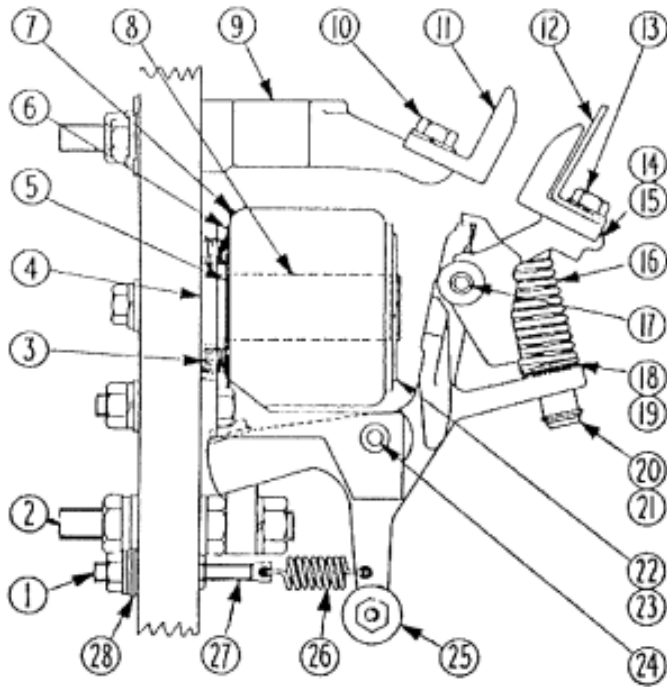


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	11-1028-3	Screw	KP5781001	28	4416-841	Insulating Washer	KP5781027
3	69-2441	Spring	KP5781002	29	6-168-10	Contact Set	KP5781028
4	17-207-15	Magnet Frame	KP5781003	35	9-460-162	Blowout Coil	KP5781029
5	916-2882Z	Steel Washer	KP5781004	36	79-888	Support	KP5781030
6	16-1551-2	Neoprene Washer	KP5781005	37	17-2294	Base	KP5781031
7		Coil		38	11-1249	Screw	KP5781032
8	51-92	Coil Core	KP5781007	39	17-2292	Base L.H	KP5781033
9	79-124-4	Contact Support Complete	KP5781008	39	17-2291	Base R.H	KP5781034
10	911-373	Long Hex Screw	KP5581008	40	79-1677	Bracket	KP5781035
11	23-435	Contact	KP5581021	41	62-208	Pole Piece	KP5781036
12	49-99	Arc Guard	KP5781011	42	17-2293	Side Plate	KP5781037
14	24-196-2	Contact Lever	KP5781012	43	25-990	Connector	KP5781038
15	24-196-5	Contact Lever w/ o Arc Guard	KP5781013	44	62-233	Arc Shield Complete	KP5781039
15	24-196-15	Contact Lever with Arc Guard	KP5781014	45	73-865	Arc Shield L.H	KP5781040
16	69-58	Spring	KP5581025	45	73-864	Arc Shield R.H	KP5781041
17	13-84	Pin	KP5781016	46	73-374	Arc Shield	KP5781042
18	916-1164Z	Shim Washer 016 Thick	KP5781017	47	62-93	Arc Horn	KP5781043
19	16-319	Shim Washer 032 Thick	KP5781018	49	911-5646Z	Contact Mounting Screw	KP5581023
20	13-587	Adjusting Pin	KP5581027	50	62-234-6	Contact Support Complete	KP5781045
21	29-541	Spring Ring	KP5581028	52	79-4288	Support Plate	KP5781046
22	16-252	Brass Washer	KP5781021	*	62-234	D-C Blowout Complete	KP5781047
23	16-253	Brakelite Washer	KP5781022	*	62-234-2	D-C Blowout Complete	KP5781048
24	13-170	Shaft	KP5781023	*	62-234-3	D-C Blowout Complete	KP5781049
25	24-215	Armature Lever	KP5781024	*	62-234-4	D-C Blowout Complete	KP5781050
26	969-8871	Spring	KP5781023				
27	14-541	Adjusting Stud	KP5781026				

Replacement Parts for: No. 545 600 Amp D-C Contactor

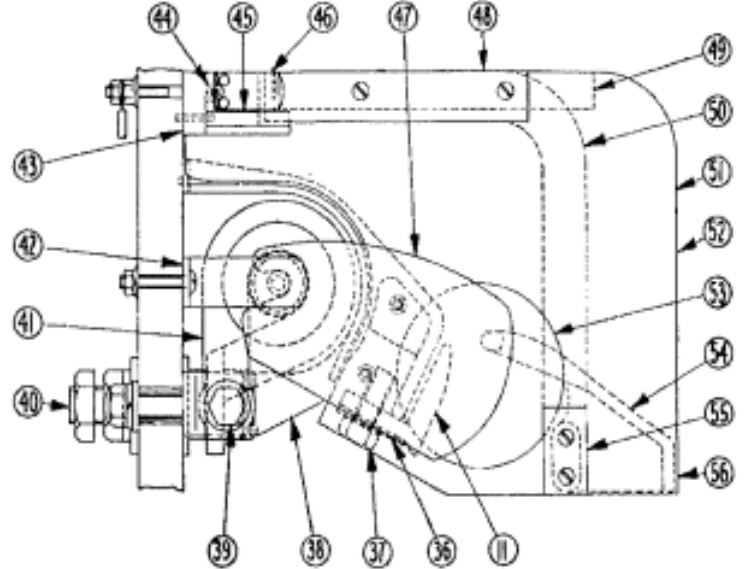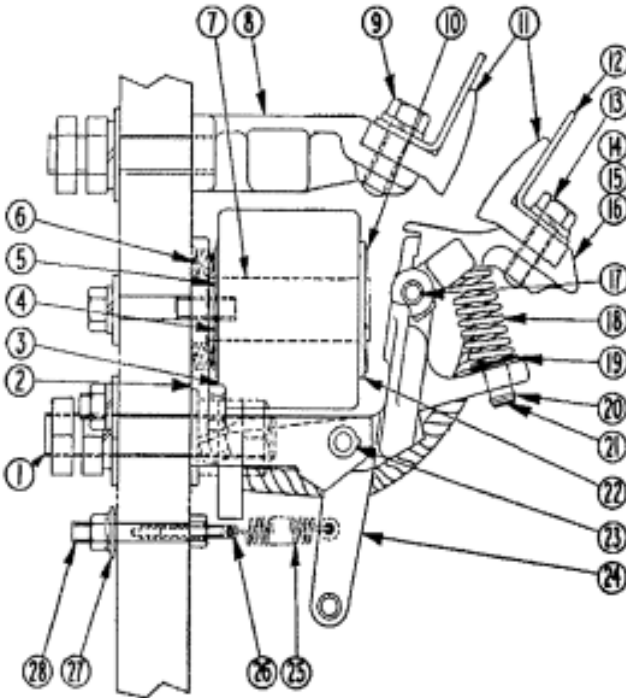



REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1314-100	Pin for 1" Panel	KP5881001	26	14-541	Adjusting Stud	KP5781026
2	17-207-16	Magnet Frame	KP5881002	27	4416-841	Insulating Washer	KP5781027
3		Coil		28	114262	Screw	KP5881028
4	16-1551-2	Neoprene Washer	KP5781005	29	6-168-35	Set of Contacts	KP5881029
5	16-1944-2	Steel Washer	KP5881005	37	911-5890Z	Screw	KP5881009
6	69-2441	Spring	KP5781002	38	62-236-5	Contact Support Complete	KP5881031
7	51-979	Core	KP5581043	39	911-5890Z	Screw	KP5881009
8	23-1289-3	Contact Support Complete	KP5881008	40	14-256-12	Stud for 1" Panel	KP5881033
9	911-5890Z	Screw	KP5881009	41	9-460-163	Blowout Coil	KP5881034
10	16-426	Brass Washer	KP5881010	42	79-891	Support	KP5881035
11	23-1225	Contact	KP5881011	43	17-2294	Base	KP5781031
12	73-1268	Arc Guard	KP5881012	44	11-1249-2	Screw	KP5881037
13	911-5892Z	Contact Screw	KP0803029	45	17-2291	Base R.H	KP5781034
14	624-594	Contact Lever w/Connector	KP5881014	45	17-2292	Base L.H	KP5781033
15	24-1330-2	Contact Lever with Arc Guard	KP5881015	46	79-1677	Bracket	KP5781035
16	24-1330	Contact Lever w/o Arc Guard	KP5881016	47	62-98	Pole Piece	KP5881041
17	13-3961	Shaft	KP5881017	48	17-2295	Side Plate	KP5881042
18	69-2376	Spring	KP5881018	49	29-1127	Spacer	KP5881043
19	916-1121Z	Washer	KP5881019	50	25-991	Connector	KP5881044
20	29-541	Spring Ring	KP5581028	51	62-235	Arc Shield Complete	KP5881045
21	13-593	Adjusting Pin	KP5881021	52	73-268	Arc Shield (Right Half)	KP5881046
22	16-253	Brakelite Washer	KP5781022	52	73-267	Arc Shield (Left Half)	KP5881047
23	13-164	Shaft	KP5881023	53	73-243	Arc Shield	KP5881048
24	624-592	Armature Lever	KP5881024	54	62-99	Arc Horn	KP5881049
25	969-887J	Spring	KP5781023	55	17-1250	Side Plate	KP5881050

Replacement Parts for: No. 560 100 Amp Spring Closed D-C Contactor

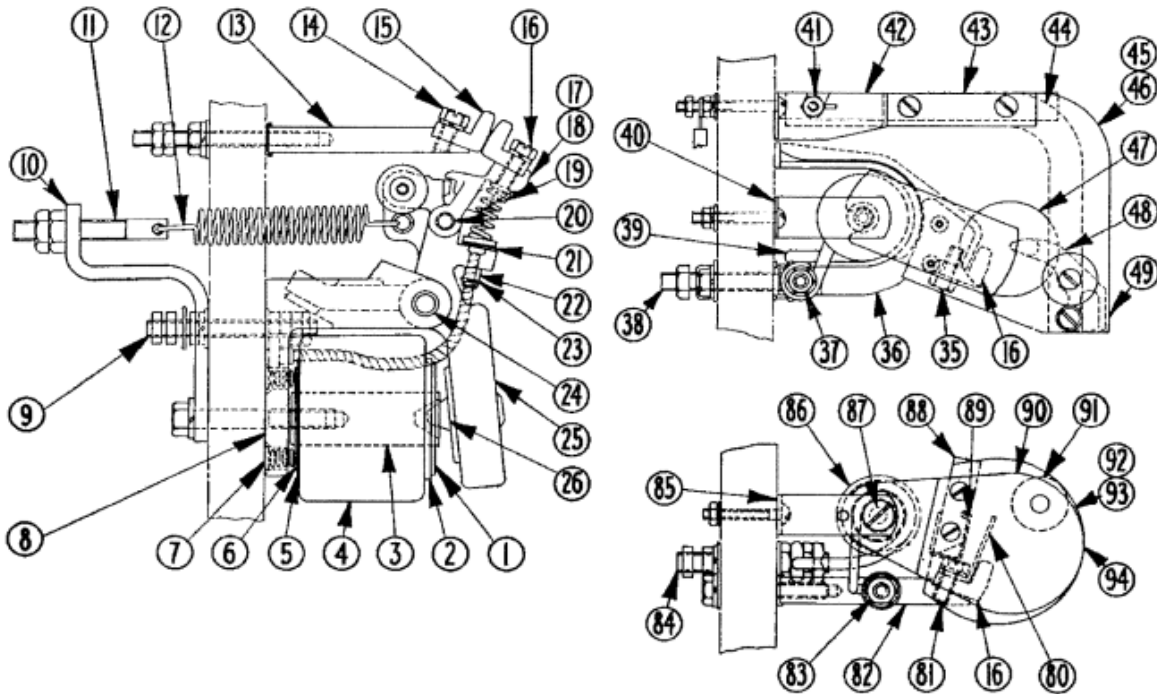

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	16-398	Brass Washer	KP5981001	27	6-168-29	Set of Contacts	KP5981027
2	16-399	Bakelite Washer	KP5981002	36	18-739	Contact Support Complete	KP5681040
3	51-182-2	Core	KP5981003	38	814-266	Stud For 3/4" Panel	KP5681002
4		Coil		39		Blowout Coil	
5	16-1551-2	Neoprene Washer	KP5781005	40	79-845	Support	KP5981031
6	916-2881Z	Steel Washer	KP5981006	40	79-845	Support	KP5681032
7	969-1001J	Spring	KP5981007	41	14-359-2	Stud	KP5681033
8	17-207-7	Magnet Frame	KP5981008	43	17-1523	Side Plate	KP5681034
9	814-565	Stud for 3/4" Panel	KP5981009	44	25-812	Connector	KP5681035
10	79-866	Bracket	KP5981010	45	62-121	Arc Shield, Complete	KP5681037
11	914-3568C	Adjusting Stud	KP5981011	48	62-100	Arc Horn	KP5681038
12	969-196	Spring	KP5981012	49	62-86-7	Blowout Complete 3/4" Panel	KP5681039
13	618-407	Contact Support Complete	KP5681010	80	49-239	Arc Guard	KP5681051
14	911-5445FZ	Contact Screw	KP5681011	81	911-5445FZ	Contact Screw	KP5681011
15	23-812	Contact, Silver Tipped	KP5681013	82	618-401	Contact Support Complete	KP5681052
15	1321-841	Contact	KP5981016	84	814-266	Stud For 3/4" Panel	KP5681002
16	911-5447FZ	Contact Screw	KP5681015	85	879-107	Support	KP5681042
17	24-1321-6	Contact Lever w/Connector	KP5981018	86		Blowout Coil	
18	24-792-3	Contact Lever, Complete	KP5981019	87	929-992	Spacer	KP5481035
19	969-439	Spring	KP5981020	88	2222-402	Spacer	KP5481036
20	956-1838	Pin	KP5981021	89	933-203Z	Protecting Clip	KP5981047
21	16-320	Washer 016 Thick	KP5681020	90	962-54	Pole Piece	KP5481034
22	13-595	Adjusting Pin	KP5981023	91	2222-48	Spacer	KP5981049
23	29-531	Retaining Ring	KP5681022	92	4973-5	Arc Shield	KP5481038
24	13-716	Shaft	KP5981025	25	24-1226	Armature Lever	KP5981051
26	51-181	Core Plug	KP5981026	93	662-159	Arc Chute Assembly	KP5481032

Replacement Parts for: No. 562 300 Amp Spring Closed D-C Contactor

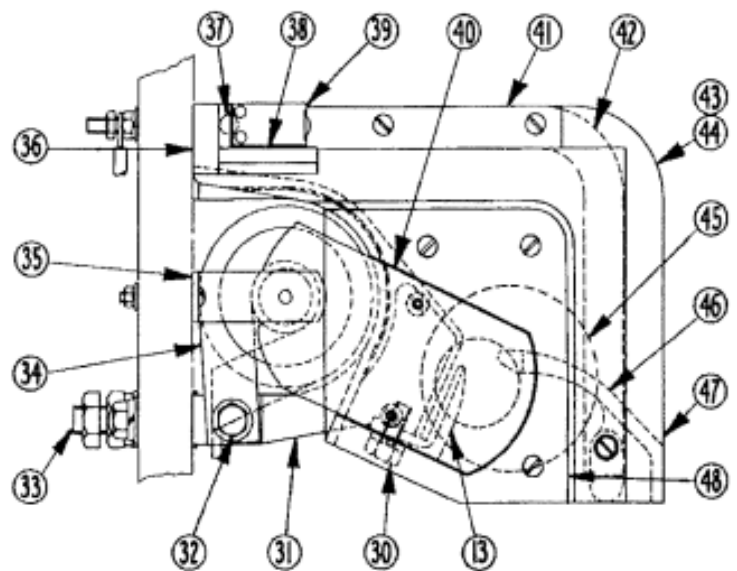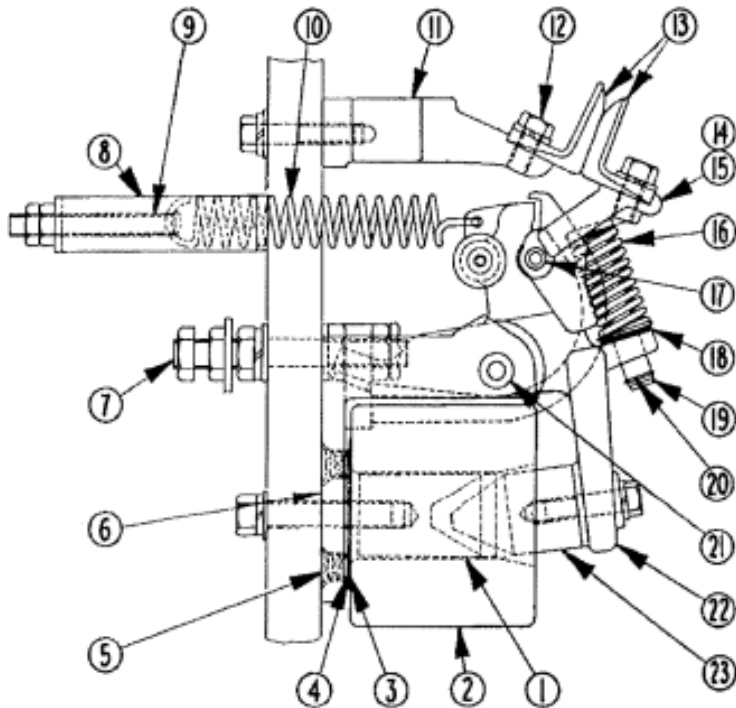

1	51-335-3	Core	KP6081001
2		Coil	
3	16-1551-2	Neoprene Washer	KP5781005
4	916-2921Z	Steel Washer	KP6081004
5	969-1162	Spring	KP6081005
6	17-207-16	Magnet Frame	KP5881002
7	1314-843	Copper Stud	KP6081007
8	979-8071	Bracket	KP6081008
9	914-3568C	Adjusting Stud	KP5981011
10	969-2001J	Spring	KP6081010
11	79-124-4	Contact Support Complete	KP5781008
12	911-373	Long Hex Screw	KP5581008
13	23-435	Contact	KP5581021
14	24-196-2	Contact Lever	KP5781012
15	24-196-5	Contact Lever w/o Arc Guard	KP5781013
16	69-58	Spring	KP5581025
17	13-84	Pin	KP5781016
18	916-1164Z	Shim Washer 016 Thick	KP5781017
18	16-319	Shim Washer 032 Thick	KP5781018
19	13-587	Adjusting Pin	KP5581027
20	29-541	Spring Ring	KP5581028
21	13-164	Shaft	KP5881023
22	24-1201-2	Armature Lever Complete	KP6081023
23	51-369	Plunger	KP6081024

24	6-168-10	Contact Set	KP5781028
29	6-168-10	Contact Set	KP5781028
30	911-5646Z	Contact Mounting Screw	KP5581023
31	62-234-6	Contact Support Complete	KP5781045
32	911-5646Z	Contact Mounting Screw	KP5581023
32	916-882Z	Washer	KP6081030
33	1314-844	Stud for 3/4 Panel	KP6081031
34	9-460-162	Blowout Coil	KP5781029
35	79-888	Support	KP5781030
36	17-2294	Base	KP5781031
37	11-1249	Screw	KP5781032
38	17-2291	Base R.H.	KP5781034
38	17-2292	Base L.H.	KP5781033
39	79-1677	Bracket	KP5781035
40	62-208	Pole Piece	KP5781036
41	17-2293	Side Plate	KP5781037
42	25-990	Connector	KP5781038
43	62-233	Arc Shield Complete	KP5781039
44	73-865	Arc Shield L.H.	KP5781040
44	73-864	Arc Shield R.H.	KP5781041
45	73-374	Arc Shield	KP5781042
46	62-93	Arc Horn	KP5781043
48	79-4288	Support Plate	KP5781046





KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com



Replacement Parts for:

No. 565 600 Amp Spring Closed D-C Contactor

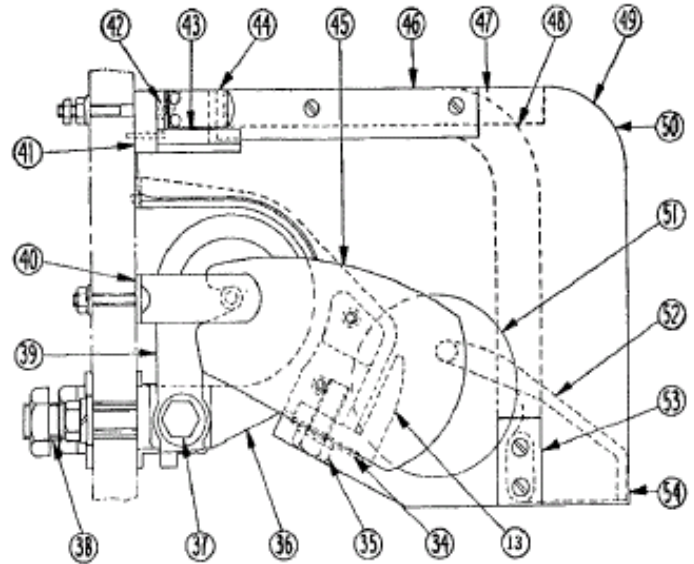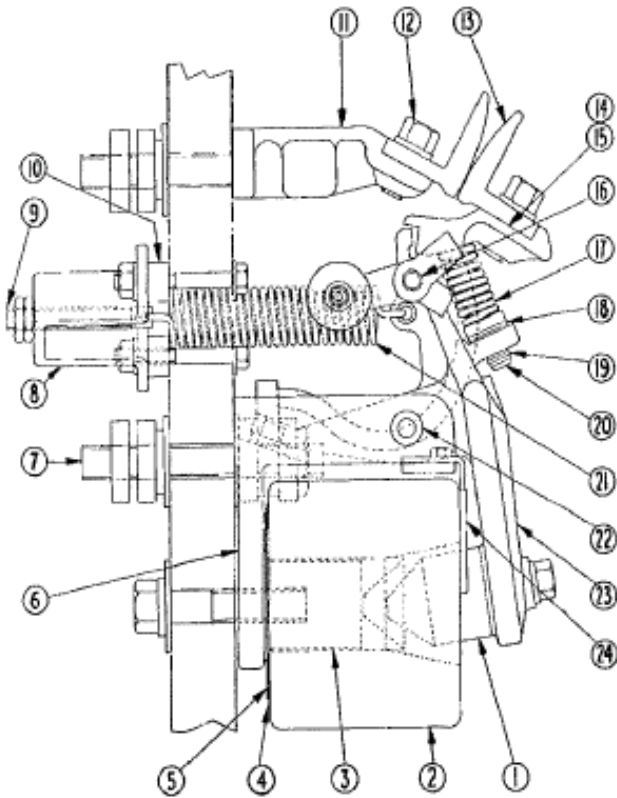

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51-343	Plunger	KP6181001	24	55-1667	Coil Clamp	KP6181024
2	911-5890Z	Screw	KP5881009	25	6-168-35	Set of Contacts	KP5881029
2		Coil		36	62-236-5	Contact Support Complete	KP5881031
3	51-342	Core	KP6181004	37	911-5890Z	Screw	KP5881009
4	4416-3	Bakelite Washer	KP6181005	38	14-256-12	Stud for 1" Panel	KP5881033
5	916-3042Z	Steel Washer	KP6181006	39	9-460-163	Blowout Coil	KP5881034
6	17-207-4	Magnet Frame	KP6181007	40	79-891	Support	KP5881035
7	1314-100	Pin for 1" Panel	KP5881001	41	17-2294	Base	KP5781031
8	979-1007J	Bracket	KP6181009	42	11-1249-2	Screw	KP5881037
9	14-311-11	Adjusting Stud	KP6181010	43	17-2292	Base L.H	KP5781033
10	929-1126Z	Spacer	KP6181011	43	17-2291	Base R.H	KP5781034
11	23-1289-3	Contact Support Complete	KP5881009	44	79-1677	Bracket	KP5781035
13	23-1225	Contact	KP5881012	45	62-98	Pole Piece	KP5881041
14	624-594	Contact Lever w/Connector	KP5881014	46	17-2295	Side Plate	KP5881042
15	24-1330	Contact Lever Complete	KP5881016	47	29-1127	Spacer	KP5881043
16	13-3961	Shaft	KP5881017	48	25-991	Connector	KP5881044
17	69-2376	Spring	KP5881018	49	62-235	Arc Shield Complete	KP5881045
18	916-1121Z	Washer	KP5881019	50	73-268	Arc Shield (Right Half)	KP5881046
19	29-541	Spring Ring	KP5881028	50	73-267	Arc Shield (Left Half)	KP5881047
20	13-593	Adjusting Pin	KP5881021	51	73-243	Arc Shield	KP5881048
21	69-445	Spring	KP6181021	52	62-99	Arc Horn	KP5881049
22	13-155	Shaft	KP6181022	53	17-1250	Side Plate	KP5881050
23	24-1274	Armature Lever	KP6181023	55	6-168-35	Set of Contacts	KP5881029

Replacement Parts for: No. 570 100 Amp D-C Contactor

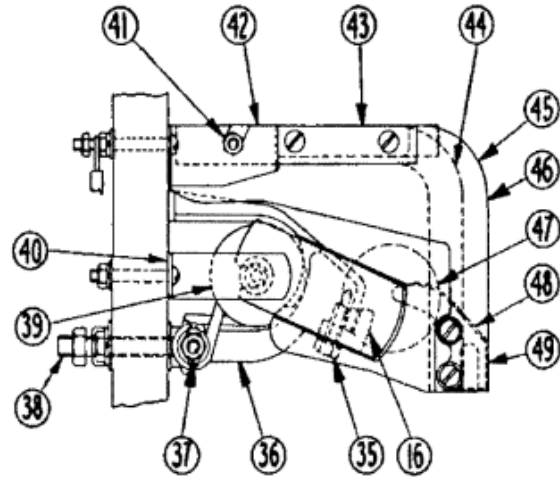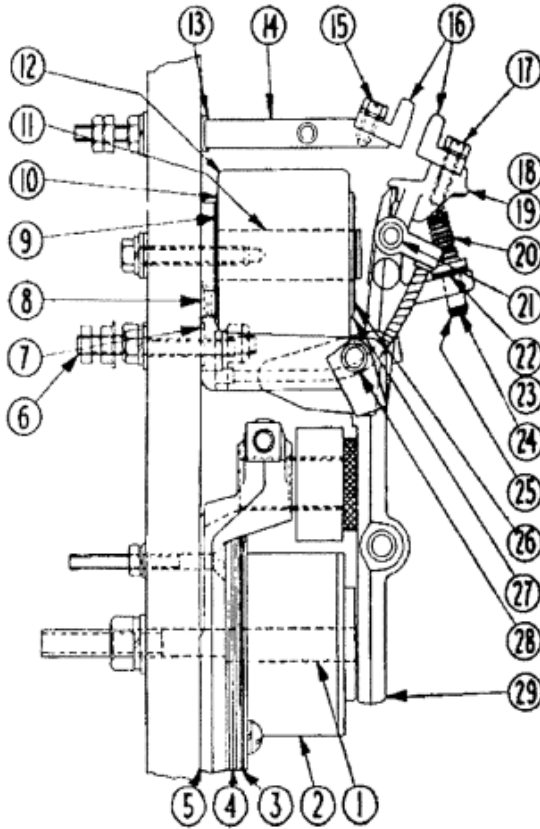


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	618-351	Post	KP6281001	23	916-174	Washer 032 Thick	KP6281024
2		Coil		24	29-531	Retaining Ring	KP5681022
3	19-1367	Shim	KP6281003	25	13-591	Adjusting Pin	KP5681021
4	19-1366	Shim	KP6281004	26	16-391	Brass Washer	KP5681023
5	17-2134	Base Assembly	KP6281005	27	16-390	Bakelite Washer	KP5681024
6	814-567	Stud	KP6281006	28	13-163	Shaft	KP5681025
7	17-207-6	Magnet Frame	KP5681004	29	624-650	Armature Lever	KP6281030
8	69-2312	Spring	KP5481019	30	6-168-29	Set of Contacts	KP5981027
9	16-1552	Steel Washer	KP5681007	35	911-5445Z	Long Hex Screw	KP5481022
10	16-1551-3	Neoprene Washer	KP5681006	36	18-739	Contact Support Complete	KP5681040
11	51-177	Coil Core	KP5681009	37	911-5445Z	Long Hex Screw	KP5481022
12		Coil		38	814-266	Stud For 3/4" Panel	KP5681002
13	933-242ZI	Locking Clip	KP5681008	39		Blowout Coil	
14	618-331	Contact Support Complete	KP6281014	40	79-845	Support	KP5681032
15	911-5445FZ	Contact Screw	KP5681011	41	14-359-2	Stud	KP5681033
16	23-812	Contact, Silver Tipped	KP5681013	43	17-1523	Side Plate	KP5681034
16	1321-841	Contact	KP5981017	44	25-812	Connector	KP5681035
17	911-5447FZ	Contact Screw	KP5681015	45	62-121	Arc Shield, Complete	KP5681038
18	24-1321-2	Contact Lever w/Connector	KP5681016	48	62-100	Arc Horn	KP5681038
19	24-792-5	Contact Lever Complete	KP6281020	49	62-86-7	Blowout Complete	KP5681039
20	969-439	Spring	KP5981020				
21	956-1838	Pin	KP5981021				
22	16-320	Washer 016 Thick	KP5681020				



KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for: No. 572 300 Amp D-C Contactor

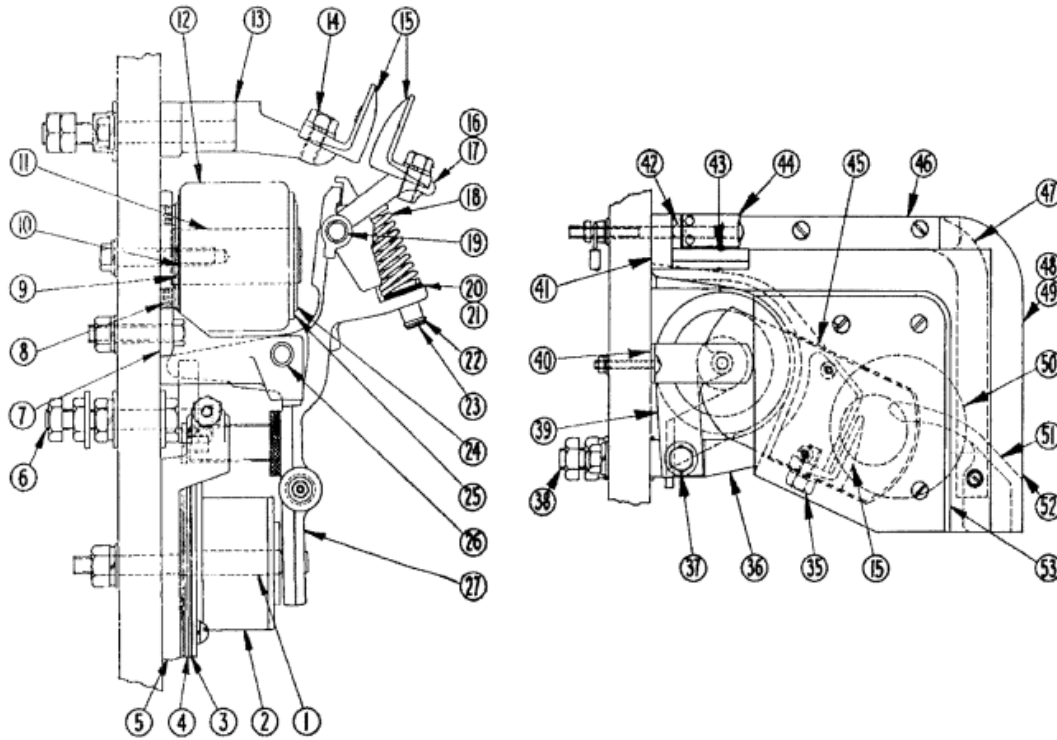

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	618-351	Post	KP6281001	45	62-208	Pole Piece	KP5781036
2		Coil		46	17-2293	Side Plate	KP5781037
3	19-1367	Shim	KP6281003	17	24-196-5	Contact Lever w/o Arc Guard	KP5781013
4	19-1366	Shim	KP6281004	47	25-990	Connector	KP5781038
5	17-2134-2	Base	KP6381005	18	69-58	Spring	KP5581025
6	1314-843	Copper Stud	KP6081007	48	62-233	Arc Shield Complete	KP5781039
7	17-207-15	Magnet Frame	KP5781003	19	13-84	Pin	KP5781016
8	969-1162	Spring	KP6081005	49	73-865	Arc Shield L.H	KP5781040
9	916-2882Z	Steel Washer	KP5781004	20	916-1164Z	Shim Washer 016 Thick	KP5781017
10	16-1551-2	Neoprene Washer	KP5781005	49	73-864	Arc Shield R.H	KP5781041
13	79-124-4	Contact Support Complete	KP5781008	21	16-319	Shim Washer 032 Thick	KP5781018
14	911-373	Long Hex Screw	KP5581008	50	73-374	Arc Shield	KP5781042
15	23-435	Contact	KP5581021	22	29-541	Spring Ring	KP5581028
16	24-196-2	Contact Lever	KP5781012	51	62-93	Arc Horn	KP5781043
35	911-5646Z	Contact Mounting Screw	KP5581023	23	13-587	Adjusting Pin	KP5581027
36	62-234-6	Contact Support Complete	KP5781045	52	62-234	D-C Blowout Complete	KP5781047
37	911-5646Z	Contact Mounting Screw	KP5581023	24	16-252	Brass Washer	KP5781021
37	916-882Z	Washer	KP6081030	52	62-234-2	D-C Blowout Complete	KP5781048
38	1314-844	Stud for 3/4 Panel	KP6081031	25	16-253	Bakelite Washer	KP5781022
39	9-460-162	Blowout Coil	KP5781029	52	62-234-3	D-C Blowout Complete	KP5781049
40	79-888	Support	KP5781030	26	13-170	Shaft	KP5781023
41	17-2294	Base	KP5781031	52	62-234-4	D-C Blowout Complete	KP5781050
42	11-1249	Screw	KP5781032	27	24-184-2	Shaft	KP6381049
43	17-2292	Base L.H	KP5781033	53	79-4288	Support Plate	KP5781046
43	17-2291	Base R.H	KP5781034	28	6-168-33	Renewal Set of Contacts	KP6381051
44	79-1677	Bracket	KP5781035	54	6-168-10	Contact Set	KP5781028





KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com



Replacement Parts for:

No. 575 600 Amp D-C Contactor

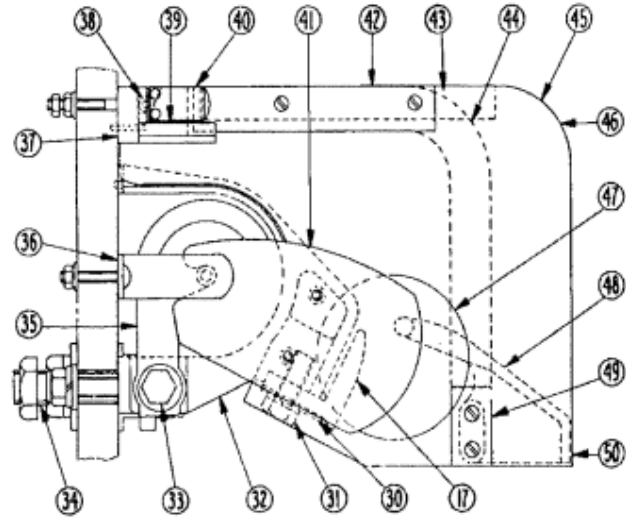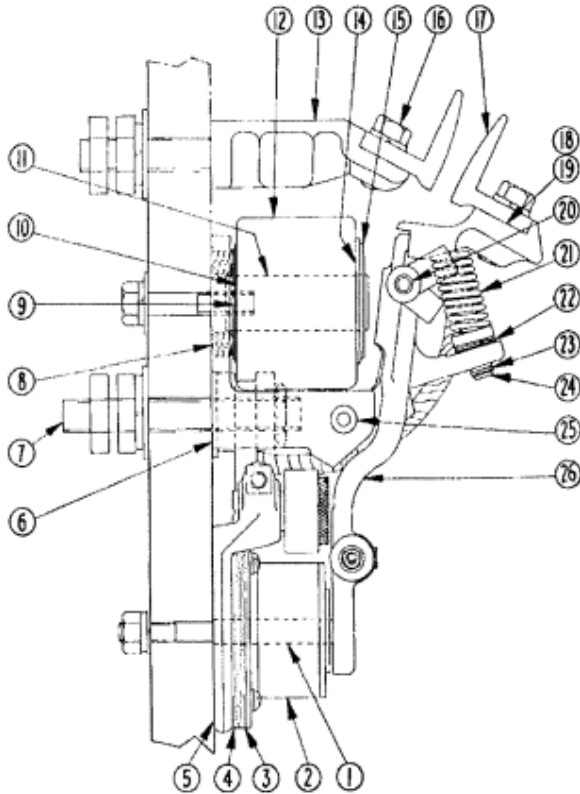


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	618-351	Post	KP6281001	25	13-164	Shaft	KP5881023
2		Coil		26	24-816-2	Armature Lever	KP6481026
3	19-1367	Shim	KP6281003	27	6-138-35	Set of Contacts	KP6481027
4	19-1366	Shim	KP6281004	31	911-5890Z	Screw	KP5881009
5	17-2134-2	Base	KP6381005	32	62-236-5	Contact Support Complete	KP5881031
6	17-207-16	Magnet Frame	KP5881002	33	911-5890Z	Screw	KP5881009
7	1314-100	Stud	KP5881001	34	14-256-12	Stud	KP5881033
8	969-1162	Spring	KP6081005	35	9-460-163	Coil	KP5881034
9	916-2921Z	Steel Washer	KP6081004	36	79-891	Support	KP5881035
10	16-1551-2	Neoprene Washer	KP5781005	37	17-2294	Base	KP5781031
11	51-979	Core	KP5581043	38	11-1249-2	Screw	KP5881037
12		Coil		39	17-2292	Base L.H	KP5781033
13	23-1289-3	Contact Support Comp	KP5881010	39	17-2291	Base R.H	KP5781034
14	16-253	Bakelite Washer	KP5781022	40	79-1677	Bracket	KP5781035
15	16-426	Brass Washer	KP5881010	41	62-98	Pole Piece	KP5881041
16	911-5890Z	Screw	KP5881009	42	17-2295	Side Plate	KP5881042
17	23-1225	Contact	KP5881013	43	29-1127	Spacer	KP5881043
18	624-594	Contact Lever w/Connector	KP5881014	44	25-991	Connector	KP5881044
19	24-1330	Contact Lever Complete	KP5881016	45	62-235	Arc Shield Complete	KP5881045
19	17-1250	Side Plate	KP5881050	46	73-268	Arc Shield (Right Half)	KP5881046
20	13-3961	Shaft	KP5881017	46	73-267	Arc Shield (Left Half)	KP5881047
21	69-2376	Spring	KP5881018	47	73-243	Arc Shield	KP5881048
23	29-541	Spring Ring	KP5581028	48	62-99	Arc Horn	KP5881049
24	13-593	Adjusting Pin	KP5881021				

Replacement Parts for: No. 580 100 Amp Double Pole D-C Contactor

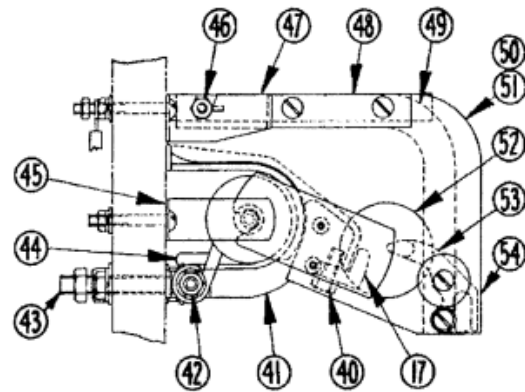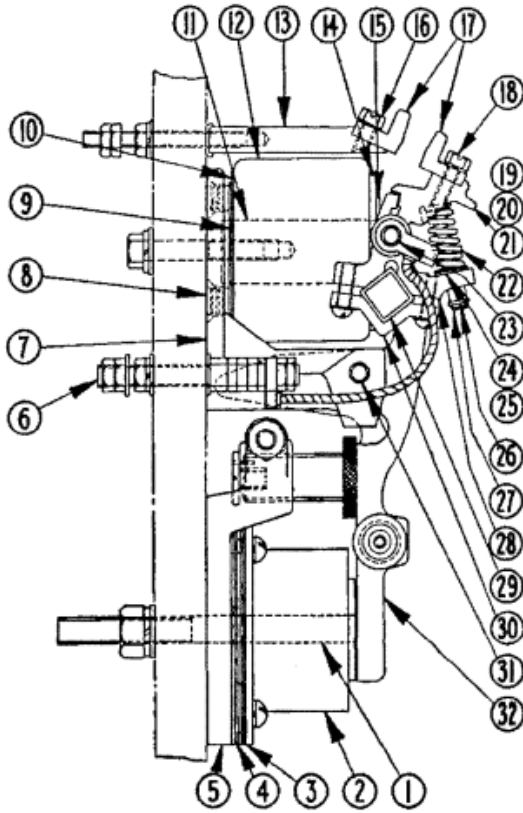

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	618-351	Post	KP6281001	24	16-320	Washer	KP5681020
3	19-1367	Shim	KP6281003	25	916-174	Washer	KP6281024
4	19-1366	Shim	KP6281004	26	29-531	Retaining Ring	KP5681022
5	17-2134-2	Base	KP6381005	27	13-591	Adjusting Pin	KP5681021
6	14-274-22	Stud for 1-11/2" Panel	KP6581005	28	24-864	Lever	KP6581028
7	17-207-15	Magnet Frame	KP5781003	29	29-722	Insulating Tube	KP6581029
8	969-1162	Spring	KP6081005	30	955-51	Clamp	KP6581030
9	916-2882Z	Steel Washer	KP5781004	31	13-170	Shaft	KP5781023
10	16-1551-2	Neoprene Washer	KP5781005	32	24-1275	Armature Lever	KP6581032
11	51-92	Coil Core	KP5781007	33	6-168-37	Set of Contacts	KP6581033
13	618-407	Contact Support Complete	KP5681010	40	911-5445Z	Long Hex Screw	KP5481022
14	16-253	Bakelite Washer	KP5781022	41	18-739	Contact Support Complete	KP5681040
15	16-252	Brass Washer	KP5781021	42	911-5445Z	Long Hex Screw	KP5481022
16	911-5445FZ	Contact Screw	KP5681011	43	814-266	Stud For 3/4" Panel	KP5681002
17	1321-841	Contact	KP5981018	45	79-845	Support	KP5681032
17	23-812	Contact, Silver Tipped	KP5681013	46	14-359-2	Stud	KP5681033
18	911-5448F1	Contact Screw	KP6581017	48	17-1523	Side Plate	KP5681034
19	24-1321-2	Contact Lever w/Connector	KP5681016	49	25-812	Connector	KP5681035
20	24-1321-4	Contact Lever Left Hand	KP6581019	50	62-121	Arc Shield, Complete	KP5681039
21	24-792-5	Contact Lever Complete	KP6281020	52	73-242	Arc Shield	KP5681037
21	624-578	Contact Lever Left Hand	KP6581021	53	62-100	Arc Horn	KP5681038
22	969-439	Spring	KP5981020	54	62-86-7	Blowout Complete 3/4" Panel	KP5681039
23	956-1838	Pin	KP5981021				

Replacement Parts for: No. 582 300 Amp Double Pole D-C Contactor

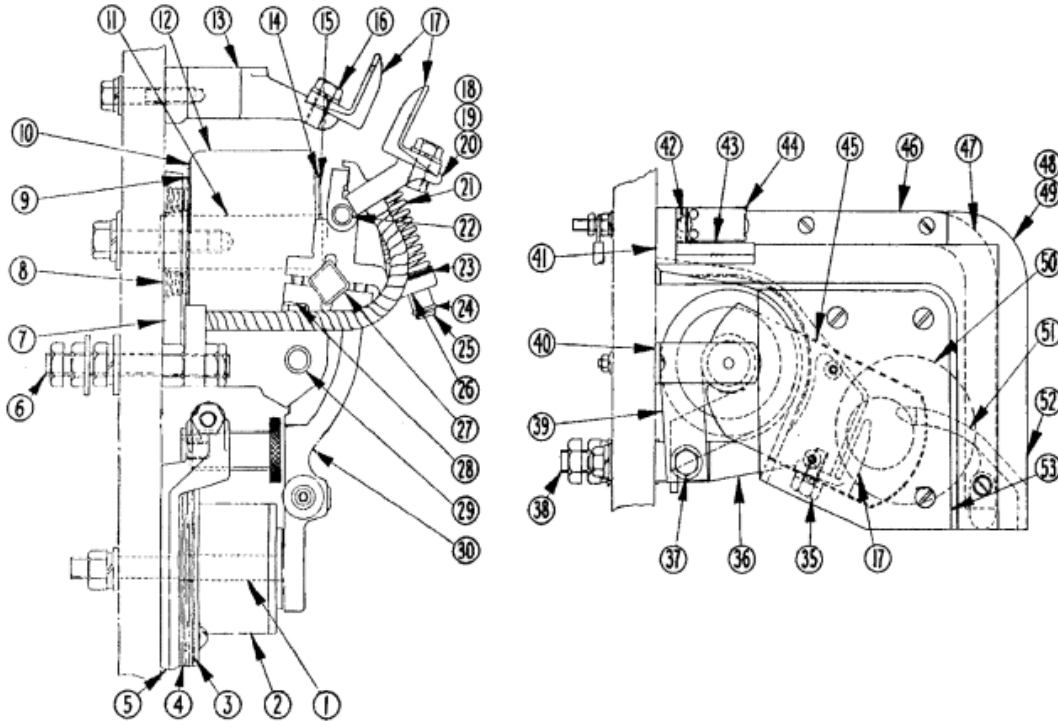

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	618-351	Post	KP6281001	29	13-164	Shaft	KP5881023
2		Coil		35	911-5646Z	Contact Mounting Screw	KP5581023
3	19-1367	Shim	KP6281003	36	62-234-6	Contact Support Complete	KP5781045
4	19-1366	Shim	KP6281004	37	911-5646Z	Contact Mounting Screw	KP5581023
5	17-2134-2	Base	KP6381005	38	14-256-18	Stud For Panel	KP6681031
6	1314-844	Stud for Panel	KP6081031	39	9-460-162	Blowout Coil	KP5781029
7	17-207-16	Magnet Frame	KP5881002	40	79-888	Support	KP5781030
9	916-2921Z	Steel Washer	KP6081004	41	17-2294	Base	KP5781031
10	16-1551-2	Neoprene Washer	KP5781005	42	11-1249	Screw	KP5781032
11	51-200	Core	KP6681010	43	17-2291	Base R.H	KP5781034
12	969-1162	Spring	KP6081005	43	17-2292	Base L.H	KP5781033
12		Coil		44	79-1677	Bracket	KP5781035
14	16-253	Bakelite Washer	KP5781022	44	73-865	Arc Shield L.H	KP5781040
15	16-426	Brass Washer	KP5881010	45	62-208	Pole Piece	KP5781036
16	911-373	Long Hex Screw	KP5581008	46	17-2293	Side Plate	KP5781037
17	23-435	Contact	KP5581021	47	25-990	Connector	KP5781038
18	24-196-2	Contact Lever	KP5781012	48	62-233	Arc Shield Complete	KP5781039
19	26-196-4	Contact Lever (Left Hand)	KP6681018	49	73-864	Arc Shield R.H	KP5781041
20	24-196-5	Contact Lever w/o Arc Guard	KP5781013	49	73-374	Arc Shield	KP5781042
21	62-93	Arc Horn	KP5781043	50	69-58	Spring	KP5581025
22	13-84	Pin	KP5781016	52	62-234-4	D-C Blowout Complete	KP5781050
23	916-1164Z	Shim Washer 016 Thick	KP5781017	52	62-234	D-C Blowout Complete	KP5781047
24	29-541	Spring Ring	KP5581028	52	62-234-3	D-C Blowout Complete	KP5781049
25	13-587	Spring Ring	KP5581027	52	62-234-2	D-C Blowout Complete	KP5781048
27	29-735	Insulating Tube	KP6681025	53	79-4288	Support Plate	KP5781046
28	55-217	Clamp	KP5581050				





KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com



Replacement Parts for:

No. 590 100 Amp Double Pole D-C Contactor

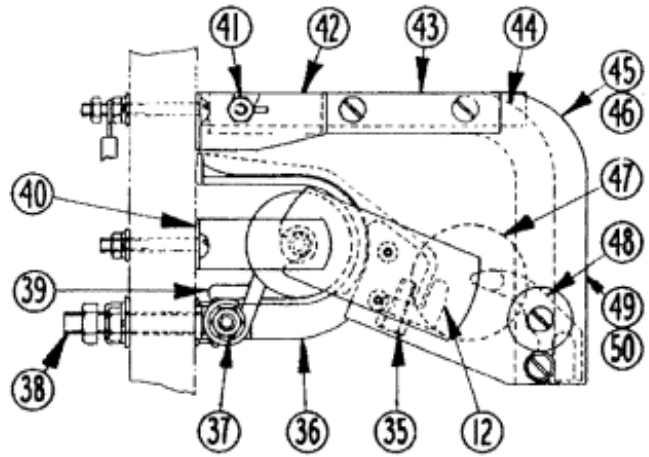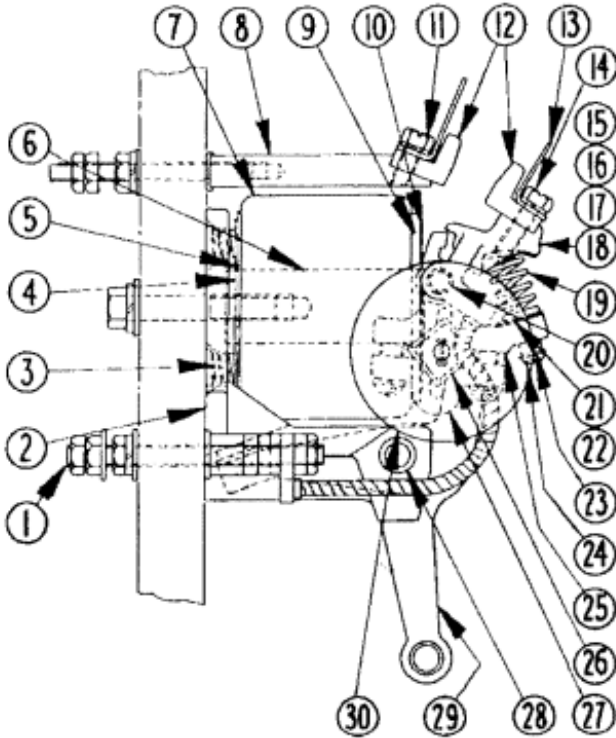

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	14-274-22	Stud for 1-1/2" Panel	KP6581005	22	916-174	Washer 032 Thick	KP6281024
2	17-207-15	Magnet Frame	KP5781003	23	29-531	Retaining Ring	KP5681022
3	69-2441	Spring	KP5781002	24	13-591	Adjusting Pin	KP5681021
4	916-2882Z	Steel Washer	KP5781004	25	24-864	Lever	KP6581028
5	16-1551-2	Neoprene Washer	KP5781005	26	29-1336	Insulating Tube	KP6781029
6	51-92	Coil Core	KP5781007	27	955-51	Clamp	KP6581030
7		Coil		28	13-170	Shaft	KP5781023
8	618-407	Contact Support Complete	KP5681010	29	24-1404	Armature Lever	KP6781032
9	16-253	Bakelite Washer	KP5781022	30	16-840-21	Insulating Washer	KP5581029
10	16-252	Brass Washer	KP5781021	31	6-168-37	Set of Contacts	KP6581033
11	911-5445FZ	Contact Screw	KP5681011	35	911-5445Z	Long Hex Screw	KP5481022
12	23-812	Contact, Silver Tipped	KP5681013	36	18-739	Contact Support Complete	KP5681040
12	23-3514	Contact	KP5681014	37	911-5445Z	Long Hex Screw	KP5481022
13	49-240	Arc Guard	KP5681012	38	814-266	Stud For 3/4" Panel	KP5681002
14	911-5448F1	Contact Screw	KP6581017	39		Blowout Coil	
15	24-1321-2	Contact Lever w/Connector	KP5681016	40	79-845	Support	KP5681032
16	24-1321-4	Contact Lever Left Hand	KP6581019	41	14-359-2	Stud	KP5681033
17	24-792-5	Contact Lever Complete R.H	KP6281020	43	17-1523	Side Plate	KP5681034
17	624-578	Contact Lever Left Hand	KP6581021	44	25-812	Connector	KP5681035
18	24-792	Contact Lever Complete	KP5681017	45	62-121	Arc Shield, Complete	KP5681040
18	55020-1	Contact Lever Left Hand	KP6781021	47	73-242	Arc Shield	KP5681037
19	69-2375	Spring	KP5681018	48	62-100	Arc Horn	KP5681038
20	13-4634	Pin	KP5681019	49	62-86-7	Blowout Complete 3/4" Panel	KP5681039
21	16-320	Washer 016 Thick	KP5681020				

Replacement Parts for: No. 912 50 Amp Single Pole D-C Contactor

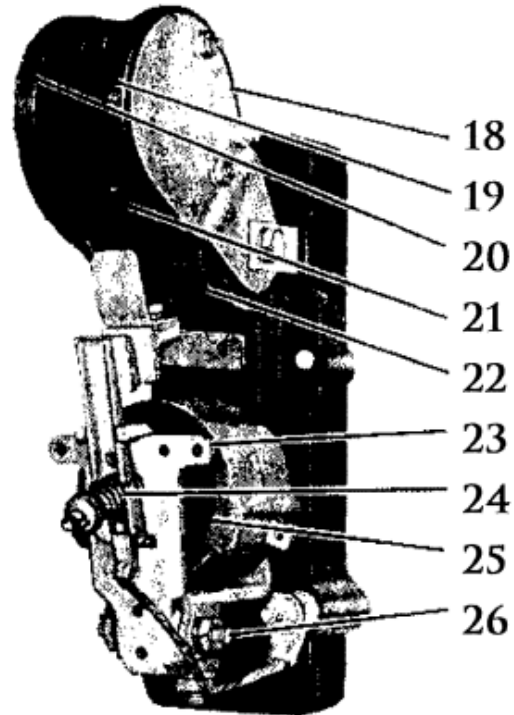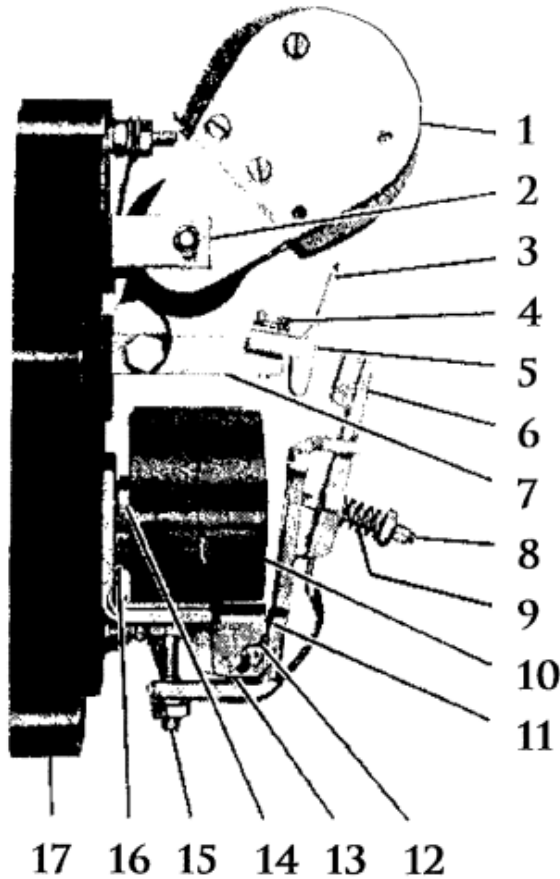

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	62-474	Blowout Complete	KP6881001	14	51-64	Core	KP5481018
2	79-5375-2	Bracket	KP6881002	15	916-198	Lock washer	KP6881019
3	62-440	Arc Guard	KP6881003	15	915-803Z	Nut	KP6881020
4	911-5445Z	Long Hex Screw	KP5481022	15	11-1812	Adjusting Screw	KP6881021
4	916-682Z	Lock washer	KP6881005	16	69-2312	Spring	KP5481019
5	23-1258	Contact (Silver Faced)	KP5481004	17	81-7302	Molded Base	KP6881023
5	23-3286	Contact	KP5481003	17	81-7145	Molded Base	KP6881024
6	40-522	Contact (Silver Faced)	KP5481005	18	62-474-3	Pole Piece	KP6881025
6	40-522-4	Finger	KP5481024	19	73-1194	Arc Shield	KP6881026
7	18-1395-2	Contact Post	KP6881010	20	73-1194-2	Arc Shield	KP6881027
7	18-1395	Contact Post	KP6881011	21	23-3311-3	Protecting Clip	KP5481037
8	15-797	Self Locking Cup Nut	KP6881012	23	24-4025-2	Armature Lever	KP6881029
9	69-95	Spring	KP5481009	24	49-1204-13	Spring Gland	KP5481025
10		Coil		25	4416-134	Washer	KP5481010
11	69-179	Spring	KP5481011	26	13-3239-2	Shaft	KP6881032
12	13-3186	Spring Pin	KP6881016	27	80-1696-2	Power Terminal Pressure Lug	KP6881033
13	17-6904	Magnet Frame	KP6881017				





KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:

No. 913 100 Amp Single Pole D-C Contactor

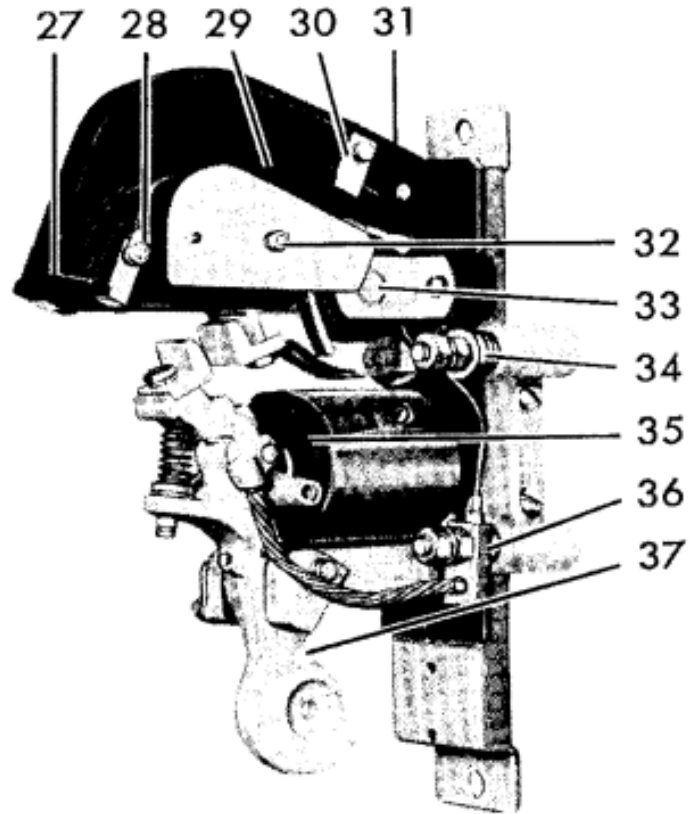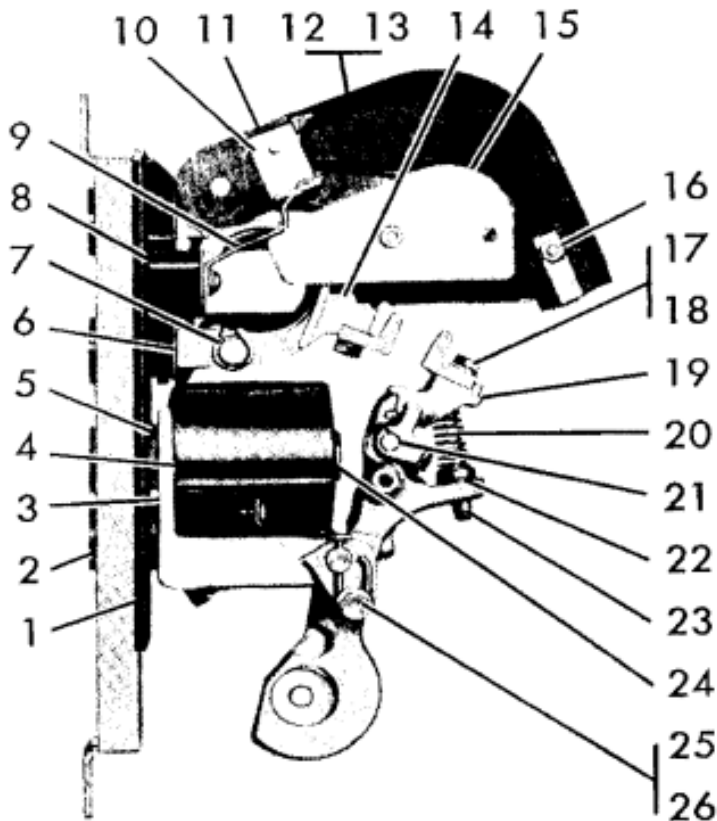

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3671	Insulator	KP6981001	21	13-4330	Shaft	KP6981021
3	17-7114	Magnet Frame	KP6981002	22	16-320	Washer 016 Thick	KP5681020
4		Coil		23	13-591	Adjusting Pin	KP5681021
5	16-2315	Washer	KP5581005	24	51-885	Core	KP6981024
6	16-2359	Shim Washer	KP6981005	25	13-3859	Shaft	KP6981025
7	911-5446Z	Screw	KP5481001	26	911-5447Z	Long Hex Screw	KP6981026
8	17-7117	Moulded Base	KP6981007	26	13-3860	Pin	KP6981027
9	52-859	Latch	KP6981008	27	73-1630	Arc Deflector	KP6981028
10	52-876	Hasp	KP6981009	28	79-9197-5	Bracket	KP6981029
11	62-446-2	Arc Shield (Left Hand)	KP6981010	29	25-1927	Connector	KP6981030
12	62-562	Blowout Complete	KP6981011	30	19-1248-3	Clamp	KP5581038
13	62-562-2	Arc Shield, Complete	KP6981012	31	62-446	Arc Shield (Right Hand)	KP6981032
14	18-1378	Contact Post	KP6981013	32	11-862	Screw	KP6981033
15	62-463	Pole Piece	KP6981014	33		Blowout Coil	
16	62-444	Arc Horn	KP6981015	34	25-1798	Connector	KP6981035
17	23-812	Contact, Silver Tipped	KP5681013	35	55-1454	Coil Clamp	KP6981036
17	23-3514	Contact	KP5681014	36	24-4123-2	Contact Lever w/Connector	KP6981037
18	911-5445Z	Long Hex Screw	KP5481022	37	24-4122	Armature Lever	KP6981038
19	24-4123	Contact Lever, Complete	KP6981019	37	18-1576	Stop	KP5581047
20	69-2375	Spring	KP5681018				





KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:

No. 914 150 Amp Single Pole D-C Contactor

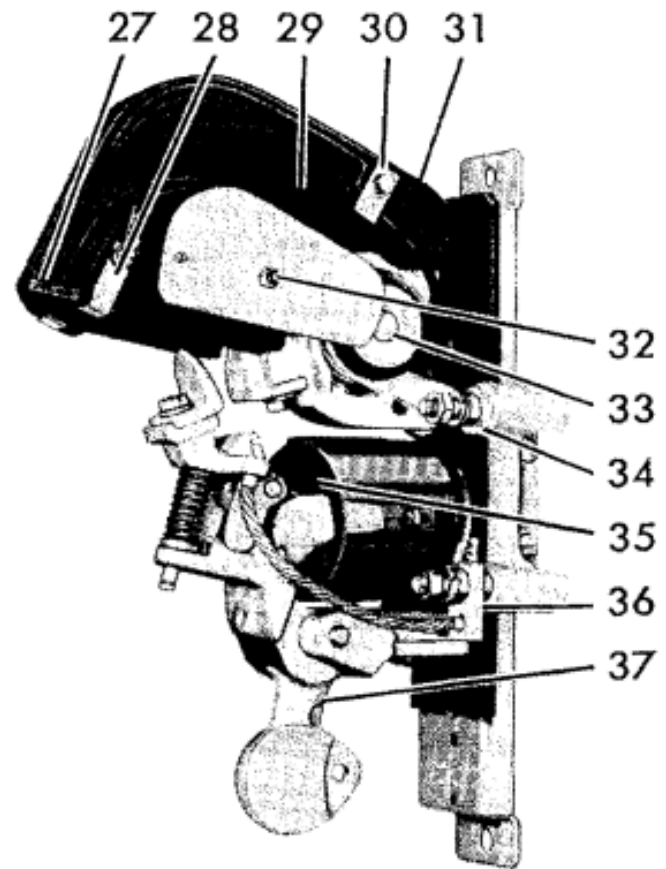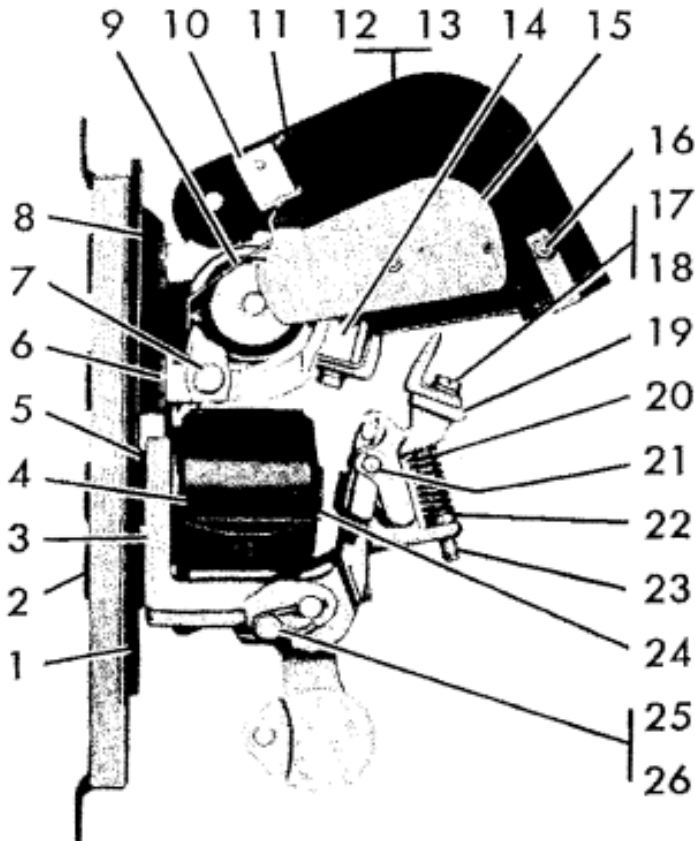

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3677	Insulator	KP7081001	21	29-531	Retaining Ring	KP5681022
3	17-11147	Magnet Frame	KP7081002	22	16-320	Washer	KP5681020
4		Coil		23	13-734	Adjusting Pin	KP7081024
5	16-2315	Washer	KP5581005	23	29-531	Retaining Ring	KP5681022
6	16-2359	Shim Washer	KP6981005	24	51-881	Core	KP7081026
7	911-5607Z	Hex Screw	KP7081006	25	13-3859-2	Shaft	KP7081027
8	17-7117	Moulded Base	KP6981007	26	13-3860	Pin	KP6981027
9	52-877	Latch	KP7081008	27	73-1631	Arc Deflector	KP7081029
10	52-876	Hasp	KP6981009	28	79-9197-6	Bracket	KP7081030
11	62-439	Arc Shield L.H	KP7081010	29	25-1927-2	Connector	KP7081031
12	62-563	B/O Complete	KP7081011	30	19-1248-3	Clamp	KP5581039
13	62-563-2	Arc Shield Complete	KP7081012	31	62-432	Arc Shield R.H	KP7081033
14	18-1376	Contact Post	KP7081013	32	11-863	Screw	KP7081034
15	62-465	Pole Piece	KP7081014	33	9-460-434	Blowout Coil	KP7081035
16	62-431	Arc Horn	KP7081015	34	25-1790	Connector	KP7081036
17	23-717	Contact	KP7081016	35	55-1452	Coil Clamp	KP7081037
17	23-813	Contact, Silver Faced	KP7081017	36	24-4119-2	Contact Lever w/Connector	KP7081038
18	911-5606FZ	Contact Screw	KP7081018	37	24-4130	Armature Lever	KP7081039
19	24-4119	Contact Lever Complete	KP7081019	37	18-1576	Stop	KP5581047
20	69-432	Spring	KP7081020				
21	13-4330	Shaft	KP6981021				





KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com



Replacement Parts for:

No. 915 300 Amp Single Pole D-C Contactor

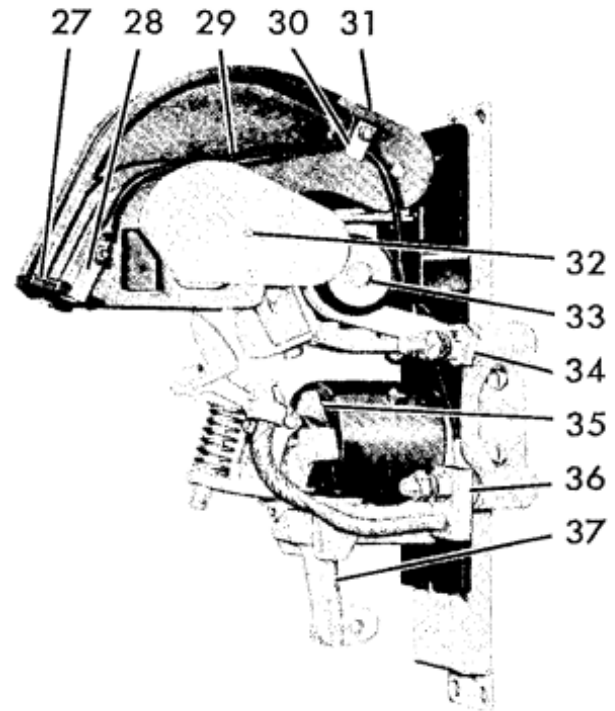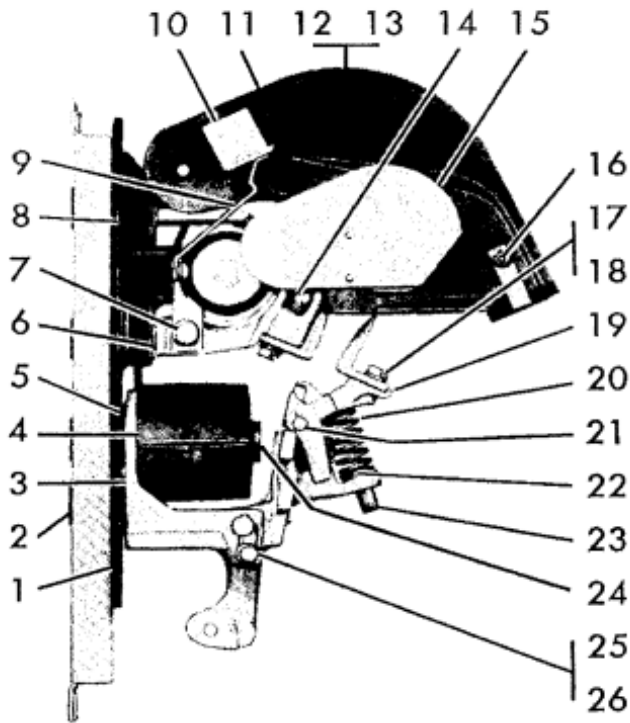

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3682	Insulator	KP7181001	22	16-319	Shim Washer	KP5781018
2	56-2698	Insulator	KP7181002	22	916-225	Shim Washer	KP5581026
2	16-1837	Disc	KP7181003	23	13-587	Adjusting Pin	KP5581027
2	56-2698-2	Insulator	KP5581002	23	29-541	Spring Ring	KP5581028
3	17-7193	Magnet Frame	KP7181005	24	51-896	Core	KP7181031
4	9-1589-1	Coil, 230 VDC	KP7181006	25	13-3859-3	Shaft	KP7181032
5	16-2315	Washer	KP5581005	26	13-3860	Pin	KP6981027
6	16-1879	Shim Washer	KP5581007	26	911-5446Z	Screw	KP5481001
7	911-373	Long Hex Screw	KP5581008	26	916-682Z	Lock washer	KP6881005
8	17-7589	Molded Base	KP5581009	26	916-641Z	Washer	KP5481023
9	52-880	Latch	KP5581010	27	73-1632	Arc Deflector	KP5581034
10	52-879	Hasp	KP5581011	28	79-9197-3	Bracket	KP5581038
11	62-454-2	Arc Shield (Left Hand)	KP5581012	29	25-1927-3	Connector	KP7181039
12	62-564	B/O Complete	KP7181014	30	19-1248-3	Clamp	KP5581040
13	62-564-2	Arc Shield, Complete	KP7181015	3 L	62-454	Arc Shield (Right Hand)	KP5581035
14	18-1410	Contact Post w/Copper Contact	KP5581015	32	916-101	Tooth Lock washer	KP5581040
15	62-452	Pole Piece	KP5581018	32	811-1664	Lg Flathead Screw	KP5581039
16	62-561	Arc Horn	KP5581019	33	9-460-437	Blowout Coil	KP5581041
17	23-435	Contact	KP5581021	34	916-231	Lock washer	KP7181045
17	23-1042-2	Silver Faced Contact	KP5581022	34	911-373	Long Hex Screw	KP5581008
18	911-5646Z	Contact Mounting Screw	KP5581023	34	25-1816	Connector	KP5581042
19	24-4175	Contact Lever Complete	KP7181022	35	55-1451	Coil Clamp	KP7181048
20	69-58	Spring	KP5581025	36	24-4175-2	Contact Lever w/Connector	KP7181049
21	13-4330-2	Shaft with clips	KP5581052	37	18-1576	Stop	KP5581047
21	28-42	Retaining Ring	KP5581053	37	24-4177	Armature Lever	KP7181051
22	916-1164Z	Shim Washer	KP5781017				



Replacement Parts for: No. 916 600 Amp Single Pole D-C Contactor

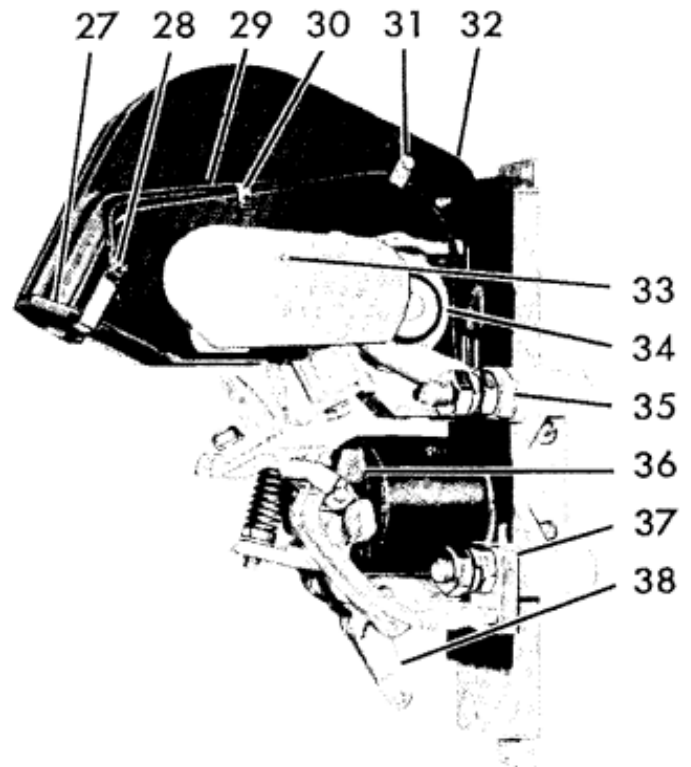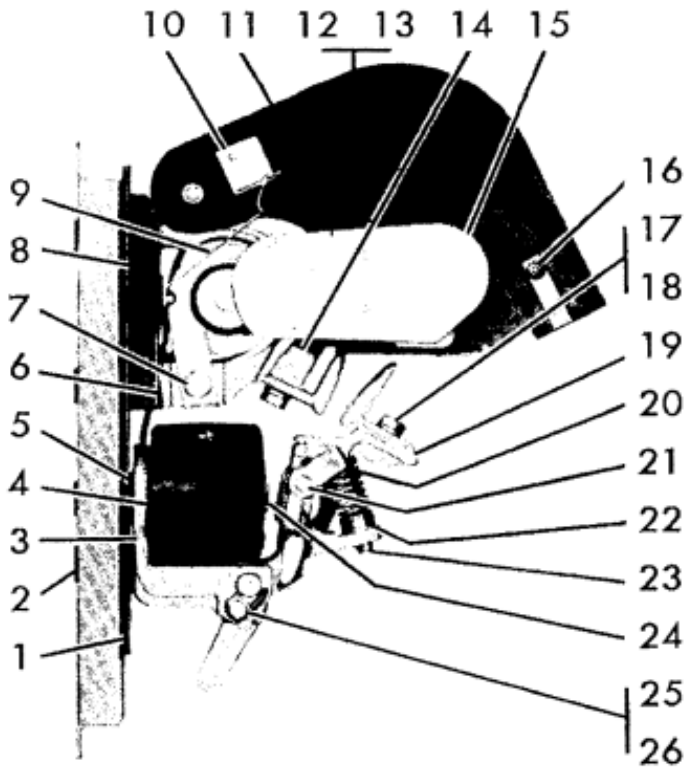

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3686	Insulator	KP7281001	21	29-1264	Retaining Ring	KP7281023
3	17-7275	Magnet Frame	KP5581003	21	13-4330-3	Shaft	KP7281024
4		Coil		22	916-1164Z	Shim Washer 016 Thick	KP5581017
5	16-2315	Washer	KP5581005	23	29-541	Spring Ring	KP5581028
5	16-2316	Washer (Top)	KP5581006	23	13-593	Adjusting Pin	KP5881021
6	16-1879	Shim Washer	KP5581007	24	51-979	Core	KP5581043
7	911-5890Z	Screw	KP5881009	25	13-3859-4	Shaft	KP5581046
8	17-7340	Moulded Base	KP7281008	26	911-5606Z	Contact Screw	KP7281030
9	52-853	Latch	KP7281009	26	13-3862	Pin	KP5581030
10	52-879	Hasp	KP5581011	27	73-1633	Arc Deflector	KP7281032
12	62-565	Blowout Complete	KP7281011	28	79-9197-4	Bracket	KP7281033
13	62-565-3	Arc Shield Complete	KP7281012	29	25-1927-4	Connector	KP7281034
14	18-1417	Contact Post	KP7281013	30	79-4180-26	Clamp	KP7281035
15	62-457	Pole Piece	KP7281014	31	19-1248-3	Clamp	KP5581041
15	62-459	Inner Arc Shield	KP7281015	33	11-863	Screw	KP7081034
15	19-945-7	Strap	KP7281016	34	9-460-438	Blowout Coil	KP7281038
16	62-561-2	Arc Horn	KP7281017	35	25-1850	Connector	KP7281039
17	23-1288	Contact w/Silver Inscr	KP7281018	36	55-1553	Coil Clamp	KP5581055
17	23-4026	Contact	KP7281019	37	24-4205-2	Contact Lever w/Connector	KP7281041
18	911-5888Z	Contact Mounting Screw	KP3005017	38	18-1576	Stop	KP5581047
19	24-4205	Contact Lever Complete	KP7281021	38	24-4206-2	Armature Lever	KP7281043
20	69-2376	Spring	KP5881018				



Replacement Parts for:

No. 920 810 Amp Single Pole D-C Contactor

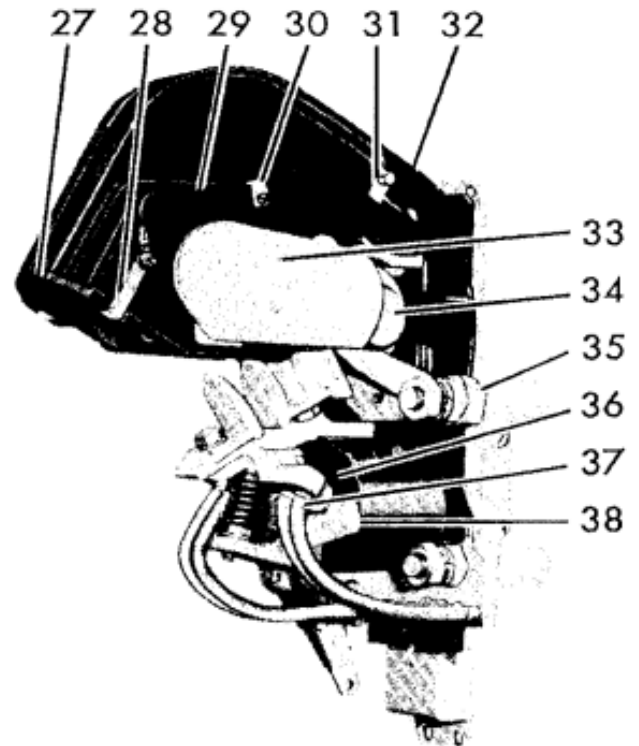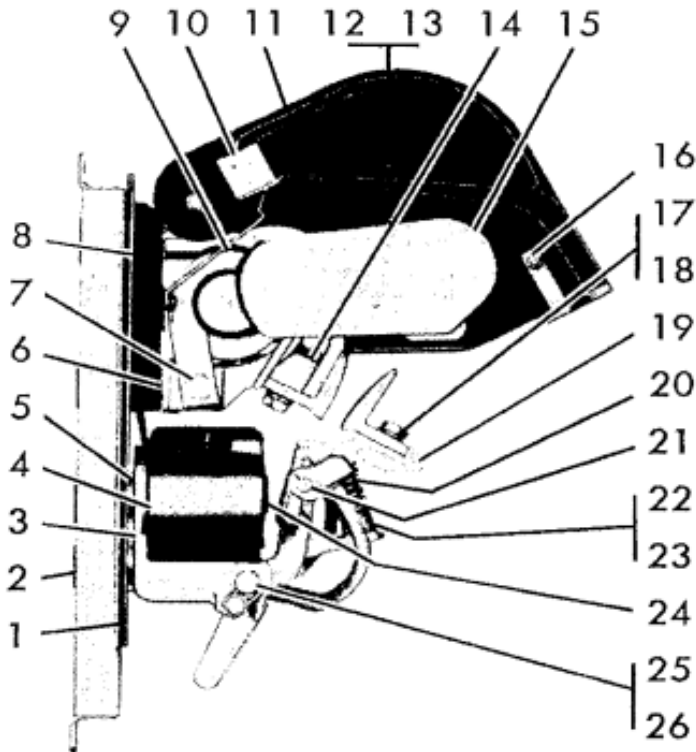



REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3686	Insulator	KP7281001	19	24-4584	Contact Lever Complete	KP7381024
2	56-2698-2	Insulator	KP5581002	20	69-2376	Spring	KP5881018
3	17-7275	Magnet Frame	KP5581003	21	13-4330-3	Shaft	KP7281024
4		Coil		21	29-1264	Retaining Ring	KP7281023
5	16-2315	Washer	KP5581005	22	916-1164Z	Shim Washer	KP5781017
5	16-2316	Washer(Top)	KP5581006	23	13-593	Adjusting Pin	KP7381029
6	16-1879	Shim Washer	KP5581007	23	29-541	Spring Ring	KP5581028
7	911-5890Z	Screw	KP5881009	24	51-979	Core	KP5581043
8	17-7340	Moulded Base	KP7281008	25	13-3859-4	Shaft	KP5581046
9	52-853	Latch	KP7281009	26	13-3862	Pin	KP5581030
10	52-879	Hasp	KP5581011	27	73-1633	Arc Deflector	KP7281032
11	62-460-2	Arc Shield L.H	KP7381012	28	79-9197-4	Bracket	KP7281033
12	62-565-2	Blowout Complete	KP7381013	29	25-1927-4	Connector	KP7281035
13	62-565-3	Arc Shield Complete	KP7281012	30	79-4180-26	Clamp	KP7281035
14	18-1417	Contact Post	KP7281013	31	19-1248-3	Clamp	KP5581042
15	19-945-7	Strap	KP7281016	32	62-460	Arc Shield R.H	KP7381039
15	62-457	Pole Piece	KP7281014	33	11-863	Screw	KP7081034
15	62-459	Inner Arc Shield	KP7281015	34	9-460-447	Blowout Coil	KP7381041
16	62-561-2	Arc Horn	KP7281017	35	25-1850	Connector	KP7281039
17	23-1288	Contact w/Silver Insert	KP7281018	36	55-1553	Coil Clamp	KP5581055
17	23-4026	Contact	KP7281019	37	24-4584-2	Contact Lever	KP7381044
18	911-5888Z	Contact Mounting Screw	KP3005017	38	24-4585	Armature Lever	KP7381045
18	23-1288	Contact w/Silver Insert	KP7281018				

Replacement Parts for: No. 925 300 Amp Spring Closed D-C Contactor

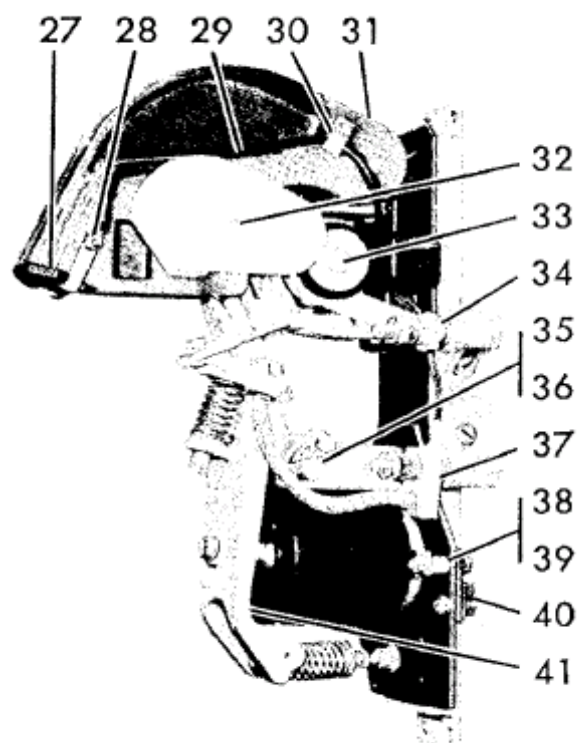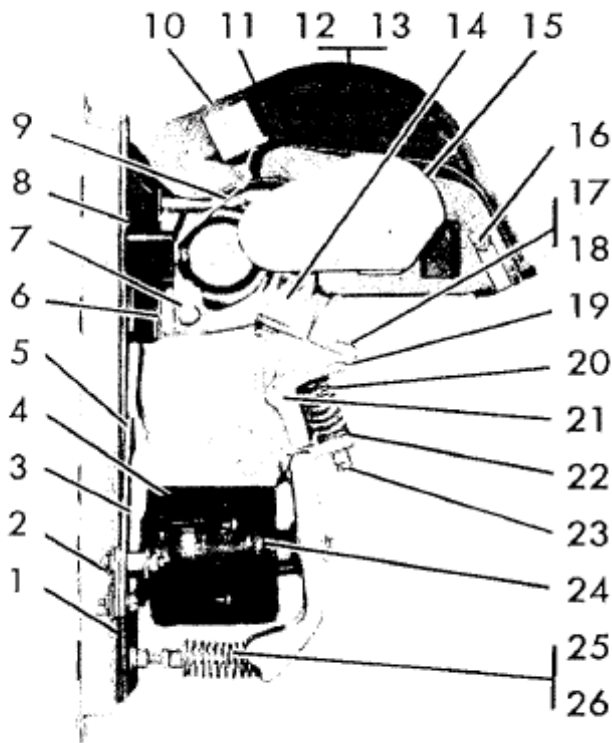


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3683	Insulator	KP7781001	22	916-225	Shim Washer	KP5581026
2	56-2698-2	Insulator	KP5581002	23	13-587	Adjusting Pin	KP5581027
3	17-7275	Magnet Frame	KP5581003	24	51-335-3	Core	KP6081001
4		Coil		25	69-2237	Spring	KP7781026
5	56-3684	Insulator	KP7781005	26	18-1492-2	Stop	KP7781027
6	16-1879	Shim Washer	KP5581007	27	73-1632	Arc Deflector	KP5581034
7	911-373	Long Hex Screw	KP5581008	28	79-9197-3	Bracket	KP5581038
8	17-7589	Molded Base	KP5581009	29	25-1927-3	Connector	KP7181039
9	52-880	Latch	KP5581010	30	19-1248-3	Clamp	KP5581046
10	52-879	Hasp	KP5581011	31	62-454	Arc Shield (Right Hand)	KP5581035
11	62-454-2	Arc Shield (Left Hand)	KP5581012	32	811-1664	Lg Flathead Screw	KP5581039
12	62-564	Blowout, Complete	KP7181014	33	9-460-437	Blowout Coil	KP5581041
13	62-564-2	Arc Shield, Complete	KP7181015	34	25-1816	Connector	KP5581042
14	18-1410	Contact Post w/Copper Contact	KP5581015	35	13-3862	Pin	KP5581030
15	62-452	Pole Piece	KP5581018	36	13-3859-4	Shaft	KP5581046
16	62-561	Arc Horn	KP5581019	37	24-4175-2	Contact Lever w/Connector	KP7181049
17	23-1042-2	Contact, Silver Faced	KP5581022	38	56-3735	Insulator	KP7781039
17	23-435	Contact	KP5581021	39	15-834-2	Spacer	KP7781040
18	911-5646Z	Contact Mounting Screw	KP5581023	40	79-9203	Bracket	KP7781041
19	24-4175	Contact Lever Complete	KP7181022	41	24-4179	Armature Lever	KP7781042
20	69-58	Spring	KP5581025				
21	13-4330-2	Shaft	KP5581052				

Replacement Parts for: No. 926 600 Amp Spring Closed D-C Contactor

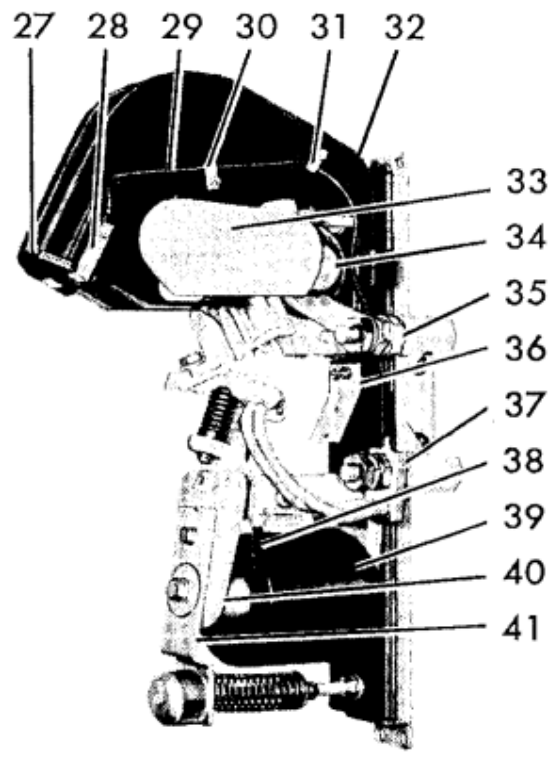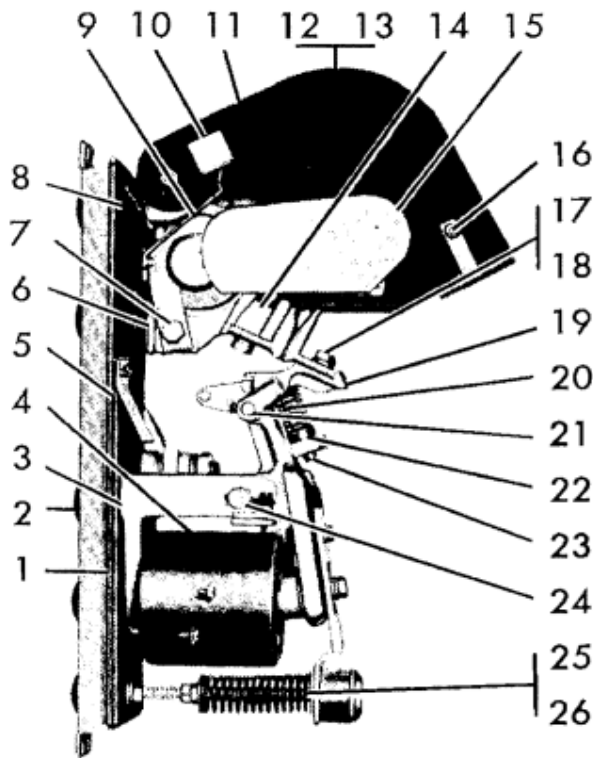



REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3687	Insulator	KP7881001	21	13-4330-3	Shaft	KP7281024
2	56-2698-2	Insulator	KP5581002	22	916-1164Z	Shim Washer 016 Thick	KP5781017
3	17-7346	Magnet Frame	KP7881003	23	13-593	Adjusting Pin	KP5881021
4		Coil		23	29-541	Spring Ring	KP5581028
5	56-3688	Insulator	KP7881005	24	13-4290	Shaft	KP7881028
6	16-1879	Shim Washer	KP5581007	25	69-2145	Spring	KP7881029
7	911-5890Z	Screw	KP5881009	26	18-1500	Stop	KP7881030
8	17-7340	Molded Base	KP7281008	27	73-1633	Arc Deflector	KP7281032
9	52-853	Latch	KP7281009	28	79-9197-4	Bracket	KP7281033
10	52-879	Hasp	KP5581011	29	25-1927-4	Connector	KP7281037
12	62-565	Blowout Complete	KP7281011	30	79-4180-26	Clamp	KP7281035
13	62-565-3	Arc Shield Complete	KP7281012	31	19-1248-3	Clamp	KP5581047
14	18-1417	Contact Post	KP7281013	33	11-863	Screw	KP7081034
15	19-945-7	Strap	KP7281016	34	9-460-438	Blowout Coil	KP7281038
15	62-459	Inner Arc Shield	KP7281015	35	25-1850	Connector	KP7281039
15	62-457	Pole Piece	KP7281014	36	79-9204	Bracket	KP7881039
16	62-561-2	Arc Horn	KP7281017	37	24-4205-2	Contact Lever	KP7281041
17	23-4026	Contact	KP7281019	38	55-1667	Coil Clamp	KP6181024
17	23-1288	Contact w/Silver Insert	KP7281018	39	51-342	Core	KP6181004
18	911-5888Z	Contact Mounting Screw	KP3005017	40	24-4207-2	Armature Lever	KP7881043
19	24-4205	Contact Lever Complete	KP7281021	41	24-4552	Stop Lever	KP7881044
20	69-2376	Spring	KP5881018				
21	29-1264	Retaining Ring	KP7281023				

Replacement Parts for: No. 932 50 Amp Single Pole D-C Ltl Contactor

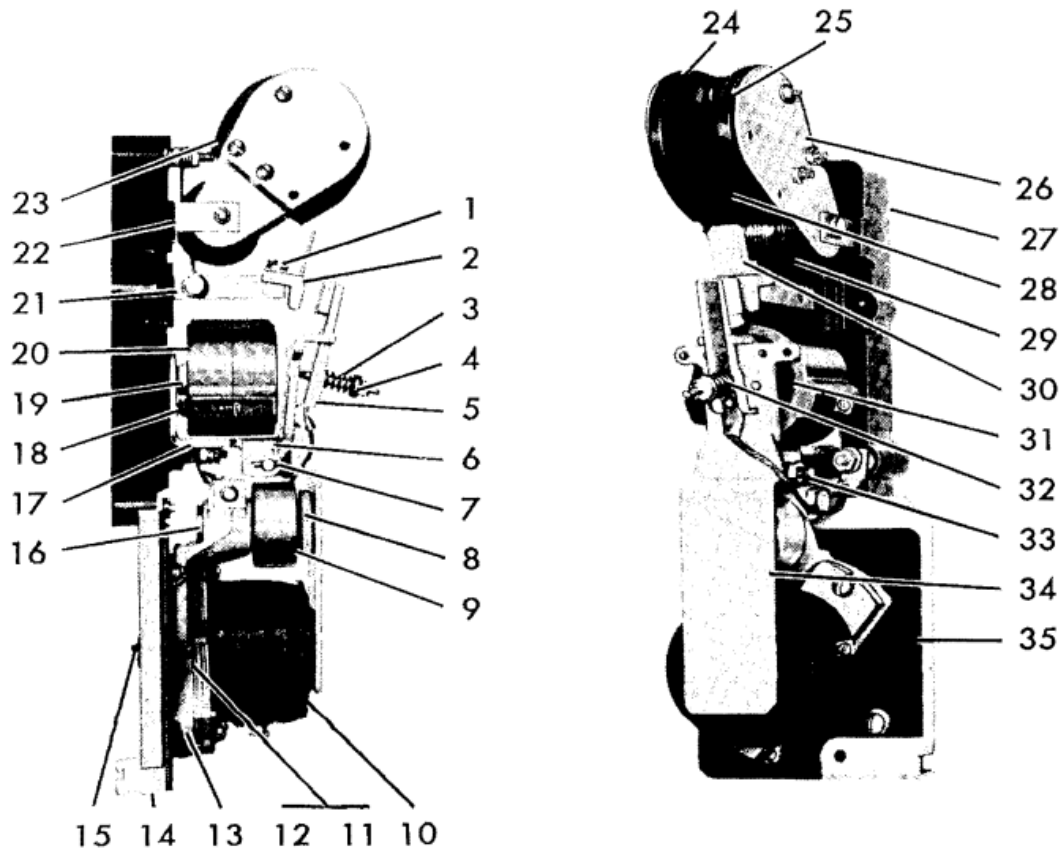



REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	911-5445Z	Long Hex Screw	KP5481022	18	69-2312	Spring	KP5481019
2	23-3286	Contact	KP5481003	19	51-64	Core	KP5481018
2	23-1258	Contact (Silver Faced)	KP5481004	20		Coil	
3	69-95	Spring	KP5481009	21	18-1395	Contact Post	KP6881011
4	15-797	Self Locking Cup Nut	KP6881012	22	79-5375-2	Bracket	KP6881002
5	40-522	Contact Finger, Silver Faced	KP5481005	23	62-474	Blowout Complete	KP6881001
5	40-522-4	Contact Finger	KP5481024	24	73-1194-2	Arc Shield	KP6881027
6	69-179	Spring	KP5481011	25	73-1194	Arc Shield	KP6881026
7	13-3186	Spring Pin	KP6881016	26	62-474-3	Pole Piece	KP6881025
8	911-679	Adjusting Screw	KP7481034	27	81-7145	Molded Base	KP6881024
9	1315-1	Shunt Nut	KP7481046	28	23-3311-3	Protecting Clip	KP5481037
10		Holdout Coil		29		Blowout Coil	
11	19-1367	Shim	KP6281003	30	62-440	Arc Guard	KP6881003
12	19-1366	Shim	KP6281004	31	4416-134	Washer	KP5481010
13	17-7625	Base	KP7481045	32	49-1204-13	Spring Gland	KP5481025
14	17-7813	Mounting Plate	KP7981016	33	13-3239-2	Shaft	KP6881032
15	18-1342-3	Post	KP7981017	34	24-4041	Armature Lever	KP7981036
16	11-1062	Adjusting Screw	KP7481002	35	56-2865	Insulator	KP7981037
17	17-6904	Magnet Frame	KP6881017				

Replacement Parts for: No. 933 100 Amp D-C Ltl Contactor

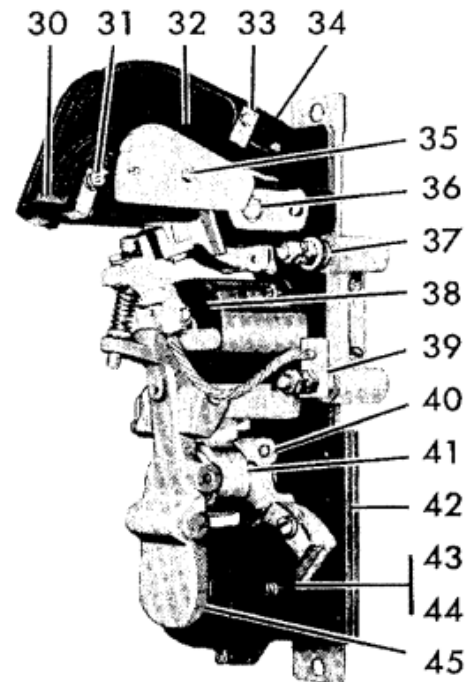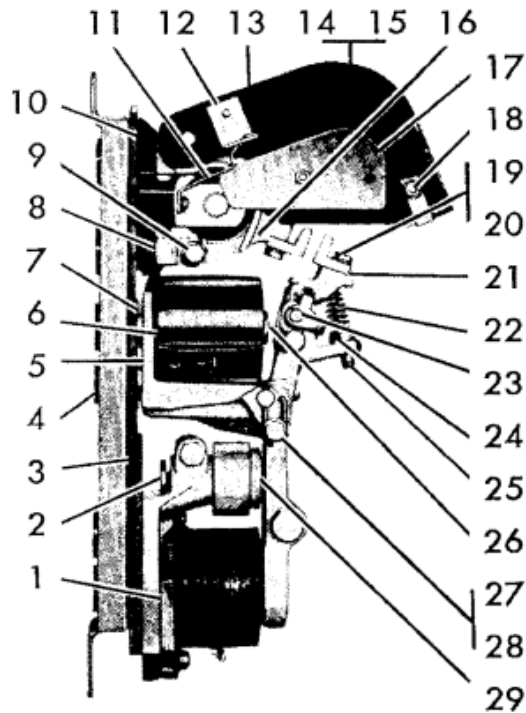



REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	19-1367	Shim	KP6281003	23	29-531	Retaining Ring	KP5681022
2	11-1062	Adjusting Screw	KP7481002	24	16-320	Washer	KP5681020
2	13-1079-17	Pin	KP8081003	25	13-591	Adjusting Pin	KP5681021
3	56-3675	Insulator	KP8081004	25	29-531	Retaining Ring	KP5681022
4	56-2698	Insulator	KP7181002	26	51-885	Core	KP6981024
5	17-7114	Magnet Frame	KP6981002	27	13-3859	Shaft	KP6981025
6		Coil		28	13-3860	Pin	KP6981027
7	16-2315	Washer	KP5581005	29	911-679	Adjusting Screw	KP7481034
8	16-2359	Shim Washer	KP6981005	30	73-1630	Arc Deflector	KP6981028
9	911-5446Z	Screw	KP5481001	31	79-9197-5	Bracket	KP6981029
10	17-7117	Moulded Base	KP6981007	32	25-1927	Connector	KP6981030
11	52-859	Latch	KP6981008	33	19-1248-3	Clamp	KP5581048
12	52-876	Hasp	KP6981009	34	62-446	Arc Shield (Right Hand)	KP6981032
13	62-446-2	Arc Shield (Left Hand)	KP6981010	35	911-2104Z	Screw	KP7581036
14	62-562	Blowout Complete	KP6981011	36		Blowout Coil	
15	62-562-2	Arc Shield, Complete	KP6981012	37	25-1798	Connector	KP6981035
16	18-1378	Contact Post	KP6981013	38	55-1454	Coil Clamp	KP6981036
17	19-989-19	Strap	KP8081018	39	24-4123-2	Contact Lever w/Connector	KP6981037
17	62-463	Pole Piece	KP6981014	40	17-7625	Base	KP7481045
18	62-444	Arc Horn	KP6981015	41	1315-1	Shunt Nut	KP7481046
19	23-812	Contact, Silver Tipped	KP5681013	42	56-3674	Insulator	KP8081047
19	23-3514	Contact	KP5681014	43		Holdout Coil	
20	911-5445Z	Long Hex Screw	KP5481022	44	18-1342-2	Hold Out Coil Post	KP7481049
21	24-4123	Contact Lever, Complete	KP6981019	45	24-4131	Armature Lever	KP8081050
22	69-2375	Spring	KP5681018				
23	13-4330	Shaft	KP6981021				

Replacement Parts for: No. 934 150 Amp Single Pole D-C Ltl Contactor

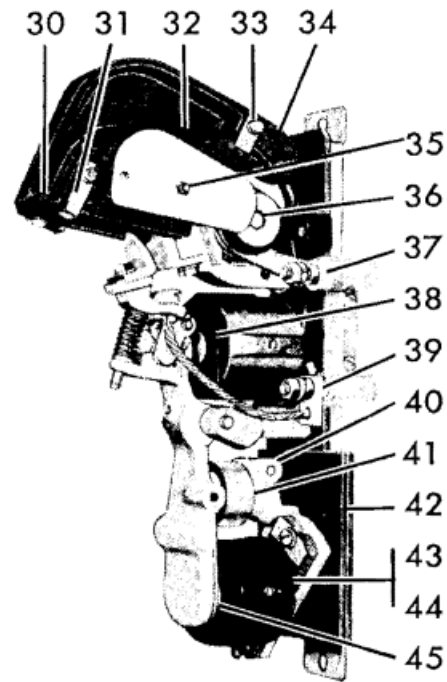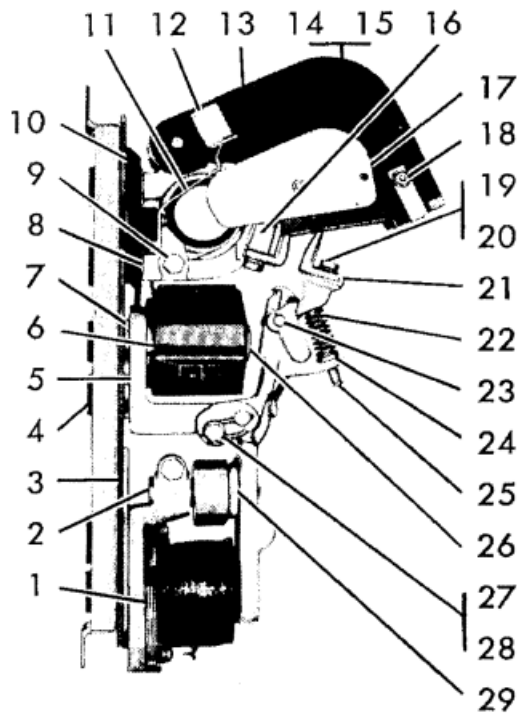

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	19-1367	Shim	KP6281003	26	13-4330	Shaft	KP6981021
2	13-1079-17	Pin	KP8081003	27	16-320	Washer 016Thick	KP5681020
3	11-1062	Adjusting Screw	KP7481002	28	13-734	Adjusting Pin	KP7081024
4	56-3680	Insulator	KP8181004	29	51-881	Core	KP7081026
5	56-2698	Insulator	KP7181002	30	13-3859-2	Shaft	KP7081027
6	17-11147	Magnet Frame	KP7081002	31	13-3860	Pin	KP6981027
7		Coil		32	911-679	Adjusting Screw	KP7481034
8	16-2315	Washer	KP5581005	33	73-1631	Arc Deflector	KP7081029
9	16-2359	Shim Washer	KP6981005	34	79-9197-6	Bracket	KP7081030
10	911-5607Z	Hex Screw	KP7081006	35	25-1927-2	Connector	KP7081031
11	17-7117	Moulded Base	KP6981007	36	19-1248-3	Clamp	KP5581049
12	52-877	Latch	KP7081008	37	11-863	Screw	KP7081034
13	52-876	Hasp	KP6981009	38	9-460-434	Blowout Coil	KP7081035
14	62-563	B/O Complete	KP7081011	39	911-5608Z	Screw	KP8181039
15	62-563-2	Arc Shield	KP7081012	40	25-1790	Connector	KP7081036
16	18-1376	Contact Post	KP7081013	41	55-1452	Coil Clamp	KP7081037
17	19-989-20	Strap	KP7681016	42	24-4119-2	Contact Lever	KP7081038
18	62-465	Pole Piece	KP7081014	43	17-7625	Base	KP7481045
19	62-431	Arc Horn	KP7081015	44	1315-1	Shunt Nut	KP7481046
20	23-813	Contact, Silver Faced	KP7081017	45	56-3674	Insulator	KP8081047
21	23-717	Contact	KP7081016	46		Holdout Coil	
22	911-5606FZ	Contact Screw	KP7081018	47	18-1342-2	Hold Out Coil Post	KP7481049
23	24-4119	Contact Lever Complete	KP7081019	48	24-4134	Armature Lever	KP8181048
24	69-432	Spring	KP7081020				
25	29-531	Retaining Ring	KP5681022				


Replacement Parts for: No. 935 300 Amp D-C Ltl Contactor

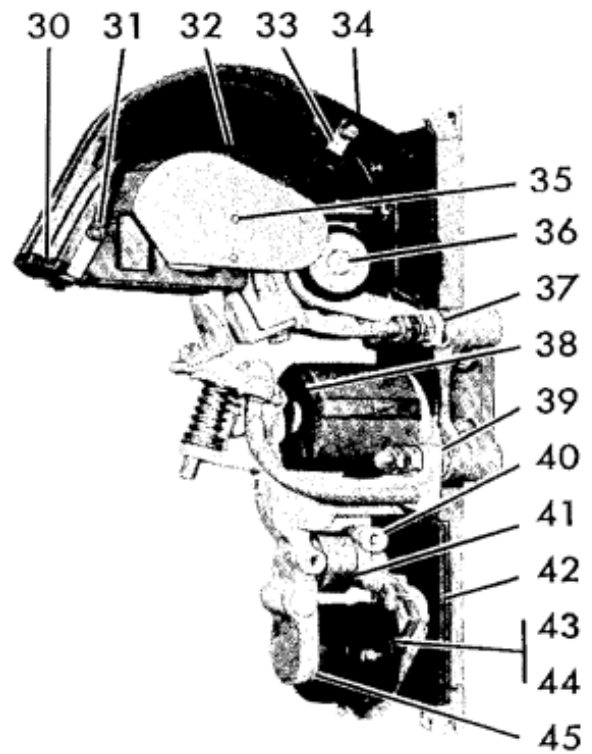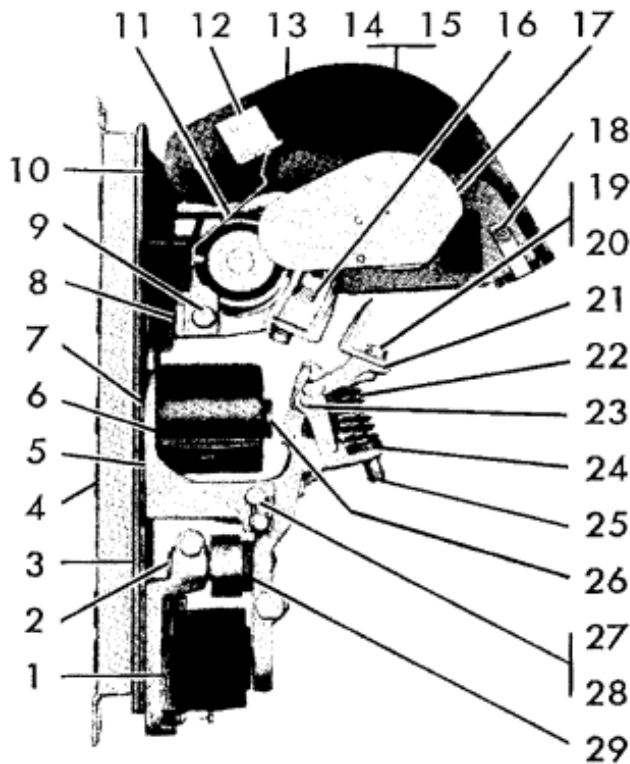

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	19-1366	Shim	KP6281004	24	16-319	Shim Washer	KP5781018
2	11-1062	Adjusting Screw	KP7481002	25	13-587	Adjusting Pin	KP5581027
3	56-3685	Insulator	KP8281003	26	51-896	Core	KP7181032
4	56-2698	Insulator	KP7181002	27	13-3859-3	Shaft	KP7181032
5	17-7193	Magnet Frame	KP7181005	28	13-3860	Pin	KP6981027
6		Coil		29	911-679	Adjusting Screw	KP7481034
7	16-2315	Washer	KP5581005	30	73-1632	Arc Deflector	KP5581034
8	16-1879	Shim Washer	KP5581007	31	79-9197-3	Bracket	KP5581038
10	17-7589	Moulded Base	KP5581009	32	25-1927-3	Connector	KP7181039
11	52-880	Latch	KP5581010	33	19-1248-3	Clamp	KP5581050
12	52-879	Hasp	KP5581011	34	62-454	Arc Shield (Right Hand)	KP5581035
13	62-454-2	Arc Shield (Left Hand)	KP5581012	35	811-1664	Screw	KP5581039
14	62-564	Blowout, Complete	KP7181014	36	9-460-437	Blowout Coil	KP5581041
15	62-564-2	Arc Shield, Complete	KP7181015	37	25-1816	Connector	KP5581042
16	18-1410	Contact Post	KP5581015	38	55-1451	Coil Clamp	KP7181048
17	62-452	Pole Piece	KP5581018	39	24-4175-2	Contact Lever w/Connector	KP7181049
18	62-561	Arc Horn	KP5581019	40	17-7625	Base	KP7481045
19	23-435	Contact	KP5581021	41	1315-1	Shunt Nut	KP7481046
20	911-5646Z	Contact Mounting Screw	KP5581023	42	56-3674	Insulator	KP8081047
21	24-4175	Contact Lever Complete	KP7181022	43		Holdout Coil	
22	69-58	Spring	KP5581025	44	18-1842-2	Hold Out Coil Post	KP8281043
23	13-4330-2	Shaft	KP5581052	45	24-4182	Armature Lever	KP8281044

Replacement Parts for:


No. 936 600 Amp Single Pole D-C Ltl Contactor

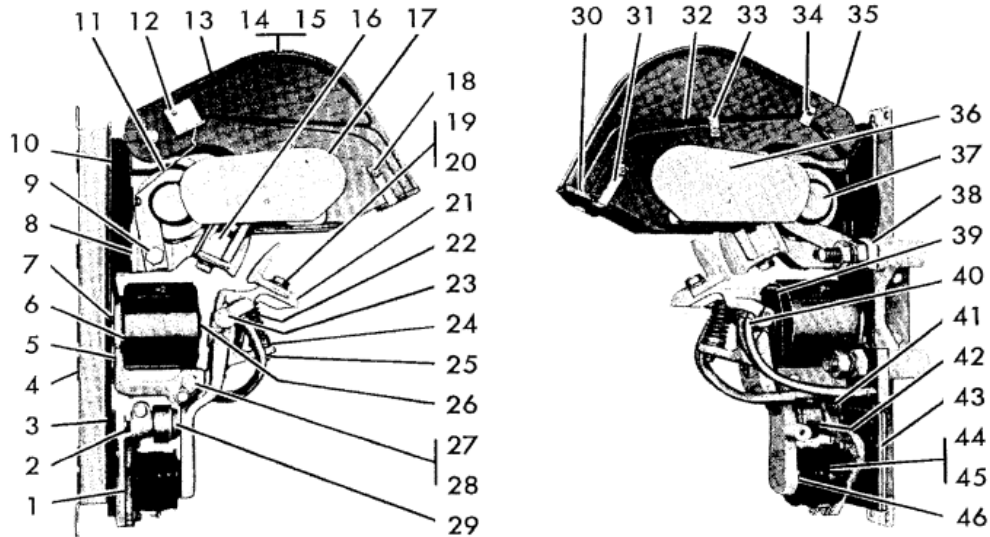

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	19-1366	Shim	KP6281004	23	29-1264	Retaining Ring	KP7281023
2	11-1062	Adjusting Screw	KP7481002	24	16-319	Shim Washer 032 Thick	KP5781018
2	13-1079-17	Pin	KP8081003	25	29-541	Spring Ring	KP5581028
3	56-3690	Insulator	KP7481003	25	13-593	Adjusting Pin	KP5881021
5	17-7275	Magnet Frame	KP5581003	26	51-979	Core	KP5581043
6		Coil	KP8381006	27	13-3859-4	Shaft	KP5581046
7	16-2315	Washer	KP5581005	28	13-3862	Pin	KP5581030
7	16-2316	Washer (Top)	KP5581006	29	911-679	Adjusting Screw	KP7481034
8	16-1879	Shim Washer	KP5581007	30	73-1633	Arc Deflector	KP7281032
9	911-5890Z	Screw	KP5881009	31	79-9197-4	Bracket	KP7281033
10	17-7340	Moulded Base	KP7281008	32	25-1927-4	Connector	KP7281038
11	52-853	Latch	KP7281009	33	79-4180-26	Clamp	KP7281035
12	52-879	Hasp	KP5581011	34	19-1248-3	Clamp	KP5581051
14	62-565	Blowout Complete	KP7281011	36	11-863	Screw	KP7081034
15	62-565-3	Arc Shield Complete	KP7281012	37	9-460-438	Blowout Coil	KP7281038
16	18-1417	Contact Post	KP7281013	38	25-1850	Connector	KP7281039
17	62-459	Inner Arc Shield	KP7281015	39	55-1553	Coil Clamp	KP5581055
17	62-457	Pole Piece	KP7281014	40	24-4205-2	Contact Lever w/Connector	KP7281041
17	19-945-7	Strap	KP7281016	41	17-7625	Base	KP7481045
18	62-561-2	Arc Horn	KP7281017	41	911-5652Z	Screw	KP8381046
19	23-4026	Contact	KP7281019	42	1315-1	Shunt Nut	KP7481046
19	23-1288	Contact w/Silver Insert	KP7281018	43	56-3689	Insulator	KP7481047
20	911-5888Z	Contact Mounting Screw	KP3005017	44		Holdout Coil	
21	24-4205	Contact Lever Complete	KP7281021	45	18-1342-2	Hold Out Coil Post	KP7481049
22	69-2376	Spring	KP5881018	46	24-4208-2	Armature Lever	KP8381051
23	13-4330-3	Shaft	KP7281024				

Replacement Parts for:


No. 944 150 Amp Two-Pole D-C Ltl Contactor

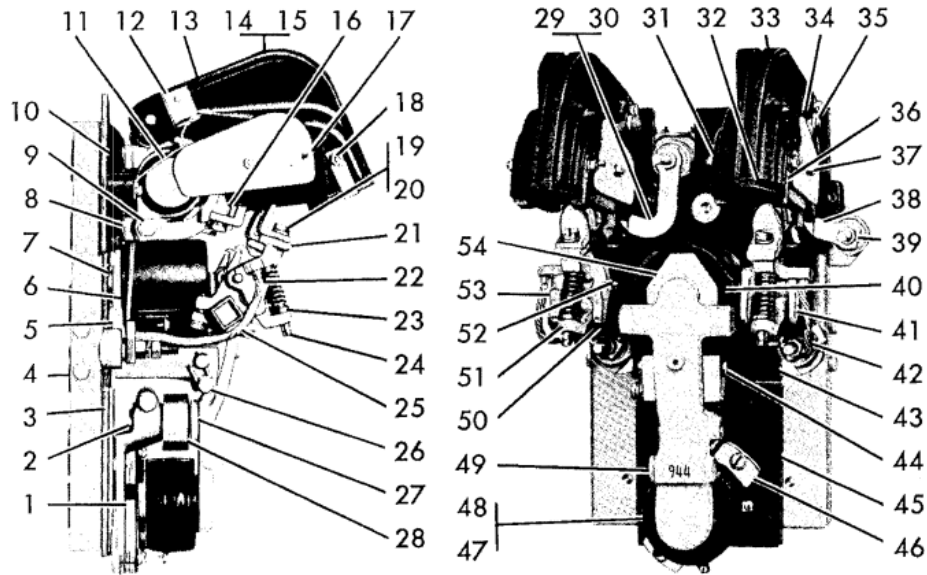

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	19-1367	Shim	KP6281003	28	1315-1	Shunt Nut	KP7481046
2	11-1062	Adjusting Screw	KP7481002	29	9-460-448	Blowout Coil, Left Hand	KP8481033
2	13-1079-17	Pin	KP8081003	30	25-2099	Connector	KP8481034
3	56-3692	Insulator	KP8481004	31	62-563	Blowout, Complete	KP7081011
4	56-2698	Insulator	KP7181002	32	73-1631	Arc Deflector	KP7081029
5	17-7193	Magnet Frame	KP7181005	33	62-432	Arc Shield R.H	KP7081033
6		Coil		34	25-1927-2	Connector	KP7081031
7	16-2315	Washer	KP5581005	35	19-1248-3	Clamp	KP5581052
8	16-2359	Shim Washer	KP6981005	36	79-9197-6	Bracket	KP7081030
9	911-5607Z	Hex Screw	KP7081006	37	11-863	Screw	KP7081034
9	916-198	Lock washer	KP6881019	38	9-460-434	Blowout Coil	KP7081035
10	17-7117	Moulded Base	KP6981007	39	25-1790	Connector	KP7081036
11	52-877	Latch	KP7081008	40	51-896	Core	KP7181033
12	52-876	Hasp	KP6981009	41	24-4119	Contact Lever Complete	KP7081019
13	62-439	Arc Shield L.H	KP7081010	42	24-4119-2	Contact Lever w/Connector	KP7081038
14	62-563-3	L.H Blowout, Complete	KP8481016	43	56-3691	Insulator	KP8481047
15	62-563-2	Arc Shield, Complete	KP7081012	44	13-3859-3	Shaft	KP7181032
16	18-1376	Contact Post	KP7081013	45	56-3674	Insulator	KP8081047
17	19-989-20	Strap	KP7681016	46	17-7625	Base	KP7481045
17	62-465	Pole Piece	KP7081014	47		Holdout Coil	
18	62-431	Arc Horn	KP7081015	48	18-1342-2	Holdout Coil Post	KP7481049
19	23-717	Contact	KP7081016	49	24-4688-3	Armature Lever	KP8481053
19	23-813	Contact, Silver Faced	KP7081017	50	29-721	Insulating Tube	KP8481054
20	911-5606Z	Contact Screw	KP7281030	51	24-860	Contact Lever	KP8481055
20	916-198	Lock washer	KP6881019	52	13-4330	Shaft	KP6981021
21	24-4119-3	L.H Contact Lever, Complete	KP8481026	24	13-734-2	Adjusting Pin	KP8481057
22	69-432	Spring	KP7081020	24	29-531	Retaining Ring	KP5681022
23	16-320	Washer 016 Thick	KP5681020	52	29-531	Retaining Ring	KP5681022
26	13-3860	Pin	KP6981027	53	24-4119-4	L.H Contact Lever w/Connector	KP8481060
26	911-5446Z	Screw	KP5481001	54	55-1451	Coil Clamp	KP7181048
27	911-679	Adjusting Screw	KP7481034	25	55-573	Clamp	KP8481062



Replacement Parts for:

No. 945 300 Amp Two-Pole D-C Ltl Contactor

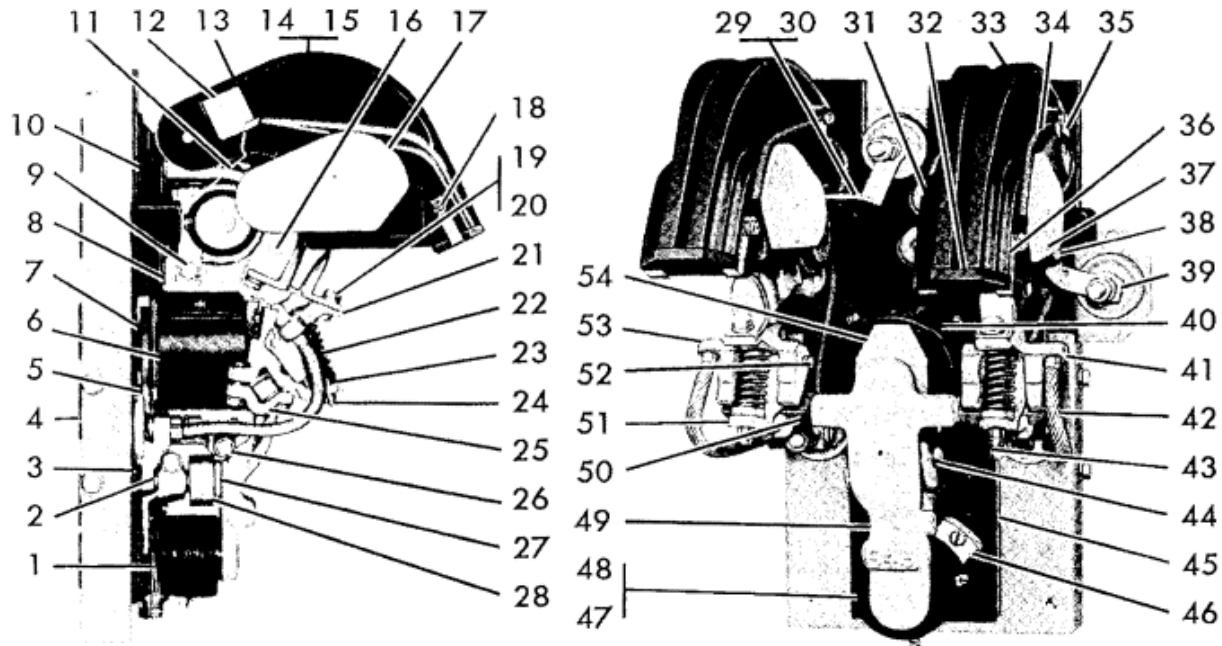

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	19-1367	Shim	KP6281003	28	1315-1	Shunt Nut	KP7481046
2	11-1062	Adjusting Screw	KP7481002	29	9-460-449	Blowout Coil Left Hand	KP5581031
3	56-3692	Insulator	KP8481004	30	25-2095	Left Hand Connector	KP5581032
4	56-2698	Insulator	KP7181002	31	62-564-6	Right Hand Blowout Complete	KP5581033
5	17-7275	Magnet Frame	KP5581003	32	73-1632	Arc Deflector	KP5581034
6		Coil		33	62-454	Arc Shield (Right Hand)	KP5581035
7	16-2315	Washer	KP5581005	34	25-1927-5	Connector	KP5581036
8	16-1879	Shim Washer	KP5581007	35	19-1248-3	Clamp	KP5581053
9	911-373	Screw	KP5581008	36	79-9197-3	Bracket	KP5581038
10	17-7589	Moulded Base	KP5581009	37	811-1664	Lg Flathead Screw	KP5581039
11	52-880	Latch	KP5581010	38	9-460-437	Blowout Coil	KP5581041
12	52-879	Hasp	KP5581011	39	25-1816	Connector	KP5581042
13	62-454-1	Arc Shield (Left Hand)	KP5581012	40	51-979	Core	KP5581043
14	62-564-3	Left Hand Blowout	KP5581013	41	24-4175-7	R.H Contact Lever Complete	KP5581044
15	62-564-8	Arc Shield Complete	KP5581014	42	24-4175-6	R.H Contact Lever w Connector	KP5581045
16	18-1410	Contact Post w/Copper Contact	KP5581015	43	56-3693	Insulator	KP5581001
17	62-452	Pole Piece	KP5581018	44	13-3859-4	Shaft	KP5581046
18	62-561	Arc Horn	KP5581019	45	56-3674	Insulator	KP8081047
19	23-1042-2	Contact, Silver Faced	KP5581022	46	17-7625	Base	KP7481045
19	23-435	Contact	KP5581021	47		Holdout Coil	
20	911-5646Z	Contact Mounting Screw	KP5581023	48	18-1342-2	Hold Out Coil Post	KP7481049
21	24-4175-3	L.H Contact Lever Complete	KP5581024	49	24-4690	Armature Lever	KP8581050
22	69-58	Spring	KP5581025	50	29-735	Insulating Tube	KP6681025
23	916-225	Shim Washer	KP5581026	51	24-4699	Contact Lever	KP5581051
24	13-587	Adjusting Pin	KP5581027	52	13-4330-2	Shaft	KP5581052
25	55-217	Clamp	KP5581050	53	24-4175-4	L.H Contact Lever w Connector	KP5581054
26	13-3862	Pin	KP5581030	54	55-1553	Coil Clamp	KP5581055
27	911-679	Adjusting Screw	KP7481034				



Replacement Parts for: No. 952 50 Amp Double Pole D-C Ltl Contactor

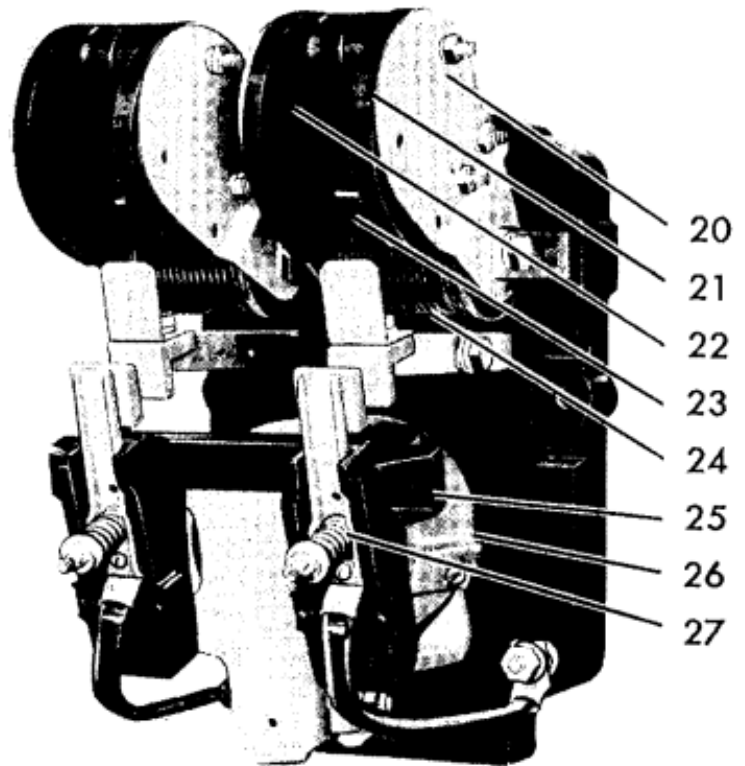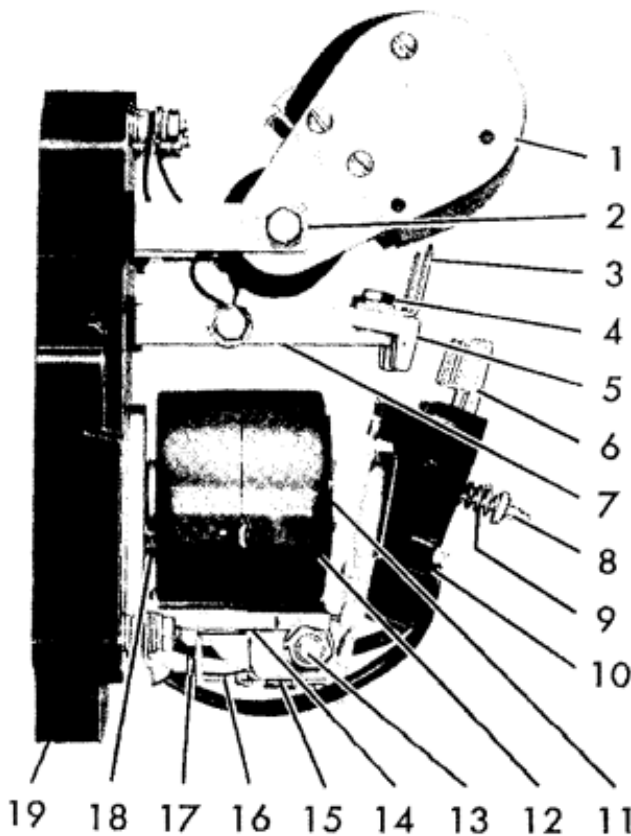

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	62-474	Blowout Complete	KP6881001	14	17-6943	Magnet Frame	KP8681016
2	79-5433	Bracket	KP8681002	15	69-158	Spring	KP8681017
3	62-440	Arc Guard	KP6881003	16	14-143	Adjusting Stud	KP5681028
4	911-5445Z	Contact Screw	KP8681004	17	15-842	Adjusting Nut	KP8681019
5	23-3286	Contact	KP5481003	18	69-195	Spring	KP8681020
5	23-1258	Contact (Silver Faced)	KP5481004	19	81-7225-2	Molded Base	KP8681021
6	40-492-2	Movable Contact Finger	KP8681007	20	62-474-3	Pole Piece	KP6881025
6	40-492-3	Contact Finger w/Silver	KP8681008	21	73-1194	Arc Shield	KP6881026
7	18-1351	Contact Post	KP8681009	22	73-1194-2	Arc Shield	KP6881027
8	15-797	Self Locking Cup Nut	KP6881012	23	23-3311-3	Protecting Clip	KP5481037
9	69-95	Spring	KP5481009	24		Coil	KP8681026
10	24-4065-3	Armature Lever	KP8681012	25	24-4065	Armature Lever Complete	KP8681027
11	51-913	Core	KP8681013	26		Coil	
12	4416-1321	Washer	KP8681014	27	49-1204-13	Spring Gland	KP5481025
13	18-219-5	Shaft	KP8681015				


Replacement Parts for:

No. 954 150 Amp Double Pole D-C Ltl Contactor

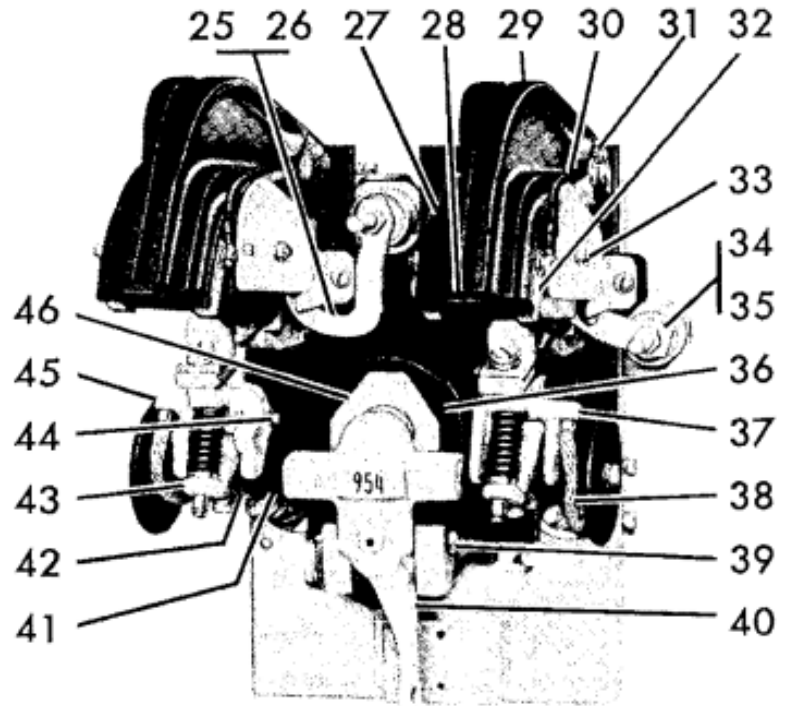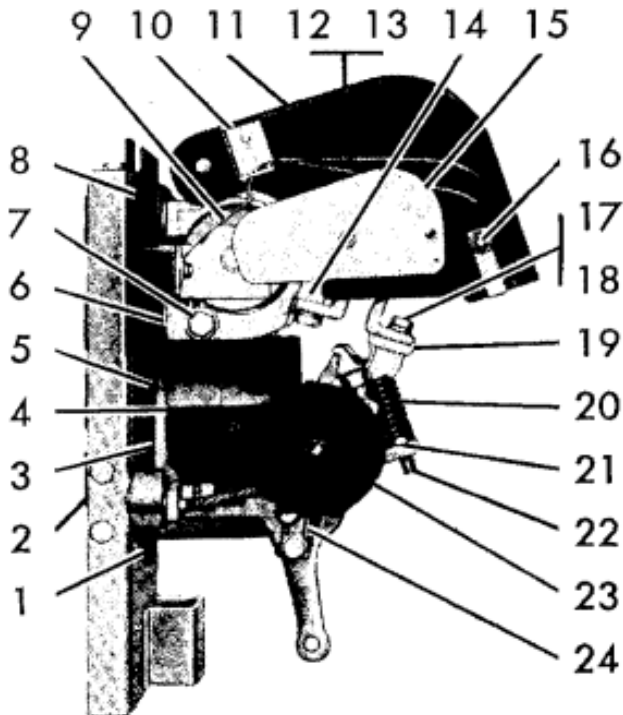

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3691	Insulator	KP8481047	22	29-531	Retaining Ring	KP5681022
3	17-7193	Magnet Frame	KP7181005	23	16-840-21	Insulating Washer	KP5581029
4		Coil		25	9-460-448	Blowout Coil Left Hand	KP8481033
5	16-2315	Washer	KP5581005	26	25-2099	Connector	KP8481034
6	16-2359	Shim Washer	KP6981005	27	62-563	B/O Complete R.H	KP7081011
7	911-5607Z	Hex Screw	KP7081006	27	62-563-6	R.H Blowout, Complete	KP8781032
7	916-198	Lock washer	KP6881019	28	73-1631	Arc Deflector	KP7081029
7	916-801Z	Washer	KP8781008	30	25-1927-2	Connector	KP7081031
8	17-7117	Moulded Base	KP6981007	31	19-1248-3	Clamp	KP5581054
9	52-877	Latch	KP7081008	32	79-9197-6	Bracket	KP7081030
10	52-876	Hasp	KP6981009	34	9-460-434	Blowout Coil	KP7081035
12	62-563-3	L.H Blowout, Complete	KP8481016	35	25-1790	Connector	KP7081036
12	62-563-7	L.H Blowout, Complete	KP8781013	36	51-896	Core	KP7181034
13	62-563-2	Arc Shield Complete	KP7081012	37	24-4119	Contact Lever Complete	KP7081019
14	18-1376	Contact Post	KP7081013	38	24-4119-2	Contact Lever	KP7081038
15	19-989-20	Strap	KP7681016	39	13-3859-3	Shaft	KP7181032
15	62-465	Pole Piece	KP7081014	40	18-1576	Stop	KP5581047
16	62-431	Arc Horn	KP7081015	40	24-4687-3	Armature Lever	KP8781044
17	23-717	Contact	KP7081016	41	29-1336-2	Insulating Tube	KP8781045
17	23-813	Contact, Silver Faced	KP7081017	42	55-573	Clamp	KP8481062
18	911-5606Z	Contact Screw	KP7281030	43	24-860	Contact Lever	KP8481055
18	916-198	Lock washer	KP6881019	44	13-4330	Shaft	KP6981021
19	24-4119-3	L.H Contact Lever, Complete	KP8481026	45	24-4119-2	Contact Lever w/Connector	KP7081038
20	69-432	Spring	KP7081020	46	55-1451	Coil Clamp	KP7181048
21	16-320	Washer 016 Thick	KP5681020				
22	13-734-2	Adjusting Pin	KP8481057				

Replacement Parts for: No. 955 300 Amp Two-Pole D-C Ltl Contactor

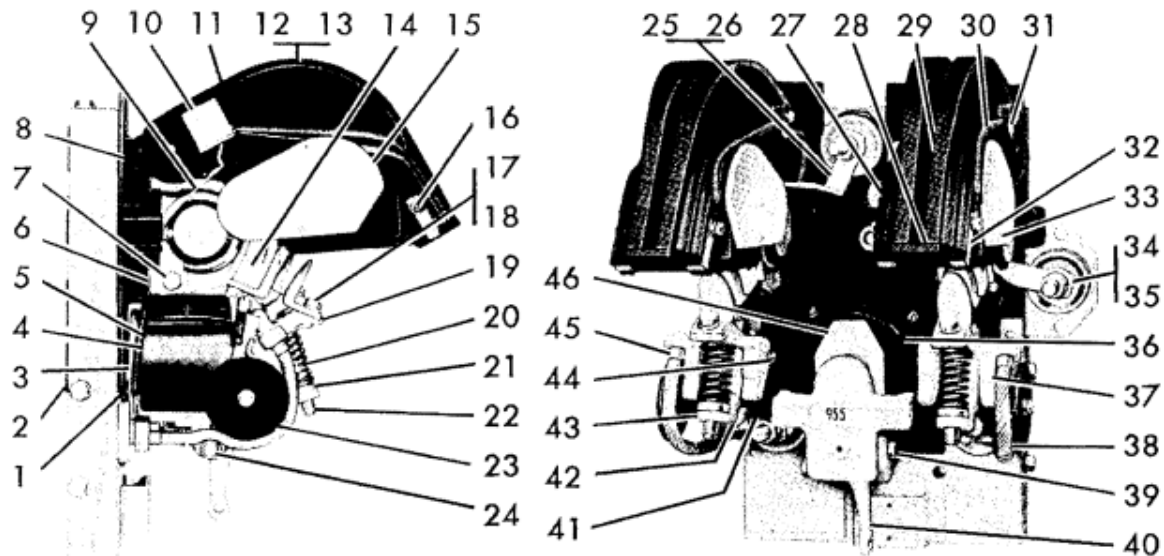

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	56-3693	Insulator	KP5581001	23	16-840-21	Insulating Washer	KP5581029
2	56-2698-2	Insulator	KP5581002	24	13-3862	Pin	KP5581030
3	17-7275	Magnet Frame	KP5581003	25	9-460-449	Blowout Coil Left Hand	KP5581031
4		Coil		26	25-2095	Left Hand Connector	KP5581032
5	16-2315	Washer	KP5581005	27	62-564-6	Right Hand Blowout Complete	KP5581033
5	16-2316	Washer Top	KP5581006	28	73-1632	Arc Deflector	KP5581034
6	16-1879	Shim Washer	KP5581007	29	62-454	Arc Shield (Right Hand)	KP5581035
7	911-373	Long Hex Screw	KP5581008	30	25-1927-5	Connector	KP5581036
8	17-7589	Moulded Base	KP5581009	31	19-1248-3	Clamp	KP5581037
9	52-880	Latch	KP5581010	32	79-9197-3	Bracket	KP5581038
10	52-879	Hasp	KP5581011	33	811-1664	Lg. Flathead Screw	KP5581039
11	62-454-2	Arc Shield (Left Hand)	KP5581012	33	916-101	Tooth Lock washer	KP5581040
12	62-564-3	Left Hand Blowout	KP5581013	34	9-460-437	Blowout Coil	KP5581041
13	62-564-8	Arc Shield Complete	KP5581014	35	25-1816	Connector (used w/o Blowout)	KP5581042
14	18-1410	Contact Post w/Copper Contact	KP5581015	36	51-979	Core	KP5581043
15	19-945-6	Strap	KP5581016	37	24-4175-7	R.H Contact Lever Complete	KP5581044
15	62-451	Inner Arc Shield	KP5581017	38	24-4175-6	R.H Contact Lever WI Connector	KP5581045
15	62-452	Pole Piece	KP5581018	39	13-3859-4	Shaft	KP5581046
16	62-561	Arc Horn	KP5581019	40	18-1576	Stop	KP5581047
16	915-322Z	Nut	KP5581020	40	24-4689	Armature Lever	KP5581048
17	23-435	Contact	KP5581021	41	29-1336-3	Insulating Tube	KP5581049
17	23-1042-2	Contact w/silver insert	KP5581022	42	55-217	Clamp	KP5581050
18	911-5646Z	Contact Mounting Screw	KP5581023	43	24-4699	Contact Lever	KP5581051
19	24-4175-3	L.H Contact Lever Complete	KP5581024	44	13-4330-2	Shaft	KP5581052
20	69-58	Spring	KP5581025	44	28-42	Retaining Ring	KP5581053
21	916-225	Shim Washer	KP5581026	45	24-4175-4	L.H Contact Lever WI Connector	KP5581054
22	13-587	Adjusting Pin	KP5581027	46	55-1553	Coil Clamp	KP5581055
22	29-541	Spring Ring	KP5581028				

Replacement Parts Catalog for

SQUARE-D

Table of Contents

BRAKES

EC&M No. 5 TYPE WB BRAKE, FOLIO 2.....	58
EC&M No. 10 TYPE WB BRAKE, FOLIO 2.....	59
EC&M No. 20 TYPE WB BRAKE, FOLIO 2.....	60
EC&M No. 22 TYPE WB BRAKE, FOLIO 1.....	61
EC&M No. 30 TYPE WB BRAKE, FOLIO 2.....	62
EC&M No. 30 TYPE WB BRAKE, FOLIO 3.....	63-64
EC&M No. 40 TYPE WB BRAKE, FOLIO 2.....	65
EC&M No. 40 TYPE WB BRAKE, FOLIO 3.....	66-67
EC&M No. 50 TYPE WB BRAKE, FOLIO 2.....	68
EC&M No. 50 TYPE WB BRAKE, FOLIO 3.....	69-70
EC&M No. 60 TYPE WB BRAKE, FOLIO 1.....	71-72
CLASS 5010 8" TYPE WB BRAKE, FOLIO.....	73-74
CLASS 5010 10" TYPE WB BRAKE, FOLIO 5.....	75-76
CLASS 5010 13" TYPE WB BRAKE, FOLIO 5.....	77-78
CLASS 5010 16" TYPE WB BRAKE, FOLIO 5.....	79-80
CLASS 5010 19" TYPE WB BRAKE, FOLIO 5.....	81-82-83
CLASS 5010 23" TYPE WB BRAKE, FOLIO 5.....	84-85
CLASS 5010 30" TYPE WB BRAKE, FOLIO 6.....	86-87
CLASS 5010 8" TYPE F SERIES A.....	88
CLASS 5010 10" TYPE F SERIES A.....	89
CLASS 5010 13" TYPE F SERIES A.....	90
CLASS 5010 16" TYPE F SERIES A.....	91
CLASS 5010 19" TYPE F SERIES A.....	92
CLASS 5010 23" TYPE F SERIES A.....	93
CLASS 5010 30" TYPE F SERIES A.....	94
CLASS 5010 10" TYPE F SERIES B.....	95
CLASS 5010 13" TYPE F SERIES B.....	96
CLASS 5010 16" TYPE F SERIES B.....	97
CLASS 5010 23" TYPE F SERIES B.....	98
CLASS 5060 10" TYPE AT ADJUSTABLE TORQUE BRAKE.....	99-100
CLASS 5060 13" TYPE AT ADJUSTABLE TORQUE BRAKE.....	101-102
CLASS 5060 16" TYPE AT ADJUSTABLE TORQUE BRAKE.....	103-104

If you are unable to locate the part you need, call our sales department and they can further assist you.
Square-D & ECM are Registered Trademarks of the Square-D Corporation.

Replacement Parts Catalog for

SQUARE-D

Table of Contents

CONTACTORS

NO. 0 SINGLE POLE TYPES CONTACTOR, FOLIO 7.....	105-106
NO. 1 SINGLE POLE TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	107-108
NO. 1 SINGLE POLE SPRING CLOSED TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	109-110
NO. 2 SINGLE POLE TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	111-112
NO. 2 SINGLE POLE SPRING CLOSED TYPE L LINE-ARC CONTACTOR, FOLIO 3	113-114
NO. 2 DOUBLE POLE TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	115-116
NO. 3 SINGLE POLE TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	117-118
NO. 3 SINGLE POLE SPRING CLOSED TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	119-120
NO. 3 DOUBLE POLE TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	121-122
NO. 4 & 4A SINGLE POLE TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	123-124
NO. 4 & 4A SINGLE POLE SPRING CLOSED TYPE L LINE-ARC CONTACTOR, FOLIO 3.....	125-126

SAFETY LIMIT STOPS


NO. 10 YOUNGSTOWN LIMIT STOP.....	127
NO. 20 YOUNGSTOWN LIMIT SWITCH.....	128-129
NO. 30 YOUNGSTOWN LIMIT SWITCH.....	130-131
NO. 10 YOUNGSTOWN LIMIT SWITCH AC/DC TYPE BG SERIES A.....	132-133
NO. 20 AC/DC YOUNGSTOWN LIMIT SWITCH TYPE CG SERIES B.....	134-135
NO. 20 AC/DC YOUNGSTOWN LIMIT SWITCH TYPE CCG SERIES B.....	136-137
NO. 30 YOUNGSTOWN LIMIT SWITCH TYPE DG SERIES A.....	138-139-140
NO. 30 YOUNGSTOWN LIMIT SWITCH TYPE DDG SERIES A.....	141-142
NO. 40 YOUNGSTOWN LIMIT STOP SINGLE TYPE EG SERIES A.....	143-144-145
NO. 40 YOUNGSTOWN LIMIT STOP DUPLEX TYPE EEG SERIES A.....	146-147-148
NO. 50 DC YOUNGSTOWN LIMIT STOP SIMPLEX TYPE FG SERIES A.....	149-150-151
NO. 50 DC YOUNGSTOWN LIMIT STOP DUPLEX TYPE FFG SERIES A.....	152-153-154

MISCELLANEOUS

TYPE DM MASTER SWITCH FOLIO 1-A.....	155-156
EC&M TYPE NT MASTER CONTROLLER, FOLIO 1.....	157-158
SI ACCELERATION RELAY, FOLIO 1A & 1b.....	159
SIP PLUGGING RELAY, FOLIO 1A & 1B.....	160


If you are unable to locate the part you need, call our sales department and they can further assist you.
Square-D & ECM are Registered Trademarks of the Square-D Corporation.

Replacement Parts for: EC&M No. 5 Type WB Brake, Folio 2

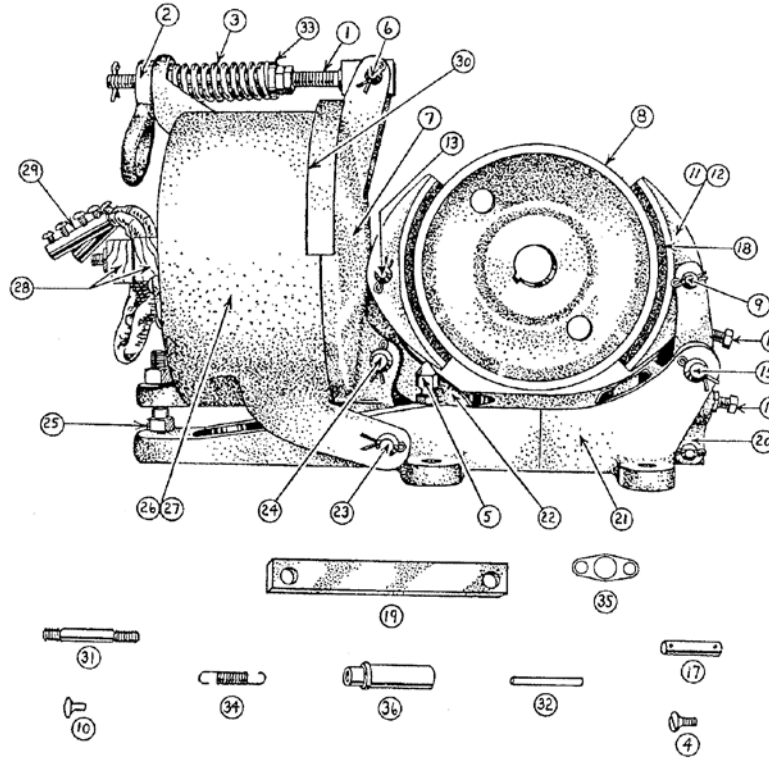

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-0519-A	Spring Rod	KP0522001	24	WB-0533	Armature Pin	KP0522025
2	WB-0520	Handle	KP0522002	25	WB-234	Magnet Adjusting Screw	KP1312032
3	WB-0538	Spring	KP0522003	26	WB-0549-A	Assembled Magnet, w/ Coil	KP0522027
4	WB-1080	F.H Screw	KP0522004	27	WB-0516-A	Magnet Case	KP0522028
5	WB-0543	Shoe Adjusting Screw	KP0522005	28	WB-0541	Lead Block	KP0522029
6	WB-0537	Spring Rod Pin	KP0522006	30	WB-0528	Dust Shield	KP0522030
7	WB-0514-A	Armature	KP0522007	31	Q-165	Lead Block Stud	KP0522031
8	WB-0530	Brake Wheel 7" Diameter	KP0522008	32	WB-0539	Centering Spring Pin	KP0522032
9	WB-0546	Shoe Pin	KP0522009	33	WB-0521	Spring Collar	KP0522033
10	WB-0550	Rivet	KP0812007	34	WB-0540	Centering Spring	KP0522034
11	WB-0524-A	Assembled Shoe, w/ Lining	KP0522011	35	Q-106	Guard	KP0522035
12	WB-0522	Brake Shoe, w/out Lining	KP0522012	36	WB-103	Bushing	KP0522036
13	WB-0545	Shoe Pin	KP0522013	37	WB-0525	Retaining Plate	KP0522037
14	WB-0542	Shoe Adjusting Screw	KP0522014	*	WB-0568-A	Coil	KP0522038
15	WB-0534	Shoe Lever Hinge Pin	KP0522015	*	WB-0544	Amateur Pin Bushing	KP0522039
16	WB-0548	Equalizing Screw	KP0522016	*	WB-0501	Magnet Hinge Pin Bushing	KP0522040
17	WB-0536	Connection Rod Pin	KP0522017	*	WB-0504	Shoe Lever Hinge Pin Bushing	KP0522041
18	WB-0523	Brake Lining	KP0522018	*	WB-0506	Magnet Hinge Pin Bushing	KP0522042
19	WB-0529	Connecting Rod	KP0522019	*	WB-0505	Shoe Lever Hinge Pin Bushing	KP0522043
20	WB-0510-A	Shoe Lever	KP0522020	*	WB-0503	Magnet Hinge Bushing	KP0522044
21	WB-0507-A	Frame	KP0522021	*	WB-0502	Armature Pin Bushing	KP0522045
22	WB-0512-A	Balance Lever	KP0522022				
23	WB-0535	Magnet Hinge Pin	KP0522024				


Replacement Parts for: EC&M No. 10 Type WB Brake, Folio 2

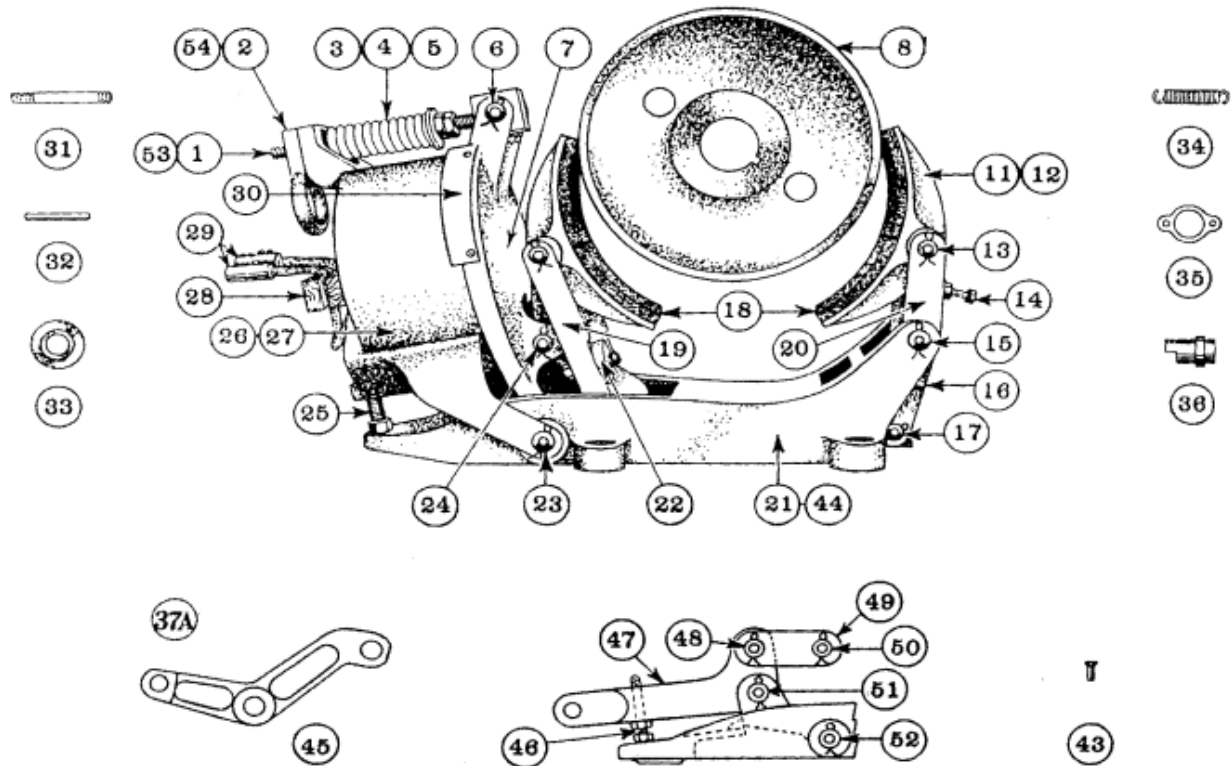

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-183-A	Spring Rod , with Nuts	KP1022001	28	Q-164	Lead Block	KP1022023
2	WB-181	Handle	KP1022002	30	WB-1163	Dust Shield	KP1022024
3	WB-116	Brake Spring	KP1022003	31	Q-165	Lead Block Stud	KP0522031
6	WB-125	Spring Rod Pin	KP1022004	32	WB-119	Centering Spring Pin	KP1022026
7	WB-187-A	Armature	KP1022005	33	WB-114	Spring Collar	KP1022027
8	WB-132-A	Wheel	KP1022006	34	WB-126	Centering Spring	KP1022028
11	WB-110-A	Assembled Shoe	KP1022007	37	WB-109	Retaining Plate, Brass	KP1022029
12	WB-104	Brake Shoe	KP1022008	40	WB-186-A	Balance Lever	KP1022030
13	WB-120	Shoe Pin	KP1022009	41	WB-106	Connecting Rod	KP1022031
15	WB-122	Shoe Lever Hinge Pin	KP1022010	43	WB-159	Lining Rivet	KP1012006
16	WB-133	Equalizing Screw	KP1022011	46	WB-134	Shoe Adjusting Screw	KP1022033
17	WB-124	Connecting Rod Pin	KP1022012	*	WB-1129-A	Coil	KP1022034
18	WB-118	Brake Lining	KP1022013	*	WB-1132-A	Coil, 5-8 HP	KP1022035
19	WB-105	Shoe Lever (Armature End)	KP1022014	*	51001-071-59	Brake Block Kit	KP1022036
20	WB-185-A	Shoe Lever With Spring Pin	KP1022015	*	WB-1133-A	Coil	KP1022037
21	WB-189-A	Frame	KP1022016	*	WB-162	Bushing, Armature/Upper	KP1022038
23	WB-123	Magnet Hinge Pin	KP1022017	*	WB-161	Bushing, Magnet Case	KP1022039
24	WB-121	Armature Pin	KP1022018	*	WB-164	Bushing, Frame/Upper	KP1022040
25	WB-434	Special Cap Screw	KP1022019	*	WB-165	Bushing, Shoe Lever	KP1022041
26	WB-190-A	Assembled Magnet	KP1022020	*	WB-163	Bushing, Armature-Frame/Upper	KP1022042
27	WB-188-A	Magnet Case	KP1022021				


Replacement Parts for:

FC&M No 20 Type WB Brake Eolin 2

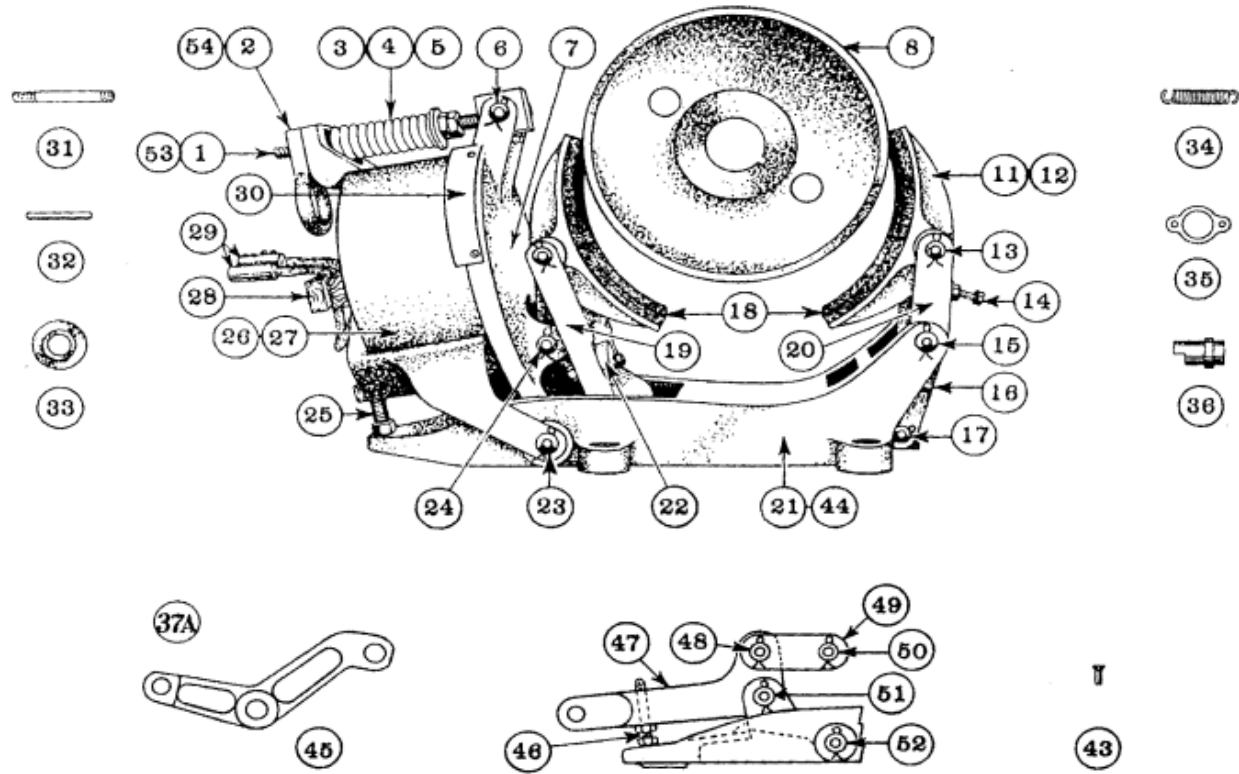

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-283-A	Spring Rod with Nuts	KP2022001	30	WB-2163	Dust Shield	KP2022025
2	WB-281	Handle	KP2022002	30	WB-215	Dust Shield, Steel	KP2022026
3	WB-216	Brake Spring	KP2022003	31	Q-165	Lead Block Stud	KP0522031
6	WB-225	Spring Rod Pin	KP2022004	32	WB-219	Centering Spring Pin	KP2022028
7	WB-287-A	Armature	KP2022005	33	WB-2061	Spring Collar	KP2022029
11	WB-210-A	Assembled Shoe	KP2022006	34	WB-226	Centering Spring	KP2022030
12	WB-204	Brake Shoe	KP2022007	35	Q-305	Terminal Guard	KP2022031
13	WB-220	Shoe Pin	KP2022008	36	WB-229	Terminal Bushing	KP2022032
14	WB-238	Shoe Adjusting Screw	KP2022009	37	WB-209	Retaining Plate, Brass	KP2022033
15	WB-222	Shoe Lever Hinge Pin	KP2022010	40	WB-286-A	Balance Lever	KP2022034
16	WB-235	Equalizing Screw	KP1312015	41	WB-206-A	Connecting Rod	KP2022035
17	WB-224	Connecting Rod Pin	KP2022012	43	WB-259	Lining Rivet	KP2022036
18	WB-218	Brake Lining	KP2022013	44	WB-289-A	Frame	KP2022037
18	51001-071-60	LiningKit	KP2022014	48	WB-424	Connecting Rod Pin	KP2022038
19	WB-205	Shoe Lever	KP2022015	*	WB-263	Bushing, Armature/Lower	KP2022039
20	WB-285-A	Shoe Lever	KP2022016	*	WB-262	Bushing, Armature	KP2022040
22	WB-232-A	Shoe Adjusting Wheel w/screw	KP2022017	*	WB-265	Bushing, Shoe Lever	KP2022041
23	WB-223	Magnet Hinge Pin	KP2022018	*	WB-264	Bushing, Frame/Upper	KP2022042
24	WB-221	Armature Pin	KP2022019	*	WB-261	Bushing, Magnet Case	KP2022043
25	WB-455	Magnet Adjusting Screw	KP2022020	*	WB-267	Bushing, Balance Lever	KP2022044
26	WB-290-A	Assembled Magnet	KP2022021	*	FP-24C36	Bushing	KP2022045
27	WB-288-A	Magnet Case	KP2022022	*	29005-48301	Bushing	KP2022046
28	Q-257	Lead Block	KP2022023				


Replacement Parts for: EC&M No. 22 Type WB Brake, Folio 1

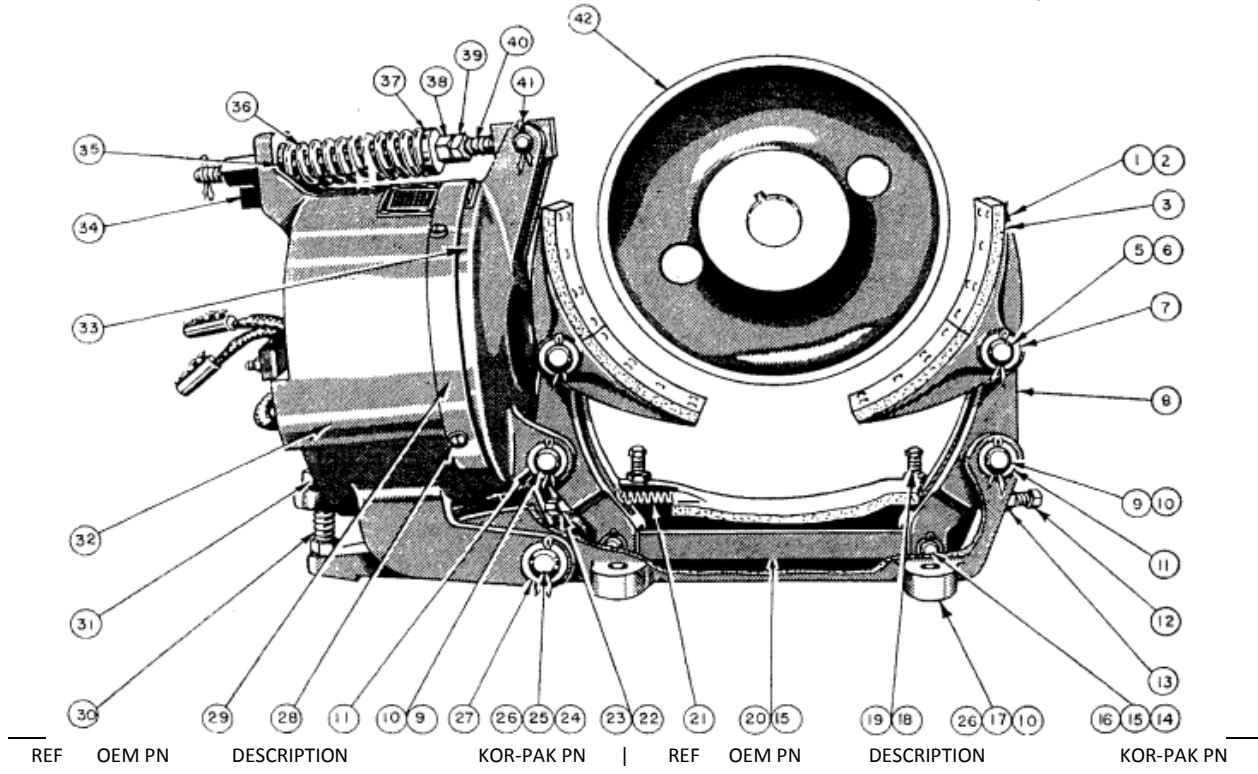

REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-2200-A	Assembled Shoe, Complete	KP2221001
2	WB-2317-A	Brake Shoe	KP2221002
3	WB-2340	Brake Lining	KP2221003
4	WB-359	Lining Rivet	KP2221004
5	FP-24B17	Bearing	KP2221005
6	WB-2213	Shoe Pin	KP2221006
7	WB-3227	Washer	KP2221007
8	WB-2204-A	Shoe Lever	KP2221008
9	WB-2343	Shoe Lever Pin	KP2221009
10	FP-24B36	Bearing	KP2221010
11	FA-78	Washer, for Shoe Lever Pin	KP2221011
12	WB-2243	Equalizing Screw	KP2221012
14	WB-2342	Connecting Rod Pin	KP2221013
15	FP-24C10	Bearing	KP2221014
16	FP-24B18	Bearing	KP2221015
17	WB-2186-A	Frame	KP2221016
18	WB-2215	Shoe Adjusting Screw	KP2221017
20	WB-2217-A	Connecting Rod	KP2221018
21	WB-2330	Centering Spring	KP1312031
22	WB-2333	Guide Screw	KP2221020
24	WB-2223	Magnet Hinge Pin	KP2221021
25	FP-24B21	Bearing	KP2221022
26	FP-24C32	Bearing	KP2221023

27	WB-3228	Washer	KP2221025
29	WB-2259	Dust Shield	KP2221026
30	WB-233	Magnet Adjusting Screw	KP2221027
32	WB-2312-A	Assembled Magnet	KP2221028
33	WB-2188-A	Armature	KP2221029
34	WB-4236-A	Spring Rod Nut	KP2221030
35	WB-2239	Spring Retainer	KP2221031
36	WB-2329	Operating Spring	KP2221032
37	WB-2249	Spring Collar	KP2221033
40	WB-2234-A	Spring Rod	KP2221034
41	WB-225	Spring Rod Pin	KP2022004
43	WB-2242	Terminal Bushing	KP1312098
44	Q-305	Terminal Guard	KP2022031
46	Q-165	Lead Block Stud	KP0522031
47	Q-257	Lead Block	KP2022023
52	WB-2192-A	Magnet Case	KP2221040
54	WB-2250	Retaining Plate	KP2221041
*	WB-2280-A	Series Coil	KP2221042
*	WB-22Shunt	Shunt Coil	KP2221043
*	WB-2283-A	Coil	KP2221044
*	51001-071-61	Brake Block Kit	KP2221045
*	WB-2281-A	Series Coil	KP2221046

Replacement Parts for: EC&M No. 30 Type WB Brake, Folio 2

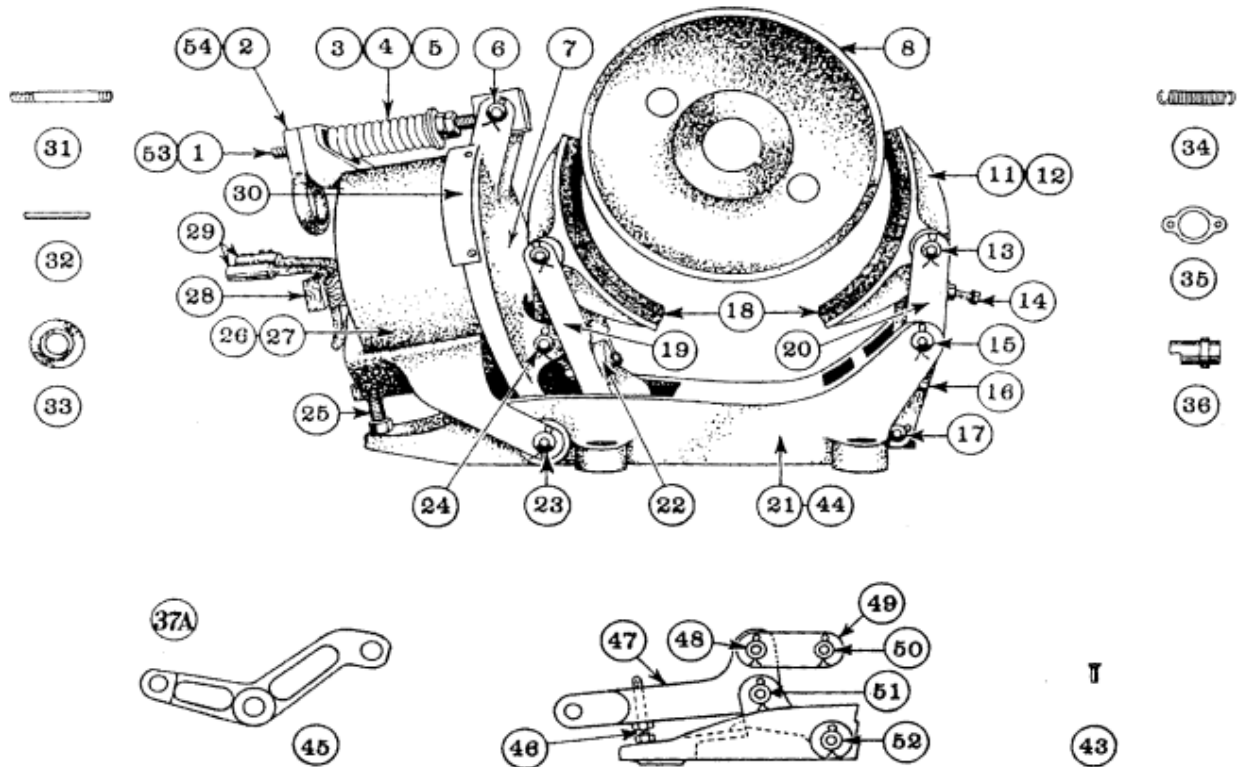


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-383-A	Spring Rod with Nuts	KP3022001	30	WB-315	Dust Shield	KP3022023
2	WB-381	Handle	KP3022002	31	Q-369	Lead Block Stud	KP3022024
3	WB-316	Operating Spring	KP3022003	32	WB-319	Spring Pin	KP3022025
6	WB-325	Spring Rod Pin	KP3022004	33	WB-314	Spring Collar	KP3022026
7	WB-387-A	Armature	KP3022005	34	WB-326	Centering Spring	KP3022027
11	WB-3200-A	Assembled Shoe, Complete	KP3022006	35	WB-329	Terminal Guard	KP3022028
12	WB-3317-A	Brake Shoe	KP3022007	36	WB-303	Terminal Bushing	KP3022029
13	WB-320	Shoe Pin	KP3022008	37	WB-309	Retaining Plate, Brass	KP3022030
15	WB-322	Shoe Lever Hinge Pin	KP3022009	37A	WB-3183	Retaining Plate	KP3022031
16	WB-235	Equalizing Screw	KP1312015	40	WB-308	Balance Lever	KP3022032
17	WB-324	Connecting Rod Pin	KP3022011	41	WB-3217-A	Connecting Rod	KP3022033
18	WB-318	Brake Lining	KP3022012	43	WB-366	Rivet	KP3022034
19	WB-305	Shoe Lever	KP3022013	46	WB-355	Shoe Adjusting Screw	KP1012019
20	WB-385-A	Shoe Lever With Spring Pin	KP3022014	50	WB-345	Armature Pin	KP3022036
21	WB-389-A	Frame	KP3022015	*	WB-363	Bushing, Armature/Lower	KP3022037
22	WB-332-A	Shoe Adjusting Wheel w/ Screw	KP3022016	*	WB-3144-A	Coil	KP3022038
23	WB-322	Shoe Lever Hinge Pin	KP3022009	*	WB-362	Bushing, Armature	KP3022039
24	WB-321	Armature Pin	KP3022018	*	WB-365	Bushing, Shoe Lever	KP3022040
25	WB-333	Special Cap Screw	KP3022019	*	WB-364	Bushing, Frame	KP3022041
26	WB-3184-A	Assembled Magnet	KP3022020	*	WB-361	Bushing	KP3022042
27	WB-3174-A	Magnet Case	KP3022021	*	WB-31XX	Coil, 50 HP	KP3022043
28	Q-368	Lead Block	KP3022022				

*Not Pictured

Replacement Parts for:


EC&M No. 30 Type WB Brake, Folio 3

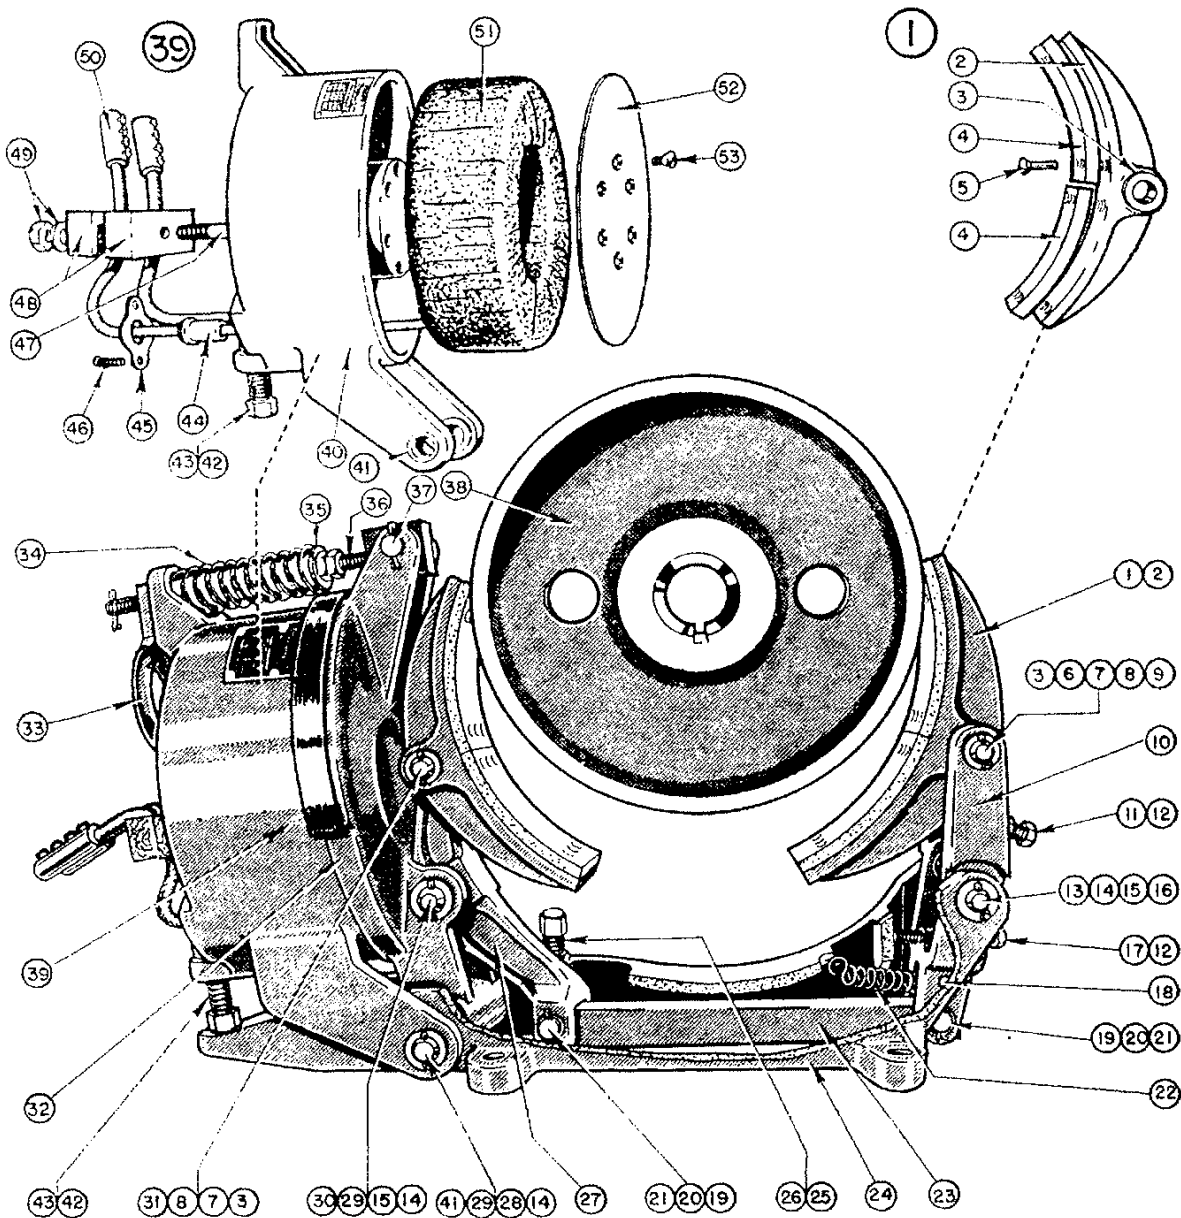

Replacement Parts for: EC&M No. 30 Type WB Brake, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-3200-A	Assembled Shoe, Complete	KP3022006				
2	WB-3317-A	Brake Shoe	KP3022007				
3	FP-24B19	Bearing	KP3023003				
4	WB-318	Brake Lining	KP3022012				
5	WB-366	Rivet	KP3022034				
6	WB-3213	Shoe Pin	KP3023006				
7	WB-3227	Washer	KP2221007				
8	FP-24B17	Bearing	KP2221005				
9	WB-3220	Spacer	KP3023009				
10	WB-3204-A	Shoe Lever with Hinge Pin	KP3023010				
11	WB-355	Shoe Adjusting Screw	KP1012019				
13	WB-322	Shoe Lever Hinge Pin	KP3022009				
14	WB-3228	Washer	KP2221025				
15	FP-24B21	Bearing	KP2221022				
16	FP-24B20	Bearing	KP3023015				
17	WB-235	Equalizing Screw	KP1312015				
18	WB-319	Spring Pin	KP3022025				
19	WB-324	Connecting Rod Pin	KP3022011				
20	FP-24B18	Bearing	KP2221015				
21	FP-24C10	Bearing	KP2221014				
22	WB-326	Centering Spring	KP3022027				
23	WB-3217-A	Connecting Rod	KP3022033				
24	WB-3186-A	Frame Complete	KP3023023				
25	WB-3215	Shoe Adjusting Screw	KP3023024				
27	WB-3202-A	Balance Lever	KP3023025				
28	WB-3223	Magnet Hinge Pin	KP3023026				
29	FP-24C11	Bearing	KP3023027				
30	WB-345	Armature Pin	KP3022036				
31	WB-3214	Shoe Pin	KP3023029				
32	WB-3190-A	Armature Complete	KP3023030				
33	WB-381	Handle	KP3022002				
34	WB-316	Operating Spring	KP3022003				
35	WB-2249	Spring Collar	KP2221033				
36	WB-383-A	Spring Rod with Nuts	KP3022001				
37	WB-325	Spring Rod Pin	KP3022004				
39	WB-3312-A	Assembled Magnet	KP3023036				
40	WB-3192-A	Magnet Case	KP3023037				
41	FP-24B22	Bearing	KP3023038				
42	WB-333	Special Cap Screw	KP3022019				
44	WB-303	Terminal Bushing	KP3022029				
45	Q-305	Terminal Guard	KP2022031				
47	Q-369	Lead Block Stud	KP3022024				
48	Q-368	Lead Block	KP3022022				
51	WB-3125-A	Coil	KP3023044				
52	WB-3138	Retaining Plate	KP3023045				

Replacement Parts for: EC&M No. 40 Type WB Brake, Folio 2

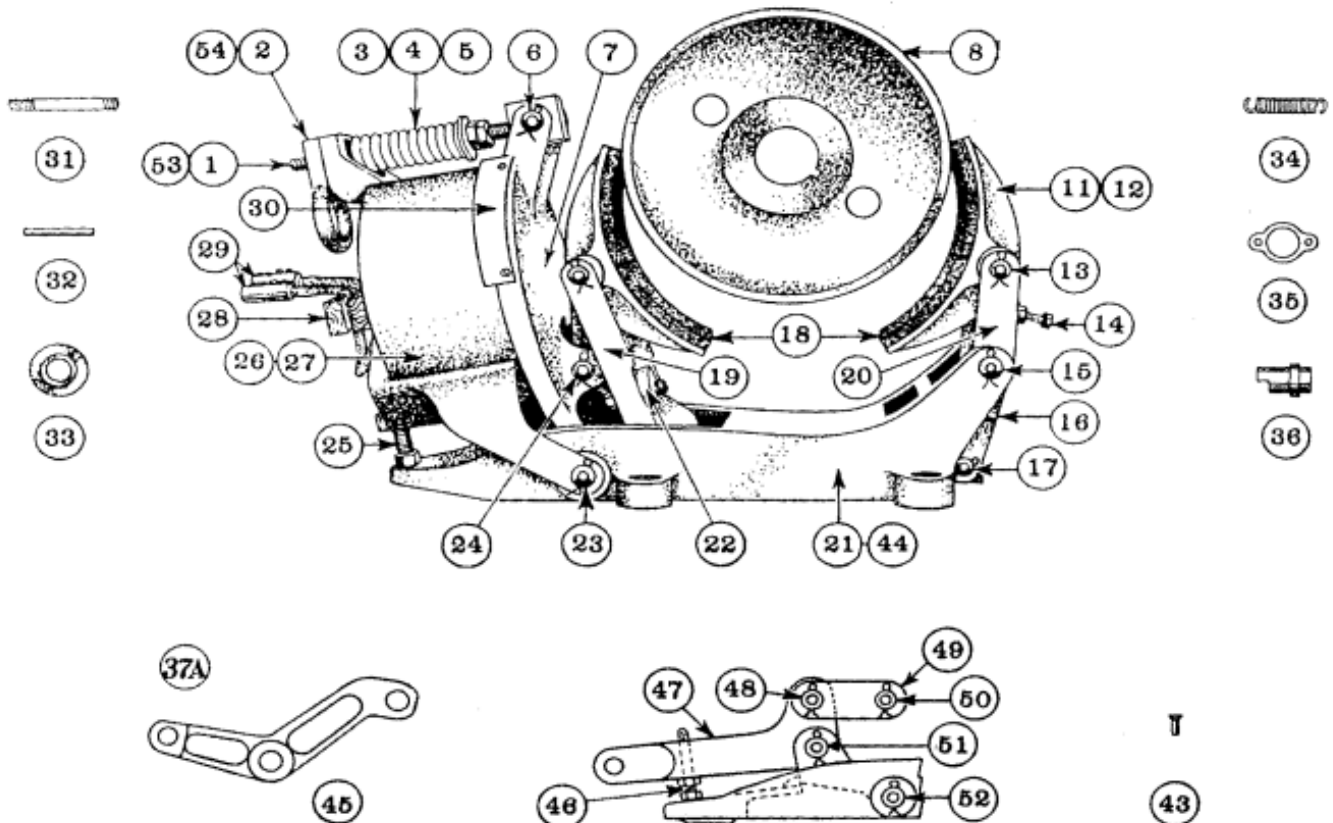

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-483-A	Spring Rod, with Nuts	KP4022001	28	Q-368	Lead Block	KP3022022
2	WB-381	Handle	KP3022002	30	WB-4163	Dust Shield	KP4022026
3	WB-416	Brake Spring	KP1614016	31	Q-369	Lead Block Stud	KP3022024
4	WB-436	Operating Spring	KP4022004	32	WB-419	Centering Spring Pin	KP4022028
6	WB-425	Spring Rod Pin	KP4022005	33	WB-414	Spring Collar	KP4022029
7	WB-487-A	Armature	KP4022006	34	WB-426	Centering Spring	KP4022030
11	WB-4200-A	Assembled Shoe, Complete	KP4022007	35	WB-529	Terminal Guard	KP4022031
12	WB-4317-A	Brake Shoe	KP4022008	36	WB-503	Terminal Bushing	KP4022032
13	WB-420	Shoe Pin	KP4022009	37	WB-409	Retaining Plate, Brass	KP4022033
14	WB-435	Special Cap Screw	KP4022010	37	WB-4183	Retaining Plate	KP4022034
15	WB-422	Shoe Lever Hinge Pin	KP4022011	40	WB-408	Balance Lever	KP4022035
16	WB-334	Equalizing Screw	KP4022012	41	WB-4217-A	Connecting Rod	KP4022036
17	WB-424	Connecting Rod Pin	KP2022038	43	WB-366	Rivet	KP3022034
18	WB-418	Brake Lining	KP4022014	46	WB-455	Magnet Adjusting Screw	KP2022020
19	WB-405	Shoe Lever	KP4022015	*	WB-466	Bushing, Frame, Lower Inner	KP4022039
20	WB-4204-A	Shoe Lever With Spring Pin	KP4022016	*	WB-4131-A	Coil	KP4022040
21	WB-489-A	Frame	KP4022017	*	WB-4132-A	Coil, Series Wound 100-HP	KP4022041
22	WB-432-A	Shoe Adjusting Wheel w/screw	KP4022018	*	51001-071-63	Brake Block Kit	KP4022042
23	WB-423	Magnet Hinge Pin	KP4022019	*	WB-463	Bushing, Armature	KP4022043
24	WB-421	Armature Pin	KP4022020	*	WB-461	Bushing, Magnet Case	KP4022044
25	WB-433	Special Cap Screw	KP4022021	*	WB-462	Bushing, Shoe Lever	KP4022045
26	WB-4184-A	Assembled Magnet	KP4022022	*	WB-464	Bushing, Armature/Lower	KP4022046
27	WB-4174-A	Magnet Case	KP4022023				


EC&M No. 40 Type WB Brake, Folio 3



Replacement Parts for: EC&M No. 40 Type WB Brake, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-4200-A	Assembled Shoe, Complete	KP4022007				
2	WB-4317-A	Brake Shoe	KP4022008				
3	WB-418	Brake Lining	KP4022014				
5	FP-24B24	Bearing	KP4023004				
6	WB-4213	Shoe Pin	KP4023005				
7	FA-78	Washer, for Shoe Lever Pin	KP2221011				
8	WB-4204-A	Shoe Lever With Spring Pin	KP4022016				
9	WB-4244	Shoe Adjusting Screw	KP4023008				
11	WB-4240	Shoe Lever Pin	KP4023009				
12	FP-24B27	Bearing	KP4023010				
13	WB-4228	Washer, for Shoe Lever Pin	KP4023011				
14	WB-4243	Equalizing Screw	KP4023012				
15	WB-419	Centering Spring Pin	KP4022028				
16	WB-424	Connecting Rod Pin	KP2022038				
17	FP-24B23	Bearing	KP4023015				
18	FP-24C13	Bearing	KP4023016				
19	WB-426	Centering Spring	KP4022030				
20	WB-4217-A	Connecting Rod	KP4022036				
21	WB-4186-A	Frame Complete	KP4023019				
22	WB-4202-A	Balance Lever	KP4023020				
23	FP-24C14	Bearing	KP4023021				
24	WB-4215	Shoe Adjusting Screw	KP4023022				
26	WB-4223	Magnet Hinge Pin	KP4023024				
27	FP-24B28	Bearing	KP4023025				
28	FP-24B26	Bearing	KP4023026				
29	FP-24C31	Bearing	KP4023027				
30	WB-4222	Armature Pin	KP4023028				
31	WB-433	Special Cap Screw	KP4022021				
33	WB-4312-A	Assembled Magnet Complete	KP4023030				
34	WB-4190-A	Armature Complete	KP4023031				
35	WB-4236-A	Spring Rod Nur	KP2221030				
36	WB-4239	Spring Retainer	KP4023033				
37	WB-436	Operating Spring	KP4022004				
38	WB-414	Spring Collar	KP4022029				
41	WB-4234-A	Spring Rod	KP4023036				
42	WB-425	Spring Rod Pin	KP4022005				
44	WB-503	Terminal Bushing	KP4022032				
45	WB-529	Terminal Guard	KP4022031				
47	Q-369	Lead Block Stud	KP3022024				
48	Q-368	Lead Block	KP3022022				
52	WB-4192-A	Magnet Case	KP4023042				
54	WB-4183	Retaining Plate	KP4022034				
*	WB-4146-A	Coil	KP4023044				

Replacement Parts for: EC&M No. 50 Type WB Brake, Folio 2

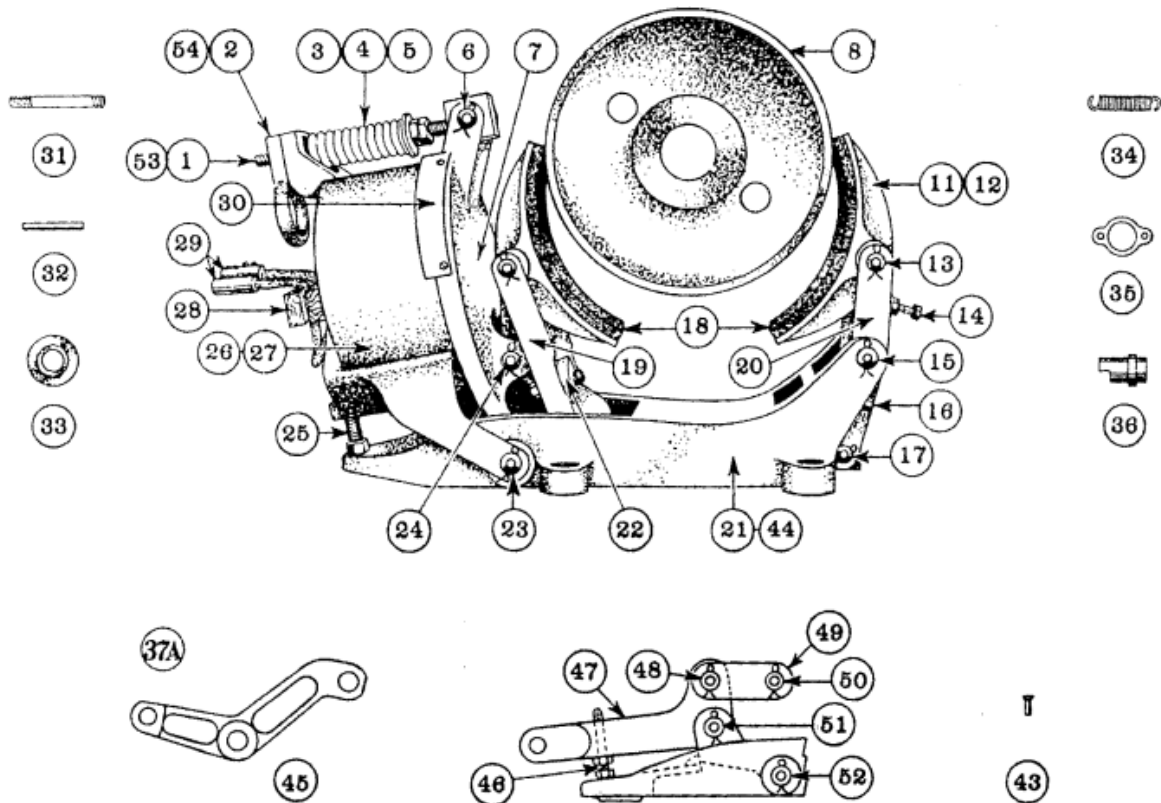


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-583-A	Spring Rod with Nuts	KP5022001	28	Q-368	Lead Block	KP3022022
2	WB-581	Handle	KP5022002	30	WB-515	Dust Shield	KP5022025
4	WB-516	Operating Spring (Large)	KP5022003	31	Q-369	Lead Block Stud	KP3022024
5	WB-536	Operating Spring (Small)	KP5022004	32	WB-519	Centering Spring Pin	KP5022027
6	WB-525	Spring Rod Pin	KP5022005	33	WB-514	Spring Collar	KP5022028
7	WB-587-A	Armature	KP5022006	34	WB-526	Centering Spring	KP5022029
11	WB-5200-A	Assembled Shoe, Complete	KP5022007	35	WB-529	Terminal Guard	KP4022031
12	WB-5317-A	Brake Shoe	KP5022008	36	WB-503	Terminal Bushing	KP4022032
13	WB-520	Shoe Pin	KP5022009	37	WB-509	Retaining Plate, Brass	KP5022032
14	WB-334	Equalizing Screw	KP4022012	37a	WB-5183	Retaining Plate, Steel	KP5022033
15	WB-522	Shoe Lever Hinge Pin	KP5022011	39	WB-5141-A	Shunt Coil	KP5022034
16	WB-5029	Special Cap Screw	KP5022012	40	WB-508	Balance Lever	KP5022035
17	WB-524	Connecting Rod Pin	KP5022013	41	WB-506	Connecting Rod	KP5022036
18	WB-518	Brake Lining	KP5022014	42	WB-556	Shoe Pin Bearing	KP5022037
19	WB-505	Shoe Lever	KP5022015	43	WB-559	Lining Rivet	KP5022038
20	WB-585-A	Shoe Lever With Spring Pin	KP5022016	*	WB-561	Magnet Case Bushing	KP5022039
21	WB-589-A	Frame	KP5022017	*	WB-5129-A	Series Coil	KP5022040
22	WB-532-A	Shoe Adjusting Wheel w/screw	KP5022018	*	51001-071-64	Brake Block Kit	KP5022041
23	WB-523	Magnet Hinge Pin	KP5022019	*	WB-5234-A	Spring Rod	KP5022042
24	WB-521	Armature Pin	KP5022020	*	WB-562	Bushing, Armature/Lower	KP5022043
24	WB-5174-A	Magnet Case	KP5022021	*	WB-564	Bushing, Shoe Lever	KP5022044
25	WB-533	Special Cap Screw	KP5022022	*	WB-563	Bushing, Shoe Lever	KP5022045
26	WB-5184-A	Assembled Magnet	KP5022023				

*Not pictured

Replacement Parts for:

EC&M No. 50 Type WB Brake, Folio 3

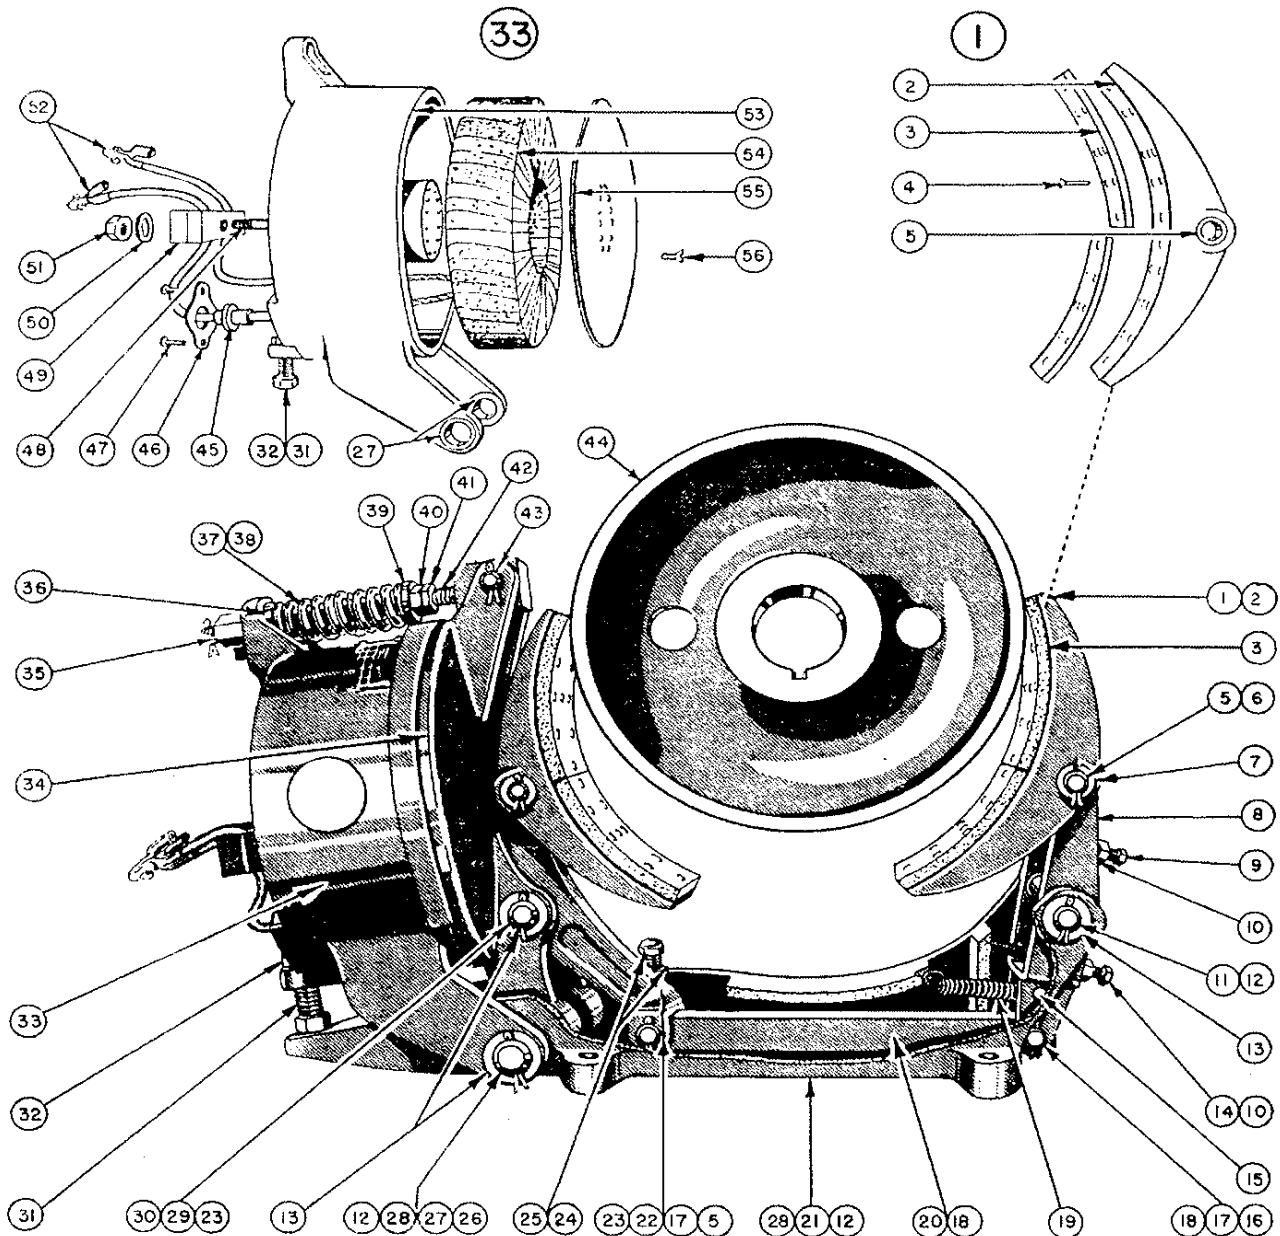


Replacement Parts for:

EC&M No. 50 Type WB Brake, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-5200-A	Assembled Shoe, Complete	KP5022007				
3	WB-518	Brake Lining	KP5022014				
4	WB-559	Lining Rivet	KP5022038				
5	FP-24B28	Bearing	KP4023025				
6	WB-5213	Shoe Pin	KP5023005				
7	WB-629	Washer	KP5023006				
8	WB-5204-A	Shoe Lever	KP5023007				
9	WB-5244	Shoe Adjusting Screw	KP5023008				
11	WB-5240	Shoe Lever Pin	KP5023009				
12	FP-24B31	Bearing	KP5023010				
12	WB-5317-A	BrakeShoe	KP5022008				
13	WB-627	Washer	KP5023012				
14	WB-5243	Equalizing Screw	KP5023013				
15	WB-519	Centering Spring Pin	KP5022027				
16	WB-524	Connecting Rod Pin	KP5022013				
17	FP-24B25	Bearing	KP5023016				
18	FP-24C14	Bearing	KP4023021				
19	WB-526	Centering Spring	KP5022029				
20	WB-5217-A	Connecting Rod	KP5023019				
21	WB-5186-A	Frame, Complete	KP5023020				
22	WB-5202-A	Shoe Lever	KP5023021				
23	FP-24B15	Bearing	KP5023022				
23	FP-24C15	Bearing	KP5023023				
24	WB-4215	ShoeAdjustingScrew	KP4023022				
26	WB-5223	Magnet Hinge Pin	KP5023026				
27	FP-24B30	Bearing	KP5023027				
28	FP-24C16	Bearing	KP5023028				
29	WB-5222	Armature Pin	KP5023029				
30	FP-24B29	Bearing	KP5023030				
31	WB-533	Special Cap Screw	KP5022022				
33	WB-5312-A	Assembled Magnet, Complete	KP5023032				
34	WB-5190-A	Armature	KP5023033				
35	WB-5236-A	SpringRodNut	KP5023034				
36	WB-5239	Spring Retainer	KP5023035				
37	WB-516	Operating Spring (Large)	KP5022003				
38	WB-536	Operating Spring (Small)	KP5022004				
39	WB-514	Spring Collar	KP5022028				
42	WB-4234-A	Spring Rod	KP4023036				
43	WB-525	Spring Rod Pin	KP5022005				
45	WB-503	Terminal Bushing	KP4022032				
46	WB-529	Terminal Guard	KP4022031				
48	Q-369	Lead Block Stud	KP3022024				
49	Q-368	Lead Block	KP3022022				
53	WB-5192-A	Magnet Case, Complete	KP5023045				
55	WB-5183	Retaining Plate, Steel	KP5022033				
*	WB-5140-A	Coil	KP5023047				
*	WB-5143-A	Shunt Coil	KP5023048				

Replacement Parts for:

EC&M No. 60 Type WB Brake, Folio 1

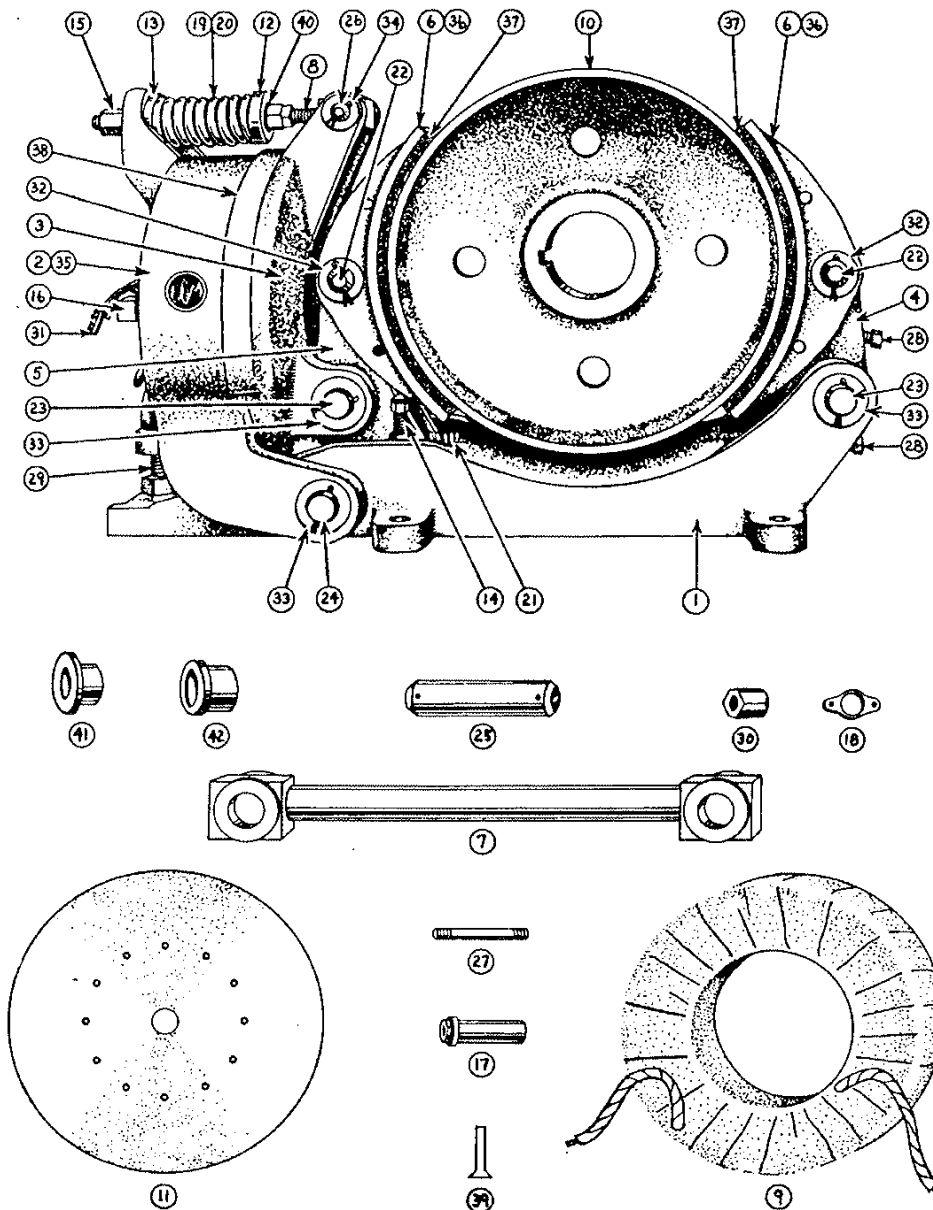


Replacement Parts for:

EC&M No. 60 Type WB Brake, Folio 1

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	WB-689-A	Frame	KP6021001				
2	WB-6174-A	Magnet Case	KP6021002				
3	WB-6112-A	Armature W/Dust Shield	KP6021003				
4	WB-685-A	Shoe Lever	KP6021004				
5	WB-686-A	Shoe Lever	KP6021005				
6	WB-610-A	Assembled Shoe W/Lining	KP6021006				
7	WB-6070-A	Connecting Rod	KP6021007				
8	WB-683-A	Spring Rod W/Nuts	KP6021008				
11	WB-6183	Retaining Plate	KP6021009				
12	WB-614	Spring Retainer	KP6021010				
13	WB-6061	Spring Retainer	KP6021011				
14	WB-6114	Shoe Adjusting Screw	KP6021012				
15	WB-6012	Spring Rod Nut	KP6021013				
16	WB-6168	Lead Block	KP6021014				
17	WB-603	Terminal Bushing	KP6021015				
18	Q-305	Terminal Guard	KP2022031				
19	WB-6179	Operating Spring	KP6021017				
20	WB-636	Operating Spring, Inner	KP6021018				
21	WB-626	Centering Spring	KP6021019				
22	WB-620	Shoe Pin	KP6021021				
23	WB-622	Shoe Lever Hinge Pin	KP6021022				
24	WB-623	Magnet Hinge Pin	KP6021023				
25	WB-624	Connecting Rod Pin	KP6021024				
26	WB-625	Spring Rod Pin	KP6021025				
27	WB-6171	Lead Block Stud	KP6021026				
28	WB-634	Shoe Adjusting Screw	KP6021027				
29	WB-633	Magnet Adjusting Screw	KP6021028				
30	WB-6169	Spl. Nut For Adj Screw	KP6021029				
32	WB-627	Washer	KP5023012				
33	WB-628	Washer	KP6021031				
34	WB-629	Washer	KP5023006				
36	WB-6069-A	Brake Shoe Only	KP6021033				
37	WB-618	Brake Lining	KP6021034				
38	WB-615	Dust Shield	KP6021035				
39	WB-659	Rivet	KP2312004				
40	WB-630	Thrust Washer	KP6021037				
41	FP-24B10	Bearing	KP6021038				
42	FP-24B11	Bearing	KP6021039				
*	51001-071-65	Brake Block Kit	KP6021040				

Replacement Parts for:
8" Class 5010 Type WB Brake, Folio 5

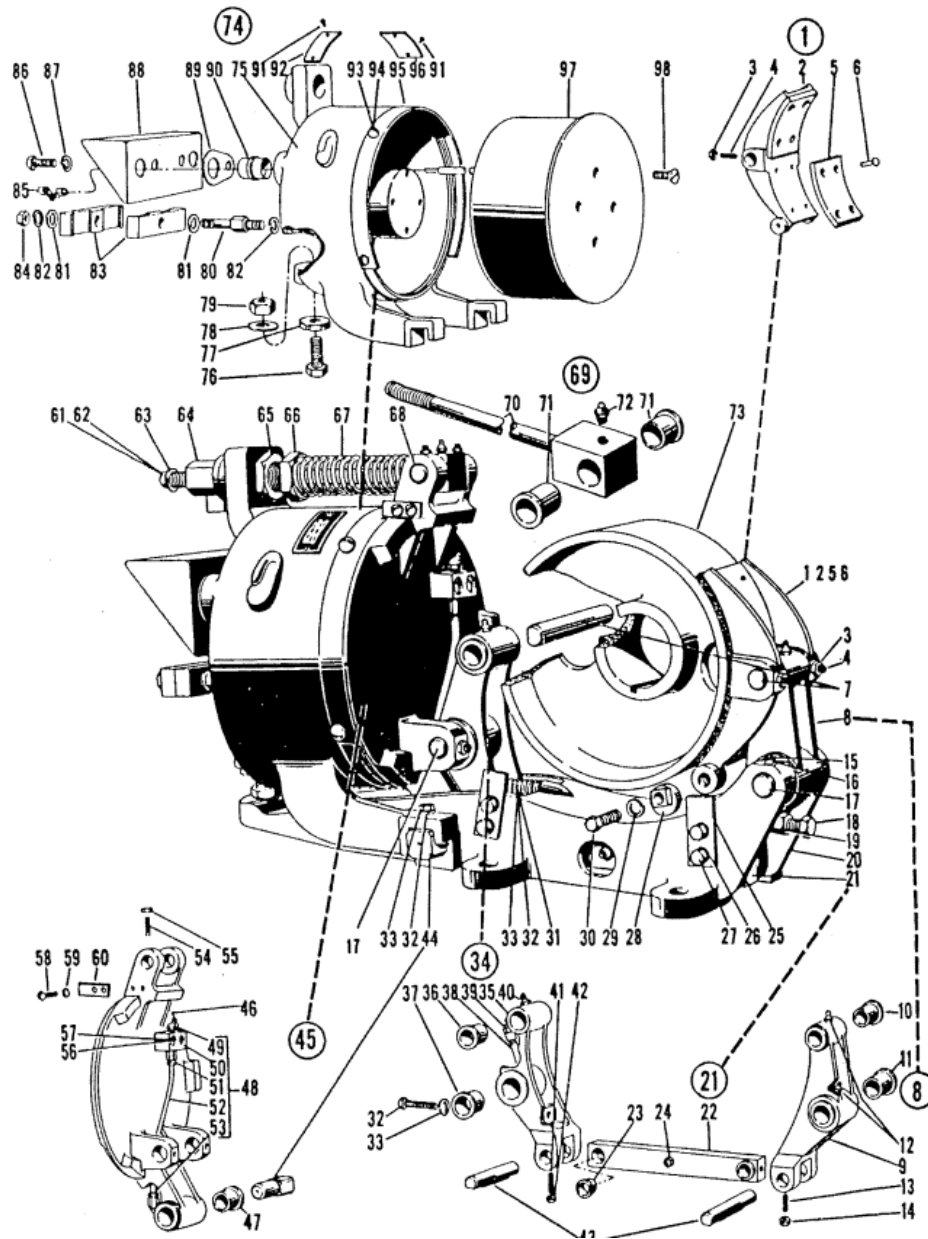


Replacement Parts for: 8" Class 5010 Type WB Brake, Folio 5

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	W-10004-A	Assembled Brake Shoe Complete	KP1012001	51	W-13026	Header Block	KP0812051
2	W-10005	Brake Shoe, Only	KP1012002	52	52927-018-50	Compression Fitting	KP0812052
3		H.I Check Nut	KP1012003	53	W-10048	Tube	KP1012056
4		Set Screw	KP1012004	54	52927-018-70	Compression Fitting	KP0812054
5	W-10043	Brake Block	KP1012005	55		Set Screw	KP1012004
6	WB-159	Lining Rivet	KP1012006	56		H.I Check Nut	KP1012003
7	W-10032	Shoe Pin	KP1012007	59		Hex Head Cap Screw, Plated	KP1012060
8	W-10006-A	Assembled Shoe Lever	KP1012008	60		Plated Lock Washer	KP1012061
9	W-10008-A	Shoe Lever With Bearings	KP1012009	61	W-13049	Air Gap Indicator	KP1012062
10	FP-24B45	Bearing	KP0812016	62		Hex Head Cap Screw, Plated	KP1012063
11	FP-24B40	Bearing	KP1012011	63		Plated Lock Washer	KP1012061
12	52927-017-60	Grease Fitting	KP0812004	64	LC-48	Washer	KP0812061
13		Set Screw	KP1012004	65	W-10022	Manual Release Nut	KP1012066
14		H.I Check Nut	KP1012003	66	W-10041	Lock Nut	KP1012067
15		Set Screw	KP1012004	67	W-10023	Spring Adjusting Nut	KP1012068
16		H.I Check Nut	KP1012003	68	W-10045	Spring Collar	KP0814015
17	W-10033	Shoe Lever Pin	KP1012017	69	W-10020	Operating Spring	KP1014016
17a	W-10034	Shoe Lever Pin, Armature End	KP1012018	70	W-10035	Spring Rod Pin	KP1012071
18	WB-355	Shoe Adjusting Screw	KP1012019	71	W-10012-A	Assembled Spring Rod	KP1012072
19	W-10042	Lock Nut	KP1012020	72	W-10094-A	Spring Rod	KP1012073
20	W-10018-A	Assembled Frame, Complete	KP1012021	73	FP-24B47	Bearing	KP0812025
21	W-10009-A	Assembled Connecting Rod	KP1012022	74	52927-017-60	Grease Fitting	KP0812004
22	W-10095-A	Connecting Rod	KP1012023	76	W-10001-A	Assembled Magnet	KP1012076
23	FP-24B47	Bearing	KP0812025	77	W-10017	Magnet Case	KP1012077
24	FP-25A11	Grease Fitting	KP1012025	78	W-10040	Magnet Adjusting Screw	KP1012078
25	W-10025	Cam Rail	KP1012026	79	W-10088	Magnet Adjusting Nut	KP1012079
26	PlatedLockWasher	L-01	KP1012027	80	W-10092	Washer	KP1012080
27	02701-00200	Pl. Lk. Washer	KP1012028	81	W-10080	Lock Nut	KP1012081
27		Hex Head Cap Screw, Plated	KP1012029	82	W-10090	Lead Clamp Stud	KP1012082
28	W-8015-A	Cam (replace with W-10117)	KP0812030	83		Flat Washer, Plated	KP1012083
29		Plated Lock Washer	KP1012031	84		Plated Lock Washer	KP1012031
30		Hex Head Cap Screw, Plated	KP1012032	85	W-10091	Lead Clamp	KP0812081
31	W-10021	Centering Spring	KP1012033	86		Hex Nut, Plated	KP1012086
33		Lock Washer, Plated	KP1012034	88		Hex Head Cap Screw, Plated	KP1012063
34	W-10007-A	Assembled Shoe Lever	KP1012035	89		Plated Lock Washer	KP1012031
35	W-10008-A	Shoe Lever With Bearings	KP1012009	90	W-10089	Terminal Shield	KP1012089
36	FP-24B45	Bearing	KP0812016	92	W-10029	Lead Bushing	KP1012090
37	FP-24B40	Bearing	KP1012011	93		Drive Screw	KP1012091
39	52927-017-60	Grease Fitting	KP0812004	95		R.I Screw	KP1012092
40	52927-017-70	Grease Fitting	KP0812042	96		Plated Lock Washer	KP1012061
41		Set Screw	KP1012004	97	W-10024	Dust Shield	KP1012094
42		H.I Check Nut	KP1012003	*	W-10113	Spring, 12 112% Of Std Torque	KP1012095
43	W-10098	10" Connecting Rod Pin	KP1012043	*	W-10265-A	Shunt Coil, 115 VDC	KP1012096
44	W-10030	Magnet Hinge Pin	KP1012044	*	W-10254-A	Coil, 16-20 HP	KP1012097
44a	W-10028	Frame Bushing	KP1012045	*	W-10118	Spring, 50% Of Std Torque	KP1012098
44b	W-10114	Pin	KP1012046	*	W-10264-A	Shunt Coil	KP1012099
44c	W-10115	Collar	KP1012047	*	W-10039	Lead Gasket	KP1012100
45		Hex Head Cap Screw, Plated	KP1012048	*	FP-25A18	Compression Fitting	KP1012101
46	W-10002-A	Assembled Armature	KP1012049	*	FP-25A17	Compression Fitting	KP1012102
47	W-10003-A	Armature, Complete	KP1012050	*	FP-25A16	Grease Fitting	KP1012103
48	FP-24B40	Bearing	KP1012011	*	FP-25A15	Grease Fitting	KP1012104
49	W-10047-A	Assembled Grease Unit	KP1012052				
50	52927-017-50	Grease Fitting	KP0812050				

*Not Pictured

Replacement Parts for:

10" Class 5010 Type WB Brake, Folio 5

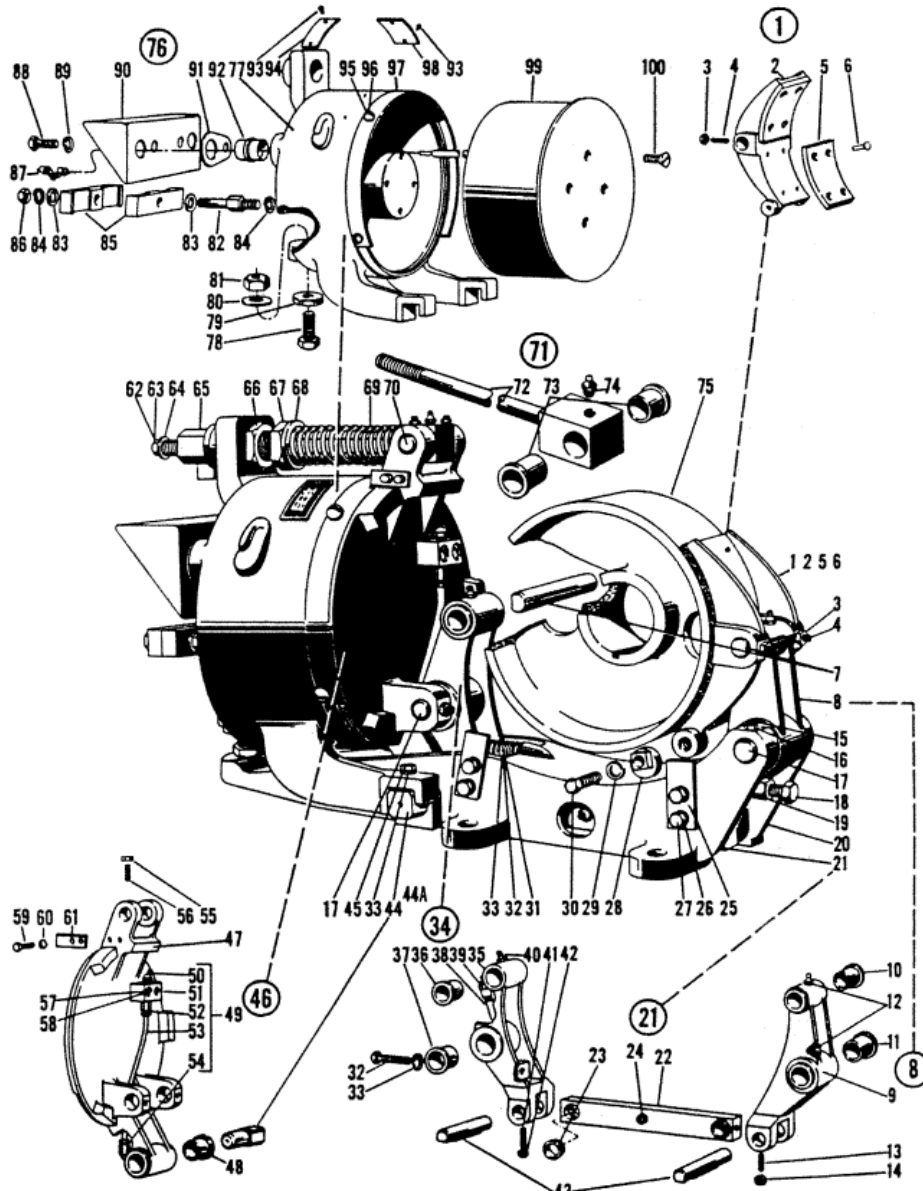


Replacement Parts for:

10" Class 5010 Type WB Brake, Folio 5

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	W-10004-A	Assembled Brake Shoe Complete	KP1012001	51	W-13026	Header Block	KP0812051
2	W-10005	Brake Shoe, Only	KP1012002	52	52927-018-50	Compression Fitting	KP0812052
3		H.I Check Nut	KP1012003	53	W-10048	Tube	KP1012056
4		Set Screw	KP1012004	54	52927-018-70	Compression Fitting	KP0812054
5	W-10043	Brake Block	KP1012005	55		Set Screw	KP1012004
6	WB-159	Lining Rivet	KP1012006	56		H.I Check Nut	KP1012003
7	W-10032	Shoe Pin	KP1012007	59		Hex Head Cap Screw, Plated	KP1012060
8	W-10006-A	Assembled Shoe Lever	KP1012008	60		Plated Lock Washer	KP1012061
9	W-10008-A	Shoe Lever With Bearings	KP1012009	61	W-13049	Air Gap Indicator	KP1012062
10	FP-24B45	Bearing	KP0812016	62		Hex Head Cap Screw, Plated	KP1012063
11	FP-24B40	Bearing	KP1012011	63		Plated Lock Washer	KP1012061
12	52927-017-60	Grease Fitting	KP0812004	64	LC-48	Washer	KP0812061
13		Set Screw	KP1012004	65	W-10022	Manual Release Nut	KP1012066
14		H.I Check Nut	KP1012003	66	W-10041	Lock Nut	KP1012067
15		Set Screw	KP1012004	67	W-10023	Spring Adjusting Nut	KP1012068
16		H.I Check Nut	KP1012003	68	W-10045	Spring Collar	KP0814015
17	W-10033	Shoe Lever Pin	KP1012017	69	W-10020	Operating Spring	KP1014016
17a	W-10034	Shoe Lever Pin, Armature End	KP1012018	70	W-10035	Spring Rod Pin	KP1012071
18	WB-355	Shoe Adjusting Screw	KP1012019	71	W-10012-A	Assembled Spring Rod	KP1012072
19	W-10042	Lock Nut	KP1012020	72	W-10094-A	Spring Rod	KP1012073
20	W-10018-A	Assembled Frame, Complete	KP1012021	73	FP-24B47	Bearing	KP0812025
21	W-10009-A	Assembled Connecting Rod	KP1012022	74	52927-017-60	Grease Fitting	KP0812004
22	W-10095-A	Connecting Rod	KP1012023	76	W-10001-A	Assembled Magnet	KP1012076
23	FP-24B47	Bearing	KP0812025	77	W-10017	Magnet Case	KP1012077
24	FP-25A11	Grease Fitting	KP1012025	78	W-10040	Magnet Adjusting Screw	KP1012078
25	W-10025	Cam Rail	KP1012026	79	W-10088	Magnet Adjusting Nut	KP1012079
26	PlatedLockWasher	L-01	KP1012027	80	W-10092	Washer	KP1012080
27	02701-00200	Pl. Lk. Washer	KP1012028	81	W-10080	Lock Nut	KP1012081
27		Hex Head Cap Screw, Plated	KP1012029	82	W-10090	Lead Clamp Stud	KP1012082
28	W-8015-A	Cam (replace with W-10117)	KP0812030	83		Flat Washer, Plated	KP1012083
29		Plated Lock Washer	KP1012031	84		Plated Lock Washer	KP1012031
30		Hex Head Cap Screw, Plated	KP1012032	85	W-10091	Lead Clamp	KP0812081
31	W-10021	Centering Spring	KP1012033	86		Hex Nut, Plated	KP1012086
33		Lock Washer, Plated	KP1012034	88		Hex Head Cap Screw, Plated	KP1012063
34	W-10007-A	Assembled Shoe Lever	KP1012035	89		Plated Lock Washer	KP1012031
35	W-10008-A	Shoe Lever With Bearings	KP1012009	90	W-10089	Terminal Shield	KP1012089
36	FP-24B45	Bearing	KP0812016	92	W-10029	Lead Bushing	KP1012090
37	FP-24B40	Bearing	KP1012011	93		Drive Screw	KP1012091
39	52927-017-60	Grease Fitting	KP0812004	95		R.I Screw	KP1012092
40	52927-017-70	Grease Fitting	KP0812042	96		Plated Lock Washer	KP1012061
41		Set Screw	KP1012004	97	W-10024	Dust Shield	KP1012094
42		H.I Check Nut	KP1012003	*	W-10113	Spring, 12 112% Of Std Torque	KP1012095
43	W-10098	10" Connecting Rod Pin	KP1012043	*	W-10265-A	Shunt Coil, 115 VDC	KP1012096
44	W-10030	Magnet Hinge Pin	KP1012044	*	W-10254-A	Coil, 16-20 HP	KP1012097
44a	W-10028	Frame Bushing	KP1012045	*	W-10118	Spring, 50% Of Std Torque	KP1012098
44b	W-10114	Pin	KP1012046	*	W-10264-A	Shunt Coil	KP1012099
44c	W-10115	Collar	KP1012047	*	W-10039	Lead Gasket	KP1012100
45		Hex Head Cap Screw, Plated	KP1012048	*	FP-25A18	Compression Fitting	KP1012101
46	W-10002-A	Assembled Armature	KP1012049	*	FP-25A17	Compression Fitting	KP1012102
47	W-10003-A	Armature, Complete	KP1012050	*	FP-25A16	Grease Fitting	KP1012103
48	FP-24B40	Bearing	KP1012011	*	FP-25A15	Grease Fitting	KP1012104
49	W-10047-A	Assembled Grease Unit	KP1012052	*Not Pictured			
50	52927-017-50	Grease Fitting	KP0812050				

Replacement Parts for:


13" Class 5010 Type WB Brake, Folio 5

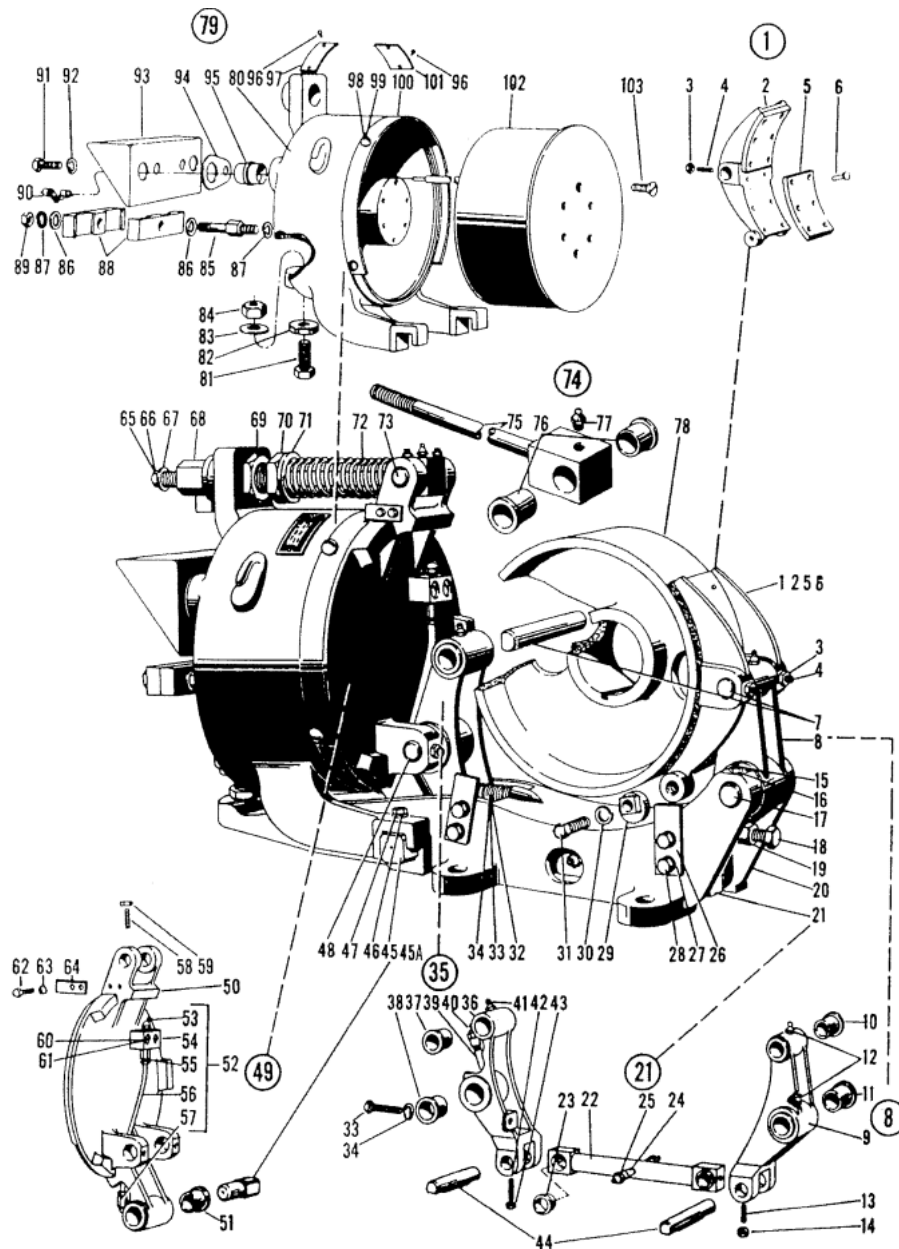

Replacement Parts for:
13" Class 5010 Type WB Brake, Folio 5

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	W-13004-A	Assembled Brake Shoe, Complete	KP1312001	55	52927-018-50	Compression Firing	KP0812052
2	W-13005	Shoe	KP1312002	56	W-13048	Tube	KP1312057
3	22903-24200	Set Screw	KP1312003	57	52927-018-70	Compression Firing	KP0812054
5	W-13043	Brake Block	KP1312004	58	22903-24200	Set Screw	KP1312003
6	W-13046	River	KP1312005	60	21101-20400	Fil. I. Cap Screw	KP0812055
7	W-13032	Shoe Pin	KP1312006	61	23701-00200	Pl. Lock Washer	KP0812003
8	W-13006-A	Assembled Shoe Lever	KP1312007	62	21401-20200	H.I Cap Screw	KP1312062
9	W-13008-A	Shoe Lever with Bearing	KP1312008	63	23701-00200	Pl. Lock Washer	KP0812003
10	29005-56404	Bearing	KP1314008	64	W-13049	Air Gap Indicator	KP1012062
100	W-13024	Dust Shield	KP1312010	65	21401-22240	H.I Cap Screw	KP0812083
11	29005-66446	Bearing	KP1614008	66	23701-00200	Pl. Lock Washer	KP0812003
12	52927-017-60	Grease Firing	KP0812004	66	23701-00220	Lock Washer	KP1312067
15	22903-24200	Set Screw	KP1312003	67	TW-76	Washer	KP1312068
17	W-13033	Shoe Lever Pin (Frame End)	KP1312014	68	W-13022	Manual Release Nut	KP1312069
18	WB-235	Equalizing Screw	KP1312015	69	W-13041	Lock Nut	KP1312070
19	W-13042	LockNur	KP1312016	70	W-13023	Spring Adjusting Nut	KP1312071
20	W-13018-A	Assembled Frame, Complete	KP1312017	71	W-13045	Spring Collar	KP1314015
*	W-13028	Bronze Frame Bushing	KP1312018	72	W-13020	Operating Spring	KP1314016
21	W-13009-A	Assembled Connecting Rod, Comp	KP1312019	72a	W-13121	Spring, 33% Of Std Torque	KP1312074
21a	W-13151-A	Connecring Rod W/Bearings	KP1312020	72b	W-13120	Spring, 66% Of Std Torque	KP1312075
22	W-13095-A	Connecring Rod with Bearings	KP1312021	72c	W-13163	Spring, 50% of Std Torque	KP1312076
23	29005-56403	Bearing	KP1312022	73	W-13035	Spring Rod Pin	KP1312077
24	25223-46400	Pipe Nipple	KP1312023	74	W-13012-A	Assembled Spring Rod, Comp	KP1312078
25	52927-017-70	Grease Fitting	KP0812042	75	W-13094-A	Assembled Spring Rod, Complete	KP1312079
26	W-13025	Cam Rail	KP1312025	76	29005-48320	Bearing	KP1312080
27	23701-00200	Pl. Lock Washer	KP0812003	77	52927-017-60	Grease Fitting	KP0812004
28	21401-20240	H.I Cap Screw	KP0812029	79	W-13001-A	Assembled Magnet, Complete	KP1312082
29	W-13015-A	Cam	KP1312028	80	W-13087-A	Magnet Case, Only	KP1312083
30	23701-00240	Pl. Lock Washer	KP0812036	81	W-13040	Magner Adjusting Screw	KP1312084
31	21401-24480	H.I Cap Screw	KP1312030	81a	W-16165	Stop Bracker	KP1312085
32	WB-2330	Centering Spring	KP1312031	82	W-13088	Magnet Adjusting Nut	KP1312086
33	WB-234	Magnet Adjusting Screw	KP1312032	83	W-13092	Washer	KP1312087
34	23701-00280	Lock Washer	KP1312033	84	W-13080	Lock Nut	KP1312088
35	W-13007-A	Assembled Shoe Lever, Complete	KP1312034	85	W-13090	Lead Clamp Stud	KP1312089
36	W-13008-A	Shoe Lever with Bearing	KP1312008	86	23601-00240	Washer	KP1312090
37	29005-56404	Bearing	KP1314008	87	23701-00240	Pl. Lock Washer	KP0812036
38	29005-66446	Bearing	KP1614008	88	W-13091	Lead Clamp	KP1312092
39	25223-46680	Pipe Nipple	KP1312038	89	23002-00240	H.I Nut	KP1312093
40	52927-017-60	Grease Fitting	KP0812004	91	21401-24240	H.I Cap Screw	KP1312094
41	52927-017-70	Grease Fitting	KP0812042	92	23701-00240	Pl. Lock Washer	KP0812036
42	22903-24200	Set Screw	KP1312003	93	W-13089	Terminal Shield	KP1312096
44	W-13098	Connecting Rod Pin	KP1312042	94	W-13039	Gasker	KP1312097
44	W-13031	Connecting Rod Pin	KP1312043	95	WB-2242	Terminal Bushing	KP1312098
45	Use 45b & 45c	Superceded		*	29005-66440	Bearing	KP1312099
45a	W-13159	Pin	KP1312045	*	W-13266-A	Coil Shunt	KP1312100
45b	W-13160	Collar	KP1312046	*	W-13263-A	Coil	KP1312101
46	23701-00320	Pl. Lock Washer	KP1312047	*	Calibration Plate	13" WB Calibration Plate	KP1312102
47	21401-32640	H.I Cap Screw	KP1312048	*	W-13262-A	Coil, T-1351	KP1312103
48	W-13034	Shoe Lever Pin (Armature End)	KP1312049	*	T-1303 Class 5010 13"		KP1312104
49	W-13002-A	Assembled Armature, Complete	KP1312050	*	W-13250-A	Coil	KP1312105
50	W-13003-A	Armarure with Bearings	KP1312051	*	W-13268-A	Shunt Coil	KP1312106
51	29005-66446	Bearing	KP1614008	*	51001-071-52	Brake Block Kit	KP1312107
52	W-13047-A	Assembled Grease Unit, Comp	KP1312053	*	Not Pictured		
53	52927-017-50	Grease Firing	KP0812050				
54	W-13026	Header Block	KP0812051				

16" Class 5010 Type WB Brake, Folio 5

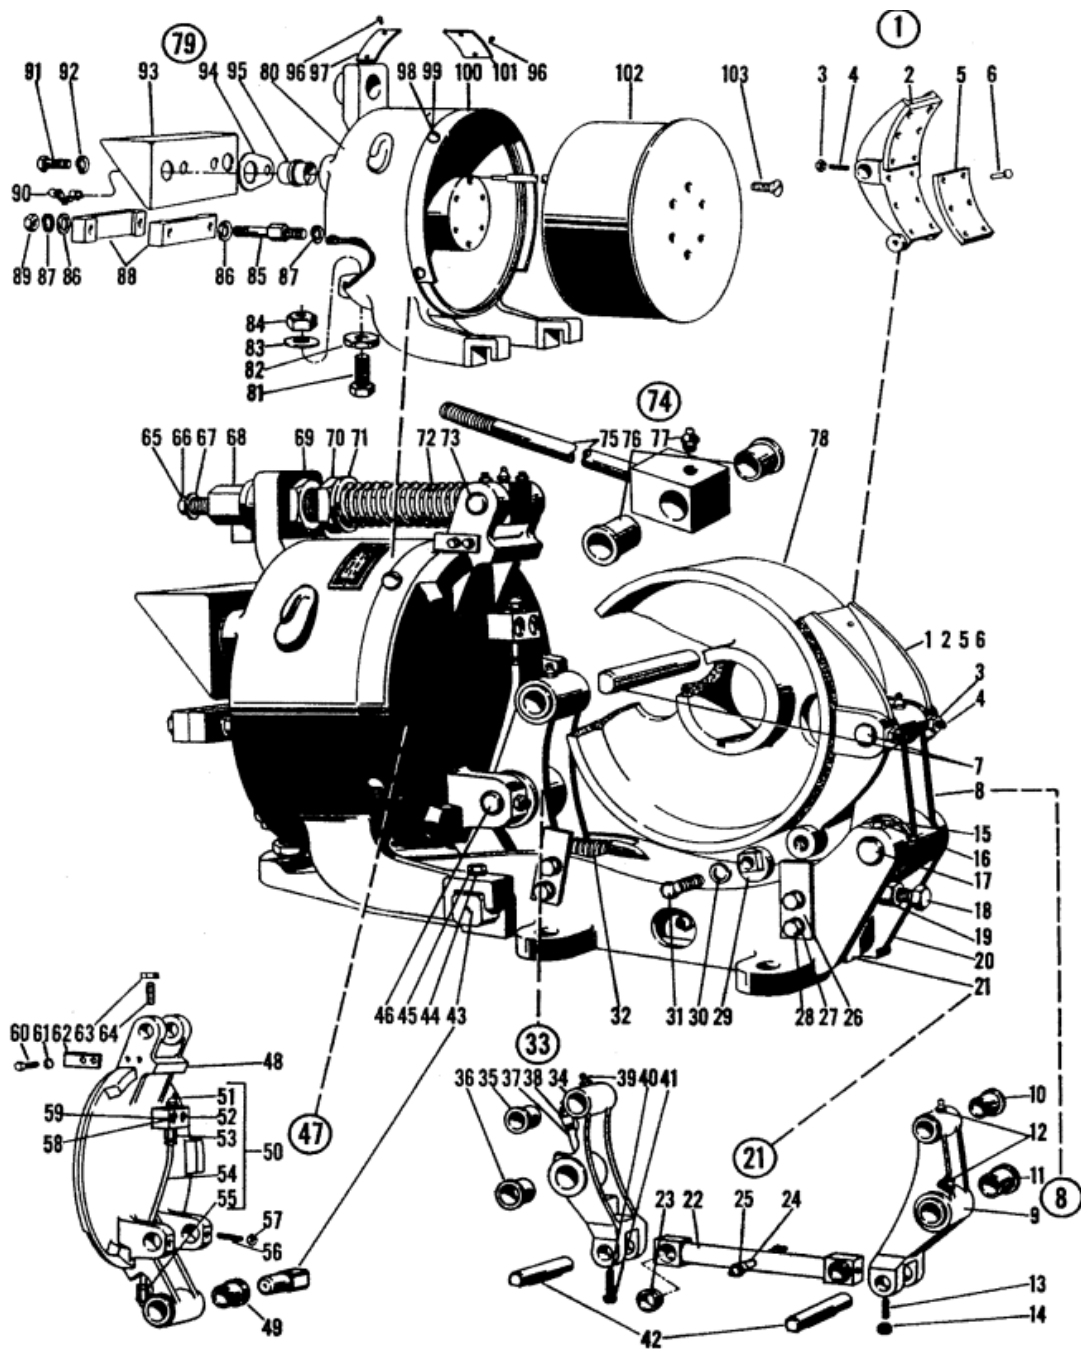


Replacement Parts for:

16" Class 5010 Type WB Brake, Folio 5

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	W-16004-A	Assembled Brake Shoe, Complete	KP1612001	69	W-16041	Lock Nut	KP1612047
2	W-16005-A	Brake Shoe	KP1612002	70	W-16023	Spring Adjusting Nut	KP1612048
5	W-16043	Brake Block	KP1612003	71	W-16045	Spring Collar	KP1612049
6	W-16046	Rivet	KP1612004	72	W-16020	Operating Spring	KP1612050
7	W-16032	Shoe Pin	KP1612005	72a	W-16123	Spring, 50% Of Std Torque	KP1612051
8	W-16006-A	Assembled Shoe Lever, Complete	KP1612006	73	W-16035	Spring Rod Pin	KP1612052
9	W-16008-A	Shoe Lever	KP1612007	74	W-16012-A	Spring Rod Complete	KP1612053
10	FP-24B43	Bearing	KP1612008	75	W-16094-A	Spring Rod w/Bearings	KP1612054
11	FP-24B42	Bearing	KP1612009	76	FP-24B40	Bearing	KP1012011
12	FP-25A12	Grease Fitting	KP1612010	77	FP-25A12	Grease Fitting	KP1612010
17	W-16033	Shoe Lever Pin (Frame End)	KP1612011	79	W-16001-A	Assembled Magnet Complete	KP1612057
18	W-16027	Screw	KP1612012	80	W-16087-A	Magnet Case	KP1612059
19	W-16042	Lock Nut	KP1612013	81	W-16040	Magnet Adjusting Screw	KP1612060
20	W-16018-A	Assembled Frame, Complete	KP1612014	82	W-16088	Magnet Adjusting Nut	KP1612061
21	W-16009-A	Assembled Connecting Rod Comp	KP1612015	83	W-16092	Washer	KP1612062
22	W-16095-A	Connecting Rod	KP1612016	84	W-16080	Lock Nut	KP1612063
23	FP-24B44	Bearing	KP1612017	85	W-16090	Lead Clamp Stud	KP1612064
25	FP-25A15	Grease Fitting	KP1012104	88	W-16091	Lead Clamp	KP1612065
26	W-16025	Cam Rail	KP1612019	93	W-16089	Terminal Shield	KP1612066
26a	W-16162	Rail	KP1612020	94	W-16039	Lead Gasket	KP1612067
29	W-13015-A	Cam	KP1312028	95	W-16029	Lead Bushing	KP1612068
29a	W-16163	Adjusting Ring	KP1612022	100	W-16024	DustShield	KP1612069
32	W-16021	Centering Spring	KP1612023	101		16" WB Calibration Plate	KP1612070
33	W-16007-A	Assembled Shoe Lever, Complete	KP1612024	*	29005-68655	Bearing	KP1612071
34	W-16008-A	Shoe Lever	KP1612007	*	51001-066-53	Manual Release Nut	KP1612072
35	FP-24B43	Bearing	KP1612008	*	W-16157	Retaining Plate	KP1612073
36	FP-24B42	Bearing	KP1612009	*	W-16028	Bearing	KP1612074
38	FP-25A12	Grease Fitting	KP1612010	*	W-16151-A	Rod	KP1612075
39	FP-25A15	Grease Fitting	KP1012104	*	W-16152-A	Connecting Rod w/Bearings	KP1612076
42	W-16031	Connecting Rod Pin	KP1612030	*	W-16098	Connecting Rod Pin	KP1612077
43	Use 43a & 43b	Superseded	KP1612031	*	W-16262-A	Coil	KP1612078
43a	W-16160	Pin	KP1612032	*	W-16274-A	Coil, 80-100 HP	KP1612079
43b	W-16161	Collar	KP1612033	*	W-16286-A	Coil	KP1612080
46	W-16034	Shoe Lever Pin (Armature End)	KP1612034	*	W-16269-A	Shunt Coil	KP1612081
47	W-16002-A	Assembled Armature, Complete	KP1612035	*	W-16265-A	Shunt Coil, 230 VDC	KP1612082
48	W-16003-A	Armature	KP1612036	*	W-16252-A	Coil, 52-65 HP	KP1612083
49	FP-24B42	Bearing	KP1612009				
50	W-16047-A	Assembled Grease Unit, Comp	KP1612038				
51	FP-25A16	Grease Fitting	KP1012103				
52	W-13026	Header Block	KP0812051				
53	FP-25A17	Compression Fitting	KP1012102				
54	W-16048	Tube	KP1612042				
55	FP-25A18	Compression Fitting	KP1012101				
62	W-13049	Air Gap Indicator	KP1012062				
67	TW-76	Washer	KP1312068				
68	W-16022	Manual Release Nut	KP1612046				

Replacement Parts for:

19" Class 5010 Type WB Brake, Folio 5

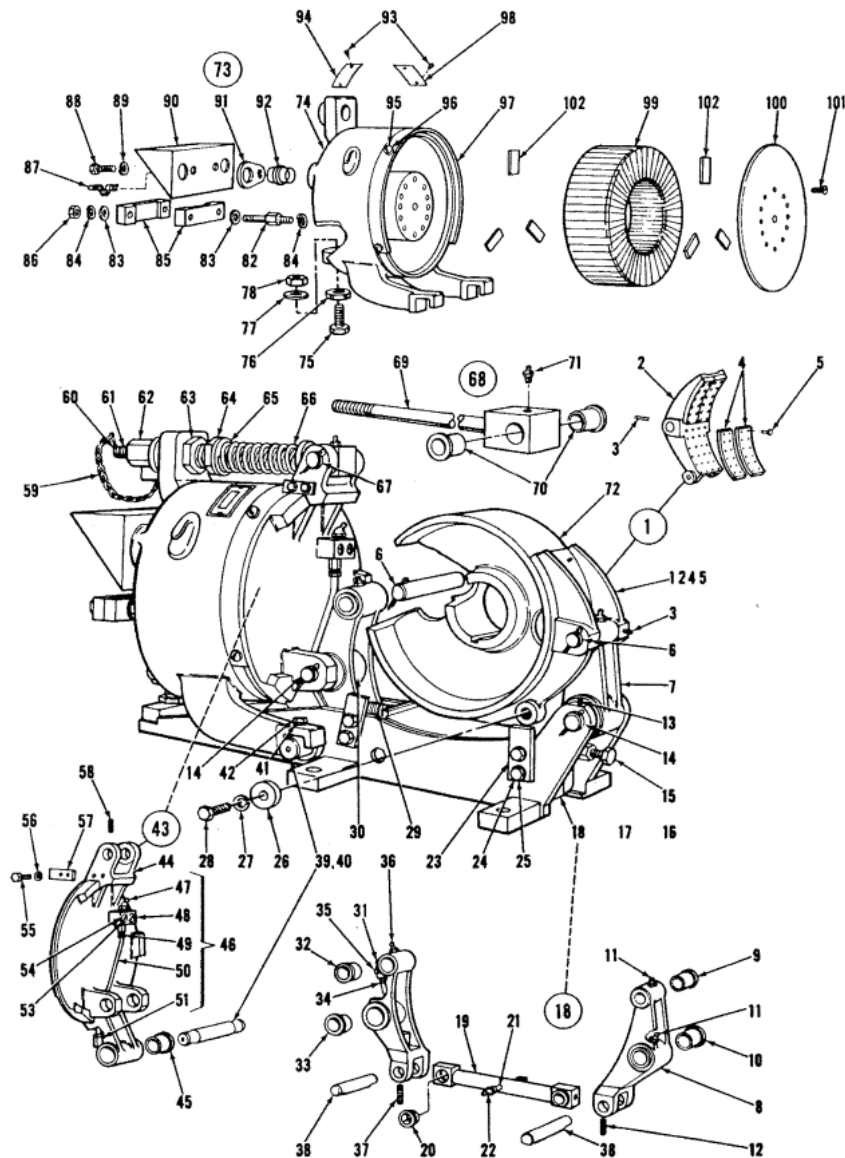

Replacement Parts for:

19" Class 5010 Type WB Brake, Folio 5

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	W-19004-A	Assembled Brake Shoe Complete	KP1912001	52	22903-28240	Set Screw	KP1912013
2	W-19005	Brake Shoe	KP1912002	53	21507-20400	P.H.S Screw	KP1912055
3	22903-24200	Set Screw	KP1312003	54	23701-00200	Pl. Lock Washer	KP0812003
4	W-19043	Brake Block	KP1912004	55	21401-20200	H.I Cap Screw	KP1312062
5	W-19327	Rivet	KP1912005	56	23701-00200	Pl. Lock Washer	KP0812003
6	W-19032	Shoe Pin	KP1912006	57	W-19049	Air Gap Indicator	KP1912060
7	W-19006-A	Assembled Shoe Lever Complete	KP1912007	58	22903-24200	Set Screw	KP1312003
8	W-19008-A	Assembled Shoe Lever	KP1912008	60	21008-07160	Lg Type "U" Drive Screw	KP1912062
9	29005-66446	Bearing	KP1614008	61	24201-12680	Cotter Pin	KP1912063
10	29005-72600	Bearing	KP1914008	62	W-19022	Manual Release Nut	KP1912064
11	25209-20400	Grease Fitting	KP1912011	63	W-19041	Lock Nut	KP1912065
12	22903-24200	Set Screw	KP1312003	64	W-19023	Spring Adjusting Nut	KP1912066
13	22903-28240	Set Screw	KP1912013	65	W-19045	Spring Collar	KP1912067
14	W-19033	Shoe Lever Pin	KP1912014	66	W-19020	Operating Spring	KP1912068
15	W-16027	Screw	KP1612012	66a	W-19154	Spring, 50% Of Std Torque	KP1912069
16	W-16042	Lock Nut	KP1612013	67	W-19035	Spring Rod Pin	KP1912070
17	W-19018-A	Assembled Frame, Complete	KP1912017	68	W-19012-A	Assembled Spring Rod Complete	KP1912071
18	W-19167-A	Assembled Connecting Rod Comp	KP1912018	69	W-19094-A	Spring Rod	KP1912072
19	W-19166-A	Connecting Rod	KP1912019	70	29005-64405	Bearing	KP1912073
20	29005-66447	Bearing	KP1912020	71	25209-20400	Grease Fitting	KP1912011
21	25223-46480	Pipe Nipple	KP0812041	73	W-19201-A	Assembled Magnet, Complete	KP1912075
21	25223-46640	Pipe Nipple	KP1912022	74	W-19287-A	Magnet Case	KP1912076
22	25209-30400	Grease Fitting	KP1912023	75	W-19040	Magnet Adjusting Screw	KP1912077
22	25209-20400	Grease Fitting	KP1912011	76	W-19088	Magnet Adjusting Nut	KP1912078
23	W-19161	Cam Rail	KP1912025	77	W-19092	Washer	KP1912079
24	27303-00220	Shakeproof Lock Washer	KP1912026	78	W-19080	Lock Nut	KP1912080
25	21401-22320	Hex Steel Cap Screw	KP1912027	79	W-23123	Stop Bracket	KP1912081
26	W-23125	Adjusting Ring	KP1912028	80	21401-22160	H. Stl. Cap Screw	KP1912082
27	23701-00280	Lock Washer	KP1312033	81	23703-00220	Shakeproof Lk. Washer	KP1912083
28	21401-28320	Hex Steel Cap Screw	KP1912030	82	W-19090	Lead Clamp Stud	KP1912084
29	W-19021	Centering Spring	KP1912031	83	23601-00240	Washer	KP1312090
30	W-19007-A	Assembled Shoe Lever Complete	KP1912032	84	23701-00240	Pl. Lock Washer	KP0812036
32	29005-66446	Bearing	KP1614008	85	W-19091	Lead Clamp	KP1912087
33	29005-72600	Bearing	KP1914008	86	23001-00240	H.I Nut	KP1912088
34	W-19008-A	Assembled Shoe Lever	KP1912008	88	21401-24240	H.I Cap Screw	KP1312094
34	25223-46680	Pipe Nipple	KP1312038	89	23701-00240	Pl. Lock Washer	KP0812036
35	25209-20400	Grease Fitting	KP1912011	90	W-19089	Terminal Shield	KP1912091
36	25209-30400	Grease Fitting	KP1912023	91	W-19039	Gasket	KP1912092
37	22903-24200	Set Screw	KP1312003	93	21008-06080	Drive Screw	KP0812087
38	W-19098	Connecting Rod Pin	KP1912040	95	21410-20160	Hex Type E Screw	KP1912094
39	W-19159	Magnet Hinge Pin	KP1912041	96	23701-00200	Pl. Lock Washer	KP0812003
40	W-19160	Pin Collar	KP1912042	97	W-19024	Dust Shield	KP1912096
41	23701-00360	Pl. Lock Washer	KP1912043	98	19"WB	Calibration Plate	KP1912097
42	21401-36680	H.I Cap Screw	KP1912044	99	W-19055	Coil	KP1912098
43	W-19002-A	Assembled Armature	KP1912045	99	W-19286	Coil	KP1912099
44	W-19003-A	Armature	KP1912046	100	W-19157	Retaining Plate	KP1912100
45	29005-72600	Bearing	KP1914008	101	21721-22200	Hex Socket Flat Hd. Cap Screw	KP1912101
46	W-19047-A	Assembled Grease Unit, Comp	KP1912048	*	W-19009-A	Assembled Connecting Rod	KP1912102
47	25209-10400	Grease Fitting	KP1912049	*	50502-526-09	Equalizing Screw	KP1912103
48	W-13026	Header Block	KP0812051	*	W-19149	Cam Rail	KP1912104
49	25208-90160	Compression Fitting	KP1912051	*	W-19028	Steel Base Bushing	KP1912105
50	W-19048	Tube	KP1912052	*	W-19029	Lead Bushing (strap wound)	KP1912106
51	25208-90161	Compression Fitting	KP1912053	*	W-19095-A	Connecting Rod	KP1912107


Replacement Parts for:

19" Class 5010 Type WB Brake, Folio 5

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
*	W-19030	Magnet Hinge Pin	KP1912108				
*	W-19087-A	Magnet Case	KP1912109				
*	W-19001-A	Assembled Magnet, Complete	KP1912110				
*	W-19039	Lead Gasket	KP1912111				
*	W-19025	Cam Rail	KP1912112				
*	W-19031	Connecting Rod Pin	KP1912113				
*	W-19079	Lead Bushing (wire wound)	KP1912114				

Replacement Parts for:

23" Class 5010 Type WB Brake, Folio 5

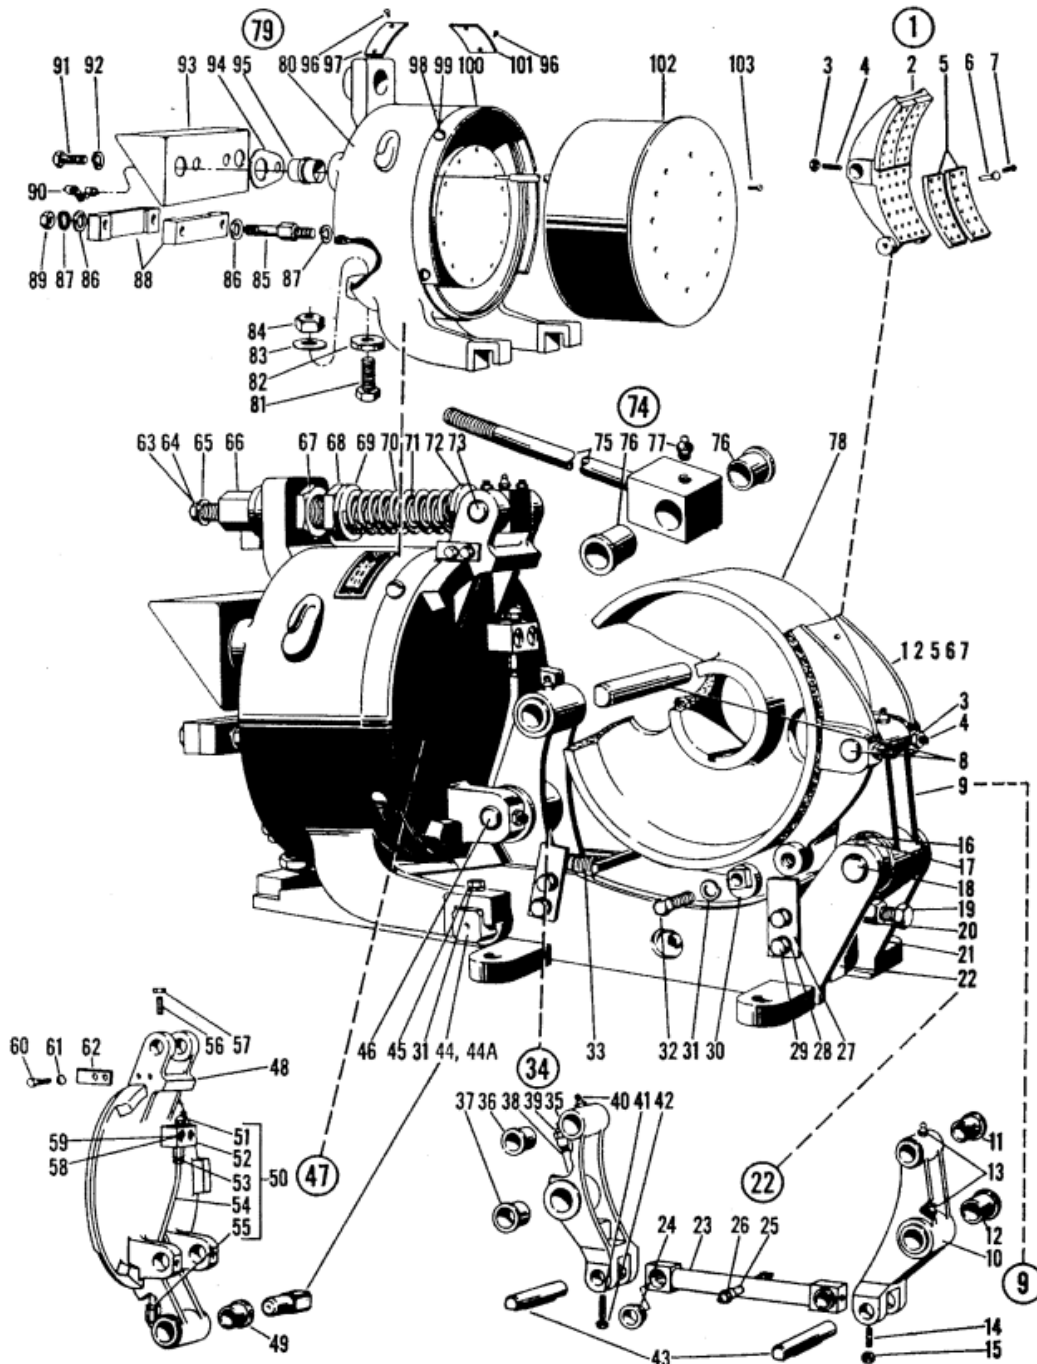

Replacement Parts for:

23" Class 5010 Type WB Brake, Folio 5

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	W-23004-A	Assembled Brake Shoe, Complete	KP2312001	69	W-23045	Spring Collar	KP2312050
2	W-23005	Brake Shoe, Only	KP2312002	70	W-23020	Operating Spring, Large	KP2312051
5	W-23043	Lining	KP2312003	70a	W-23159	Spring, 50% Of Std Torque	KP2312052
6	WB-659	Rivet	KP2312004	71	W-23082	Operating Spring, Small	KP2312053
8	W-23032	Shoe Pin	KP2312005	72	W-23078	Spring Collar	KP2312054
9	W-23006-A	Assembled Shoe Lever, Complete	KP2312006	73	W-13033	Shoe Lever Pin (Frame End)	KP1312014
10	W-23008-A	Shoe Lever	KP2312007	73	W-23035	Pin	KP2312056
11	FP-24J11	Bearing	KP2312008	74	W-23012-A	Assembled Spring Rod, Complete	KP2312057
12	FP-24J12	Bearing	KP2312009	75	W-23094-A	Spring Rod	KP2312058
13	FP-25A12	Grease Fitting	KP1612010	76	FP-24J10	Bearing	KP2312059
18	W-23033	Shoe Lever Pin (Frame End)	KP2312011	77	FP-25A12	Grease Fitting	KP1612010
19	W-23027	Equalizing Screw	KP2312012	79	W-23001-A	Assembled Magnet, Complete	KP2312061
20	W-23042	Lock Nut	KP2312013	79	W-23201-A	Magnet Assembly	KP2312062
21	W-23018-A	Assembled Frame	KP2312014	80	W-23087-A	Magnet Case	KP2312063
22	W-23009-A	Assembled Connecting Rod Comp	KP2312015	81	W-23040	Magnet Adjusting Screw	KP2312064
23	W-23095-A	Connecting Rod	KP2312016	82	W-23088	Magnet Adjusting Nut	KP2312065
24	FP-24J11	Bearing	KP2312008	83	W-23092	Washer	KP2312066
26	FP-25A15	Grease Fitting	KP1012104	84	W-23080	Lock Nut	KP2312067
27	W-23025	Cam Rail	KP2312019	85	W-19090	Lead Clamp Stud	KP1912084
30	W-19015-A	Cam	KP2312020	88	W-19091	Lead Clamp	KP1912087
31	23701-00380	Pl. Lock Washer	KP2312021	93	W-23089	Terminal Shield	KP2312070
32	21401-28560	Cap Screw	KP2312022	94	W-23039	Lead Gasket	KP2312071
33	W-23021	Centering Spring	KP2312023	95	W-23029	Lead Bushing	KP2312072
34	W-23007-A	Assembled Shoe Lever, Complete	KP2312024	95	W-23079	Lead Bushing	KP2312073
35	W-23008-A	Shoe Lever	KP2312007	100	W-23024	Dust Shield	KP2312074
36	FP-24J11	Bearing	KP2312008	102	W-23127	Retaining Plate 7 holes (Stainless)	KP2312075
39	FP-25A12	Grease Fitting	KP1612010	102	W-23126	Retaining Plate Cover	KP2312076
40	FP-25A15	Grease Fitting	KP1012104	102	W-23127	Retaining Plate, 19 holes, Folio 5A	KP2312077
42	W-19049	Air Gap Indicator	KP1912060	102	W-23127	Retaining Plate, 12 holes, Folio 5	KP2312078
43	W-23031	Connecting Rod Pin	KP2312030	*	23004-00400	H. Nut	KP2312079
44	Use 44(a) & 44(b)	Superseded	KP2312031	*	29005-80715	Frame Bushing	KP2312080
44a	W-23232	Magnet Hinge Pin	KP2312032	*	W-23028	Frame Bushing	KP2312081
44b	S-23233	Pin Collar	KP2312033	*	50502-526-13	Screw	KP2312082
46	W-23034	Shoe Lever Pin (Armature End)	KP2312034	*	50502-526-10	Equalizing Screw	KP2312083
47	W-23002-A	Assembled Armature, Complete	KP2312035	*	21714-22280	Nylock Brass Screw	KP2312084
48	W-23003-A	Armature	KP2312036	*	W-23124	Cam Rail	KP2312085
49	FP-24J12	Bearing	KP2312009	*	23223-46800	Pipe Nipple	KP2312086
50	W-23047-A	Assembled Grease Unit, Comp	KP2312038	*	W-23258-A	Coil	KP2312087
51	W-13026	Header Block	KP0812051	*	W-23052-A	Coil	KP2312088
52	FP-25A16	Grease Fitting	KP1012103	*	W-23061-A	Coil	KP2312089
53	FP-25A17	Compression Fitting	KP1012102	*	W-23261-A	Coil	KP2312090
54	W-23048	Tube	KP2312042	*	W-23058-A	Coil	KP2312091
55	FP-25A18	Compression Fitting	KP1012101	*	W-23254-A	Coil 110-140 HP	KP2312092
63	21401-22240	H.I Cap Screw	KP0812083	*	W-23252-A	Brake Coil, 160-205 hp	KP2312093
64	23701-00220	Lock Washer	KP1312067	*	W-23253-A	Coil, 140-180 HP	KP2312094
65	SS-292	Washer	KP2312046				
66	W-19022	Manual Release Nut	KP1912064				
67	W-19041	Lock Nut	KP1912065				
68	W-23023	Spring Adjusting Nut	KP2312049				




KOR-PAK
CORPORATION

Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts for:

30" Class 5010 Type WB Brake, Folio 6

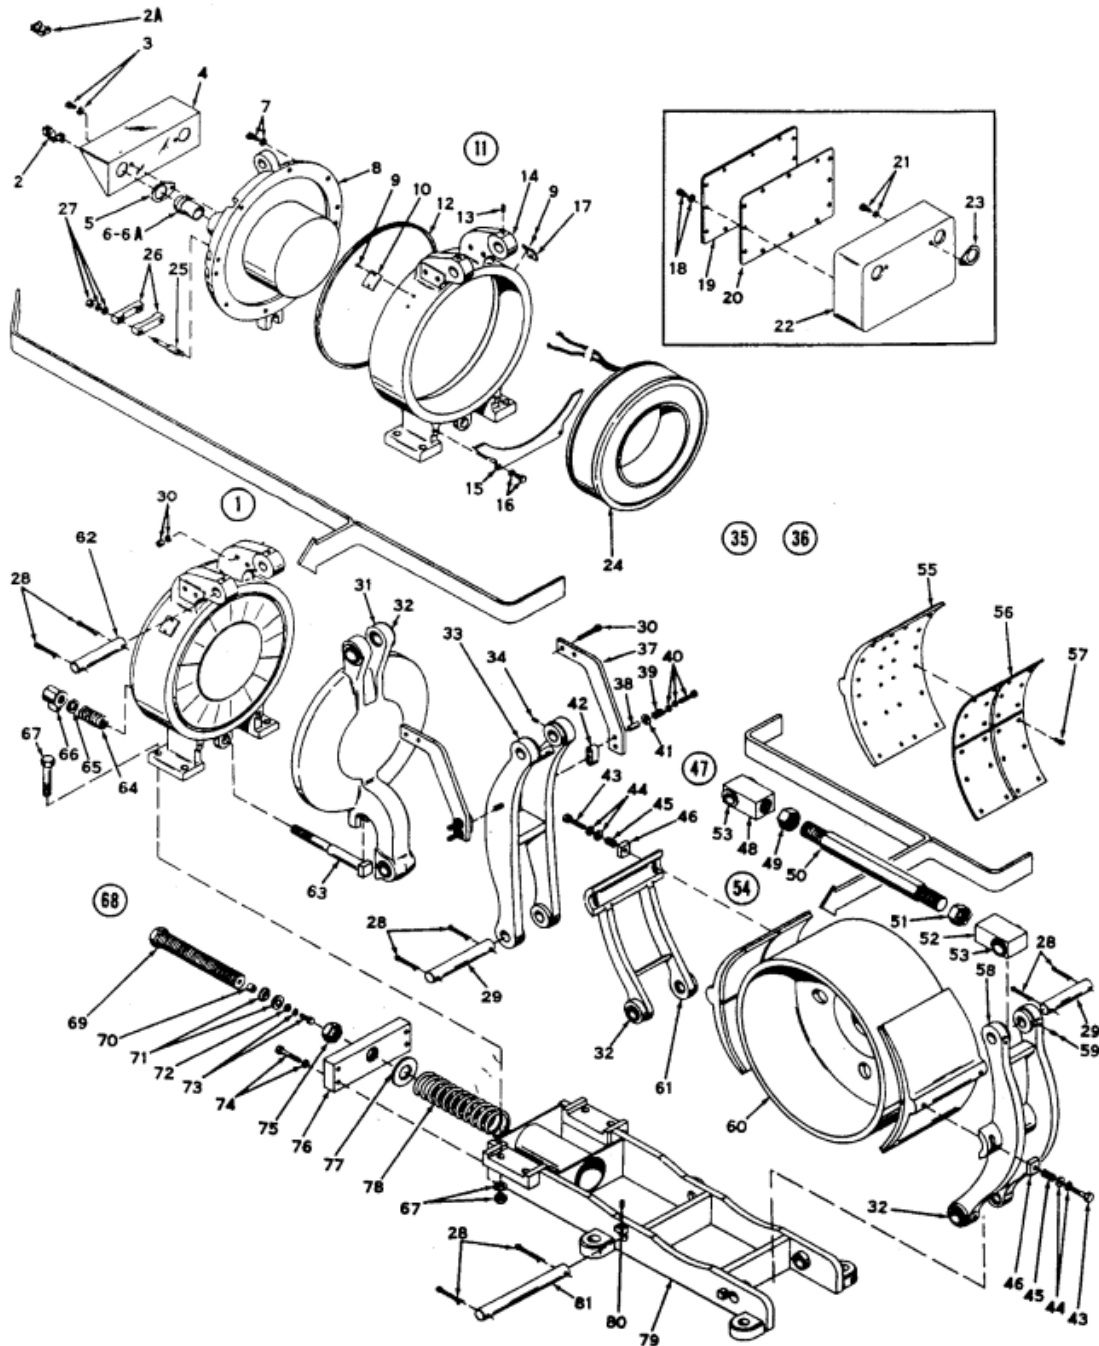


Replacement Parts for:

30" Class 5010 Type WB Brake, Folio 6


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51007-010-50	Magnet Assembly	KP3012001	51	50502-551-01	Jam Nut, LH	KP3012049
2	FP-28CI1	Coil Terminal Lug	KP3012002	52	51007-017-02	Connecting Rod Link, LH	KP3012050
02a	52908-003-02	Coil Terminal Lug	KP3012003	53	51007-023-01	Bearing	KP3012033
4	51007-031-01	Terminal Shield	KP3012004	54	51007-013-50	Brake Shoe Assembly	KP3012052
5	51007-029-04	Lead Bushing Clamp	KP3012005	55	51007-022-01	Brake Shoe	KP3012053
6	51007-029-01	Lead Bushing	KP3012006	56	51007-026-01	Brake Block	KP3012054
06a	51007-029-02	Lead Bushing	KP3012007	58	51007-014-50	Shoe Lever Assembly	KP3012055
8	51007-020-01	Magnet Faceplate	KP3012008	59	22903-28402	Set Screw	KP3012012
10	51139-040-04	Calibration Plate	KP3014003	60	51007-047-02	Brake Wheel	KP3012057
11	51007-019-50	Magnet Case Assembly	KP3012010	61	51007-015-50	Shoe Support Lever Assembly	KP3012058
12	51007-019-02	Gasket	KP3012011	62	51007-039-03	Armature Pin	KP3012059
13	22903-28402	Set Screw	KP3012012	63	51007-021-01	Manual Release Screw	KP3014033
14	51007-019-01	Magnet Case	KP3012013	64	50502-601-12	Spring	KP3014006
15	51007-035-01	Non-Magnetic Spacer	KP3014034	65	50502-003-32	Washer	KP3014005
15	51139-035-01	Nameplate	KP3012015	66	51007-021-02	Manual Release Nut	KP3012063
17	51139-035-01	Nameplate	KP3012015	68	51007-027-51	Torque Screw Assembly	KP3014037
19	51007-029-05	Junction Box Cover	KP3012017	69	51007-027-02	Torque Screw	KP3014038
20	51007-029-06	CoverGasket	KP3012018	70	50502-051-28	Spacer	KP3014039
22	51007-032-01	Junction Box	KP3012019	71	SP-875	Thrust Washer	KP3012067
23	51007-029-03	Lead Gasket	KP3012020	72	50502-003-30	Washer	KP3014041
24	50909-016-56	Coil	KP3012021	75	50502-551-03	Locknut	KP3014042
24	51007-038-50	Coil, 440-580 HP	KP3012022	76	51007-027-01	Torque Screw Plate	KP3014043
24	51007-038-54	Coil, 230-305 HP	KP3012023	77	50502-003-31	SpringThrust Plate	KP3014044
24	51007-038-53	Coil, 290-385 HP	KP3012024	78	51007-040-01	Operating Spring	KP3014045
24	51007-037-52	Shunt Coil	KP3012025	79	51007-012-50	Frame Assembly	KP3012073
24	51007-038-55	Coil, 175-235 HP	KP3012026	80	22903-28402	Set Screw	KP3012012
24	50909-016-58	Brake Coil, 30" Series	KP3012027	81	51007-039-02	Outer Lever/Support Lever Pin	KP3012075
24	51007-038-52	Coil, 315-410 HP	KP3012028	*	51017-029-01	Block	KP3012076
25	W-19090	Lead Clamp Stud	KP1912084	*	50903-808-57	Brake Block	KP3014029
26	W-19091	Lead Clamp	KP1912087				
29	51007-039-01	Pin	KP3012031				
31	51007-018-50	Armature Assembly	KP3012032				
32	51007-023-01	Bearing	KP3012033				
33	51007-016-50	Shoe Lever Assembly	KP3012034				
34	22903-28402	Set Screw	KP3012012				
35	51007-030-51	Virtual Center Assembly, LH	KP3014016				
36	51007-030-50	Virtual Center Assembly, RH	KP3014015				
37	51007-043-01	Bracket	KP3012038				
38	50502-052-16	Spacer	KP3014013				
39	50502-601-13	Spring	KP3014012				
42	51007-042-03	Bearing, (Type T 30")	KP3012041				
43	50502-526-17	Special Cap Screw	KP3014017				
45	50502-601-38	Shoe Clamp Spring	KP3014018				
46	51007-028-01	Shoe Clamp	KP3012044				
47	51007-017-50	Connecting Rod Assembly	KP3012045				
48	51007-017-01	Connecting Rod Link, RH	KP3012046				
49	W-23080	Lock Nut	KP2312067				
50	51007-017-03	Connecting Rod	KP3012048				

Replacement Parts for: 8" Class 5010 Type F Series A

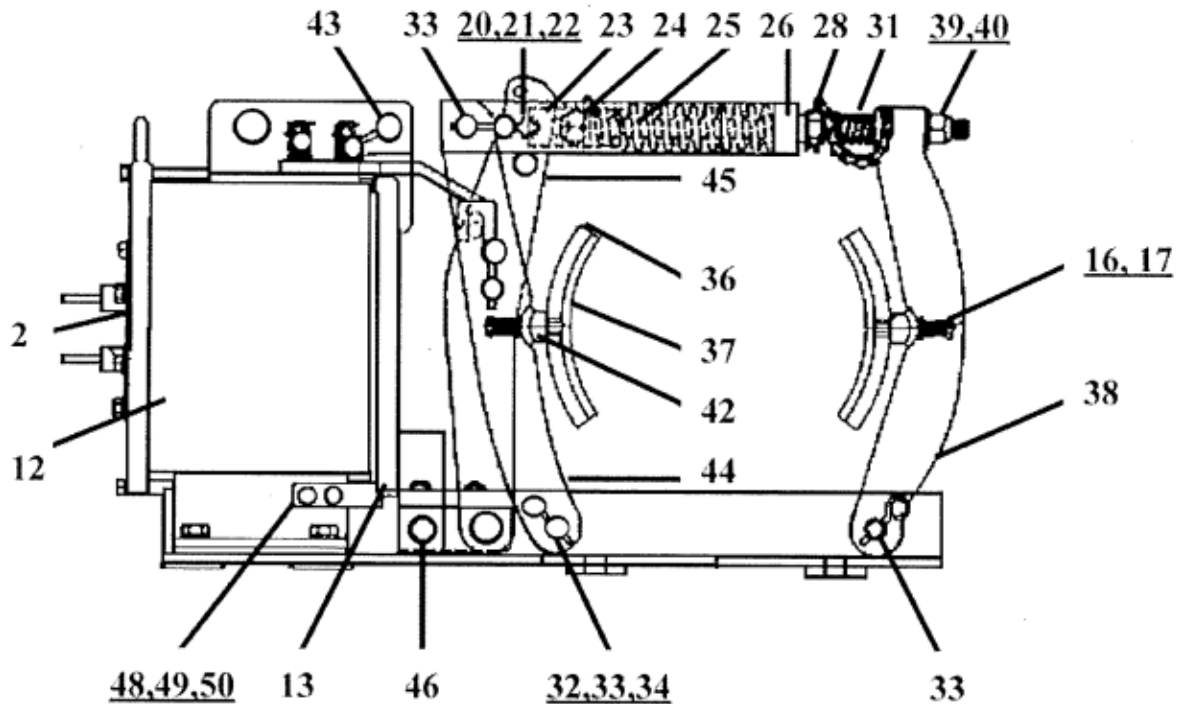


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50903-134-01	Lifting Bracket	KP0814001	38	50903-127-50	Outboard Shoe Lever	KP0814025
2	50903-143-01	Magnet Case Cover Assembly	KP0814002	39	50903-411-50	Nut and Washer Assembly	KP0814026
6	50903-167-01	Terminal Shield	KP0814003	42	50903-404-03	Lining Wear Indicator	KP0814027
7	50903-166-01	Lead Bushing	KP0814004	43	50903-401-10	Pin	KP0814028
8	29206-00430	O Ring	KP0814005	44	50903-129-50	Inboard Shoe Lever	KP0814029
12	50903-102-50	Base and Magnet Case Assembly	KP0814006	45	50903-119-50	Connecting Rod Lever	KP0814030
13	50903-121-50	Armature	KP0814007	46	50903-115-50	Connecting Link	KP0814031
14	29005-40240	Bearing	KP0814008	47	50903-401-12	Pin	KP0814032
15	50903-140-50	Centering Bracket	KP0814009	48	50903-139-01	Armature Gap Indicator	KP0814033
16	50901-010-13	Centering Bracket Spring	KP0814010	60	50903-805-51	Self-Adj Shoe Mechanism Kit	KP0814034
20	50903-407-04	Latch Pin	KP0814011	62	50903-158-01	Connecting Rod	KP0814035
21	29907-02410	E Ring	KP0814012	63	29013-02120	Connecting Rod Bearing	KP0814036
22	50901-010-09	Latch Pin Spring	KP0814013	68	29005-24121	Bearing	KP0814037
23	50903-117-50	Connecting Rod Assembly	KP0814014	71	50903-164-50	Crank Assembly	KP0814038
24	W-10045	Spring Collar	KP0814015	72	50903-160-01	Ratchet Rod	KP0814039
25	50901-010-12	Operating Spring	KP0814016	73	50903-415-01	Crank Pin	KP0814040
26	50903-137-50	Yoke	KP0814017	74	50906-165-50	Ratchet Rod End Block	KP0814041
27	50903-141-01	Calibration Plate	KP0814018	75	21601-24660	Socket Head Screw	KP0814042
28	50904-136-50	Manual Release Nut	KP0814019	76	50901-003-01	Spring	KP0814043
31	50901-010-11	Connecting Rod Spring	KP0814020	77	50904-154-50	Star Wheel Stop Nut Assembly	KP0814044
32	50903-401-11	Pin	KP0814021	78	50904-161-01	Ratchet Rod Guide	KP0814045
33	50903-402-03	Locking Pin	KP0814022	80	29005-32221	Oilite Bearing	KP0814046
36	50903-101-50	Shoe Assembly, Includes Lining	KP0814023	*	50903-809-51	Assorted Hardware Package	KP0814047
37	50903-808-51	Shoe Lining Kit	KP0814024				

Replacement Parts for: 10" Class 5010 Type F Series A

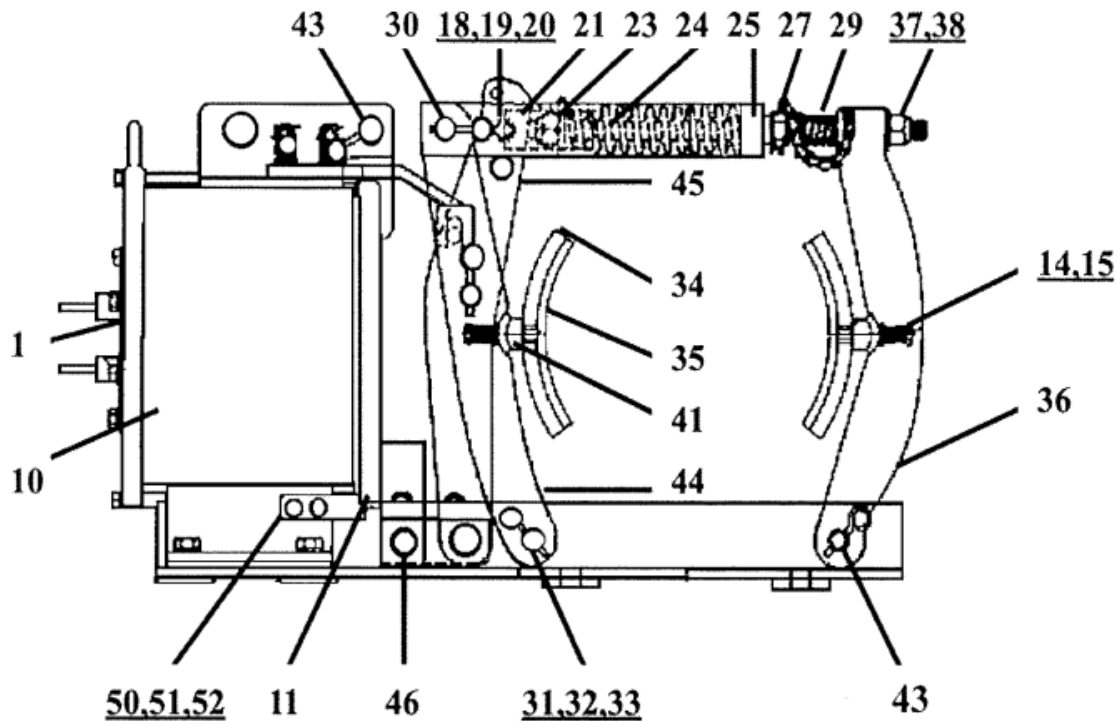


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50904-143-50	Magnet Case Cover Assembly	KP1014001	43	50903-401-01	Pin	KP1014024
4	50904-167-01	Terminal Shield	KP1014002	44	50904-129-50	Inboard Shoe Lever	KP1014025
5	50904-166-01	Lead Bushing	KP1014003	45	50904-119-50	Connecting Rod Lever	KP1014026
6	29206-00430	O Ring	KP0814005	46	50904-115-50	Connecting Link	KP1014027
8	21008-06120	Drive Screw	KP1014005	47	50903-401-03	Pin	KP1014028
10	50904-109-50	Magnet Case	KP1014006	50	50904-139-01	Armature Gap Indicator	KP1014029
11	50904-121-5	Armature	KP1014007	53	50903-809-52	Assorted Hardware Package	KP1014030
12	29005-48240	Bearing	KP1014008	60	50903-805-52	Self-Adj Shoe Mechanism Kit	KP1014031
13	50904-140-50	Centering Bracket Assy	KP1014009	62	50904-158-01	Connecting Rod	KP1014032
14	50901-010-02	Centering Bracket Spring	KP1014010	63	29013-02120	Connecting Rod Bearing	KP0814036
18	50903-407-01	Latch Pin	KP1014011	68	29005-24121	Bearing	KP0814037
19	29907-02410	E Ring	KP0814012	71	50904-164-50	Crank Assembly	KP1014035
20	50901-010-09	Latch Pin Spring	KP0814013	72	50904-160-01	Ratchet Rod	KP1014036
21	50904-117-50	Connecting Rod Assembly	KP1014014	73	50903-415-01	Crank Pin	KP0814040
23	W-10045	Spring Collar	KP0814015	74	50906-165-50	Ratchet Rod End Block	KP0814041
24	W-10020	Operating Spring	KP1014016	75	21601-24660	Socket Head Screw	KP0814042
25	50904-137-50	Yoke	KP1014017	76	50901-003-01	Spring	KP1014040
26	50904-141-01	Calibration Plate	KP1014018	77	50904-154-50	Star Wheel Stop Nut Assembly	KP0814044
27	50904-136-50	Manual Release Nut	KP0814019	78	50904-161-01	Ratchet Rod Guide	KP0814045
37	50903-411-50	Nut and Washer Assembly	KP0814026	80	29005-32221	Oilite Bearing	KP0814046
39	50901-010-03	Shoe Mounting Spring	KP1014021				
41	50903-404-04	Lining Wear Indicator	KP1014022				
42	50904-107-50	Base	KP1014023				

Replacement Parts for: 13" Class 5010 Type F Series A

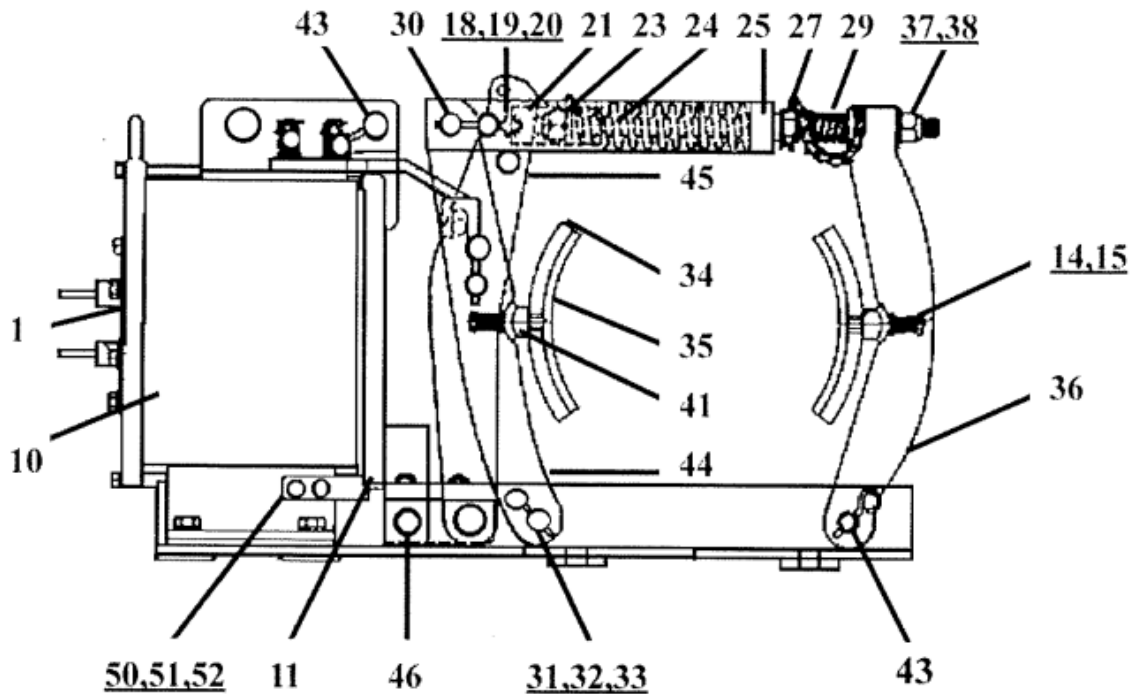


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50905-143-50	Magnet Case Cover Assembly	KP1314001	37	50903-411-51	Elastic Stop Nut Assembly	KP1314026
4	50905-167-05	Terminal Shield	KP1314002	41	50903-404-01	Lining Wear Indicator	KP1314027
5	50905-168-01	Lead Bushing	KP1314003	42	50905-107-50	Base	KP1314028
6	29206-00550	O Ring	KP1314004	43	50903-401-07	Pin	KP1314029
8	21008-06120	Drive Screw	KP1014005	44	50905-129-50	Inboard Shoe Lever	KP1314030
10	50905-109-50	Magnet Case	KP1314006	45	50905-119-50	Connecting Rod Lever	KP1314031
11	50905-121-50	Armature	KP1314007	46	50905-115-50	Connecting Link	KP1314032
12	29005-56404	Bearing	KP1314008	47	50903-401-09	Pin	KP1314033
13	50905-140-50	Centering Bracket	KP1314009	50	50904-139-01	Armature Gap Indicator	KP1014029
14	50901-010-07	Centering Bracket Spring	KP1314010	60	50903-805-53	Self-adjusting Shoe Mechanism	KP1314035
18	50903-407-03	Latch Pin	KP1314011	62	50905-158-01	Connecting Rod	KP1314036
19	29907-03210	E Ring	KP1314012	63	29013-02120	Connecting Rod Bearing	KP0814036
20	50901-010-06	Latch Pin Spring	KP1314013	68	29005-24121	Bearing	KP0814037
21	50905-117-50	Connecting Rod Assembly	KP1314014	69	29005-32221	Oilite Bearing	KP0814046
23	W-13045	Spring Collar	KP1314015	71	50905-164-50	Crank Assembly	KP1314040
24	W-13020	Operating Spring	KP1314016	72	50905-160-01	Ratchet Rod	KP1314041
25	50905-137-50	Yoke	KP1314017	73	50903-415-02	Crank Pin	KP1314042
26	50905-141-01	Calibration Plate	KP1314018	74	50906-165-50	Ratchet Rod End Block	KP0814041
27	50905-136-50	Manual Release Nut	KP1314019	75	21601-24660	Socket Head Screw	KP0814042
29	50901-010-08	Connecting Rod Spring	KP1314020	76	50901-003-03	Spring	KP1314045
30	50903-401-08	Pin	KP1314021	77	50905-154-50	Star Wheel Stop Nut Assembly	KP1314046
31	50903-402-01	Locking Pin	KP1015022	78	50904-161-01	Ratchet Rod Guide	KP0814045
34	50905-101-50	Shoe Assembly, Includes Lining	KP1314023	*	50903-809-53	Assorted Hardware Package	KP1314048
35	50903-808-53	Shoe Lining Kit	KP1314024				
36	50905-127-50	Outboard Shoe Lever	KP1314025				

Replacement Parts for: 16" Class 5010 Type F Series A

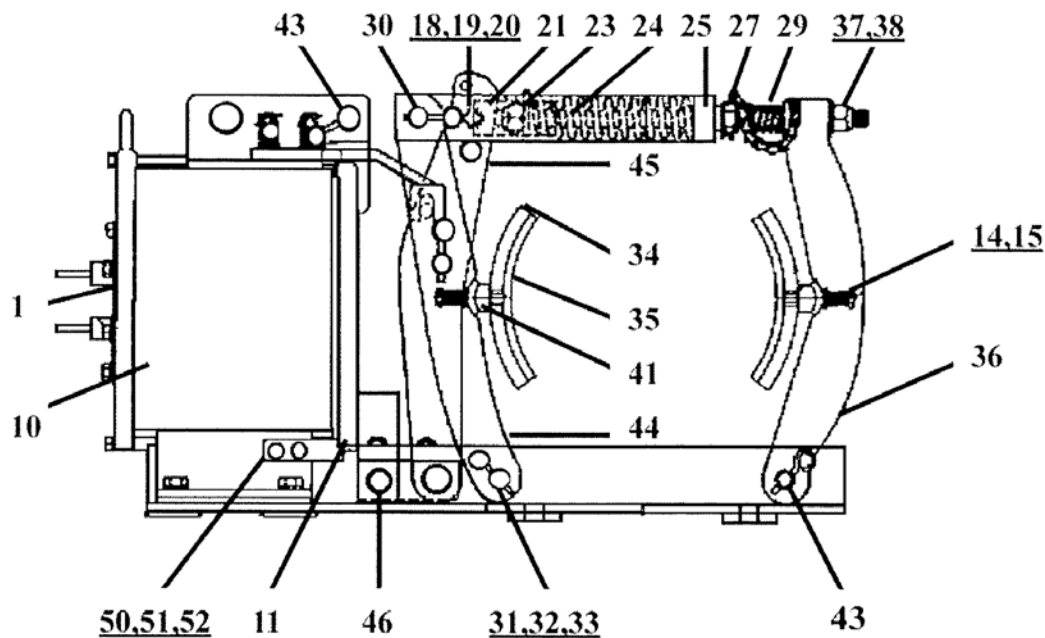


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50906-143-50	Magnet Case Cover Assembly	KP1614001	37	50903-411-52	Elastic Stop Nut Assembly	KP1614026
4	50906-167-01	Terminal Shield	KP1614002	41	50903-404-02	Lining Wear Indicator	KP1614027
5	50906-166-01	Lead Bushing	KP1614003	42	50906-107-50	Base	KP1614028
6	29206-00665	O Ring	KP1614004	43	50903-401-04	Pin	KP1614029
8	21008-06120	Drive Screw	KP1014005	44	50906-129-50	Inboard Shoe Lever	KP1614030
10	50906-109-50	Magnet Case	KP1614006	45	50906-119-50	Connecting Rod Lever	KP1614031
11	50906-121-50	Armature	KP1614007	46	50906-115-50	Connecting Link	KP1614032
12	29005-66446	Bearing	KP1614008	47	50903-401-06	Pin	KP1614033
13	50906-140-50	Centering Bracket	KP1614009	50	50906-139-01	Armature Gap Indicator	KP1614034
14	50901-010-04	Centering Bracket Spring	KP1614010	53	50903-809-54	Assorted Hardware Package	KP1614035
18	50903-407-02	Latch Pin	KP1614011	60	50903-805-54	Self-Adj Shoe Mechanism Kit	KP1614036
19	29907-03210	E Ring	KP1314012	62	50906-158-01	Connecting Rod	KP1614037
20	50901-010-06	Latch Pin Spring	KP1314013	63	29013-02120	Connecting Rod Bearing	KP0814036
21	50906-117-50	Connecting Rod Assembly	KP1614014	68	29005-24121	Bearing	KP0814037
23	50903-405-01	Spring Seat	KP1614015	71	50906-164-50	Crank Assembly	KP1614040
24	WB-416	Brake Spring	KP1614016	72	50906-160-01	Ratchet Rod	KP1614041
25	50906-137-50	Yoke	KP1614017	73	50903-415-03	Crank Pin	KP1614042
26	50906-141-01	Calibration Plate	KP1614018	74	50906-165-50	Ratchet Rod End Block	KP0814041
27	50906-136-50	Manual Release Nut	KP1614019	75	21601-24660	Socket Head Screw	KP0814042
29	50901-010-05	Connecting Rod Spring	KP1614020	76	50901-003-02	Spring	KP1614045
30	50903-401-05	Pin	KP1614021	77	50906-154-50	Star Wheel Stop Nut Assembly	KP1614046
31	50903-402-02	Locking Pin	KP1614022	78	50906-161-01	Ratchet Rod Guide	KP1614047
34	50906-101-50	Brake Shoes w/Lining	KP1614023	80	29005-32221	Oilite Bearing	KP0814046
35	50903-808-54	Shoe Lining Kit	KP1614024				
36	50906-127-50	Outboard Shoe Lever	KP1614025				

Replacement Parts for: 19" Class 5010 Type F Series A

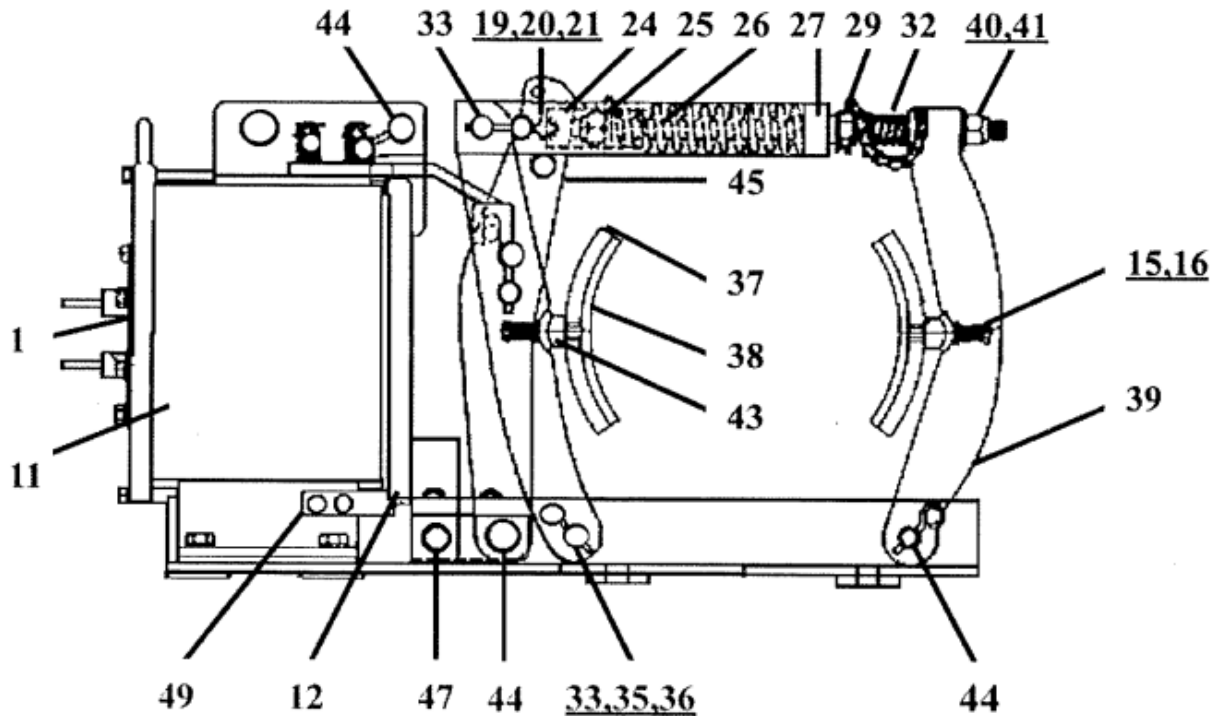


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50907-143-50	Magnet Case Cover Assembly	KP1914001	39	50907-127-50	Outboard Shoe Lever Assembly	KP1914025
5	50907-144-01	Terminal Shield	KP1914002	40	50907-113-01	Stop Nut	KP1914026
6	50907-134-01	Lead Bushing	KP1914003	41	50907-109-01	Adjusting Nut	KP1914027
7	29206-00761	O ring	KP1914004	43	50903-404-05	Lining Wear Indicator	KP1914028
9	21008-06120	Drive Screw	KP1014005	44	50903-401-17	Pin	KP1914029
11	50907-102-50	Base and Magnet Case Assembly	KP1914006	45	50907-129-50	Inboard Shoe Lever Assembly	KP1914030
12	50907-121-50	Armature Assembly	KP1914007	46	50907-119-50	Conecting Rod Lever Assembly	KP1914031
13	29005-72600	Bearing	KP1914008	47	50907-115-50	Connecting Link Assembly	KP1914032
14	50907-140-50	Centering Bracket Assembly	KP1914009	48	50903-401-18	Pin	KP1914033
15	50901-010-20	Centering Spring	KP1914010	49	50907-139-01	Armature Gap Indicator	KP1914034
19	50903-407-06	Latch Pin	KP1914011	52	50903-814-55	Self-Adj Shoe Mechanism Kit	KP1914035
20	29907-04810	E" Ring	KP1914012	55	50907-156-01	Spacer	KP1914036
21	50901-010-18	Latch Pin Spring	KP1914013	56	50907-158-01	Connecting Rod	KP1914037
24	50907-117-50	connecting Rod Assembly	KP1914014	57	29013-02160	Connecting Rod End Bearing	KP1914038
25	50903-405-05	Spring Seat	KP1914015	62	50903-415-05	Crank Pin	KP1914039
26	50901-010-19	Operating Spring	KP1914016	63	50907-164-50	CrankAssembly	KP1914040
27	50907-137-50	YokeAssembly	KP1914017	64	50907-160-01	Ratchet Rod	KP1914041
28	50907-141-01	Calibration Plate	KP1914018	65	50907-165-50	Ratchet Rod End w/Bearings	KP1914042
29	50907-135-01	Manual Release Nut	KP1914019	66	50901-003-05	Spring	KP1914043
32	50901-010-21	Connecting Rod Spring	KP1914020	67	50907-154-50	Star Wheel Stop Nut Assembly	KP1914044
33	50903-401-19	Pin	KP1914021	68	50907-161-01	Ratchet Rod Guide	KP1914045
34	50903-402-02	Locking Pin	KP1914022	*	50903-809-55	Assorted Hardware Package	KP1914046
37	50907-101-50	Shoe Assembly, Includes Lining	KP1914023				
38	50903-808-55	Shoe Lining Kit	KP1914024				

Replacement Parts for: 23" Class 5010 Type F Series A

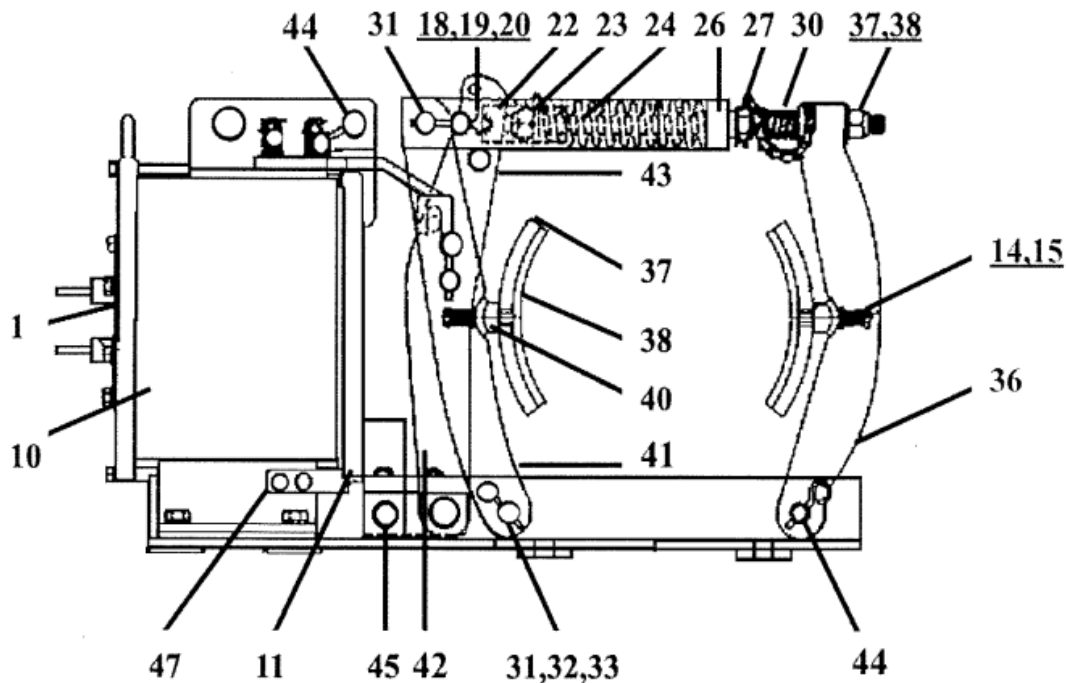


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50908-143-50	Magnet Case Cover Assembly	KP2314001	35	50903-808-56	Shoe Lining Kit	KP2314025
4	50908-167-01	Terminal Shield	KP2314002	36	50908-127-50	Outboard Shoe Lever Assembly	KP2314026
5	50908-166-01	Lead Bushing	KP2314003	37	50908-411-50	Nut & Washer Assembly	KP2314027
6	29206-00761	O ring	KP1914004	38	50908-109-01	Adjusting Nut	KP2314028
8	21008-06120	Drive Screw	KP1014005	40	50903-404-05	Lining Wear Indicator	KP2314029
10	50908-102-50	Base and Magnet Case Assembly	KP2314006	41	50903-401-16	Pin	KP2314030
11	50908-121-50	Armature Assembly	KP2314007	42	50908-129-50	Inboard Shoe Lever Assembly	KP2314031
12	29005-79645	Bearing	KP2314008	43	50908-119-50	Connecting Rod Lever	KP2314032
13	50908-140-50	Center Bracket Assembly	KP2314009	44	50903-401-14	Pin	KP2314033
14	50901-010-16	Shoe Mounting Spring	KP2314010	45	50908-115-50	Connecting Link Assembly	KP2314034
18	50903-407-05	Latch Pin	KP2314011	46	50903-401-15	Pin	KP2314035
19	29907-04810	E Ring	KP1914012	47	50908-139-01	Armature Gap Indicator	KP2314036
20	50901-010-18	Latch Pin Spring	KP1914013	52	50903-809-56	Assorted Hardware Package	KP2314037
21	24209-32780	Pin	KP2314014	54	50903-814-56	Self Adj Shoe Mechanism Kit	KP2314038
22	50908-117-50	Connector Rod Assembly	KP2314015	58	50908-158-01	Connecting Rod	KP2314039
23	50903-405-04	Spring Seat	KP2314016	61	50903-415-04	Crank Pin	KP2314040
24	50901-010-14	Operating Spring	KP2314017	62	50908-164-50	Crank Assembly	KP2314041
25	50908-137-51	Yoke Assembly	KP2314018	63	50908-160-01	Ratchet Rod	KP2314042
26	50908-141-01	Calibration Plate	KP2314019	64	29013-02120	Connecting Rod Bearing	KP0814036
27	50908-136-50	Manual Release Nut Assy	KP2314020	66	50901-003-02	Spring	KP1614045
30	50901-010-15	Connecting Rod Spring	KP2314021	67	50908-154-50	Star Wheel Stop Nut Assy	KP2314045
31	50903-401-13	Pin	KP2314022	68	50908-161-01	Ratchet Rod Guide	KP2314046
32	50903-402-04	Locking Pin	KP2314023				
34	50908-101-50	Shoe Assembly	KP2314024				

Replacement Parts for: 20" Class E010 Type E Series A

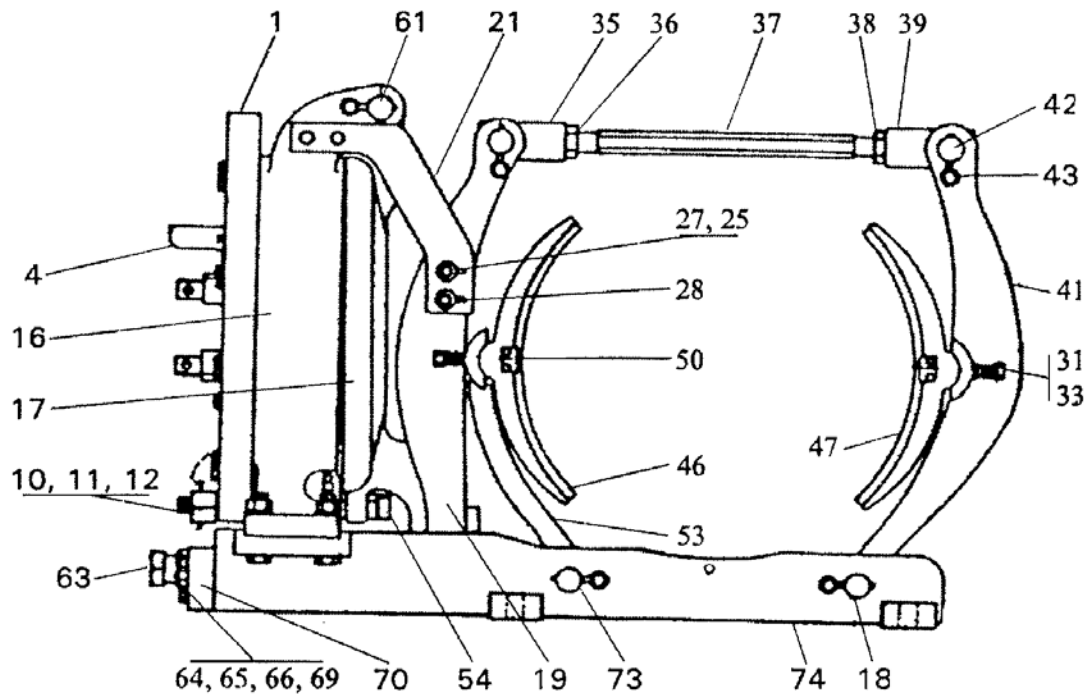


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50909-013-01	Magnet Case Cover	KP3014001	41	50909-008-50	Shoe Lever Assembly, Outboard	KP3014025
2	50909-020-01	Terminal Shield	KP3014002	42	50903-401-20	Pin	KP3014026
7	51139-040-04	Calibration Plate	KP3014003	43	50903-402-04	Locking Pin	KP2314023
10	51001-067-06	Manual Release Nut	KP3014004	46	50909-004-50	Brake Shoe Assembly	KP3014028
11	50502-003-32	Washer	KP3014005	47	50903-808-57	Brake Block	KP3014029
12	50502-601-12	Spring	KP3014006	49	50909-003-50	Brake Shoe Assembly	KP3014030
16	50909-014-01	Magnet Case	KP3014007	50	50909-001-01	Lining Wear Indicator	KP3014031
17	50909-011-51	Armature Assembly	KP3014008	53	50909-010-50	Shoe Support Lever Assembly	KP3014032
18	29005-80830	Bearing	KP3014009	54	51007-021-01	Manual Release Screw	KP3014033
19	50909-009-50	Shoe Lever Assembly, Inner	KP3014010	56	51007-035-01	Non-Magnetic Spacer	KP3014034
21	51007-094-01	Bracket	KP3014011	57	50909-015-01	Armature Gap Indicator	KP3014035
25	50502-601-13	Spring	KP3014012	61	50903-401-13	Pin	KP2314022
27	50502-052-16	Spacer	KP3014013	62	51007-027-51	Torque Screw Assembly	KP3014037
28	51007-046-01	Bearing (Type F 30")	KP3014014	63	51007-027-02	Torque Screw	KP3014038
29	51007-030-50	Virtual Center Assembly, RH	KP3014015	64	50502-051-28	Spacer	KP3014039
30	51007-030-51	Virtual Center Assembly, LH	KP3014016	65	23690-01580	Thrust Washer	KP3014040
31	50502-526-17	Special Cap Screw	KP3014017	66	50502-003-30	Washer	KP3014041
33	50502-601-38	Shoe Clamp Spring	KP3014018	69	50502-551-03	Locknut	KP3014042
35	50909-006-50	Connecting Rod Link, RH	KP3014019	70	51007-027-01	Torque Screw Plate	KP3014043
36	23003-00500	Jam Nut, RH	KP3014020	71	50502-003-31	SpringThrust Plate	KP3014044
37	50909-005-01	Connecting Rod	KP3014021	72	51007-040-01	Operating Spring	KP3014045
38	50903-427-01	Jam Nut, LH	KP3014022	73	50903-401-21	Outer & Support Lever Pin	KP3014046
39	50909-006-51	Connecting Rod Link, LH	KP3014023	74	50909-007-50	Frame Assembly	KP3014047
40	50909-005-50	Connecting Rod Assembly	KP3014024				

Replacement Parts for: 10" Class 5010 Type F Series B

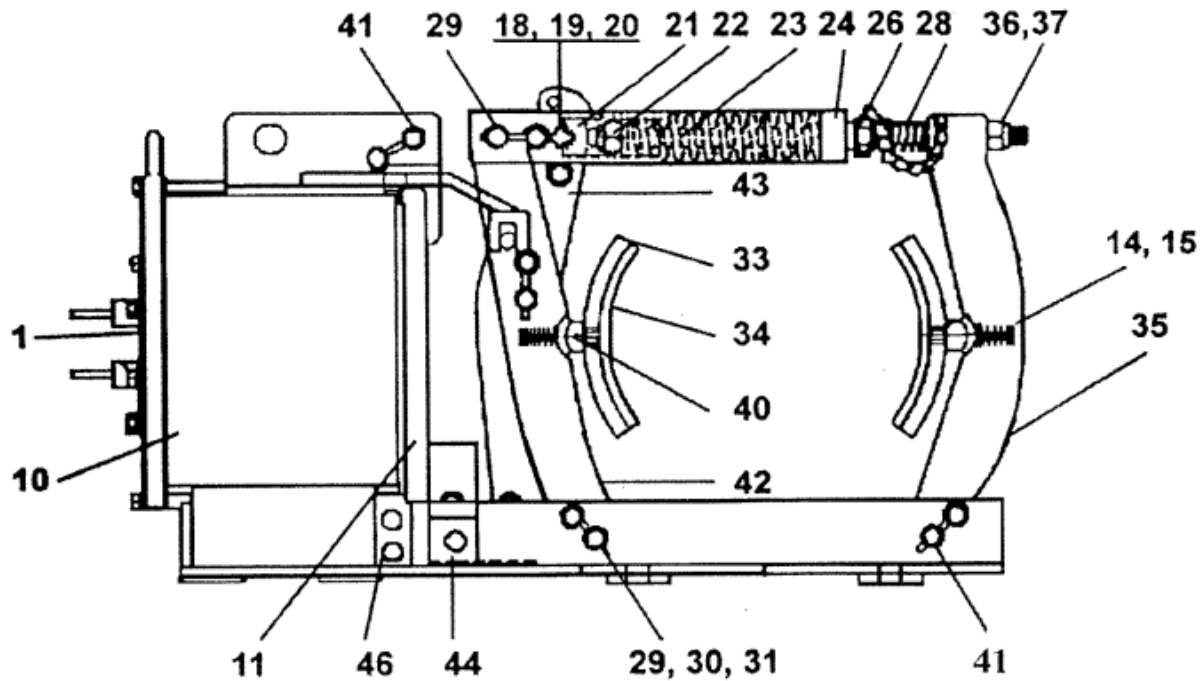


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50904-223-01	Magnet Case	KP1015001	35	50904-127-50	Outboard Shoe Lever	KP1015025
4	50904-167-01	Terminal Shield	KP1014002	36	50903-411-50	Nut and Washer Assembly	KP0814026
5	50904-166-01	Lead Bushing	KP1014003	38	50902-010-03	Shoe Mounting Spring	KP1015027
6	29206-00430	O Ring	KP0814005	40	50903-404-04	Lining Wear Indicator	KP1014022
8	21008-06120	Drive Screw	KP1014005	41	50903-401-01	Pin	KP1014024
10	50904-218-50	Magnet Case & Base Assembly	KP1015006	42	50904-129-50	Inboard Shoe Lever	KP1014025
11	50904-215-50	Armature	KP1015007	43	50904-119-50	Connecting Rod Lever	KP1014026
12	29005-48240	Bearing	KP1014008	44	50904-115-50	Connecting Link	KP1014027
13	50904-140-50	Centering Bracket Assy	KP1014009	45	50903-401-03	Pin	KP1014028
14	50901-010-02	Centering Bracket Spring	KP1014010	46	50904-226-01	Armature Gap Indicator	KP1015034
18	50903-407-01	Latch Pin	KP1014011	60	50903-805-52	Self-Adj Shoe Mechanism Kit	KP1014031
19	29907-02410	E Ring	KP0814012	62	50904-158-01	Connecting Rod	KP1014032
20	50901-010-09	Latch Pin Spring	KP0814013	63	29013-02120	Connecting Rod Bearing	KP0814036
21	50904-117-50	Connecting Rod Assembly	KP1014014	68	29005-24121	Bearing	KP0814037
22	W-10045	Spring Collar	KP0814015	71	50904-164-50	Crank Assembly	KP1014035
23	W-10020	Operating Spring	KP1014016	72	50904-160-01	Ratchet Rod	KP1014036
24	50904-137-50	Yoke	KP1014017	73	50903-415-01	Crank Pin	KP0814040
24	50904-141-01	Calibration Plate	KP1014018	74	50906-165-50	Ratchet Rod End Block	KP1015042
26	50904-136-50	Manual Release Nut	KP0814019	75	21601-24660	Socket Head Screw	KP0814042
28	50901-010-01	Connecting Rod Spring	KP1015020	76	50901-003-01	Spring	KP1014040
29	50903-401-02	Pin	KP1015021	77	50904-154-50	Star Wheel Stop Nut Assembly	KP0814044
30	50903-402-01	Locking Pin	KP1015022	78	50904-161-01	Ratchet Rod Guide	KP0814045
33	50904-101-50	Shoe Assembly	KP1015023	80	29005-32221	Oilite Bearing	KP0814046
34	50903-808-52	Shoe Lining Kit	KP1015024				

Replacement Parts for: 13" Class 5010 Type F Series B

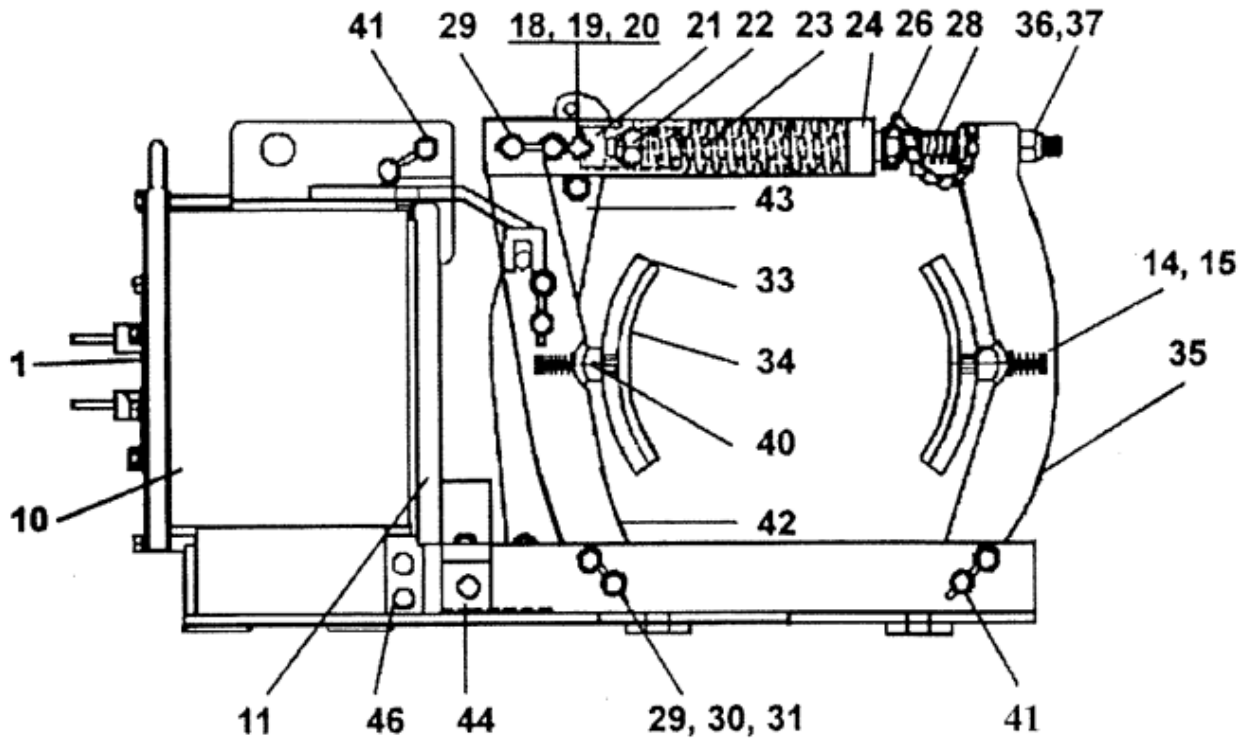


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50904-223-01	Magnet Case	KP1015001	35	50904-127-50	Outboard Shoe Lever	KP1015025
4	50904-167-01	Terminal Shield	KP1014002	36	50903-411-50	Nut and Washer Assembly	KP0814026
5	50904-166-01	Lead Bushing	KP1014003	38	50902-010-03	Shoe Mounting Spring	KP1015027
6	29206-00430	O Ring	KP0814005	40	50903-404-04	Lining Wear Indicator	KP1014022
8	21008-06120	Drive Screw	KP1014005	41	50903-401-01	Pin	KP1014024
10	50904-218-50	Magnet Case & Base Assembly	KP1015006	42	50904-129-50	Inboard Shoe Lever	KP1014025
11	50904-215-50	Armature	KP1015007	43	50904-119-50	Connecting Rod Lever	KP1014026
12	29005-48240	Bearing	KP1014008	44	50904-115-50	Connecting Link	KP1014027
13	50904-140-50	Centering Bracket Assy	KP1014009	45	50903-401-03	Pin	KP1014028
14	50901-010-02	Centering Bracket Spring	KP1014010	46	50904-226-01	Armature Gap Indicator	KP1015034
18	50903-407-01	Latch Pin	KP1014011	60	50903-805-52	Self-Adj Shoe Mechanism Kit	KP1014031
19	29907-02410	E Ring	KP0814012	62	50904-158-01	Connecting Rod	KP1014032
20	50901-010-09	Latch Pin Spring	KP0814013	63	29013-02120	Connecting Rod Bearing	KP0814036
21	50904-117-50	Connecting Rod Assembly	KP1014014	68	29005-24121	Bearing	KP0814037
22	W-10045	Spring Collar	KP0814015	71	50904-164-50	Crank Assembly	KP1014035
23	W-10020	Operating Spring	KP1014016	72	50904-160-01	Ratchet Rod	KP1014036
24	50904-137-50	Yoke	KP1014017	73	50903-415-01	Crank Pin	KP0814040
24	50904-141-01	Calibration Plate	KP1014018	74	50906-165-50	Ratchet Rod End Block	KP1015042
26	50904-136-50	Manual Release Nut	KP0814019	75	21601-24660	Socket Head Screw	KP0814042
28	50901-010-01	Connecting Rod Spring	KP1015020	76	50901-003-01	Spring	KP1014040
29	50903-401-02	Pin	KP1015021	77	50904-154-50	Star Wheel Stop Nut Assembly	KP0814044
30	50903-402-01	Locking Pin	KP1015022	78	50904-161-01	Ratchet Rod Guide	KP0814045
33	50904-101-50	Shoe Assembly	KP1015023	80	29005-32221	Oilite Bearing	KP0814046
34	50903-808-52	Shoe Lining Kit	KP1015024				

Replacement Parts for: 16" Class 5010 Type F Series B

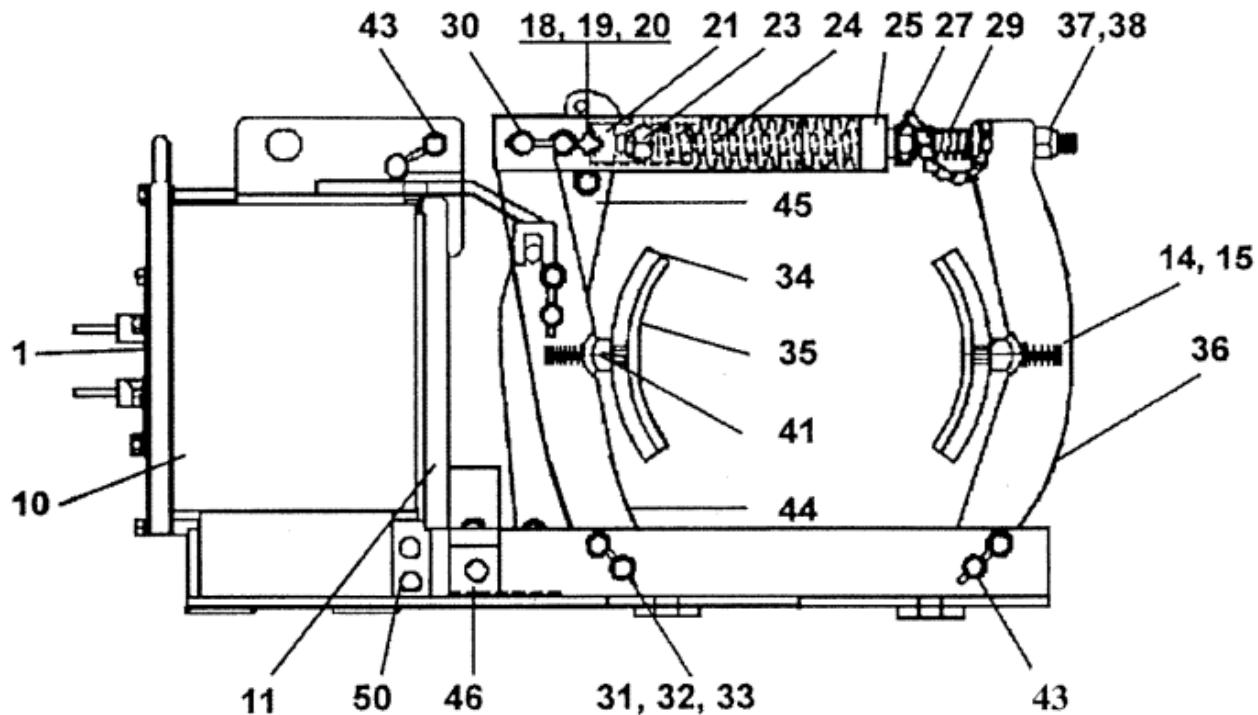

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50906-223-01	Magnet Case Cover	KP1615001	34	50906-101-50	Brake Shoes w/Lining	KP1614023
4	50906-230-01	Terminal Shield	KP1615002	35	50903-808-54	Shoe Lining Kit	KP1614024
5	50906-166-01	Lead Bushing	KP1614003	36	50906-127-50	Outboard Shoe Lever	KP1614025
6	29206-00665	O Ring	KP1614004	37	50903-411-52	Elastic Stop Nut Assembly	KP1614026
8	21008-06120	Drive Screw	KP1014005	43	50903-401-04	Pin	KP1614029
10	50906-218-50	Magnet Case & Base Assembly	KP1615006	44	50906-129-50	Inboard Shoe Lever	KP1614030
11	50906-215-50	Armature	KP1615007	45	50906-119-50	Connecting Rod Lever	KP1614031
12	29005-66446	Bearing	KP1614008	46	50906-115-50	Connecting Link	KP1614032
13	50906-228-50	Centering Bracket	KP1615009	47	50903-401-06	Pin	KP1614033
14	50901-010-04	Centering Bracket Spring	KP1614010	50	50906-226-01	Armature Gap Indicator	KP1615033
14	50903-404-02	Lining Wear Indicator	KP1614027	60	50903-805-54	Self-Adj Shoe Mechanism Kit	KP1614036
18	50903-407-02	Latch Pin	KP1614011	62	50906-158-01	Connecting Rod	KP1614037
19	29907-03210	E Ring	KP1314012	63	29013-02120	Connecting Rod Bearing	KP0814036
20	50901-010-06	Latch Pin Spring	KP1314013	68	29005-24121	Bearing	KP0814037
21	50906-117-50	Connecting Rod Assembly	KP1614014	71	50906-164-50	Crank Assembly	KP1614040
23	50903-405-01	Spring Seat	KP1614015	72	50906-160-01	Ratchet Rod	KP1614041
24	WB-416	Brake Spring	KP1614016	73	50903-415-03	Crank Pin	KP1614042
25	50906-137-50	Yoke	KP1614017	74	50906-165-50	Ratchet Rod End Block	KP0814041
26	50906-141-01	Calibration Plate	KP1614018	76	50901-003-02	Spring	KP1614045
27	50906-136-50	Manual Release Nut	KP1614019	77	50906-154-50	Star Wheel Stop Nut Assembly	KP1614046
29	50901-010-05	Connecting Rod Spring	KP1614020	78	50906-161-01	Ratchet Rod Guide	KP1614047
30	50903-401-05	Pin	KP1614021				
31	50903-402-02	Locking Pin	KP1614022				


Replacement Parts for: 23" Class 5010 Type F Series B

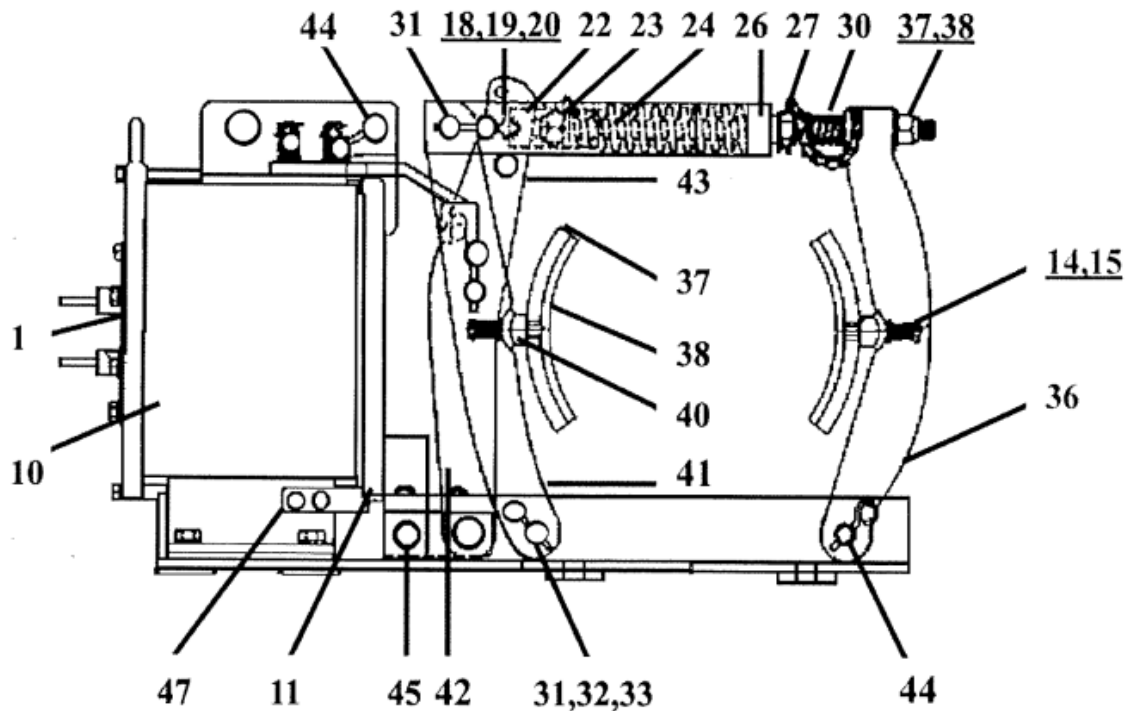

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	50908-238-01	Magnet Case Cover	KP2315001	35	50903-808-56	Shoe Lining Kit	KP2314025
4	50908-254-01	Terminal Shield	KP2315002	36	50908-246-50	Outboard Shoe Lever Assembly	KP2315024
6	29005-79645	Bearing	KP2314008	37	50908-411-50	Nut & Washer Assembly	KP2314027
8	21008-06120	Drive Screw	KP1014005	38	50908-109-01	Adjusting Nut	KP2314028
10	50908-241-50	Base and Magnet Case Assembly	KP2315005	40	50903-404-05	Lining Wear Indicator	KP2314029
11	50908-237-50	Armature Assembly	KP2315006	41	50908-243-50	Inboard Shoe Lever Assembly	KP2315028
12	29005-72600	Bearing	KP1914008	42	50908-249-50	Connecting Rod Lever	KP2315029
13	50908-231-50	Centering Bracket Assembly	KP2315008	43	50908-224-50	Connecting Link Assembly	KP2315030
14	50901-010-20	Centering Spring	KP1914010	44	50903-401-23	Pin	KP2315031
18	50903-407-05	Latch Pin	KP2314011	45	50908-139-01	Armature Gap Indicator	KP2314036
19	29907-04810	E Ring	KP1914012	48	50903-814-57	Self-Adj Shoe Mechanism Kit	KP2315033
20	50901-010-18	Latch Pin Spring	KP1914013	52	50908-259-01	Connecting Rod	KP2315034
22	50908-232-50	Connecting Rod Assembly	KP2315013	55	50903-415-06	Crank Pin	KP2315035
23	50903-405-04	Spring Seat	KP2314016	56	50908-263-50	Crank Assembly	KP2315036
24	50901-010-14	Operating Spring	KP2314017	57	50908-261-01	Ratchet Rod	KP2315037
25	50908-227-50	Yoke Assembly	KP2315016	58	29013-02160	Connecting Rod End Bearing	KP1914038
26	50908-141-01	Calibration Plate	KP2314019	60	50901-003-02	Spring	KP1614045
27	50908-215-50	Manual Release Nut Assembly	KP2315018	61	50908-154-50	Star Wheel Stop Nut Assy	KP2314045
30	50901-010-15	Connecting Rod Spring	KP2314021	62	50908-161-01	Ratchet Rod Guide	KP2314046
31	50903-401-22	Pin	KP2315020	64	50907-156-01	Spacer	KP1914036
32	50903-402-04	Locking Pin	KP2314023				
34	50908-101-50	Shoe Assembly	KP2314024				

Replacement Parts for:

10" Class 5060 Type AT Adjustable Torque Brake

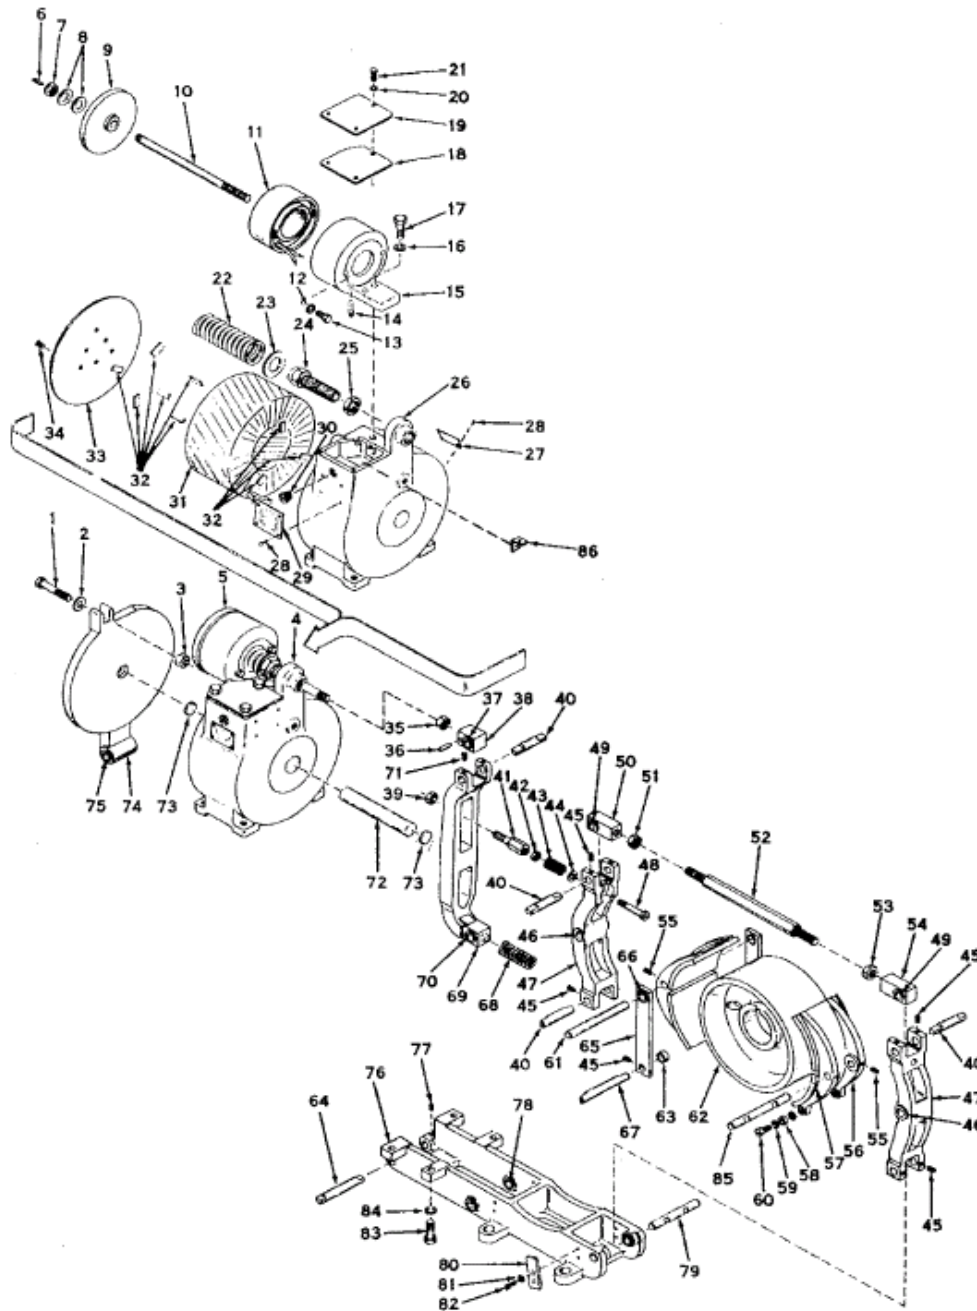


Replacement Parts for:

10" Class 5060 Type AT Adjustable Torque Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	50502-003-33	Armature Stop Washer	KP101901	67	W-10079	Drag Link Pin	KP101949
4	51009-049-50	Magnet Assembly	KP101902	68	LZA-6149	Release Spring	KP101950
5	51009-051-50	Auxiliary Magnet	KP101903	69	51009-015-01	L-Lever	KP101951
5	51009-052-50	Assembled Spring Rod	KP101904	69	51009-015-50	L-Lever Assembly	KP101952
6	24209-12480	Roll Pin	KP101905	70	FP-24B47	Bearing	KP101923
7	51009-053-01	Jam Nut, Series A	KP101906	72	51009-020-01	Thrust Pin	KP101954
8	23690-01420	Spherical Washer	KP101907	73	51009-019-01	Thrust Pad	KP101955
9	51009-052-02	Auxiliary Armature	KP101908	74	51009-011-01	Main Armature	KP101956
10	51009-052-01	Spring Rod	KP101909	74	51009-011-50	Main Armature Assembly	KP101957
15	51009-056-01	Auxiliary Magnet Case	KP101910	75	51009-010-50	Frame Assembly	KP101958
18	51009-028-02	Terminal Box Cover Gasket	KP101911	75	FP-24B45	Bearing	KP101929
19	51009-028-01	Terminal Box Cover	KP101912	76	51009-010-01	Frame	KP101960
22	W-10078	Operating Spring	KP101913	78	FP-24B45	Bearing	KP101929
23	50502-003-29	Spring Adjuster Washer	KP101914	79	W-10083	Pin	KP101962
24	51009-018-01	Spring Adjuster	KP101915	80	W-10116	Rail	KP101963
25	W-16080	Lock Nut	KP101916	85	W-10032	Shoe Pin	KP101964
26	51009-023-01	Main Magnet Case	KP101917	86	FP-28A40	Terminal	KP101965
27	51139-027-01	Nameplate	KP101918	87	51009-055-50	Parking Coil	KP101966
29	51139-028-022	Calibration Plate	KP101919	87	51009-024-52	Coil	KP101967
32	W-8086	Coil Spacer	KP101920	87	51009-024-50	Coil	KP101968
33	51009-039-01	Coil Retaining Plate	KP101921	89	W-8086	Coil Spacer	KP101920
36	FP-59A10	Roll Pin	KP101922	90	FP-74A10	Grommet	KP101970
37	FP-24B47	Bearing	KP101923	91	51009-013-50	Spring Rod Assembly	KP101971
38	51009-022-01	Spring Rod Link	KP101924				
*	51009-022-50	Spring Rod Link Assembly	KP101925				
40	W-10098	10" Connecting Rod Pin	KP101926				
41	50502-801-05	Stud	KP101927				
43	50502-601-09	Centering Spring	KP101928				
46	FP-24B45	Bearing	KP101929				
47	51009-014-01	Shoe Lever	KP101930				
48	51009-016-50	Connecting Rod Assembly	KP101931				
48	50502-526-04	Centering Spring Stud Screw	KP101932				
49	FP-24B47	Bearing	KP101923				
50	51009-029-01	Link, RH	KP101934				
51	W-8080	Lock Nut	KP101935				
52	50502-326-08	Connecting Rod	KP101936				
53	W-10086	Nut, LH	KP101937				
54	W-10004-A	Assembled Brake Shoe Complete	KP101938				
54	51009-029-02	Link, LH	KP101939				
56	WB-0550	Rivet	KP101940				
56	W-10005	Brake Shoe, Only	KP101941				
57	W-10043	Brake Block	KP101942				
58	W-10117	Adjusting Ring	KP101943				
61	W-10082	Shoe Pin	KP101944				
63	50502-051-19	Anti-drag Lever Spacer	KP101945				
64	W-10081	Hinge Pin	KP101946				
65	51009-017-01	Anti-Drag Lever	KP101947				
66	FP-24B47	Bearing	KP101923				

Replacement Parts for:

13" Class 5060 Type AT Adjustable Torque Brake

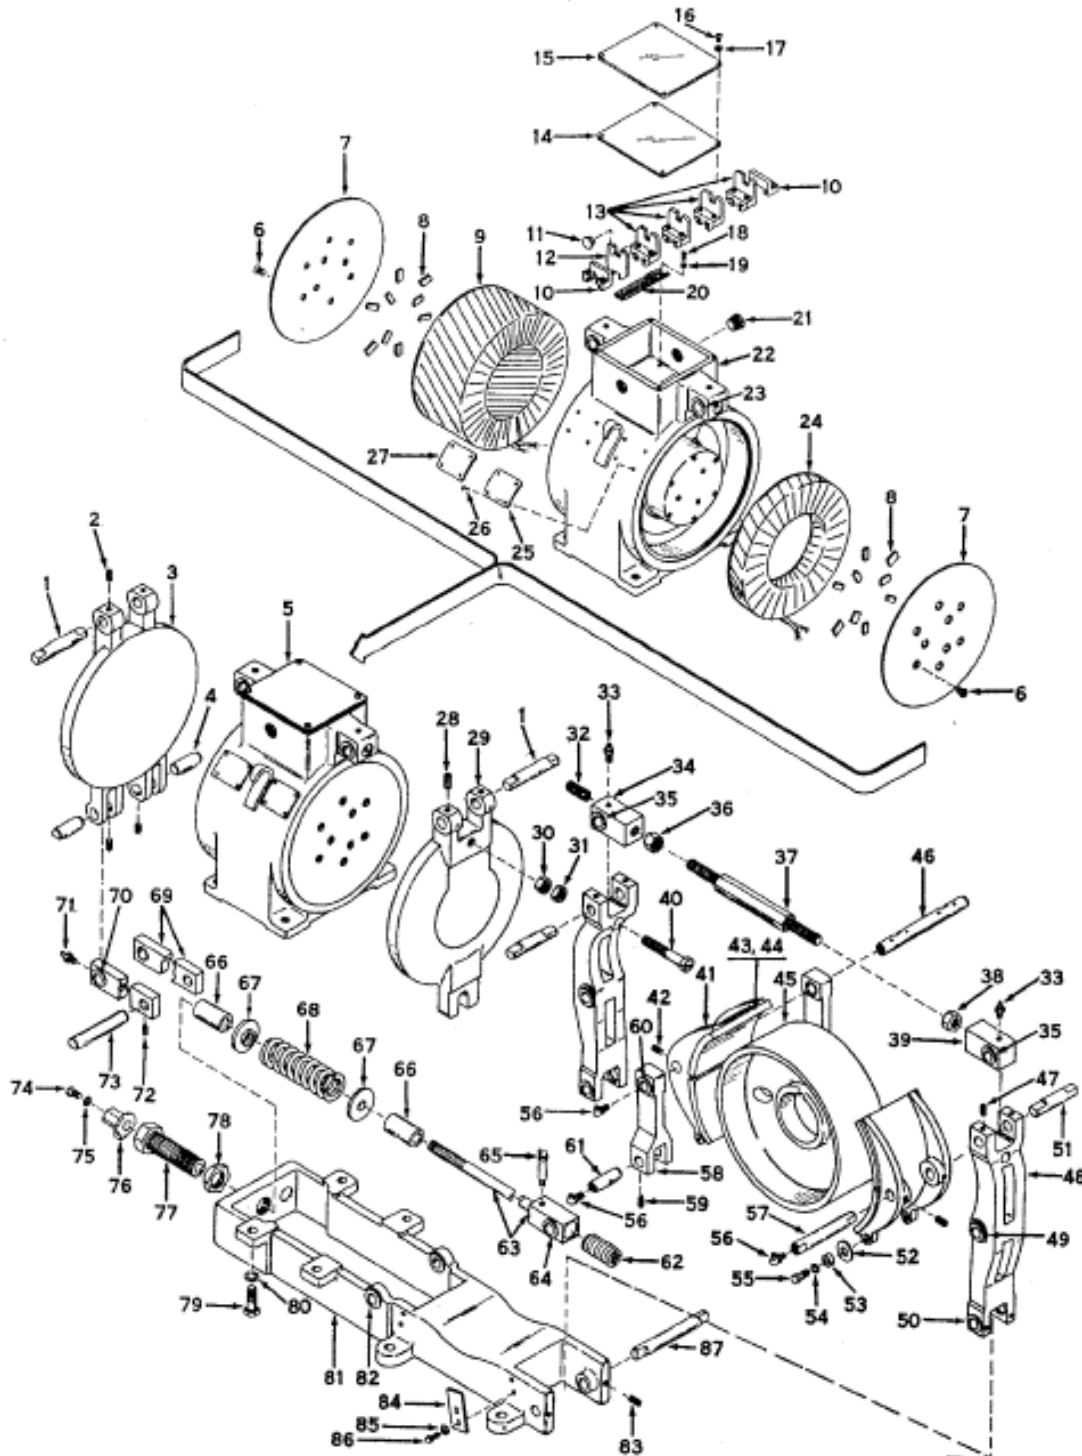


Replacement Parts for:

13" Class 5060 Type AT Adjustable Torque Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	AT-13027	Armature	KP131901	69	AT-13016	Armature Link	KP131949
2	AT-13002-A	Main Armature	KP131902	70	FP-24B40	Bearing	KP131915
3	AT-13003	Armature	KP131903	71	52927-017-60	Grease Fitting	KP131951
4	AT-13030	Link Rod	KP131904	73	AT-13025	Spring Rod Pin	KP131952
5	AT-13001-A	Magnet Assembly	KP131905	76	W-13022	Manual Release Nut	KP131953
7	W-13187	Coil Retaining Plate	KP131906	77	W-13076	Spring Adjusting Nut	KP131954
8	W-8086	Coil Spacer	KP131907	78	WB-6115	Special Nut	KP131955
10	1828-D57-G1	End Clamp Assembly	KP131908	80	AT-13019-A	Frame Assembly	KP131956
12	1828-C18-X1	Barrier	KP131909	81	AT-13020	Frame	KP131957
13	1828-D54-G1	Terminal Block Assembly	KP131910	82	FP-24J13	Bearing	KP131958
14	AT-13040	Terminal Box Gasket	KP131911	84	W-13161	Rail	KP131959
15	AT-13031	Terminal Box Cover	KP131912	87	AT-13026	Right Shoe Lever Hinge Pin	KP131960
20	1828-C22-X4	Mounting Track	KP131913	*	AT-13008-A	Connecting Rod Assembly	KP131919
22	AT-13018	Magnet Case	KP131914				
23	FP-24B40	Bearing	KP131915				
26	AT-13024	Nut, R.H	KP131916				
27	AT-13005-A	Auxiliary Armature Assembly	KP131917				
29	AT-13004-A	Auxiliary Armature	KP131918				
32	AT-13008-A	Connecting Rod	KP131919				
34	AT-13010	Connecting Rod	KP131920				
35	FP-24J14	Bearing	KP131921				
37	AT-13009	Connecting Rod	KP131922				
38	AT-13038	Nut, L.H	KP131923				
39	AT-13011	Connecting Rod	KP131924				
40	AT-13034	Equalizing Screw	KP131925				
41	W-13005	Shoe	KP131926				
41 a	W-13004-A	Shoe Assembly	KP131927				
42	W-13043	Brake Block	KP131928				
44	W-13046	Rivet	KP131929				
46	AT-13046	Right Shoe Pin	KP131930				
47	AT-13006-A	Shoe Lever Assembly	KP131931				
48	AT-13007	Shoe Lever	KP131932				
49	FP-24B40	Bearing	KP131915				
50	FP-24J14	Bearing	KP131921				
51	AT-13028	Connecting Rod	KP131935				
52	MT-691	Equalizer Screw	KP131936				
53	W-16163	Adjusting Ring	KP131937				
57	AT-13047	Left Shoe Pin	KP131938				
58	AT-13039	Anti-Drag Lever	KP131939				
60	FP-24B40	Bearing	KP131915				
61	AT-13029	Pin	KP131941				
62	AT-13022	Release Spring	KP131942				
63	AT-13012A	Spring Rod	KP131943				
64	FP-24J14	Bearing	KP131921				
66	AT-13032	Operating Spring	KP131945				
67	AT-13033	Spring Collar	KP131946				
68	AT-13015-A	Armature Link Assembly	KP131947				
68	W-13020	Operating Spring	KP131948				

Replacement Parts for:

16" Class 5060 Type AT Adjustable Torque Brake

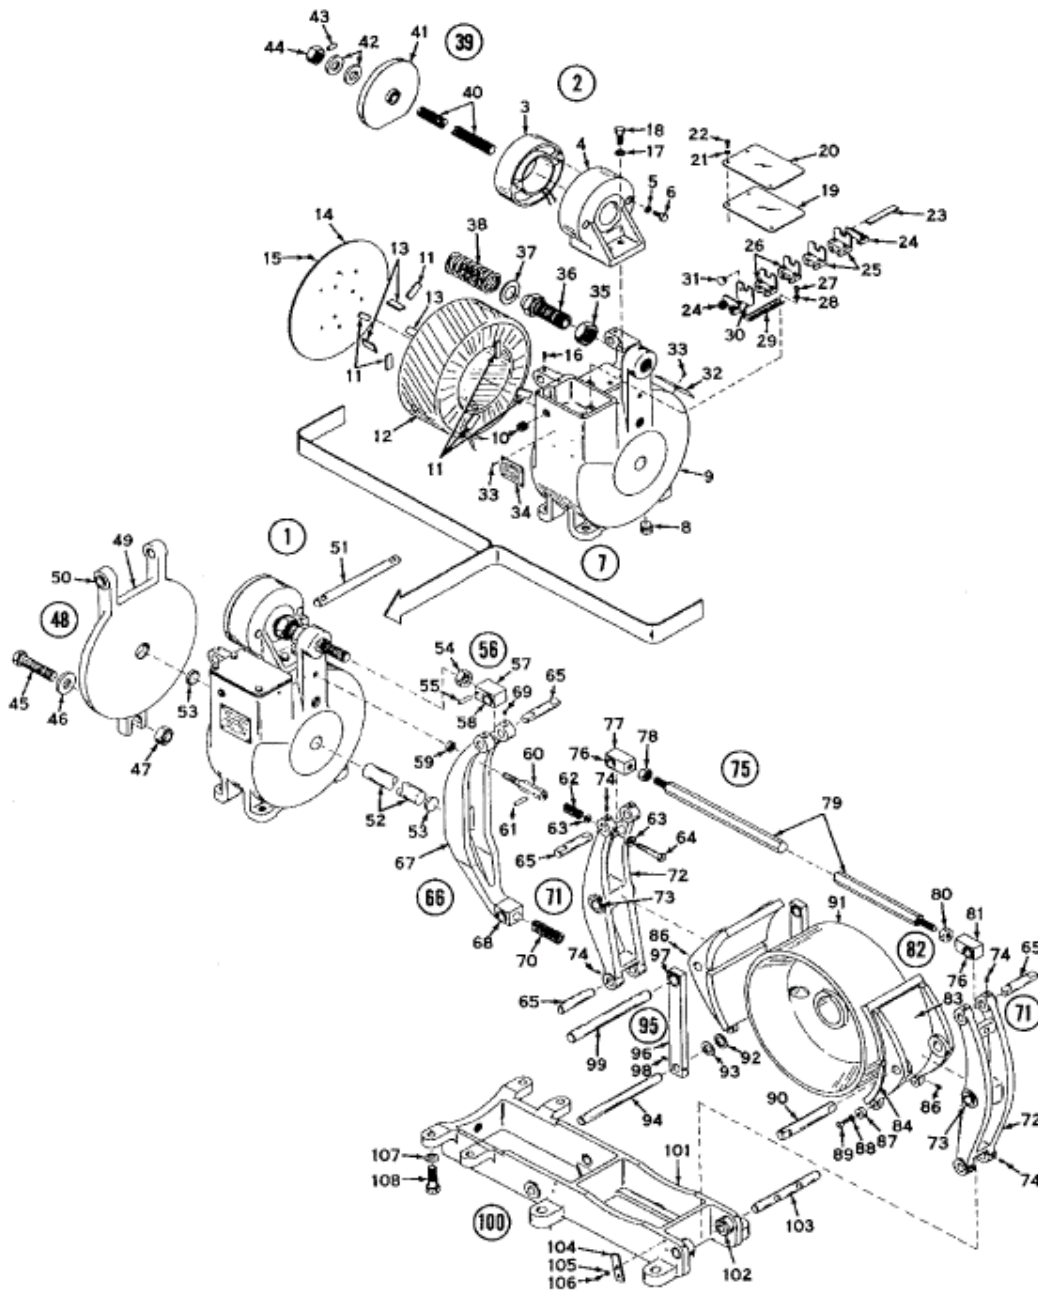


Replacement Parts for:

16" Class 5060 Type AT Adjustable Torque Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51011-056-50	Magnet Assembly	KP161901	61	24209-08241	Roll Pin	KP161949
2	51011-047-50	Parking Magnet Assembly	KP161902	62	50502-601-43	Centering Spring	KP161950
3	50512-154-22	Coil Spacer	KP161903	63	23601-00280	Washer	KP161951
3	51011-049-51	Parking Magnet Coil	KP161904	64	21401-28720	Cap Screw	KP161952
4	51011-048-01	Parking Magnet Coil	KP161905	65	AT-13028	Connecting Rod	KP161953
5	23701-00240	Pl. Lk. Washer	KP161906	66	51011-015-50	L-Lever Assembly	KP161954
6	23401-24280	Cap Screw	KP161907	67	51011-015-01	L-Lever	KP161955
7	51011-057-50	Service Magnet Assembly	KP161908	68	FP-24119	Bushing	KP161938
9	51011-059-01	Service Magnet Case	KP161909	69	22903-24200	Set Screw	KP161957
11	W-8086	Coil Spacer	KP161910	70	50502-601-22	Release Spring	KP161958
12	51011-024-52	Service Magnet Coil	KP161911	71	51011-014-50	Shoe Lever Assembly	KP161959
14	51011-030-01	Coil Retaining Plate	KP161912	72	51011-014-01	Shoe Lever	KP161960
19	51011-031-02	Terminal Box Gasket	KP161913	73	FP-24B32	Shaft Bushing	KP161961
20	51011-031-01	Terminal Box Cover	KP161914	74	22903-24200	Set Screw	KP161957
23	1828-C23-X4	Marking Strip	KP161915	75	51011-016-50	Connecting Rod Assembly	KP161963
24	1828-D57-G1	End Clamp Assembly	KP161916	76	FP-24119	Bushing	KP161938
25	1828-D55-G1	Terminal Block Assembly	KP161917	77	51011-029-50	Link, R.H	KP161965
26	1828-D54-G1	Terminal Block Assembly	KP161918	78	50502-551-06	Nut	KP161966
29	1828-C22-X4	Mounting Track	KP161919	79	50502-326-19	Connecting Rod	KP161967
30	1828-C18-X1	Barrier	KP161920	80	50502-551-05	H. St. Nut, L.H	KP161968
31	1828-D71-X1	Nylon Plug	KP161921	81	51011-029-51	Link, L.H	KP161969
34	51139-028-03	Calibration Plate	KP161922	82	W-16004-A	Assembled Brake Shoe, Complete	KP161970
35	50502-551-04	Spring Adjuster Nut	KP161923	83	W-16005-A	Brake Shoe	KP161971
36	51011-018-01	Spring Adjuster	KP161924	84	W-16043	Brake Block	KP161972
37	50502-003-44	Spring Adjuster Washer	KP161925	85	W-16046	Rivet	KP161973
38	W-16154	Operating Spring	KP161926	86	22903-24200	Set Screw	KP161957
39	51011-061-51	Spring Rod Assembly	KP161927	87	W-16163	Shoe Adjusting Cam	KP161975
40	51011-050-01	Spring Rod	KP161928	90	W-16032	Shoe Pin	KP161976
41	51011-058-01	Parking Magnet Armature	KP161929	92	WB-3227	Washer	KP161977
42	23690-01650	Spherical Washer	KP161930	93	50502-003-45	Drag Link Spacer	KP161978
43	24209-12480	Roll Pin	KP161931	94	51011-036-01	Pin	KP161939
44	51009-053-02	Special Nut	KP161932	95	51011-017-50	Drag Link Assembly	KP161980
45	21401-38840	Cap Screw	KP161933	96	51011-017-01	Drag Link	KP161981
46	50502-003-46	Armature Stop Washer	KP161934	97	FP-24B44	Bearing	KP161982
47	23002-00380	H. Nut	KP161935	98	22903-24200	Set Screw	KP161957
48	51011-011-50	Service Brake Armature Assy	KP161936	99	51011-036-02	Shoe Pin	KP161984
49	51011-011-01	Service Brake Armature	KP161937	100	51011-010-50	Frame Assembly	KP161985
50	FP-24119	Bushing	KP161938	101	51011-010-01	Frame	KP161986
51	51011-036-01	Pin	KP161939	102	FP-24119	Bushing	KP161938
52	51011-020-01	Thrust Pin	KP161940	103	51011-036-03	Shoe Lever Pin	KP161988
53	51011-019-01	Thrust Pad	KP161941	104	W-16162	Rail	KP161989
54	23004-00400	H. Nut	KP161942				
55	24209-12480	Roll Pin	KP161931				
56	51011-022-50	Spring Rod Link Assembly	KP161944				
57	51011-022-01	Spring Rod Link	KP161945				
58	FP-24119	Bushing	KP161938				
59	23003-00320	Jam Nut	KP161947				
60	51011-063-01	Centering Spring Stud	KP161948				

Replacement Parts for:

NO. 0 Single Pole Type S Contactor, Folio 7

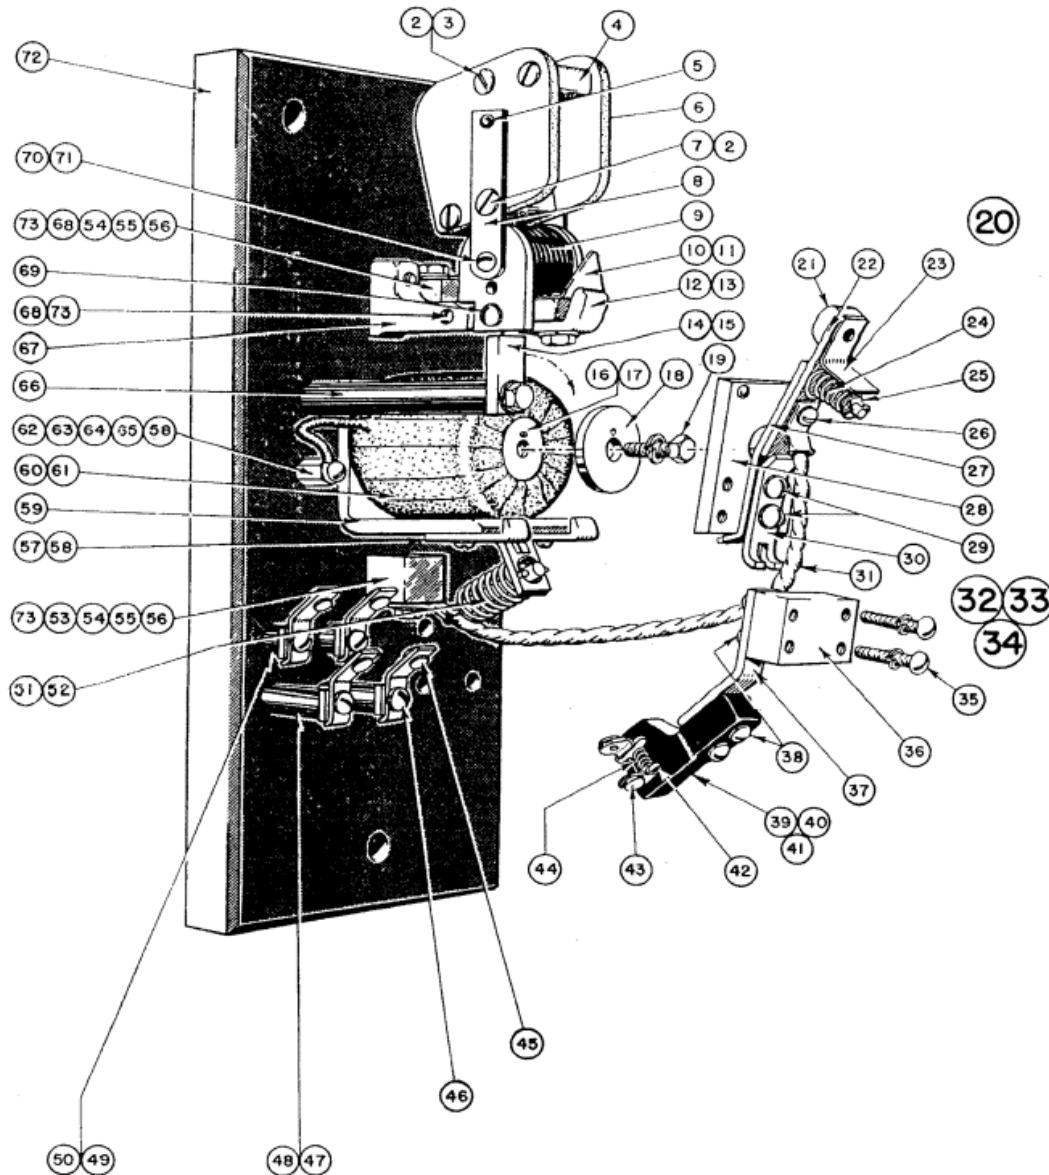


Replacement Parts for:

NO. 0 Single Pole Type S Contactor, Folio 7

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	SS-0746-A	Arc Shield	KP7528001	61	SS-0782-A	Retarding Coil	KP7528050
2	FP-23A36	Binding Screw	KP7428004	62	SS-0110	Coil Terminal Stud	KP7528051
3	FP-23A10	Binding Post	KP7528003	63	LTZ-1809	Coil Terminal Stud	KP7528052
4	SS-0771	Spacer	KP7528004	64	LTZ-1810	Coil Terminal Stud	KP7528053
6	SS-0770	Shield	KP7528005	65	LTZ-1811	Coil Terminal Stud	KP7528054
7	FP-23A13	Binding Post	KP7528006	66	SS-0806	Bar	KP7528055
8	SS-0753	Ear	KP7528007	67	SS-0750	Bracket	KP7528056
9	SS-0747-A	B.O Coil	KP7528008	68	Z0-1150	Cup Washer	KP7528057
10	SS-0752	Horn	KP7528009	70	SS-0781	Core	KP7528058
12	SS-0751	Contact Tip	KP7528010				
14	SS-0305	Stop Plate	KP7528011				
16	S-0107-A	Core	KP7528012				
17	SS-0803	Core Spacer	KP7528013				
18	LT-1067	Core Cap, Steel	KP7528014				
20	SS-0755-A	Contact Assembly	KP7528015				
21	DR-1139	Contact	KP7528016				
22	SS-0754	Contact Finger	KP7528017				
23	SS-0786	Guard	KP7528018				
24	SS-0896	Spring	KP7528019				
25	ZS-0349	Guide	KP7528020				
27	SS-0796-A	Bracket	KP7528021				
28	SS-0922-A	Armature	KP7528022				
30	SS-0795	Plate	KP7528023				
31	SS-0828-A	Connector	KP7528024				
32	EL-53-G	Control Circuit	KP7528025				
33	EL-54-G	Control Circuit	KP7528026				
34	EL-55-G	Control Circuit	KP7528027				
36	EL-63	Block	KP7528028				
37	EL-62	Control Circuit Support	KP7528029				
39	EL-1-A	Control Circuit Arm, Complete	KP7528030				
40	EL-2-A	Control Circuit Arm, Complete	KP7528031				
41	EL-3	Control Circuit Arm Only	KP7528032				
42	EL-87	Spring Retainer	KP7528033				
43	EL-84-A	Contact Bridge	KP7528034				
44	EL-49	Spring	KP7528035				
45	EL-6-A	Control Circuit Contact	KP7528036				
47	EL-19	Stud	KP7528037				
48	EL-20	Stud	KP7528038				
49	EL-9	Stud	KP7528039				
50	EL-10	Stud	KP7528040				
51	SS-0769-A	Pin	KP7528041				
52	SS-0802	Spring	KP7528042				
53	LT-1091	Spring Washer	KP7528043				
54	SS-0756	Terminal Stud	KP7528044				
55	SS-0757	Stud	KP7528045				
56	SS-0758	Stud	KP7528046				
57	SS-0798	Plate	KP7528047				
59	SS-0827-A	Frame	KP7528048				
60	SS-0785-A	Coil	KP7528049				

Replacement Parts for:

NO. 1 Single Pole Type L Line-Arc Contactor, Folio 3

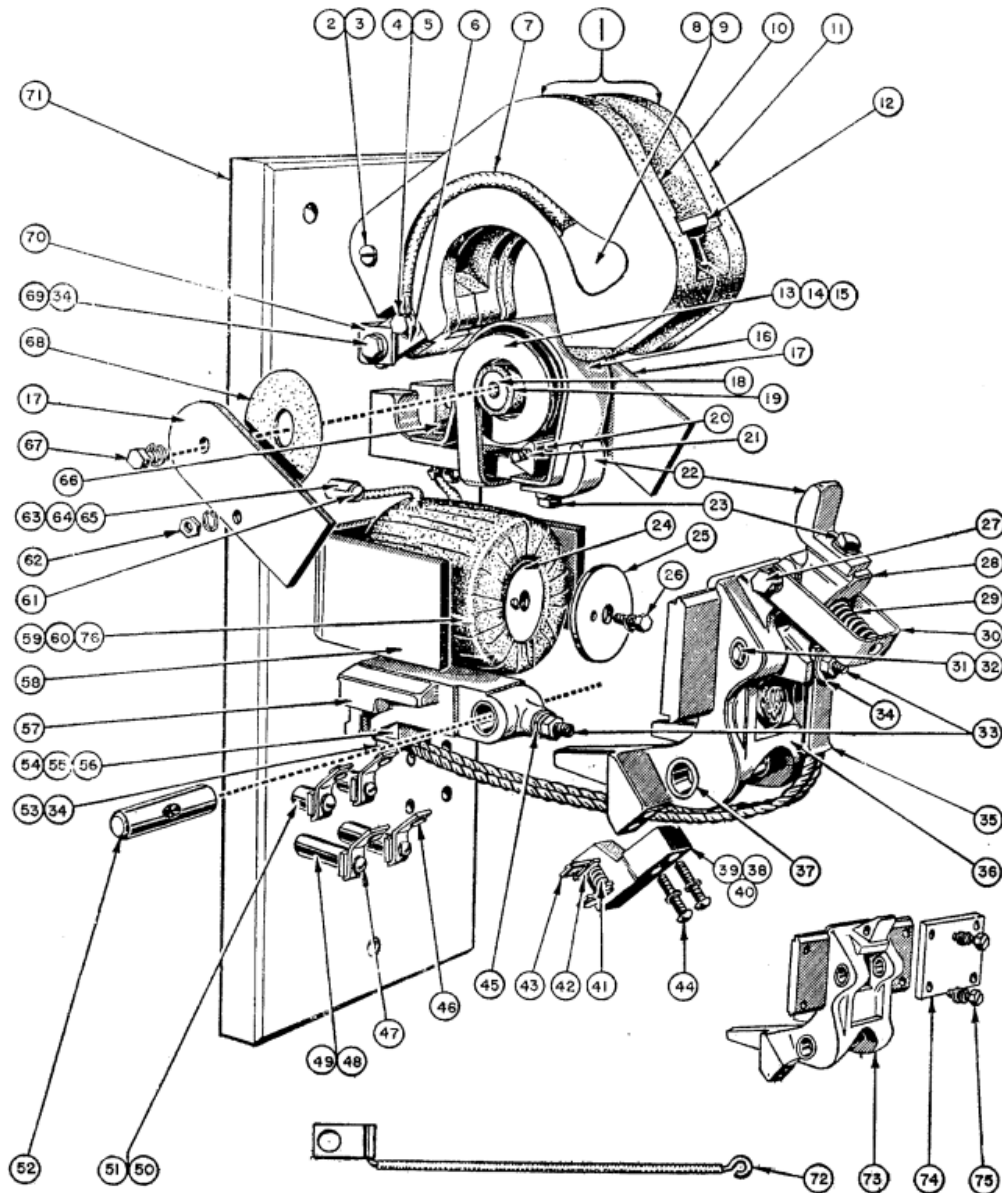


Replacement Parts for:

NO. 1 Single Pole Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-1024-A	Arc Shield Complete	KP7628001	63	LTZ-1809	Coil Terminal Stud	KP7528052
2	FP-23A36	Binding Screw	KP7428004	64	LTZ-1810	Coil Terminal Stud	KP7528053
3	FP-23A13	Binding Nut	KP7528006	65	LTZ-1811	Coil Terminal Stud	KP7528054
5	Z0-1150	Cup Washer	KP7528057	68	LT-1075	Insulator	KP7628057
6	LT-1049	Arc Shield Hinge	KP7628005	70	LT-1050	Arc Shield Clip	KP7628058
7	LT-1081	Arc Plate Connector	KP7628006	72	L-1016-A	Blowout Connector	KP7728056
9	Z0-1121	Cup Washer	KP7628007	73	L-1083-A	Magnet Arm	KP7728057
10	LT-1035	Arc Shield, Left Hand	KP7628008	74	L-1036	Tie Bar	KP7728058
11	LT-1036	Arc Shield, Right Hand	KP7628009				
12	LT-1032	Arc Plate	KP7628010				
13	LT-1656-A	Blowout Coil	KP7628011				
14	LT-1657-A	Blowout Coil	KP7628012				
15	LT-1658-A	Blowout Coil	KP7628013				
16	LT-1265-A	Blowout Guard	KP7628014				
17	LT-1052	Blowout Ear	KP7628056				
18	LT-1039	Blowout Core	KP7628015				
19	LT-1074	Insulator	KP7628016				
20	LT-1064	Blowout Ear Spacer	KP7628017				
21	LT-1072	Stud	KP7628018				
22	LT-1031	Contact Tip	KP7628019				
24	L-1015-A	Core	KP7728021				
25	L-1026	Core Cap	KP7628035				
28	LT-1028-A	Auxiliary Arm	KP7628024				
29	L-1027	Contact Spring	KP7628025				
30	L-1021	Contact Spring Bracket	KP7628026				
31	LT-1038	Auxiliary Arm Pin	KP7628029				
32	FP-24B12	Bearing	KP7628030				
33	LT-1092	Set Screw	KP7628027				
35	LT-1025-A	Connector	KP7728029				
36	L-1013-A	Magnet Arm	KP7728030				
37	FP-24B13	Bearing	KP7628032				
38	EL-1-A	Control Circuit Arm, Complete	KP7528030				
39	EL-2-A	Control Circuit Arm, Complete	KP7528031				
40	EL-3	Control Circuit Arm Only	KP7528032				
41	EL-49	Spring	KP7528035				
42	EL-87	Spring Retainer	KP7528033				
43	EL-84-A	Contact Bridge	KP7528034				
46	EL-6-A	Control Circuit Contact	KP7528036				
48	EL-19	Stud	KP7528037				
49	EL-20	Stud	KP7528038				
50	EL-9	Stud	KP7528039				
51	EL-10	Stud	KP7528040				
52	LT-1037	Magnet Arm Pin	KP7728043				
54	LT-1044-A	Main Terminal Stud	KP7628047				
55	LT-1045-A	Main Terminal Stud	KP7628048				
56	LT-1646-A	Main Terminal Stud	KP7628049				
57	LT-1029-A	Magnet Arm Bracket	KP7728047				
58	L-1018-A	Frame	KP7728048				
59	L-1010-A	Coil	KP7728049				
60	L-1011-A	Magnet Coil	KP7728050				

Replacement Parts for:

NO. 1 Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

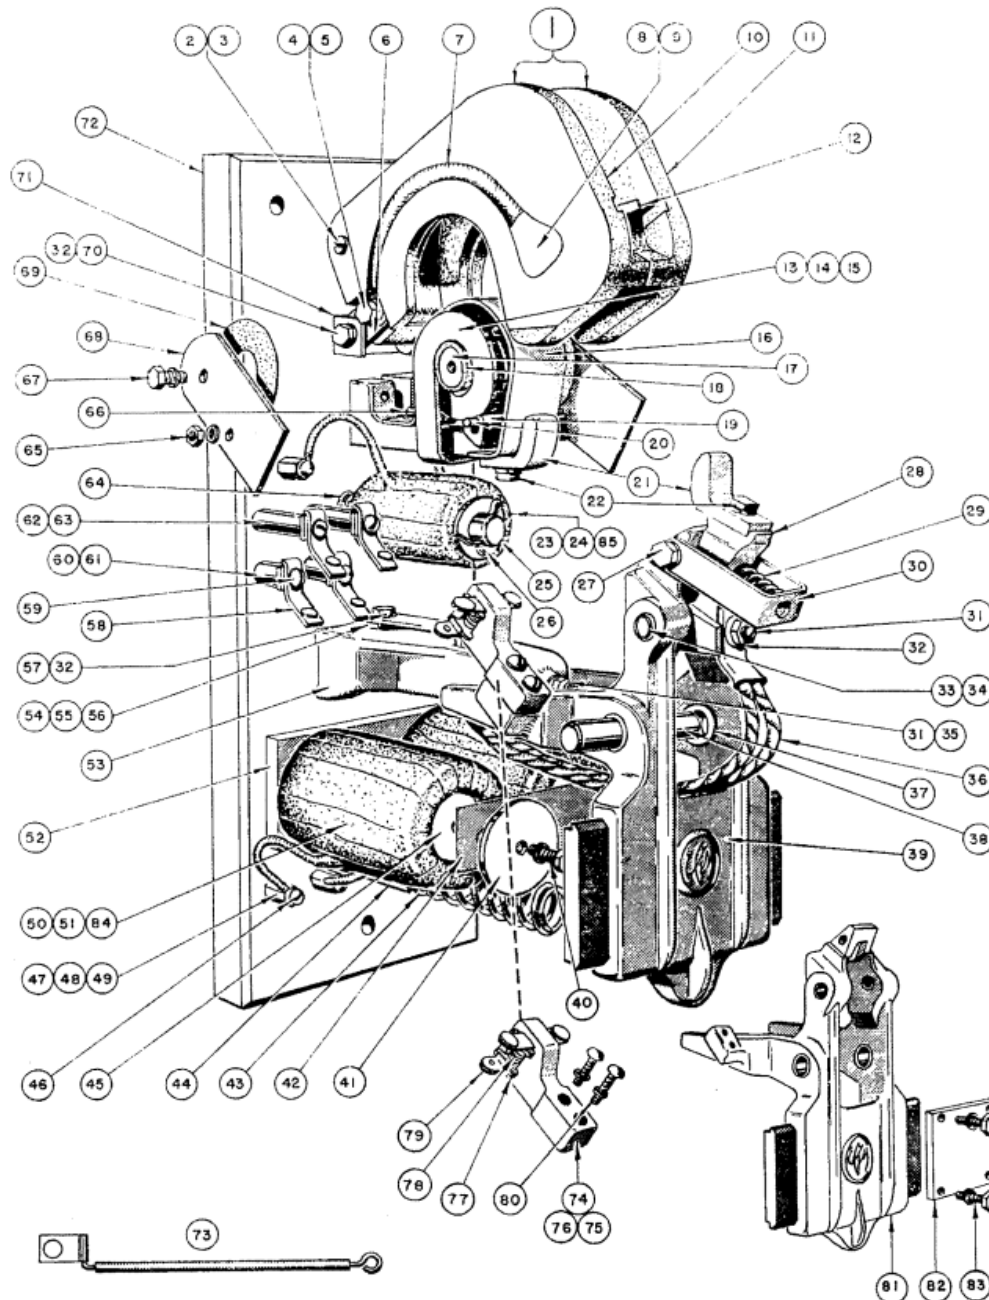


Replacement Parts for:

NO. 1 Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-1024-A	Arc Shield Complete	KP7628001	54	LT-1044-A	Main Terminal Stud	KP7628047
2	FP-23A36	Binding Screw	KP7428004	55	LT-1045-A	Main Terminal Stud	KP7628048
3	FP-23A13	Binding Nut	KP7528006	56	LT-1646-A	Main Terminal Stud	KP7628049
5	ZO-1150	Cup Washer	KP7528057	58	EL-6-A	Control Circuit Contact	KP7528036
6	1T-1049	Arc Shield Hinge	KP7628005	60	EL-13	Stud	KP7628051
7	LT-1081	Arc Plate Connector	KP7628006	61	EL-14	Stud	KP7628052
9	ZO-1121	Cup Washer	KP7628007	62	EL-25	Stud	KP7628053
10	LT-1035	Arc Shield, Left Hand	KP7628008	63	EL-26	Stud	KP7628054
11	LT-1036	Arc Shield, Right Hand	KP7628009	64	DLM-67	Spring	KP7628055
12	LT-1032	Arc Plate	KP7628010	68	LT-1052	Blowout Ear	KP7628056
13	LT-1656-A	Blowout Coil	KP7628011	69	LT-1075	Insulator	KP7628057
14	LT-1657-A	Blowout Coil	KP7628012	71	LT-1050	Arc Shield Clip	KP7628058
15	LT-1658-A	Blowout Coil	KP7628013	73	L-1109-A	Blowout Connector	KP7628059
16	LT-1265-A	Blowout Guard	KP7628014	74	EL-1-A	Control Circuit Arm, Complete	KP7528030
17	LT-1039	Blowout Core	KP7628015	75	EL-2-A	Control Circuit Arm, Complete	KP7528031
18	LT-1074	Insulator	KP7628016	76	EL-3	Control Circuit Arm Only	KP7528032
19	LT-1064	Blowout Ear Spacer	KP7628017	77	EL-87	Spring Retainer	KP7528033
20	LT-1072	Stud	KP7628018	78	EL-49	Spring	KP7528035
21	LT-1031	Contact Tip	KP7628019	79	EL-84-A	Contact Bridge	KP7528034
23	L-1113-A	Retarding Coil	KP7628020	81	L-1190-A	Magnet Arm	KP7628066
24	L-1114-A	Retarding Coil	KP7628021	82	L-3036	Tie Bar	KP7628067
25	L-1108	Stop Bar	KP7628022				
26	L-1119	Washer	KP7628023				
28	LT-1028-A	Auxiliary Arm	KP7628024				
29	L-1027	Contact Spring	KP7628025				
30	L-1021	Contact Spring Bracket	KP7628026				
31	LT-1092	Set Screw	KP7628027				
32	LT-1091	Spring Washer	KP7528043				
33	LT-1038	Auxiliary Arm Pin	KP7628029				
34	FP-24B12	Bearing	KP7628030				
36	L-1111-A	Connector	KP7628031				
37	FP-24B13	Bearing	KP7628032				
38	LT-2037	Pin	KP7628033				
39	L-1102-A	Magnet Arm	KP7628034				
41	L-1026	Core Cap	KP7628035				
42	L-3029	Non-Magnetic Spacer	KP7628036				
43	L-1105	Operating Spring	KP7628037				
44	L-1106	Operating Spring Holder	KP7628038				
45	L-3015-A	Core	KP7628039				
47	L7Z-1809	Coil Terminal Stud	KP7528052				
48	1TZ-1810	Coil Terminal Stud	KP7528053				
49	L7Z-1811	Coil Terminal Stud	KP7528054				
50	L-3011-A	Coil #230 Volt	KP7628043				
51	L-3012-A	Coil #115 Volt	KP7628044				
52	L-3018-A	Core Plate	KP7628045				
53	L-1104-A	Magnet Arm Bracket	KP7628046				

Replacement Parts for:

NO. 2 Single Pole Type L Line-Arc Contactor, Folio 3

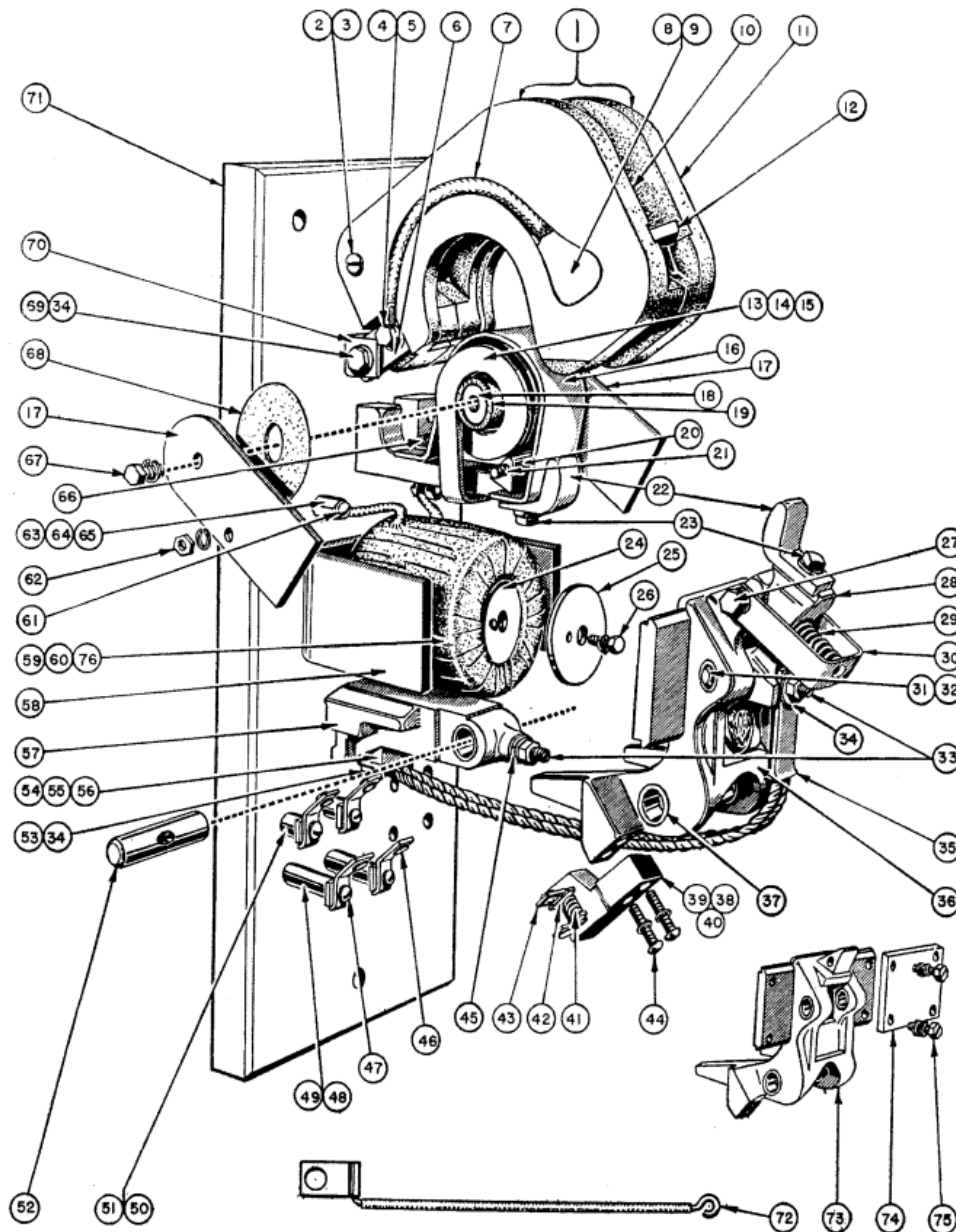


Replacement Parts for:

NO. 2 Single Pole Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-2024-A	Assembled Arc Shield, Complete	KP7828001	60	L-2011-A	Magnet Coil	KP8028051
2	FP-23A36	Binding Screw	KP7428004	63	LTZ-1809	Coil Terminal Stud	KP7528052
3	FP-23A13	Binding Nut	KP7528006	64	LTZ-1810	Coil Terminal Stud	KP7528053
5	Z0-1150	Cup Washer	KP7528057	65	LTZ-1811	Coil Terminal Stud	KP7528054
6	LT-1049	Arc Shield Hinge	KP7628005	68	LT-1075	Insulator	KP7628057
7	LT-1081	Arc Plate Connector	KP7628006	70	LT-2050	Arc Shield Clip	KP7828023
9	Z0-1121	Cup Washer	KP7628007	72	L-2016-A	Blowout Connector	KP8028057
10	LT-2035	Arc Shield, Left Hand	KP7828009	73	L-2083-A	Magnet Arm, Complete	KP8028058
11	LT-2036	Arc Shield, Right Hand	KP7828010	74	L-1036	Tie Bar	KP7728058
12	LT-2032	Arc Plate	KP7828008				
13	LT-2656-A	Blowout Coil	KP7828026				
14	LT-2657-A	Blowout Coil	KP7828027				
15	LT-2658-A	Blowout Coil	KP7828028				
16	LT-2265-A	Blowout Guard	KP7828031				
17	LT-1052	Blowout Ear	KP7628056				
18	LT-2039	Blowout Core	KP7828024				
19	LT-2074	Insulator	KP7828025				
20	LT-2064	Blowout Ear Spacer	KP7828030				
21	LT-2072	Stud	KP7828029				
22	LT-2031	ContactTip	KP7828012				
24	L-2015-A	Core	KP8028021				
25	L-1026	Core Cap	KP7628035				
28	LT-2028-A	Auxiliary Arm, Complete	KP7828022				
29	L-2027	Contact Spring	KP7828021				
30	L-1021	Contact Spring Bracket	KP7628026				
31	LT-2038	Auxiliary Arm Pin	KP7828014				
32	FP-24B12	Bearing	KP7628030				
33	LT-1092	Set Screw	KP7628027				
34	LT-1091	Spring Washer	KP7528043				
35	LT-2025-A	Connector	KP8028030				
36	L-2013-A	Magnet Arm, Complete	KP8028031				
37	FP-24B13	Bearing	KP7628032				
38	EL-1-A	Control Circuit Arm, Complete	KP7528030				
39	EL-2-A	Control Circuit Arm, Complete	KP7528031				
40	EL-3	Control Circuit Arm Only	KP7528032				
41	EL-49	Spring	KP7528035				
42	EL-87	Spring Retainer	KP7528033				
43	EL-84-A	Contact Bridge	KP7528034				
46	EL-6-A	Control Circuit Contact	KP7528036				
48	EL-23	Stud	KP8028040				
49	EL-24	Stud	KP8028041				
50	EL-11	Stud	KP7828052				
51	EL-12	Stud	KP7828053				
52	LT-2037	Pin	KP7628033				
54	LT-2044-A	Main Terminal Stud	KP7828055				
55	LT-2045-A	Main Terminal Stud	KP7828056				
56	LT-2646-A	Main Terminal Stud	KP7828057				
57	LT-2029-A	Magnet Arm Bracket	KP8028048				
58	L-2018-A	Frame	KP8028049				
59	L-2010-A	Magnet Coil	KP8028050				

Replacement Parts for:

NO. 2 Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

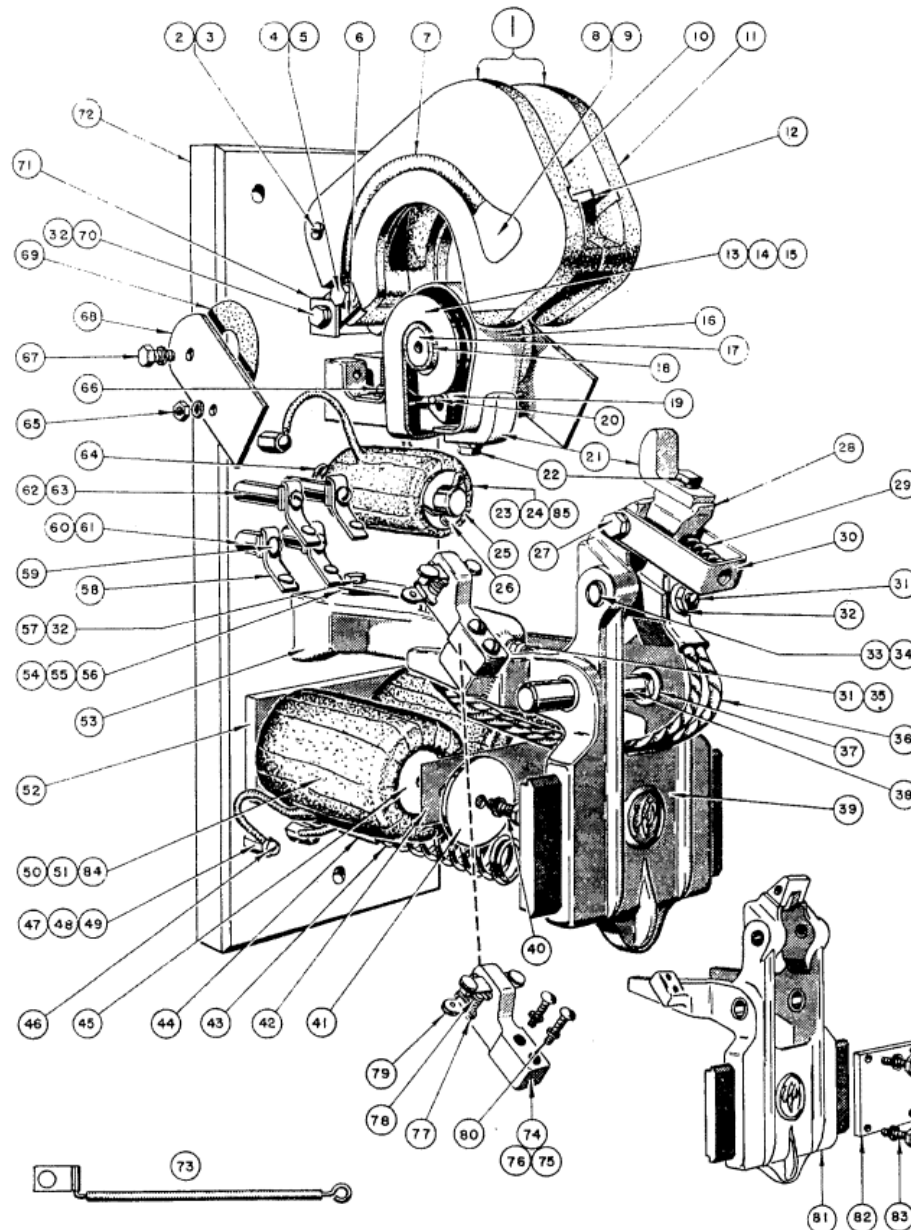


Replacement Parts for:

NO. 2 Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-2024-A	Assembled Arc Shield, Complete	KP7828001	53	L-2104-A	Magnet Arm Bracket	KP7928047
2	FP-23A36	Binding Screw	KP7428004	54	LT-2044-A	Main Terminal Stud	KP7828055
3	FP-23A13	Binding Nut	KP7528006	55	LT-2045-A	Main Terminal Stud	KP7828056
5	Z0-1150	Cup Washer	KP7528057	56	LT-2646-A	Main Terminal Stud	KP7828057
6	LT-1049	Arc Shield Hinge	KP7628005	58	EL-6-A	Control Circuit Contact	KP7528036
7	LT-1081	Arc Plate Connector	KP7628006	60	EL-19	Stud	KP7528037
9	Z0-1121	Cup Washer	KP7628007	61	EL-20	Stud	KP7528038
10	LT-2035	Arc Shield, Left Hand	KP7828009	62	EL-29	Stud	KP7928054
11	LT-2036	Arc Shield, Right Hand	KP7828010	63	EL-30	Stud	KP7928055
12	LT-2032	Arc Plate	KP7828008	64	DLM-67	Spring	KP7628055
13	LT-2656-A	Blowout Coil	KP7828026	68	LT-1052	Blowout Ear	KP7628056
14	LT-2657-A	Blowout Coil	KP7828027	69	LT-1075	Insulator	KP7628057
15	LT-2658-A	Blowout Coil	KP7828028	71	LT-2050	Arc Shield Clip	KP7828023
16	LT-2265-A	Blowout Guard	KP7828031	73	L-2109-A	Blowout Connector	KP7928060
17	LT-2039	Blowout Core	KP7828024	74	EL-1-A	Control Circuit Arm, Complete	KP7528030
18	LT-2074	Insulator	KP7828025	75	EL-2-A	Control Circuit Arm, Complete	KP7528031
19	LT-2064	Blowout Ear Spacer	KP7828030	76	EL-3	Control Circuit Arm Only	KP7528032
20	LT-2072	Stud	KP7828029	77	EL-87	Spring Retainer	KP7528033
21	LT-2031	Contact Tip	KP7828012	78	EL-49	Spring	KP7528035
23	L-1113-A	Retarding Coil	KP7628020	79	EL-84-A	Contact Bridge	KP7528034
24	L-1114-A	Retarding Coil	KP7628021	81	L-2190-A	Magnet Arm	KP7928067
25	L-2108	Stop Bar, Steel	KP7928022	82	L-3036	Tie Bar	KP7628067
26	L-1119	Washer	KP7628023				
28	LT-2028-A	Auxiliary Arm, Complete	KP7828022				
29	L-2027	Contact Spring	KP7828021				
30	L-1021	Contact Spring Bracket	KP7628026				
31	LT-2092	Set Screw	KP7928027				
32	LT-1091	Spring Washer	KP7528043				
33	LT-2038	Auxiliary Arm Pin	KP7828014				
34	FP-24B12	Bearing	KP7628030				
35	LT-1092	Set Screw	KP7628027				
36	L-2111-A	Connector	KP7928032				
37	FP-24B13	Bearing	KP7628032				
38	LT-2037	Pin	KP7628033				
39	L-2102-A	Magnet Arm, Complete	KP7928035				
41	L-1026	Core Cap	KP7628035				
42	L-3029	Non-Magnetic Spacer	KP7628036				
43	L-2105	Operating Spring	KP7928038				
44	L-1106	Operating Spring Holder	KP7628038				
45	L-3015-A	Core	KP7628039				
47	LTZ-1809	Coil Terminal Stud	KP7528052				
48	LTZ-1810	Coil Terminal Stud	KP7528053				
49	LTZ-1811	Coil Terminal Stud	KP7528054				
50	L-2116-A	Magnet Coil	KP7828047				
51	L-2117-A	Coil	KP7828048				
52	L-3018-A	Core Plate	KP7628045				

Replacement Parts for:

NO. 2 Double Pole Type L Line-Arc Contactor, Folio 3

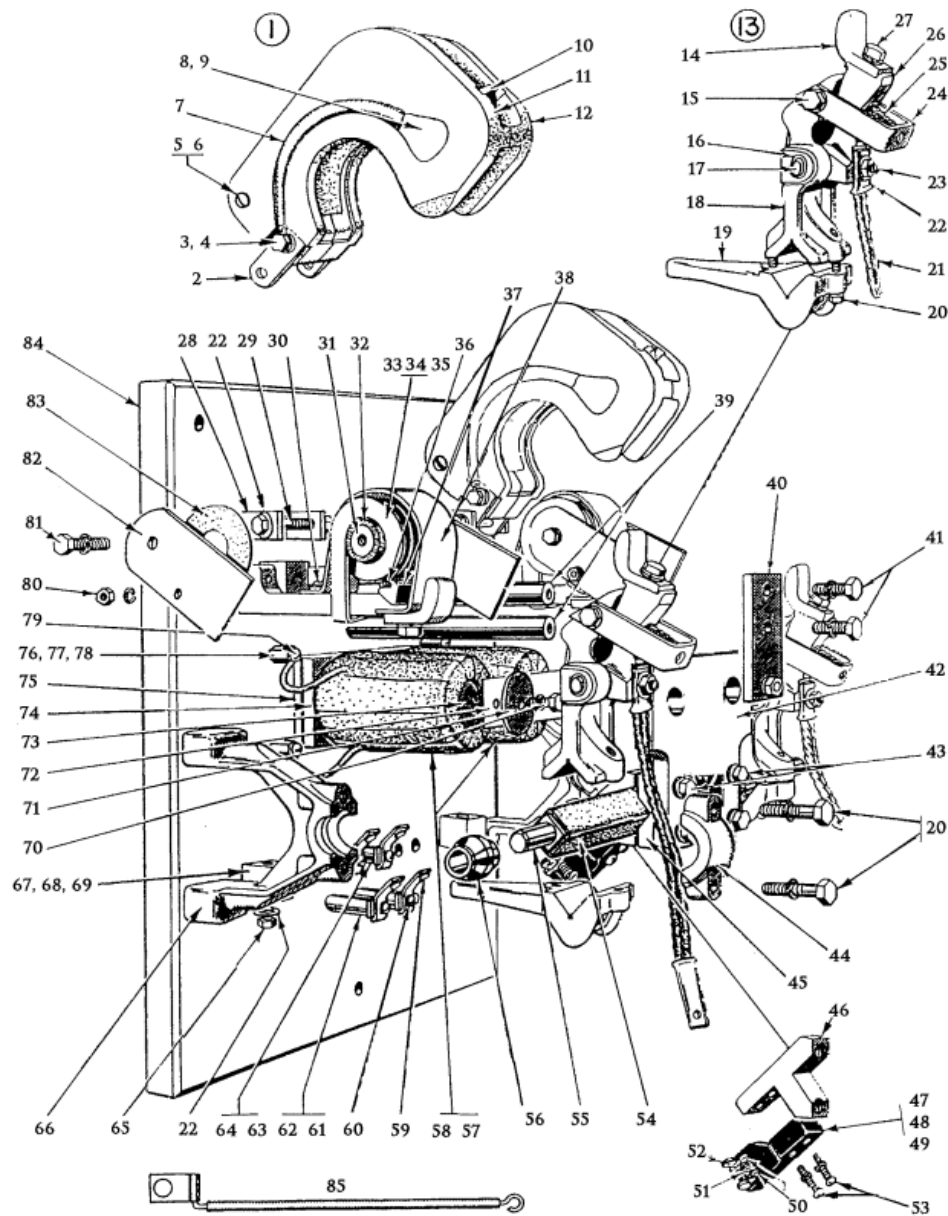


Replacement Parts for:

NO. 2 Double Pole Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-2024-A	Assembled Arc Shield, Complete	KP7828001	62	EL-22	Stud	KP7828051
2	LT-1049	Arc Shield Hinge	KP7628005	63	EL-11	Stud	KP7828052
4	Z0-1150	Cup Washer	KP7528057	64	EL-12	Stud	KP7828053
5	FP-23A36	Binding Screw	KP7428004	66	LT-2115	Bearing Bracket	KP7828054
6	FP-23A13	Binding Post	KP7528006	67	LT-2044-A	Main Terminal Stud	KP7828055
7	LT-1081	Arc Plate Connector	KP7628006	68	LT-2045-A	Main Terminal Stud	KP7828056
9	Z0-1121	Cup Washer	KP7628007	69	LT-2646-A	Main Terminal Stud	KP7828057
10	LT-2032	Arc Plate	KP7828008	71	L-1026	Corc Cap	KP7628035
11	LT-2035	Arc Shield, Left Hand	KP7828009	72	L-3029	Non-Magnetic Spacer	KP7628036
12	LT-2036	Arc Shield, Right Hand	KP7828010	73	L-3015-A	Core	KP7628039
13	L-2203-G	Assembled Contact Arm, Complete	KP7828011	74	L-3018-A	Core Plate	KP7628045
14	LT-2031	Contact Tip	KP7828012	75	L-2212	Spacer	KP7828062
16	FP-24B12	Bearing	KP7628030	76	LTZ-1809	Coil Terminal Stud	KP7528052
17	LT-2038	Auxiliary Arm Pin	KP7828014	77	LTZ-1810	Coil Terminal Stud	KP7528053
18	L-2204-A	Contact Arm, Complete	KP7828015	78	LTZ-1811	Coil Terminal Stud	KP7528054
19	LT-2123	Contact Arm Clamp	KP7828016	82	LT-1052	Blowout Ear	KP7628056
21	LT-2114-A	Connector	KP7828017	83	LT-1075	Insulator	KP7628057
22	LT-1091	Spring Washer	KP7528043	85	LT-2128-A	Blowout Connector	KP7828068
23	LT-1092	Set Screw	KP7628027				
24	L-1021	Contact Spring Bracket	KP7628026				
25	L-2027	Contact Spring	KP7828021				
26	LT-2028-A	Auxiliary Arm, Complete	KP7828022				
28	LT-2050	Arc Shield Clip	KP7828023				
31	LT-2039	Blowout Core	KP7828024				
32	LT-2074	Insulator	KP7828025				
33	LT-2656-A	Blowout Coil	KP7828026				
34	LT-2657-A	Blowout Coil	KP7828027				
35	LT-2658-A	Blowout Coil	KP7828028				
36	LT-2072	Stud	KP7828029				
37	LT-2064	Blowout Ear Spacer	KP7828030				
38	LT-2265-A	Blowout Guard	KP7828031				
39	L-2219	Stop Bar	KP7828032				
40	L-1214-A	Stop Plate	KP7828033				
42	L-2210	Armature Plate	KP7828034				
44	LT-1125	Bearing Bracket Clamp	KP7828035				
45	L-1211	Clamp	KP7828036				
46	L-1206	Magnet Arm Clamp	KP7828037				
47	EL-1-A	Control Circuit Arm, Complete	KP7528030				
48	EL-2-A	Control Circuit Arm, Complete	KP7528031				
49	EL-3	Control Circuit Arm Only	KP7528032				
50	EL-87	Spring Retainer	KP7528033				
51	EL-49	Spring	KP7528035				
52	EL-84-A	Contact Bridge	KP7528034				
54	LT-2615	Shaft Insulator	KP7828044				
55	L-2208-A	Shaft	KP7828045				
56	LT-1121	Bearing	KP7828046				
57	L-2116-A	Coil	KP7828047				
58	L-2117-A	Coil	KP7828048				
59	EL-6-A	Control Circuit Contact	KP7528036				
61	EL-21	Stud	KP7828050				

Replacement Parts for:

NO. 3 Single Pole Type L Line-Arc Contactor, Folio 3

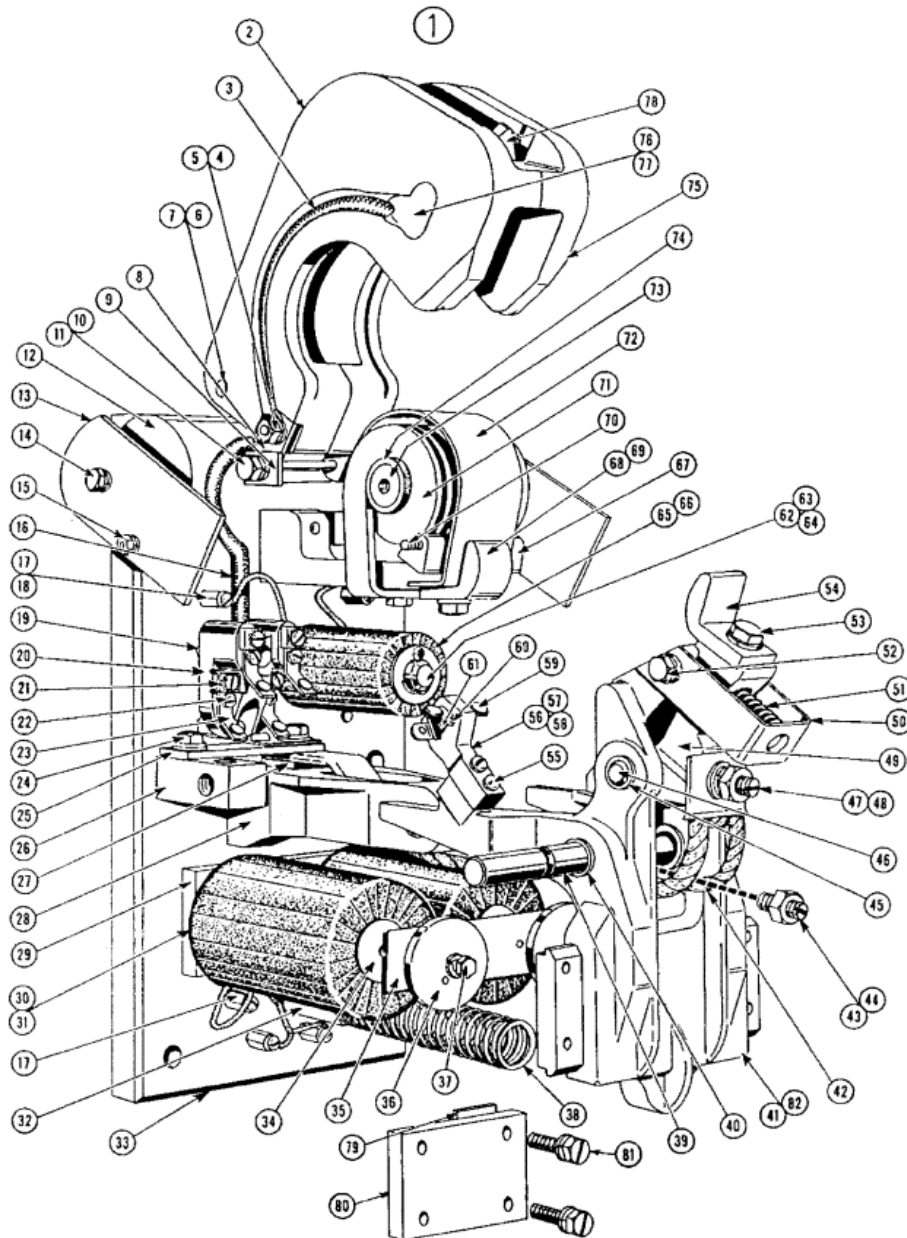


Replacement Parts for:

NO. 3 Single Pole Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-3024-A	Arc Shield, Complete	KP8128001	59	L-2116-A	Magnet Coil	KP7828047
2	FP-23A36	Binding Screw	KP7428004	60	L-2117-A	Coil	KP7828048
3	FP-23A13	Binding Nut	KP7528006	62	LTZ-1810	Coil Terminal Stud	KP7528053
5	ZO-1150	Cup Washer	KP7528057	63	LTZ-1811	Coil Terminal Stud	KP7528054
6	LT-1049	Arc Shield Hinge	KP7628005	66	LT-1068	Washer	KP8128023
7	LT-3081	Arc Plate Connector	KP8128005	68	LT-3075	Insulator, for Blowout Ear	KP8128064
9	LT-3035	Arc Shield, Complete	KP8128007	70	LT-1091	Spring Washer	KP7528043
10	LT-3036	Arc Shield, Complete	KP8128008	71	LT-3050	Arc Shield Clip	KP8128021
11	LT-3032	Arc Plate	KP8128006	73	LT-3090-A	Blowout Connector	KP8328057
12	LT-3657-A	Blowout Coil & Contact Bracket	KP8128026				
13	LT-3658-A	Blowout Coil & Contact Bracket	KP8128027				
14	LT-3265-A	Blowout Guard	KP8128030				
15	LT-3052	Blowout Ear	KP8128063				
16	LT-3039	Blowout Core	KP8128024				
17	LT-3074	Insulator, for Blowout Core	KP8128025				
18	LT-3064	Blowout Ear Spacer	KP8128029				
19	LT-3072	Stud, for Blowout Ear Spacer	KP8128028				
20	LT-3031	Contact Tip	KP7428009				
22	L-3015-A	Core	KP7628039				
23	L-3029	Non-Magnetic Spacer	KP7628036				
24	L-1026	Core Cap	KP7628035				
27	LT-3028-A	Auxiliary Arm	KP8128020				
28	L-3027	Contact Spring	KP8128019				
29	L-3021	Spring Bracket	KP8128018				
30	LT-2037	Pin	KP7628033				
31	FP-24B13	Bearing	KP7628032				
32	LT-3092	Set Screw	KP8128017				
34	LT-3091	Spring Washer	KP8128016				
35	LT-3025-A	Connector	KP8328029				
36	LT-3093	Set Screw	KP8228029				
38	L-3013-A	Assembled Magnet Arm, Complete	KP8328031				
39	FP-24B15	Bearing	KP8228031				
40	EL-1-A	Control Circuit Arm, Complete	KP7528030				
41	EL-2-A	Control Circuit Arm, Complete	KP7528031				
42	EL-3	Control Circuit Arm Only	KP7528032				
43	EL-49	Spring	KP7528035				
44	EL-87	Spring Retainer	KP7528033				
45	EL-84-A	Contact Bridge	KP7528034				
47	EL-6-A	Control Circuit Contact	KP7528036				
49	EL-27	Stud	KP8328040				
50	EL-28	Stud	KP8328041				
51	EL-15	Stud	KP8328042				
52	EL-16	Stud	KP8328043				
53	LT-3037	Magnet Arm Pin	KP8228032				
55	LT-3044-A	Main Terminal Stud	KP8128054				
56	LT-3045-A	Main Terminal Stud	KP8128055				
57	LT-3029-A	Magnet Arm Bracket	KP8328047				
58	L-3018-A	Core Plate	KP7628045				

Replacement Parts for:

NO. 3 Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

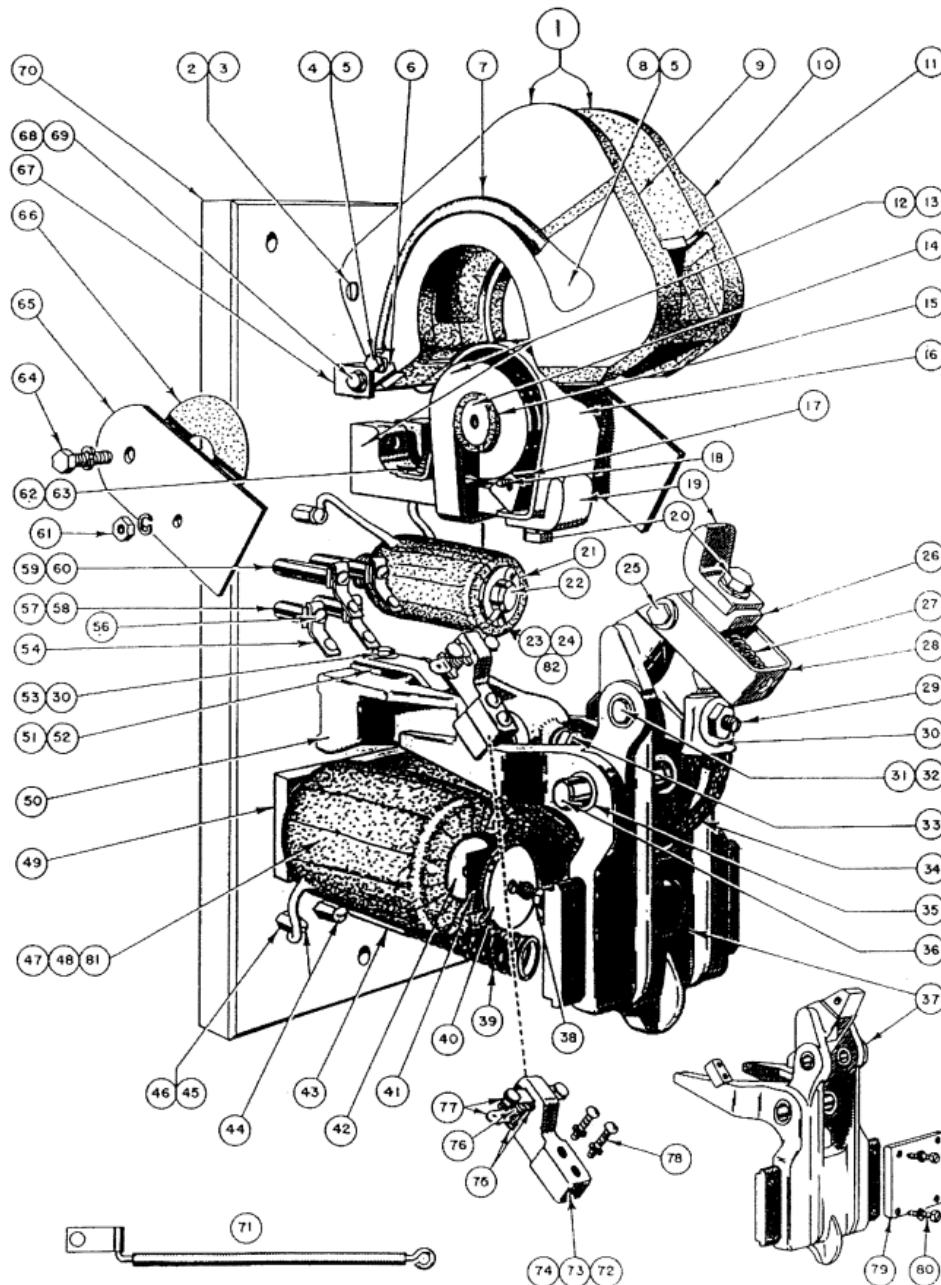


Replacement Parts for:

NO. 3 Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1T-3024-A	Arc Shield, Complete	KP8128001	52	LT-3045-A	Main Terminal Stud	KP8128055
2	FP-23A36	Binding Screw	KP7428004	54	EL-6-A	Control Circuit Contact	KP7528036
3	FP-23A13	Binding Nut	KP7528006	56	EL-19	Stud	KP7528037
5	Z0-1150	Cup Washer	KP7528057	57	EL-20	Stud	KP7528038
6	LT-1049	Arc Shield Hinge	KP7628005	58	EL-31	Stud	KP8228050
7	LT-3081	Arc Plate Connector	KP8128005	59	EL-32	Stud	KP8228051
9	LT-3035	Arc Shield, Complete	KP8128007	60	L-3120	Spring	KP8228052
10	LT-3036	Arc Shield, Complete	KP8128008	63	LT-1068	Washer	KP8128023
11	LT-3032	Arc Plate	KP8128006	65	LT-3052	Blowout Ear	KP8128063
12	LT-3657-A	Blowout Coil & Contact Bracket	KP8128026	66	LT-3075	Insulator, for Blowout Ear	KP8128064
13	LT-3658-A	Blowout Coil & Contact Bracket	KP8128027	67	LT-3050	Arc Shield Clip	KP8128021
14	LT-3039	Blowout Core	KP8128024	69	LT-1091	Spring Washer	KP7528043
15	LT-3074	Insulator, for Blowout Core	KP8128025	71	L-3109-A	Blowout Connector	KP8228058
16	LT-3265-A	Blowout Guard	KP8128030	72	EL-1-A	Control Circuit Arm, Complete	KP7528030
17	LT-3064	Blowout Ear Spacer	KP8128029	73	EL-2-A	Control Circuit Arm, Complete	KP7528031
18	LT-3072	Stud, for Blowout Ear Spacer	KP8128028	74	EL-3	Control Circuit Arm Only	KP7528032
19	LT-3031	Contact Tip	KP7428009	75	EL-87	Spring Retainer	KP7528033
21	L-3119	Washer, For Retarding Coil	KP8228018	76	EL-49	Spring	KP7528035
22	L-3108	Stop Bar	KP8228019	77	EL-84-A	Contact Bridge	KP7528034
23	L-3113-A	Retarding Coil	KP8228020				
24	L-3114-A	Retarding Coil	KP8228021				
26	LT-3028-A	Auxiliary Arm	KP8128020				
27	L-3027	Contact Spring	KP8128019				
28	L-3021	Spring Bracket	KP8128018				
29	IT-3092	Set Screw	KP8128017				
30	LT-3091	Spring Washer	KP8128016				
31	FP-24B13	Bearing	KP7628032				
32	LT-2037	Pin	KP7628033				
33	LT-3093	Set Screw	KP8228029				
34	L-3111-A	Connector	KP8228030				
35	FP-24B15	Bearing	KP8228031				
36	LT-3037	Magnet Arm Pin	KP8228032				
37	L-3102-A	Magnet Arm, Complete	KP8228033				
39	L-3105	Spring	KP8228034				
40	LT-4067	Core Cap	KP8128056				
41	LT-4752	Non-Magnetic Spacer	KP8128057				
42	L-4015-A	Core	KP8128058				
43	L-3106	Operating Spring Holder	KP8228038				
45	L7Z-1810	Coil Terminal Stud	KP7528053				
46	L7Z-1811	Coil Terminal Stud	KP7528054				
47	LT-4704-A	Magnet Coil	KP8128046				
48	LT-4705-A	Magnet Coil	KP8128047				
49	LT-4729-A	Coil Frame	KP8128059				
50	L-3104-A	Magnet Arm Bracket	KP8228044				
51	LT-3044-A	Main Terminal Stud	KP8128054				

Replacement Parts for:

NO. 3 Double Pole Type L Line-Arc Contactor, Folio 3

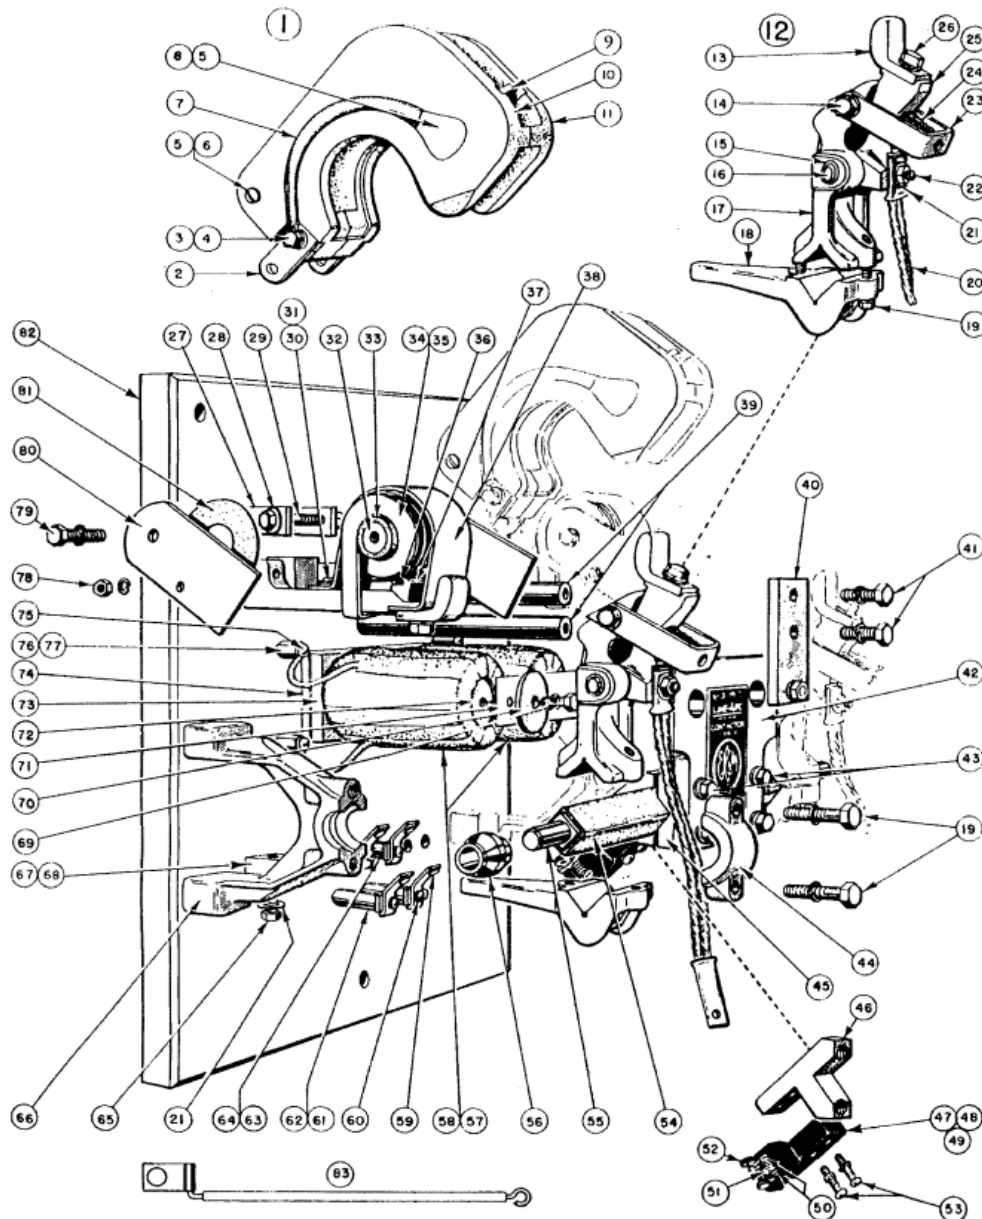


Replacement Parts for:

NO. 3 Double Pole Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-3024-A	Arc Shield, Complete	KP8128001	62	EL-30	Stud	KP7928055
2	LT-1049	Arc Shield Hinge	KP7628005	63	EL-17	Stud	KP8128051
4	Z0-1150	Cup Washer	KP7528057	64	EL-18	Stud	KP8128052
5	FP-23A36	Binding Screw	KP7428004	66	LT-3115	Bearing Bracket	KP8128053
7	LT-3081	Arc Plate Connector	KP8128005	67	LT-3044-A	Main Terminal Stud	KP8128054
9	LT-3032	Arc Plate	KP8128006	68	LT-3045-A	Main Terminal Stud	KP8128055
10	LT-3035	Arc Shield, Complete	KP8128007	70	LT-4067	Core Cap	KP8128056
11	LT-3036	Arc Shield, Complete	KP8128008	71	LT-4752	Non-Magnetic Spacer	KP8128057
12	L-3203-G	Connecting Arm	KP8128009	72	L-4015-A	Core	KP8128058
13	LT-3031	Contact Tip	KP7428009	73	LT-4729-A	Coil Frame	KP8128059
15	FP-24B13	Bearing	KP7628032	74	L-3212	Spacer	KP8128060
16	LT-2037	Pin	KP7628033	76	LTZ-1810	Coil Terminal Stud	KP7528053
17	L-3204-A	Contact Arm, Complete	KP8128013	77	LTZ-1811	Coil Terminal Stud	KP7528054
18	LT-3123	Contact Arm Clamp	KP8128014	80	LT-3052	Blowout Ear	KP8128063
20	LT-3114-A	Connector	KP8128015	81	LT-3075	Insulator, for Blowout Ear	KP8128064
21	LT-3091	Spring Washer	KP8128016				
22	LT-3092	Set Screw	KP8128017				
23	L-3021	Spring Bracket	KP8128018				
24	L-3027	Contact Spring	KP8128019				
25	LT-3028-A	Auxiliary Arm	KP8128020				
27	LT-3050	Arc Shield Clip	KP8128021				
28	LT-1091	Spring Washer	KP7528043				
31	LT-1068	Washer	KP8128023				
32	LT-3039	Blowout Core	KP8128024				
33	LT-3074	Insulator, for Blowout Core	KP8128025				
34	LT-3657-A	Blowout Coil & Contact Bracket	KP8128026				
35	LT-3658-A	Blowout Coil & Contact Bracket	KP8128027				
36	LT-3072	Stud, for Blowout Ear Spacer	KP8128028				
37	LT-3064	Blowout Ear Spacer	KP8128029				
38	LT-3265-A	Blowout Guard	KP8128030				
39	L-3219	Stop Bar	KP8128031				
40	L-1214-A	Stop Plate	KP7828033				
42	L-3210	Armature Plate	KP8128033				
44	LT-3125	Bearing Bracket Clamp	KP8128034				
45	L-3211	Clamp	KP8128035				
46	L-3206	Magnet Arm Clamp	KP8128036				
47	EL-1-A	Control Circuit Arm, Complete	KP7528030				
48	EL-2-A	Control Circuit Arm, Complete	KP7528031				
49	EL-3	Control Circuit Arm Only	KP7528032				
50	EL-87	Spring Retainer	KP7528033				
51	EL-49	Spring	KP7528035				
52	EL-84-A	Contact Bridge	KP7528034				
54	LTZ-3775	Insulator, For Shaft	KP8128043				
55	L-3208-A	Shaft, Complete	KP8128044				
56	LT-3121	Oilite Bearing	KP8128045				
57	LT-4704-A	Magnet Coil	KP8128046				
58	LT-4705-A	Magnet Coil	KP8128047				
59	EL-6-A	Control Circuit Contact	KP7528036				
61	EL-29	Stud	KP7928054				

Replacement Parts for:

NO. 4 & 4A Single Pole Type L Line-Arc Contactor, Folio 3

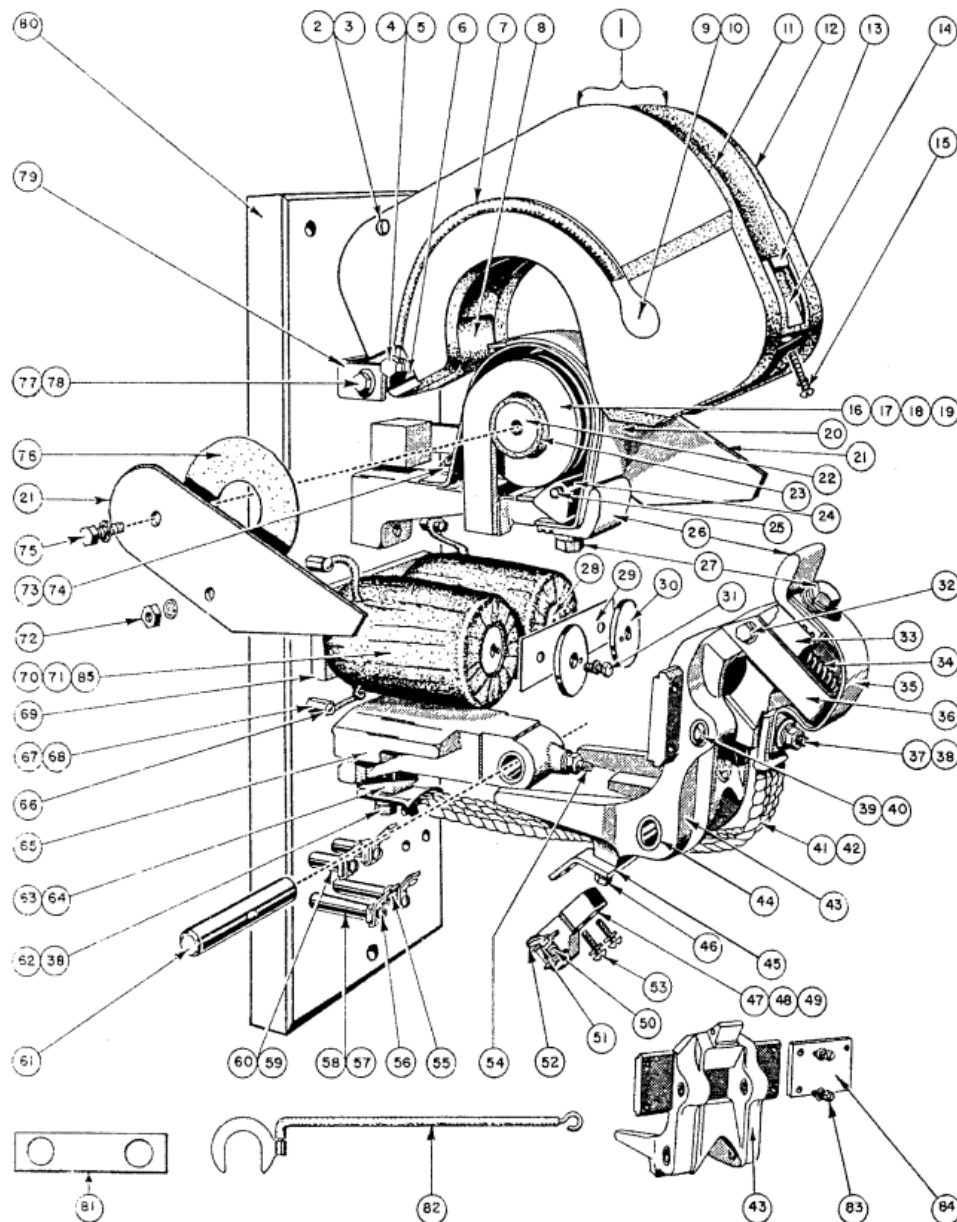


Replacement Parts for:

NO. 4 & 4A Single Pole Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-4708-A	Arc Shield	KP8428001	57	EL-31	Stud	KP8228050
2	FP-23A36	Binding Screw	KP7428004	58	EL-32	Stud	KP8228051
3	FP-23A14	Binding Post	KP7428005	59	EL-17	Stud	KP8128051
6	LT4734	Arc Shield Hinge	KP8428002	60	EL-18	Stud	KP8128052
7	LT-4778-A	Connector Arc Plate	KP8428005	61	LT-4037	Mag Arm Pin	KP8428035
8	LT-4745	Arc Shield Spacer	KP8428006	63	LT-4044-A	Main Term Stud	KP8428050
10	ZO-1150	Cup Washer	KP7528057	64	LT-4045-A	Main Terminal Stud	KP8428051
11	LT-4741	Arc Shield, L.H	KP8428008	65	LT-4029-A	Mag Arm Bracket	KP8528053
12	LT-4742	Arc Shield, R.H	KP8428009	67	LTZ-1810	Coil Terminal Stud	KP7528053
13	Lr-4720-A	Arc Plate	KP8428010	68	LTZ-1811	Coil Terminal Stud	KP7528054
14	LT-4744	Blocks	KP8428011	69	LT-4729-A	Coil Frame	KP8128059
16	LT-4709-A	B/O Coil & Contact Bracket	KP8428012	70	LT-4704-A	Magnet Coil	KP8128046
17	LT-4710-A	B/O Coil	KP8428013	71	LT-4705-A	Magnet Coil	KP8128047
18	LT-4711-A	B/O Coil	KP8428014	74	LT-1068	Washer	KP8128023
19	LT-4712-A	B/O Coil	KP8428015	76	LT-4750	For B/O Ear Insl	KP8428062
20	LT-4732-A	B/O Guard	KP8428018	78	LT-2091	Spring Washer, Large	KP8428064
21	LT-4738	B/O Ear	KP8428061	79	LT-4733	Arc Shield Clip	KP8428063
22	LT-4757	B/O Core	KP8428016	81	LT-4754	Connector	KP8428066
23	LT-4749	Insl. For B/O Core	KP8428017	82	LT-4740-A	B/O Connector	KP8528064
24	LT-4743	B/O Ear Spacer	KP8428020	84	L-3148	Tie Bar	KP8528065
25	LT-4748	Stud	KP8428019				
26	LT-4718	Contact Tip	KP8428021				
28	L-4015-A	Core	KP8128058				
29	LT-4752	Non-Magnetic Spacer	KP8128057				
30	LT-4067	Core Cap	KP8128056				
33	LT-4716-A	Aux Arm	KP8428026				
34	LT-4755	Contact Spring	KP8428028				
35	LT-4727	Aux Arm Guard	KP8428027				
36	LT-4737	Spring Bracket	KP8428029				
37	LT-3092	Set Screw	KP8128017				
39	LT-4777	Aux Arm Pin	KP8428031				
40	FP-24B14	Oilite Bearing	KP8428032				
41	LT-4714-A	Assem Connector	KP8528033				
42	LT-4784-A	Assembled Connector	KP8528034				
43	LT-4713-A	MagArm	KP8528035				
44	FP-24B16	Bearing	KP8428034				
45	L-4020	Control Contact Bracket	KP8528037				
47	EL-1-A	Control Circuit Arm, Complete	KP7528030				
48	EL-2-A	Control Circuit Arm, Complete	KP7528031				
49	EL-3	Control Circuit Arm Only	KP7528032				
50	EL-49	Spring	KP7528035				
51	EL-87	Spring Retainer	KP7528033				
52	EL-84-A	Contact Bridge	KP7528034				
54	LT-3093	Set Screw	KP8228029				
55	EL-6-A	Control Circuit Contact	KP7528036				

Replacement Parts for:

NO. 4 & 4A Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

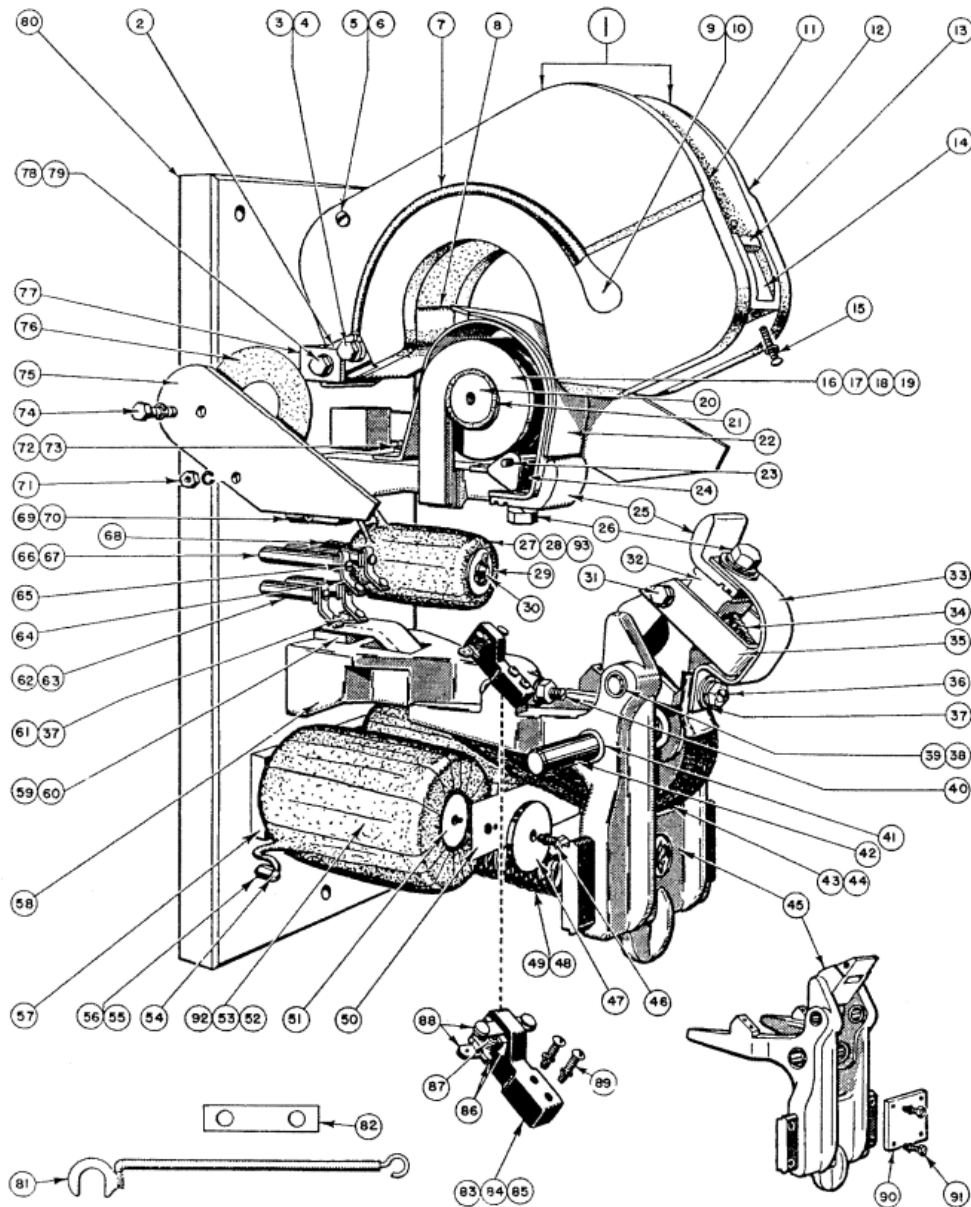


Replacement Parts for:

NO. 4 & 4A Single Pole Spring Closed Type L Line-Arc Contactor, Folio 3

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	LT-4708-A	Arc Shield	KP8428001	55	LTZ-1811	Coil Terminal Stud	KP7528054
2	LT-4734	Arc Shield Hinge	KP8428002	56	L-4128	Coil Terminal Stud	KP8428047
5	FP-23A36	Binding Screw	KP7428004	57	LT-4814-A	Mag Frame	KP8428048
6	FP-23A14	Binding Post	KP7428005	58	L-4104-A	Bracket	KP8428049
7	LT-4778-A	Connector Arc Plate	KP8428005	59	LT-4044-A	Main Terminal Stud	KP8428050
8	LT-4745	Arc Shield Spacer	KP8428006	60	LT-4045-A	Main Terminal Stud	KP8428051
10	ZO-1150	Cup Washer	KP7528057	62	EL-27	Stud	KP8328040
11	LT-4741	Arc Shield L.H	KP8428008	63	EL-28	Stud	KP8328041
12	LT-4742	Arc Shield, R.H	KP8428009	64	EL-6-A	Control Circuit Contact	KP7528036
13	LT-4720-A	Arc Plate	KP8428010	66	EL-33	Stud	KP8428055
14	LT-4744	Blocks	KP8428011	67	EL-34	Stud	KP8428056
16	LT-4709-A	B/O Coil & Contact Bracket	KP8428012	68	L-3120	Spring	KP8228052
17	LT-4710-A	B/O Coil	KP8428013	69	LTZ-1810	Coil Terminal Stud	KP7528053
18	LT-4711-A	B/O Coil	KP8428014	70	LTZ-1811	Coil Terminal Stud	KP7528054
19	LT-4712-A	B/O Coil	KP8428015	73	LT-1068	Washer	KP8128023
20	LT-4757	B/O Core	KP8428016	75	LT-4738	B/O Ear	KP8428061
21	LT-4749	Insl. For B/O Core	KP8428017	76	LT-4750	Insl. For B/O Ear	KP8428062
22	LT-4732-A	B/O Guard	KP8428018	77	LT-4733	Arc Shield Clip	KP8428063
23	LT-4748	Stud	KP8428019	79	LT-2091	Spring Washer, Large	KP8428064
24	LT-4743	B/O Ear Spacer	KP8428020	81	L-4109	Connector	KP8428065
25	LT-4718	Contact Tip	KP8428021	82	LT-4754	Connector	KP8428066
27	L-4113-A	Retarding Coil	KP8428022	83	EL-1-A	Control Circuit Arm, Complete	KP7528030
28	L-4114-A	Retarding Coil	KP8428023	84	EL-2-A	Control Circuit Arm, Complete	KP7528031
29	L-3119	Washer, For Retarding Coil	KP8228018	85	EL-3	Control Circuit Arm Only	KP7528032
30	L-4108	Stop Bar	KP8428025	86	EL-87	Spring Retainer	KP7528033
32	LT-4716-A	Aux Arm	KP8428026	87	EL-49	Spring	KP7528035
33	LT-4727	Aux Arm Guard	KP8428027	88	EL-84-A	Contact Bridge	KP7528034
34	LT-4755	Contact Spring	KP8428028	90	L-4148	Tie Bar	KP8428073
35	LT-4737	Spring Bracket	KP8428029				
36	LT-3092	Set Screw	KP8128017				
38	LT-4777	Aux Arm Pin	KP8428031				
39	FP-24B14	Oilite Bearing	KP8428032				
40	LT-3093	Set Screw	KP8228029				
41	FP-24B16	Bearing	KP8428034				
42	LT-4037	Mag Arm Pin	KP8428035				
43	L-4111-A	Connector	KP8428036				
44	L-4121-A	Connector	KP8428037				
45	L-4102-A	Magnet Arm	KP8428038				
47	LT-4067	Core Cap	KP8128056				
48	L-4105	Spring (Oper)	KP8428040				
49	L-4106	Stud	KP8428041				
50	LT-4824	Spacer	KP8428042				
51	L-4132-A	Core	KP8428043				
52	LT-4804-A	Coil	KP8428044				
53	LT-4805-A	Coil	KP8428045				


Replacement Parts for: NO. 10 Youngstown Limit Stop

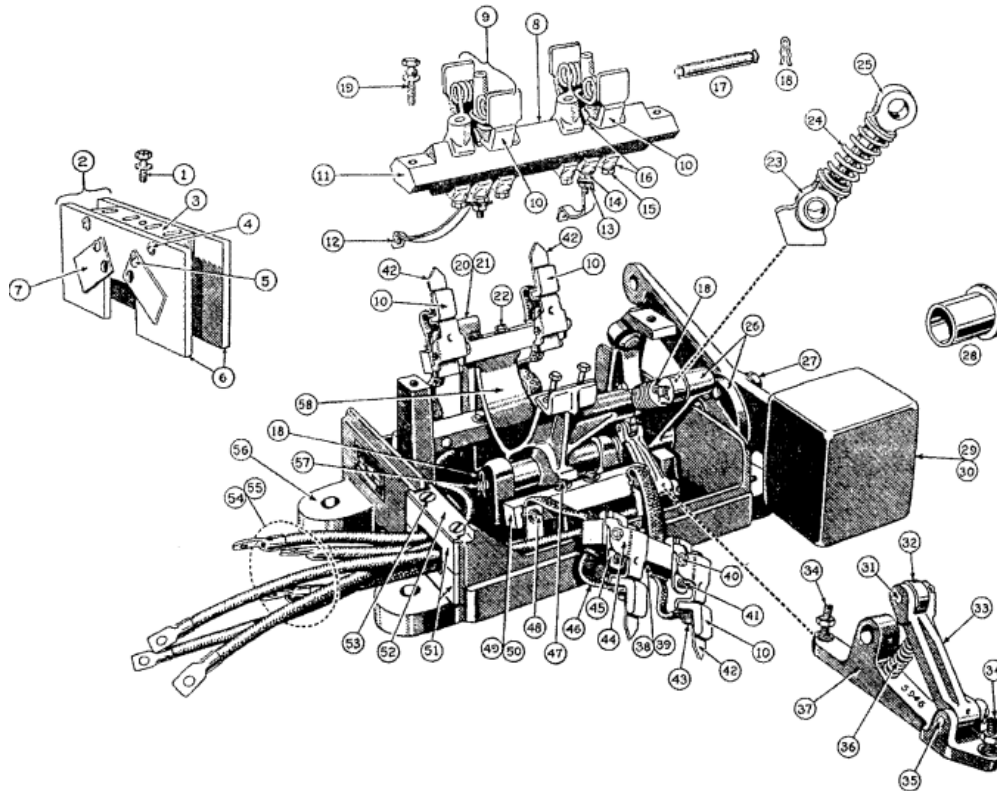

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	X-1107-A	Assembled Arc Barrier	KP7028001	36	X-164	Roller Arm Spring	KP7028004
3	X-1185	Spacer	KP7028002	37	X-157	Base	KP7028005
6	X-1163	Arc Shield	KP7028003	38	X-1104-A	Assembled Arm Insulator	KP7028006
7	X-1158	Blowout Ear	KP7028007	39	X-143	Arm Insulator	KP7028029
8	X-1102-A	Assembled Contact Beam	KP7028008	40	ZS-1159	Aux Arm Pin	KP7028030
9	X-1105-A	Blowout Coil & Contact Bracket	KP7028009	41	X-174	Contact Spring	KP7028031
10	ZCX-60-S	Contact Tip, Silver-faced	KP7028010	42	X-1118	Guard	KP7028032
11	X-1150	Contact Beam	KP7028011	44	ZS-1153	Aux Contact Arm	KP7028033
12	X-1249	Jumper	KP7028012	45	ZS-1148-A	Aux Arm Bracket, w/Bushing	KP7028034
16	ZCX-31	Clamp	KP7028013	46	X-134-A	Connector	KP7028035
17	X-1156	Blowout Core	KP7028014	49	X-119	Terminal Board	KP7028036
18	RS-130	Special Cotter	KP7028015	50	X-179	Terminal Board	KP7028037
20	Z0-59	Latch for Cover	KP7028016	51	X-127	Insulator	KP7028038
21	Z0-64	Spring	KP7028017	52	X-128	Insulator Clamp	KP7028039
23	X-153-A	Assembled Cam	KP7028018	54	X-1120-A	Leads	KP7028040
24	X-112	Spring	KP7028019	55	X-1121-A	Leads	KP7028041
25	X-158	Spring Seat	KP7028020	56	X-109	Frame	KP7028042
26	X-1115-A	Operating Arm	KP7028021	57	X-156	Contact Arm Shaft	KP7028043
28	FP-24B32	Shaft Bushing	KP7028022	58	X-1116	Contact Arm	KP7028044
29	X-1128-A	Weight Arm	KP7028023	59	X-108-A	Cover	KP7028045
30	X-1227-A	Weight Arm	KP7028024	61	FP-26A11	Eye-bolt	KP7028046
31	X-162	Roller Pin	KP7028025	66	X-1126-A	Suspended Weight Complete	KP7028047
32	X-160	Roller	KP7028026	69	X-2159	Clamp	KP7028048
33	X-154	Roller Arm	KP7028027	70	X-2167	Rope Guide	KP7028049
35	X-161	Roller Arm Pin	KP7028028				

Replacement Parts for:

NO. 20 Youngstown Limit Switch

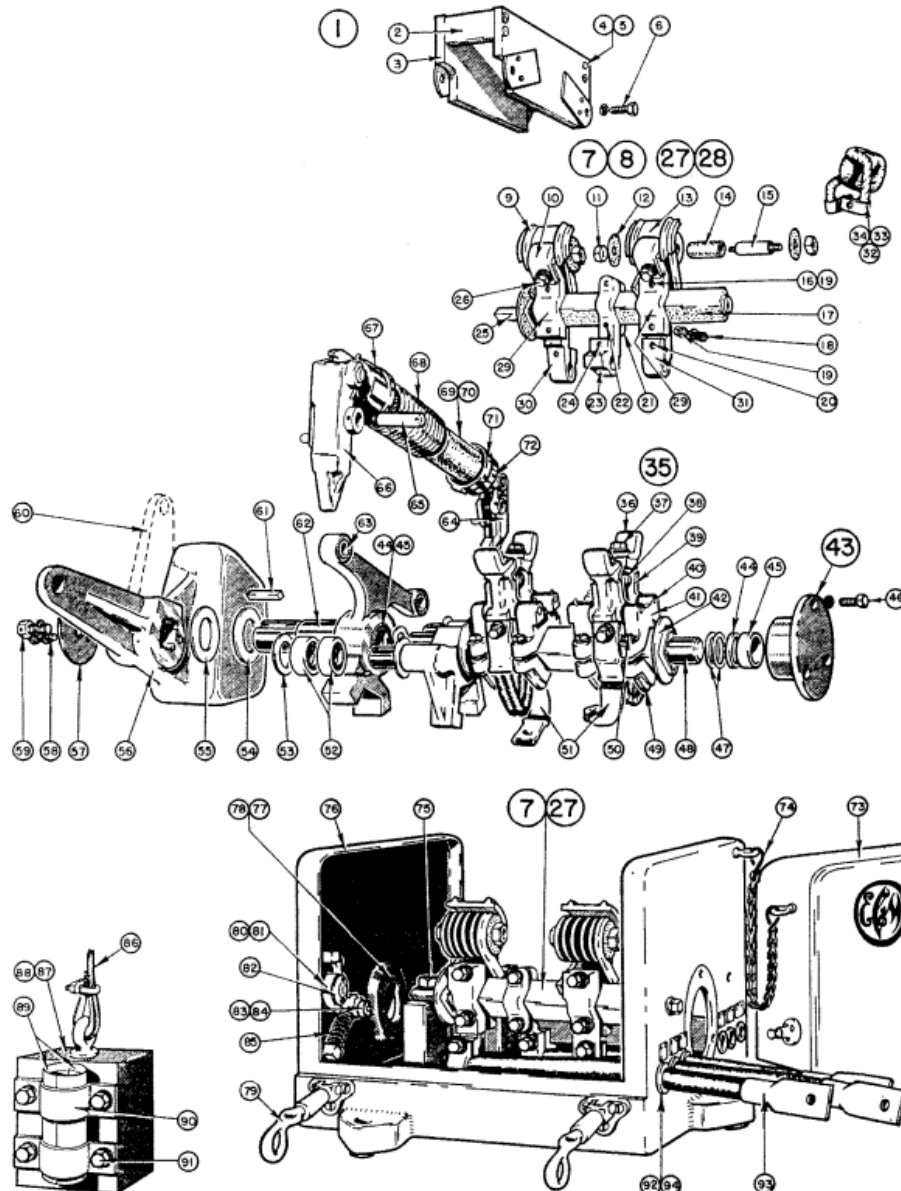


Replacement Parts for:

NO. 20 Youngstown Limit Switch

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	X-2108-A	Assembled Arc Barrier	KP7428001	66	X-2118-A	Trip Lever	KP7228008
2	X-2185	Spacer	KP7428002	67	X-2281-A	Spring Seat	KP7228010
3	X-2107-A	Arc Barrier only	KP7428003	68	X-2187	Operating Spring	KP7328011
4	FP-23A36	Binding Screw	KP7428004	69	X-2280-A	Spring Retainer	KP7228013
5	FP-23A14	Binding Post	KP7428005	70	X-2277	Tube	KP7428053
7	X-2102-A	Stationary Contact Shaft	KP7428006	71	X-2278	Tube Support	KP7428054
8	X-2103-A	Stationary Contact Shaft	KP7428007	73	X-2111-A	Hood	KP7428055
9	X-2105-A	Blowout Coil & Contact Bracket	KP7428008	75	X-2198	Special Cap Screw	KP7428056
10	LT-3031	Contact Tip	KP7428009	77	FP-24C20	Oilite Bearing	KP7428057
12	X-2184	Insulating Washer	KP7428010	78	FP-51A11	Sealing Ring	KP7428058
13	X-2106-A	Blowout Coil & Contact Bracket	KP7428011	79	FP-41A14	Hood Fastener	KP7428059
14	LTZ-1297	Blowout Core Insulator	KP7428012	80	X-2120-A	Locking Arm	KP7228090
15	X-2156	Blowout Core	KP7428013	81	X-2119-A	Locking Arm, left side	KP7228094
17	X-2228-A	Shaft Insulator	KP7328028	82	X-2170	Washer, for Locking Arm	KP7228095
19	X-2186	Insulating Bushing	KP7428015	83	X-2175	Roller, for Locking Arm	KP7228098
21	X-2141	Clamp	KP7228036	84	X-2173	Washer, for Locking Arm Roller	KP7228097
23	X-2145	Terminal Bracket	KP7228035	85	X-2276	Spring	KP7228096
25	X-2150	Shaft	KP7328027	93	X-2110-A	Lead	KP7428066
27	X-2262-A	Stationary Contact Shaft	KP7428019				
28	X-2263-A	Stationary Contact Shaft	KP7428020				
29	X-2142	Contact Bracket	KP7428021				
30	X-2266	Terminal Bracket	KP7428022				
31	X-2265	Terminal Bracket	KP7428023				
35	X-2104-A	Movable Contact Assembly	KP7428024				
36	LT-3031	Contact Tip	KP7428009				
38	X-2188	Contact Spring	KP7228065				
39	X-2139	Auxiliary Arm	KP7228064				
40	X-2180	Auxiliary Arm Pin	KP7228068				
41	X-2138	Auxiliary Arm Bracket	KP7228066				
42	X-2229-A	Shaft Insulator	KP7328060				
43	X-2220-A	Bearing Housing	KP7428031				
44	FP-51A10	Sealing Ring	KP7428032				
45	FP-24C21	Oilite Bearing	KP7428033				
47	X-2099	Spacers	KP7428034				
48	X-2116-A	Rocker Arm	KP7428035				
49	X-2140	Clamp	KP7228071				
52	X-2289-A	Roller	KP7428037				
53	X-2169	Washer, for Roller	KP7428038				
54	X-2172	Thrust Washer	KP7428039				
55	X-2224	Thrust Washer	KP7428040				
56	X-2128-A	Weight Arm	KP7428041				
57	X-2200	Cap	KP7428042				
58	X-2222	Special Cap Screw	KP7228027				
59	X-2221	Special Cap Screw	KP7428044				
61	X-2194	Key	KP7328016				
62	X-2115-A	Operating Arm	KP7428046				
63	FP-24C19	Oilite Bearing	KP7428047				
64	X-2117-A	Trip Lever	KP7228017				

Replacement Parts for:

NO. 30 Youngstown Limit Switch

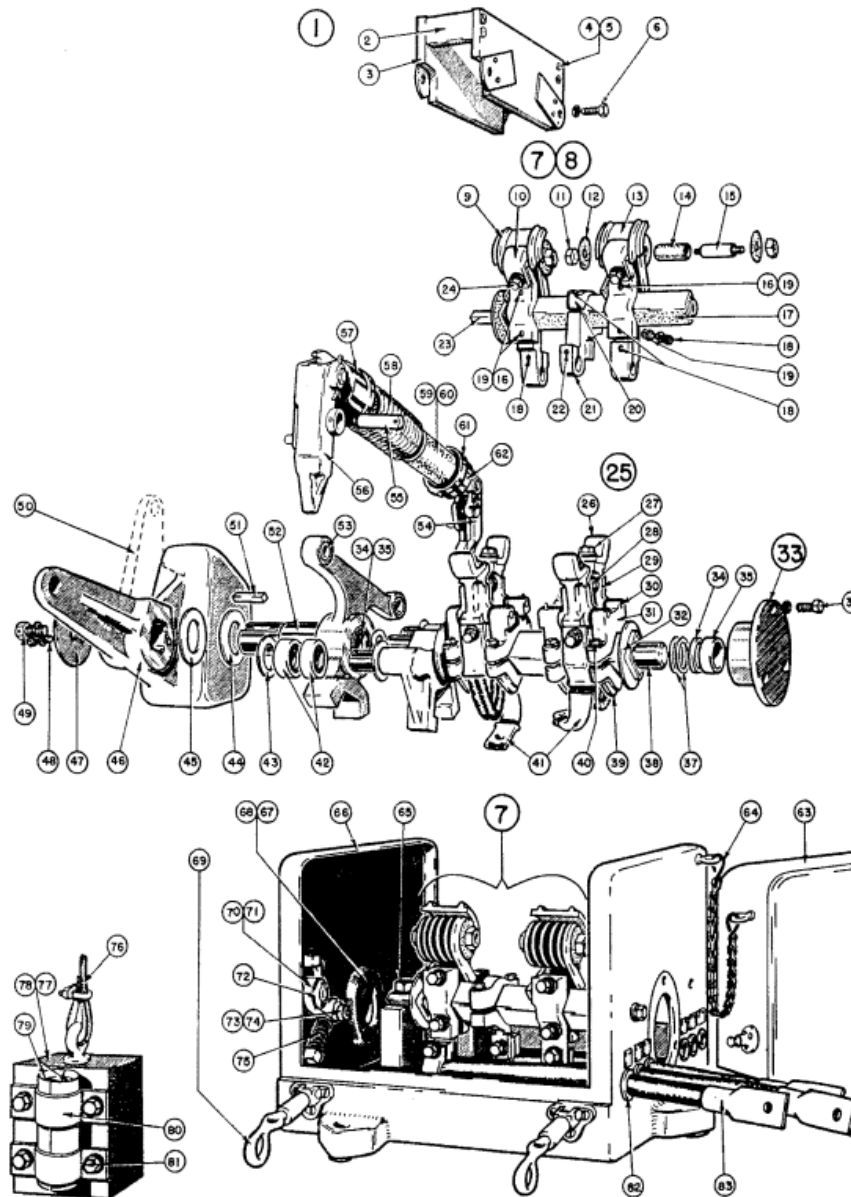


Replacement Parts for:

NO. 30 Youngstown Limit Switch

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	X-3108-A	Assembled Arc Barrier	KP8928001	65	X-2198	Special Cap Screw	KP7428056
2	X-3185	Spacer	KP8928002	67	FP-24C20	Oilite Bearing	KP7428057
3	X-3107-A	Arc Barrier Only	KP8928003	68	FP-51A11	Sealing Ring	KP7428058
4	FP-23A12	Binding Post	KP8928004	70	X-2120-A	Locking Arm	KP7228090
5	FP-23A36	Binding Screw	KP7428004	71	X-2119-A	Locking Arm left side	KP7228094
7	X-3102-A	Stationary Contact Shaft	KP8928006	72	X-2170	Washer for Locking Arm	KP7228095
8	X-3103-A	Stationary Contact Shaft	KP8928007	73	X-2175	Roller for Locking Arm	KP7228098
9	X-3105-A	Blowout Coil & Contact Bracket	KP8928008	74	X-2173	Washer/Locking Arm Roller	KP7228097
10	LT-4787	Contact Tip	KP8928009	75	X-2276	Spring	KP7228096
12	X-2184	Insulating Washer	KP7428010	83	X-3110-A	Lead	KP8928058
13	X-3106-A	Blowout Coil & Contact Bracket	KP8928011				
14	X-3183	Blowout Core Insulator	KP8928012				
15	X-3156	Blowout Core	KP8928013				
17	X-3228-A	Shaft Insulator	KP8728029				
19	X-3186	Insulating Bushing	KP8628037				
20	X-3141	Clamp	KP8628029				
21	X-3145	Terminal Bracket	KP8628039				
23	X-3150	Stationary Contact Shaft	KP8728028				
25	X-3104-A	Movable Contact Assembly	KP8928019				
26	LT-4787	Contact Tip	KP8928009				
28	X-3188	Contact Spring	KP8628049				
29	X-3139	Auxiliary Arm	KP8628048				
30	X-3180	Auxiliary Arm Pin	KP8628052				
31	X-3138	Auxiliary Arm Bracket	KP8628051				
32	X-3229-A	Shaft Insulator	KP8728072				
33	X-2220-A	Bearing Housing	KP7428031				
35	FP-24C21	Oilite Bearing	KP7428033				
37	X-2099	Spacers	KP7428034				
38	X-3116-A	Rocker Arm	KP8928029				
39	X-3140	Clamp	KP8628054				
41	X-3109-A	Connector	KP8628056				
42	X-2289-A	Roller	KP7428037				
44	X-2172	Thrust Washer	KP7428039				
45	X-2224	Thrust Washer	KP7428040				
46	X-3128-A	Weight Arm	KP8928035				
47	X-2200	Cap	KP7428042				
48	X-2222	Special Cap Screw	KP7228027				
49	X-2221	Special Cap Screw	KP7428044				
51	X-2194	Key	KP7328016				
52	X-2115-A	Operating Arm	KP7428046				
53	FP-24C19	Oilite Bearing	KP7428047				
54	X-2117-A	Trip Lever	KP7228017				
56	X-2118-A	Trip Lever	KP7228008				
57	X-2281-A	Spring Seat	KP7228010				
58	X-3187	Operating Spring	KP7228012				
59	X-2280-A	Spring Retainer	KP7228013				
60	X-2277	Tube	KP7428053				
61	X-2278	Tube Support	KP7428054				

Replacement Parts for:

NO. 10 Youngstown Limit Switch AC/DC Type BG Series A

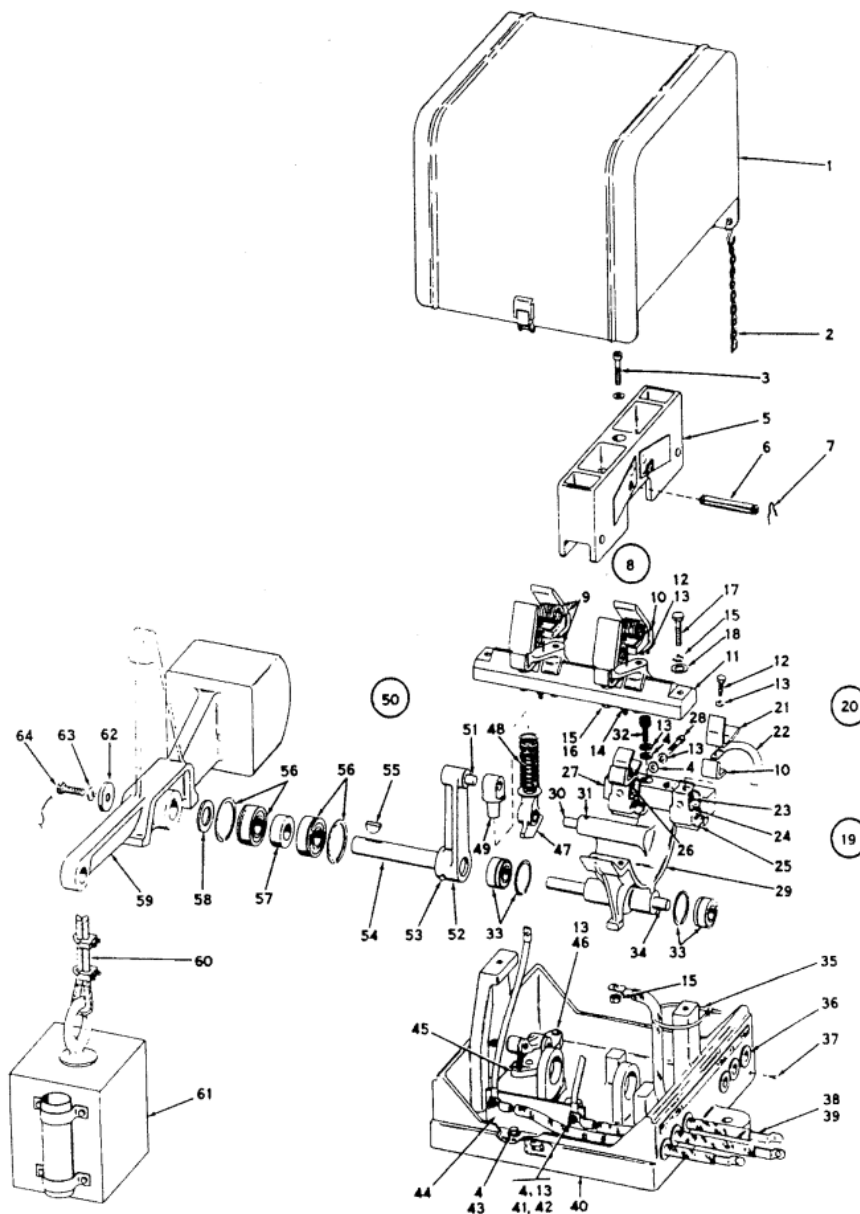

Replacement Parts for:


NO. 10 Youngstown Limit Switch AC/DC Type BG

Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51065-011-50	Cover	KP7128001	48	X-112	Spring	KP7028019
2	51065-033-50	Cover Chain	KP7128002	49	X-158	Spring Seat	KP7028020
3	21601-20440	Socket Head Cap Screw	KP7128003	50	51065-014-50	Assembled Operating Arm	KP7128050
4	23601-00200	Washer	KP7128004	51	50502-226-05	Pin	KP7128030
5	51065-015-50	Arc Chute	KP7128005	52	51065-037-01	Operating Arm	KP7128052
6	X-1218	Blowout Core	KP7128006	53	24202-06640	Taper Pin	KP7128053
7	RS-130	Special Cotter	KP7028015	54	51065-029-01	Operating Shaft	KP7128054
8	51065-012-50	Assembled Contact Beam	KP7128008	56	FP-24K13	Bearing	KP7128055
9	51065-020-50	Assembled Blowout Coil	KP7128009	57	50502-005-24	Spacer	KP7128056
10	ZCX-60	Contact Tip	KP7128010	58	X-1330	Washer	KP7128057
11	51065-017-01	Contact Beam	KP7128011	59	51065-030-50	Assembled Weight Arm	KP7128058
12	21401-20240	H.I Cap Screw	KP7128012	59	51065-031-50	Assembled Weight Arm	KP7128059
13	23701-00200	Pl. Lock Washer	KP7128013	60	X-2125-A	Wire Rope	KP7128060
14	23002-00220	H.I Nut	KP7128014	61	X-1126-A	Assembled Suspended Weight	KP7128061
15	23701-00220	Lock Washer	KP7128015	62	X-1316	Cap Washer	KP7128062
16	21401-22660	Cap Screw	KP7128016	63	23701-00240	Pl. Lock Washer	KP7128063
17	21401-22480	Cap Screw	KP7128017	64	X-1334	Special Cap Screw	KP7128064
18	23601-00220	Washer	KP7128018				
19	51065-013-50	Contact Arm	KP7128019				
20	51065-025-50	Assembled Arm Insulator	KP7128020				
21	51065-024-01	Arc Guard	KP7128021				
22	51065-023-50	Assembled Flexible Connector	KP7128022				
23	ZS-133	Auxiliary Contact Arm	KP7128023				
24	24209-16440	Rollpin	KP7128024				
25	ZS-1147	Auxiliary Arm Bracker	KP7128025				
26	X-174	Contact Spring	KP7028031				
27	51065-022-01	Moving Contact Block	KP7128027				
28	21401-20400	Cap Screw	KP7128028				
29	X-1326	Contact Arm	KP7128029				
30	50502-226-05	Pin	KP7128030				
31	24209-12320	Rollpin	KP7128031				
32	21601-20400	Cap Screw	KP7128032				
33	FP-24L10	Bearing	KP7128033				
34	50502-276-24	Contact Arm Shaft	KP7128034				
35	25901	Cable Ty-Rap	KP7128035				
36	X-1327	Grommet	KP7128036				
37	21008-06120	Drive Screw	KP7128037				
38	51065-028-50	Assembled Lead	KP7128038				
39	51065-028-51	Assembled Lead	KP7128039				
40	51065-010-50	Assembled Frame	KP7128040				
41	21401-20320	Cap Screw	KP7128041				
42	23002-00200	Nut	KP7128042				
43	21527-20240	Type C Pan Head Screw	KP7128043				
44	51065-027-01	Terminal Board	KP7128044				
45	51065-034-50	Assembled Roller Bracket	KP7128045				
46	21527-20320	Type C Pan Head Screw	KP7128046				
47	X-153-A	Assembled Cam	KP7028018				

Replacement Parts for:

NO. 20 AC/DC Youngstown Limit Switch Type CG Series B

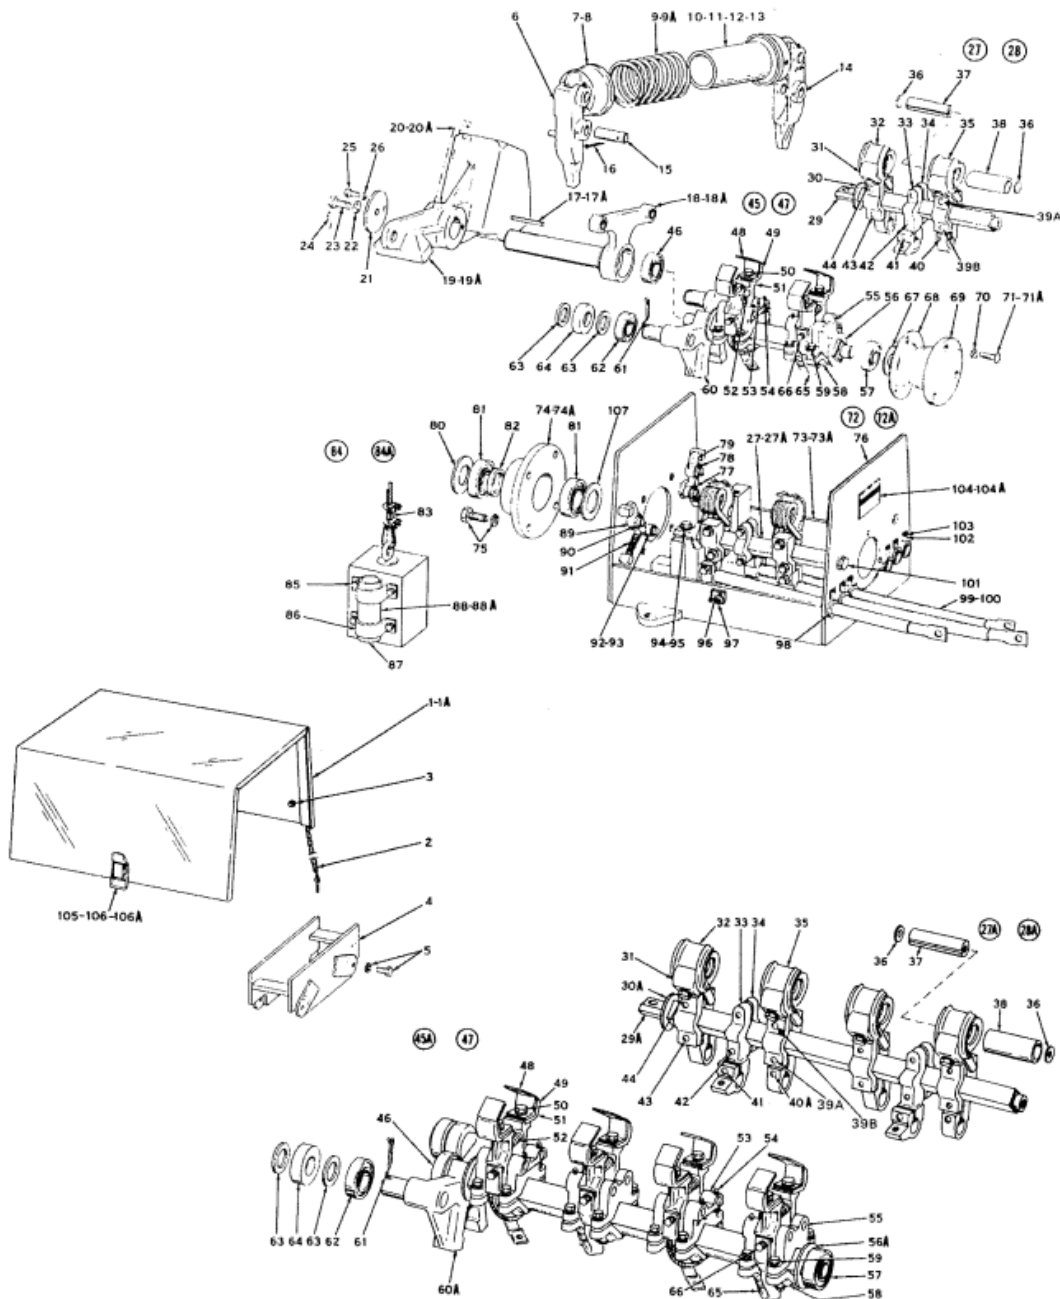


Replacement Parts for:

NO. 20 AC/DC Youngstown Limit Switch Type CG Series B

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51066-034-50	Hood	KP7328001	50	23601-00220	Washer	KP7128018
2	51066-045-50	HoodChain	KP7228002	51	X-2139	Auxiliary Arm	KP7228064
3	23001-00200	Nut	KP7228003	52	X-2188	Contact Spring	KP7228065
3	23701-00200	Pl. Lock Washer	KP7128013	53	X-2138	Auxiliary Arm Bracket	KP7228066
4	51066-010-50	Barrier	KP7228005	54	24201-06320	Cotter Pin	KP7228067
5	23701-00200	Pl. Lock Washer	KP7128013	55	X-2180	Auxiliary Arm Pin	KP7228068
5	21401-20200	H.I Cap Screw	KP7228006	56	X-2229-A	Shaft Insulator	KP7328060
6	X-2118-A	Trip Lever	KP7228008	57	29002-16300	Bearing	KP7228059
7	X-2281-A	Spring Seat	KP7228010	58	X-2140	Clamp	KP7228071
8	29005-40241	Bearing	KP7228011	59	23701-00220	Lock Washer	KP7128015
9	X-2187	Operating Spring	KP7328011	59	21401-22400	H.I Cap Screw	KP7228072
11	X-2280-A	Spring Retainer	KP7228013	60	X-2314-A	Rocker Arm Assembly	KP7328065
14	X-2117-A	Trip Lever	KP7228017	61	24201-08480	Cotter Pin	KP7228019
15	X-2179	Pin	KP7228018	62	29002-16300	Bearing	KP7228059
16	24201-08480	Cotter Pin	KP7228019	63	X-2332	Washer	KP7228076
17	X-2194	Key	KP7328016	64	29005-63640	Roller	KP7228077
18	X-2313-A	Arm	KP7328017	65	X-2109-A	Connector	KP7228078
19	X-2329-A	Weight Arm	KP7328018	66	23701-00240	Pl. Lock Washer	KP7128063
20	X-2331-A	Weight Arm	KP7328019	66	21401-24320	Cap Screw	KP7228079
21	X-2324	Cap	KP7228024	67	X-2334	Washer	KP7228080
22	23701-00280	Pl. Lock Washer	KP7228025	68	X-3354	Shim	KP7228081
23	X-2319	Cap Screw	KP7228026	69	X-2316	Bearing Housing	KP7228082
25	X-2222	Special Cap Screw	KP7228027	71	21401-24240	H.I Cap Screw	KP7328076
26	23701-00240	Pl. Lock Washer	KP7128063	71	21401-24280	Cap Screw	KP7228009
27	51066-029-50	Stationary Contact Shaft	KP7328025	72	51066-037-50	Frame Assembly	KP7328078
28	51066-029-51	Stationary Contact Shaft	KP7328026	73	51066-037-51	Frame	KP7328079
29	X-2150	Shaft	KP7328027	74	X-2315	Bearing Housing	KP7328080
30	X-2228-A	Shaft Insulator	KP7328028	75	23701-00280	Pl. Lock Washer	KP7228025
31	50005-010-01	Tip	KP7228033	75	21402-29400	Socket Head Cap	KP7228086
32	51066-030-51	Blowout Coil & Contact Bracket	KP7228034	77	24201-06240	Cotter Pin	KP7228088
33	X-2145	Terminal Bracket	KP7228035	78	24201-06320	Cotter Pin	KP7228067
34	X-2141	Clamp	KP7228036	79	X-2120-A	Locking Arm, right side	KP7228090
35	51066-030-52	Blowout Coil & Contact Bracket	KP7228037	80	X-2318	Washer	KP7228091
36	50512-001-21	Insulating Washer	KP7228038	81	29002-37320	Bearing	KP7228092
37	51066-014-01	Blowout Core	KP7228039	82	X-2317	Spacer	KP7228093
38	50512-052-05	Blowout Core Insulator	KP7228040	89	X-2119-A	Locking Arm, left side	KP7228094
39	21401-22680	CapScrew	KP7228043	90	X-2170	Washer, for Locking Arm	KP7228095
39	21401-22640	Cap	KP7228042	91	X-2276	Spring	KP7228096
39	23601-00220	Washer	KP7128018	92	X-2173	Washer, for Locking Arm Roller	KP7228097
39	23701-00220	Lock Washer	KP7128015	93	X-2175	Roller, for Locking Arm	KP7228098
39	21401-24560	Cap	KP7228041	94	21402-29400	Socket Head Cap	KP7228086
40	23601-00240	Washer	KP7228047	96	29499-00800	Hood Fastner Strike	KP7228100
40	21401-24400	H.I Cap Screw	KP7328043	97	21417-16120	Self-Tapping Screw	KP7228101
41	23601-00240	Washer	KP7228047	98	X-2163	Grommet	KP7228102
41	23701-00240	Pl. Lock Washer	KP7128063	99	51066-012-50	Lead	KP7228103
42	21401-22660	Cap Screw	KP7128016	103	21008-04060	Drive Screw	KP7228106
44	21401-24280	Cap Screw	KP7228009	105	29499-00500	Spring Catch	KP7228107
45	51066-28-50	Movable Contact Shaft Assy	KP7328048	106	24101-12080	Rivets	KP7328101
46	29002-16300	Bearing	KP7228059				
47	51066-030-50	Movable Contact Assembly	KP7228060				
48	51066-008-01	Arc Horn	KP7228061				
49	50005-010-01	Tip	KP7228033				
50	23701-00240	Pl. Lock Washer	KP7128063				

Replacement Parts for:

NO. 20 AC/DC Youngstown Limit Switch Type CCG Series B

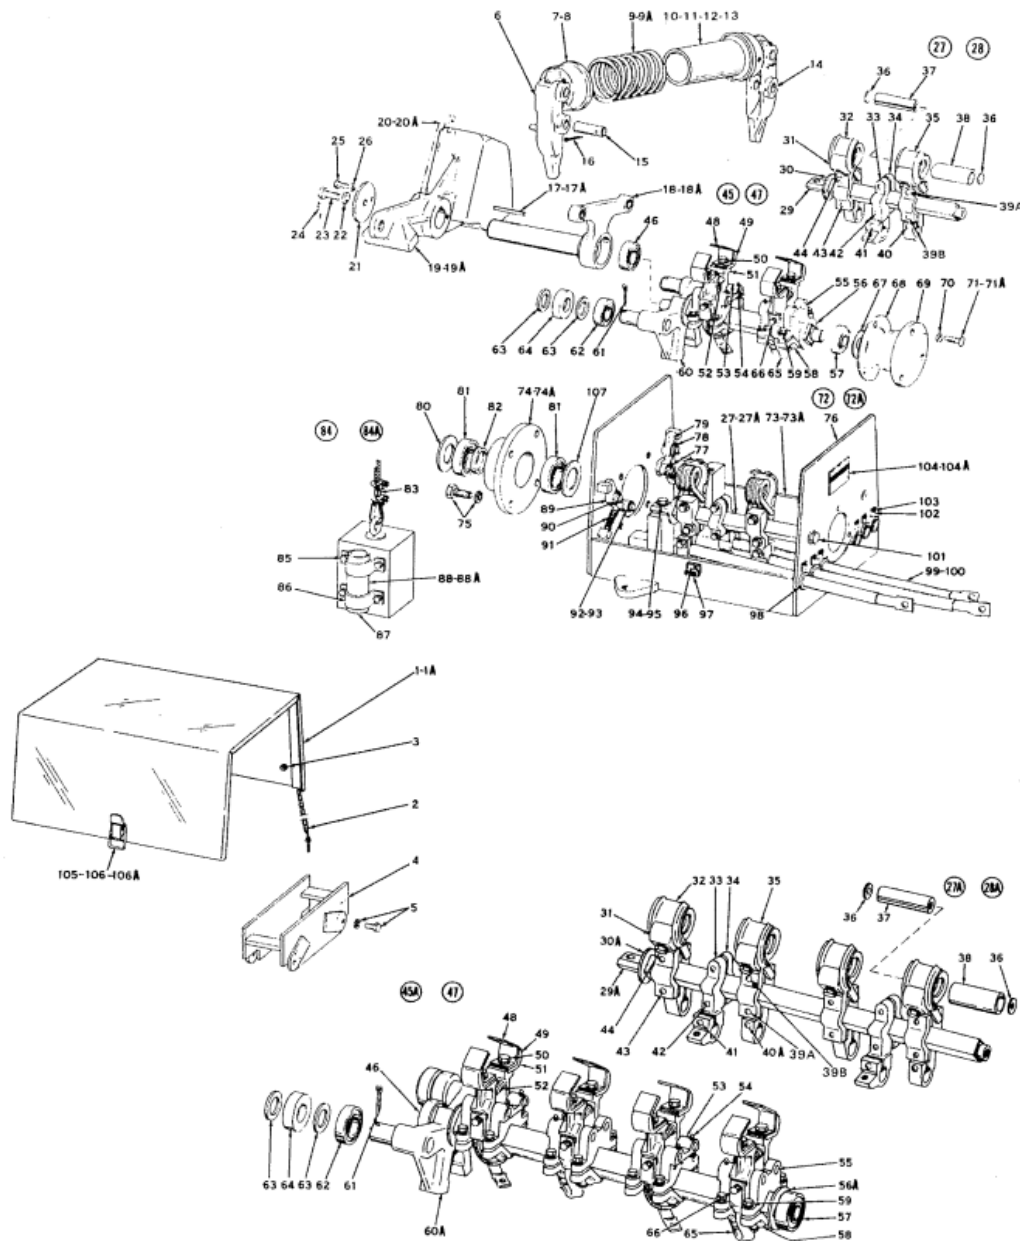

Replacement Parts for:
NO. 20 AC/DC Youngstown Limit Switch Type CCG Series B

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51066-034-51	Hood	KP7228001	44	23701-00240	Pl. Lock Washer	KP7128063
2	51066-045-50	Hood Chain	KP7228002	44	21401-24280	Cap Screw	KP7228009
3	23001-00200	Nut	KP7228003	45	51066-031-50	Movable Contact Shaft Assy	KP7228058
3	23701-00200	Pl. Lock Washer	KP7128013	46	29002-16300	Bearing	KP7228059
4	51066-010-50	Barrier	KP7228005	47	51066-030-50	Movable Contact Assembly	KP7228060
5	21401-20200	H.I Cap Screw	KP7228006	48	51066-008-01	Arc Horn	KP7228061
5	23701-00200	Pl. Lock Washer	KP7128013	49	21401-24280	Cap Screw	KP7228009
6	X-2118-A	Trip Lever	KP7228008	49	50005-010-01	Tip	KP7228033
7	21401-24280	Cap Screw	KP7228009	51	X-2139	Auxiliary Arm	KP7228064
7	X-2281-A	Spring Scat	KP7228010	52	X-2188	Contact Spring	KP7228065
8	29005-40241	Bearing	KP7228011	53	X-2138	Auxiliary Arm Bracket	KP7228066
9	X-3187	Operating Spring	KP7228012	54	24201-06320	Cotter Pin	KP7228067
10	X-2280-A	Spring Retainer	KP7228013	55	X-2180	Auxiliary Arm Pin	KP7228068
11	X-2280-A	Spring Retainer	KP7228013	56	A-2258-A	Shaft Insultaor	KP7228069
12	X-2280-A	Spring Retainer	KP7228013	57	29002-16300	Bearing	KP7228059
13	X-2280-A	Spring Retainer	KP7228013	58	X-2140	Clamp	KP7228071
14	X-2117-A	Trip Lever	KP7228017	59	21401-22400	H.I Cap Screw	KP7228072
15	X-2179	Pin	KP7228018	60	X-2342-A	Rocker Arm Assembly	KP7228073
16	24201-08480	Cotter Pin	KP7228019	61	24201-08480	Cotter Pin	KP7228019
17	X-2261	Key	KP7228020	62	29002-16300	Bearing	KP7228059
18	X-2341-A	Operating Arm Complete	KP7228021	63	X-2332	Washer	KP7228076
19	X-2349-A	Weight Arm	KP7228022	64	29005-63640	Roller	KP7228077
20	X-2351-A	Weight Arm	KP7228023	65	X-2109-A	Connector	KP7228078
21	X-2324	Cap	KP7228024	66	21401-24320	Cap Screw	KP7228079
22	23701-00280	Pl. Lock Washer	KP7228025	67	X-2334	Washer	KP7228080
23	X-2319	Cap Screw	KP7228026	68	X-3354	Shim	KP7228081
25	X-2222	Special Cap Screw	KP7228027	69	X-2316	Bearing Housing	KP7228082
26	23701-00240	Pl. Lock Washer	KP7128063	72	51066-041-50	Frame Assembly	KP7228083
27	51066-032-50	Stat Contact Shaft Assy, R.H	KP7228029	73	51066-041-51	Frame	KP7228084
28	51066-032-51	Stat Contact Shaft Assy, L.H	KP7228030	74	X-2343	Bearing Housing	KP7228085
29	X-2243	Shaft	KP7228031	75	21402-29400	Socket Head Cap	KP7228086
30	X-2257-A	Shaft Insulator	KP7228032	75	23701-00280	Pl. Lock Washer	KP7228025
31	50005-010-01	Tip	KP7228033	77	24201-06240	Cotter Pin	KP7228088
32	51066-030-51	Blowout Coil & Contact Bracket	KP7228034	78	24201-06320	Cotter Pin	KP7228067
33	X-2145	Terminal Bracket	KP7228035	79	X-2120-A	Locking Arm, right side	KP7228090
34	X-2141	Clamp	KP7228036	80	X-2318	Washer	KP7228091
35	51066-030-52	Blowout Coil & Contact Bracket	KP7228037	81	29002-37320	Bearing	KP7228092
36	50512-001-21	Insulating Washer	KP7228038	82	X-2317	Spacer	KP7228093
37	51066-014-01	Blowout Core	KP7228039	89	X-2119-A	Locking Arm, left side	KP7228094
38	50512-052-05	Blowout Core Insulator	KP7228040	90	X-2170	Washer, for Locking Arm	KP7228095
39	21401-24560	Cap	KP7228041	91	X-2276	Spring	KP7228096
39	21401-22640	Cap	KP7228042	92	X-2173	Washer, for Locking Arm Roller	KP7228097
39	21401-22680	Cap Screw	KP7228043	93	X-2175	Roller, for Locking Arm	KP7228098
39	23601-00220	Washer	KP7128018	94	21402-29400	Socket Head Cap	KP7228086
39	23701-00220	Lock Washer	KP7128015	96	29499-00800	Hood Fastner Strike	KP7228100
40	23701-00240	Pl. Lock Washer	KP7128063	97	21417-16120	Self-Tapping Screw	KP7228101
40	23601-00240	Washer	KP7228047	98	X-2163	Grommet	KP7228102
41	21401-22640	Cap	KP7228042	99	51066-012-50	Lead	KP7228103
41	23601-00240	Washer	KP7228047	100	51066-012-51	Cable	KP7228104
41	23701-00240	Pl. Lock Washer	KP7128063	101	21401-24320	Cap Screw	KP7228079
42	23601-00220	Washer	KP7128018	103	21008-04060	Drive Screw	KP7228106
42	23701-00220	Lock Washer	KP7128015	105	29499-00500	Spring Catch	KP7228107
42	21401-22660	Cap Screw	KP7128016	106	24101-12100	Rivet	KP7228108
43	23701-00220	Lock Washer	KP7128015				
43	23601-00220	Washer	KP7128018				

NO. 30 Youngstown Limit Switch Type DG Series A



Replacement Parts for:

NO. 30 Youngstown Limit Switch Type DG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51067-028-50	Hood	KP8728001	42	23701-00240	Pl. Lock Washer	KP7128063
2	X-2127-A	Hood Chain	KP8628002	42	23601-00240	Washer	KP7228047
3	23001-00200	Nut	KP7228003	43	X-3145	Terminal Bracket	KP8628039
4	51067-010-50	Arc Barrier	KP8628005	44	23701-00240	Pl. Lock Washer	KP7128063
5	21401-20200	H.I Cap Screw	KP7228006	44	21401-24680	Cap Screw	KP8628040
6	X-2118-A	Trip Lever	KP7228008	44	23601-00240	Washer	KP7228047
7	X-2281-A	Spring Seat	KP7228010	45	51067-030-50	Moveable Contact Shaft Assy	KP8728056
8	FP-24C19	Oilite Bearing	KP7428047	46	FP-24K11	Bearing	KP8628042
9	X-3187	Operating Spring	KP7228012	47	X-2332	Washer	KP7228076
10	X-2280-A	Spring Retainer	KP7228013	48	FP-24C42	Roller	KP8628044
11	X-2280-A	Spring Retainer	KP7228013	49	FP-24K11	Bearing	KP8628042
12	X-2280-A	Spring Retainer	KP7228013	51	X-3313-A	Rocker Arm Assembly	KP8728061
13	X-2280-A	Spring Retainer	KP7228013	52	51067-032-50	Movable Contact Assembly	KP8628046
14	X-2117-A	Trip Lever	KP7228017	53	51067-008-01	Arc Horn	KP8628047
15	X-2179	Pin	KP7228018	54	50005-017-01	Contact	KP8628027
16	24201-08480	Cotter Pin	KP7228019	55	23601-00280	Washer	KP8628035
17	X-2194	Key	KP7328016	55	23701-00280	Pl. Lock Washer	KP7228025
18	X-2313-A	Arm	KP7328017	56	X-3139	Auxiliary Arm	KP8628048
19	X-3316-A	Weight Arm	KP8728019	57	X-3188	Contact Spring	KP8628049
20	X-3318-A	Weight Arm	KP8728020	58	24201-08401	Cotter Pin	KP8628050
21	X-2324	Cap	KP7228024	59	X-3138	Auxiliary Arm Bracket	KP8628051
22	23701-00280	Pl. Lock Washer	KP7228025	60	X-3180	Auxiliary Arm Pin	KP8628052
23	X-2319	Cap Screw	KP7228026	61	X-3229-A	Shaft Insulator	KP8728072
25	X-2222	Special Cap Screw	KP7228027	62	FP-24K11	Bearing	KP8628042
26	23701-00240	Pl. Lock Washer	KP7128063	63	X-3140	Clamp	KP8628054
27	51067-029-50	Stat. Contact Shaft Assy R.H	KP8728026	64	23701-00240	Pl. Lock Washer	KP7128063
28	51067-029-51	Stat. Contact Shaft Assy L.H	KP8728027	64	21401-24480	H.I Cap Screw	KP8628055
29	X-3150	Stationary Contact Shaft	KP8728028	65	X-3109-A	Connecror	KP8628056
30	X-3228-A	Shaft Insulator	KP8728029	66	21401-24400	H.I Cap Screw	KP7328043
31	50005-017-01	Contact	KP8628027	66	23701-00240	Pl. Lock Washer	KP7128063
32	X-3208-A	Blowout Coil & Contact Bracket	KP8628028	67	23701-00240	Pl. Lock Washer	KP7128063
33	X-3141	Clamp	KP8628029	67	21401-24320	Cap Screw	KP7228079
34	23601-00240	Washer	KP7228047	70	X-2316	Bearing Housing	KP7228082
34	21401-24640	Cap Screw	KP8628031	71	23701-00240	Pl. Lock Washer	KP7128063
34	23701-00240	Pl. Lock Washer	KP7128063	71	21401-24320	Cap Screw	KP7228079
35	X-3209-A	Blowout Coil & Contact Bracket	KP8628032	72	51067-015-50	Frame Assembly	KP8728085
36	50512-052-06	Blowout Core Insulator	KP8628033	73	51067-015-51	Frame	KP8728086
37	51067-014-01	Blowout Core	KP8628034	74	X-2343	Bearing Housing	KP7228085
38	21401-28400	Cap Screw	KP8628036	75	21402-29400	Socket Head Cap	KP7228086
38	23601-00280	Washer	KP8628035	75	23701-00280	Pl. Lock Washer	KP7228025
39	21401-24640	Cap Screw	KP8628031	76	24201-06320	Cotter Pin	KP7228067
39	23701-00240	Pl. Lock Washer	KP7128063	77	X-2120-A	Locking Arm, right side	KP7228090
39	23601-00240	Washer	KP7228047	78	24201-06240	Cotter Pin	KP7228088
40	24201-08480	Cotter Pin	KP7228019	79	X-2318	Washer	KP7228091
40	X-3186	Insulating Bushing	KP8628037	80	FP-24K10	Bearing	KP8728094
41	23701-00240	Pl. Lock Washer	KP7128063	81	X-2317	Spacer	KP7228093
41	23601-00240	Washer	KP7228047	82	X-2125-A	Wire Rope	KP7128060
41	21401-24640	Cap Screw	KP8628031	83	X-3126-A	Suspended Weight Assembly	KP8728097
42	21401-24660	H. St. Cap	KP8628038	84	X-2159	Clamp	KP8628074

Replacement Parts for:

NO. 30 Youngstown Limit Switch Type DG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
85	21401-24320	Cap Screw	KP7228079				
85	23701-00240	Pl. Lock Washer	KP7128063				
86	X-2167	Rope Guide	KP8628075				
87	X-3129-A	Weight	KP8728102				
88	X-2119-A	Locking Arm, left side	KP7228094				
89	X-2170	Washer, for Locking Arm	KP7228095				
90	X-2276	Spring	KP7228096				
91	X-2173	Washer, for Locking Arm Roller	KP7228097				
92	X-2175	Roller, for Locking Arm	KP7228098				
93	23701-00280	Pl. Lock Washer	KP7228025				
93	21402-29400	Socket Head Cap	KP7228086				
94	29499-00800	Hood Fastner Strike	KP7228100				
95	21417-16200	Self-Tapping Screw	KP8628084				
96	51067-012-50	Lead	KP8628085				
98	23701-00240	Pl. Lock Washer	KP7128063				
98	21401-24320	Cap Screw	KP7228079				
99	X-3164	Grommet	KP8628087				
101	21515-08060	Drive Screw	KP8628089				
103	29499-00500	Spring Catch	KP7228107				
104	24101-12100	Rivet	KP7228108				
105	X-2337	Shim	KP8728119				

NO. 30 Youngstown Limit Switch Type DDG Series A




Replacement Parts for:

NO. 30 Youngstown Limit Switch Type DDG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51067-034-50	Hood	KP8628001	58	24201-08401	Cotter Pin	KP8628050
2	X-2127-A	Hood Chain	KP8628002	59	X-3138	Auxiliary Arm Bracket	KP8628051
3	23701-00200	Pl. Lk. Washer	KP7128013	60	X-3180	Auxiliary Arm Pin	KP8628052
3	23001-00200	Nut	KP7228003	61	X-3258-A	Shaft Insulator	KP8628053
4	51067-010-50	Arc Barrier	KP8628005	63	X-3140	Clamp	KP8628054
5	21401-20200	H.I Cap Screw	KP7228006	64	21401-24480	H.I Cap Screw	KP8628055
6	X-2118-A	Trip Lever	KP7228008	65	X-3109-A	Connector	KP8628056
7	X-2281-A	Spring Seat	KP7228010	66	21401-24400	H.I Cap Screw	KP7328043
8	FP-24C19	Oilite Bearing	KP7428047	67	21401-24320	Cap Screw	KP7228079
11	X-2280-A	Spring Retainer	KP7228013	68	X-2334	Washer	KP7228080
14	X-2117-A	Trip Lever	KP7228017	69	X-3354	Shim	KP7228081
15	X-2179	Pin	KP7228018	70	X-2316	Bearing Housing	KP7228082
16	24201-08480	Cotter Pin	KP7228019	72	51067-023-50	Frame Assembly	KP8628062
17	X-2261	Key	KP7228020	73	51067-023-51	Frame	KP8628063
18	X-3328-A	Operating Arm	KP8628015	74	X-3330	Bearing Housing	KP8628064
19	X-3336-A	Weight Arm	KP8628016	75	21402-29480	Cap Screw	KP8628065
20	X-3338-A	Weight Arm	KP8628017	76	24201-06320	Cotter Pin	KP7228067
21	X-3332	Cap Washer	KP8628018	77	X-2120-A	Locking Arm	KP7228090
22	23701-00280	Pl. Lock Washer	KP7228025	78	24201-06240	Cotter Pin	KP7228088
23	X-2319	Cap Screw	KP7228026	79	X-3339	Washer	KP8628069
25	X-2222	Special Cap Screw	KP7228027	80	FP-24K12	Bearing	KP8628070
26	23701-00240	Pl. Lk. Washer	KP7128063	81	X-3340	Spacer	KP8628071
27	51067-036-50	Stationary Contact Shaft Assy	KP8628023	82	X-2125-A	Wire Rope	KP7128060
28	51067-036-51	Stationary Contact Shaft Assy	KP8628024	83	X-3254-A	Suspended Weight Assembly	KP8628073
29	X-3243	Shaft	KP8628025	84	X-2159	Clamp	KP8628074
30	X-3257-A	Shaft Insulator	KP8628026	86	X-2167	Rope Guide	KP8628075
31	50005-017-01	Contact	KP8628027	87	X-3253-A	Weight	KP8628076
32	X-3208-A	Blowout Coil & Contact Bracket	KP8628028	88	X-2119-A	Locking Arm, left side	KP7228094
33	X-3141	Clamp	KP8628029	89	X-2170	Washer, for Locking Arm	KP7228095
34	23601-00240	Washer	KP7228047	90	X-2276	Spring	KP7228096
34	21401-24640	Cap Screw	KP8628031	91	X-2173	Washer, for Locking Arm Roller	KP7228097
35	X-3209-A	Blowout Coil & Contact Bracket	KP8628032	92	X-2175	Roller, for Locking Arm	KP7228098
36	50512-052-06	Blowout Core Insulator	KP8628033	93	21402-29400	Socket Head Cap	KP7228086
37	51067-014-01	Blowout Core	KP8628034	94	29499-00800	Hood Fastener Strike	KP7228100
38	23601-00280	Washer	KP8628035	95	21417-16200	Self-Tapping Screw	KP8628084
38	21401-28400	Cap Screw	KP8628036	96	51067-012-50	Lead	KP8628085
40	X-3186	Insulating Bushing	KP8628037	97	51067-012-51	Cable	KP8628086
42	21401-24660	H. St. Cap	KP8628038	99	X-3164	Grommet	KP8628087
43	X-3145	Terminal Bracket	KP8628039	100	203	Identification Plate	KP8628088
44	21401-24680	Cap Screw	KP8628040	101	21515-08060	Drive Screw	KP8628089
45	51067-035-50	Movable Contact Shaft Assy	KP8628041	103	29499-00500	Spring Catch	KP7228107
46	FP-24K11	Bearing	KP8628042	104	24101-12100	Rivet	KP7228108
47	X-2332	Washer	KP7228076	105	50502-005-32	Shim	KP8628092
48	FP-24C42	Roller	KP8628044				
51	X-3329-A	Rocker Arm Assembly	KP8628045				
52	51067-032-50	Movable Contact Assembly	KP8628046				
53	51067-008-01	Arc Horn	KP8628047				
56	X-3139	Auxiliary Arm	KP8628048				
57	X-3188	Contact Spring	KP8628049				

Replacement Parts for:

NO. 40 Youngstown Limit Stop Single Type EG Series A

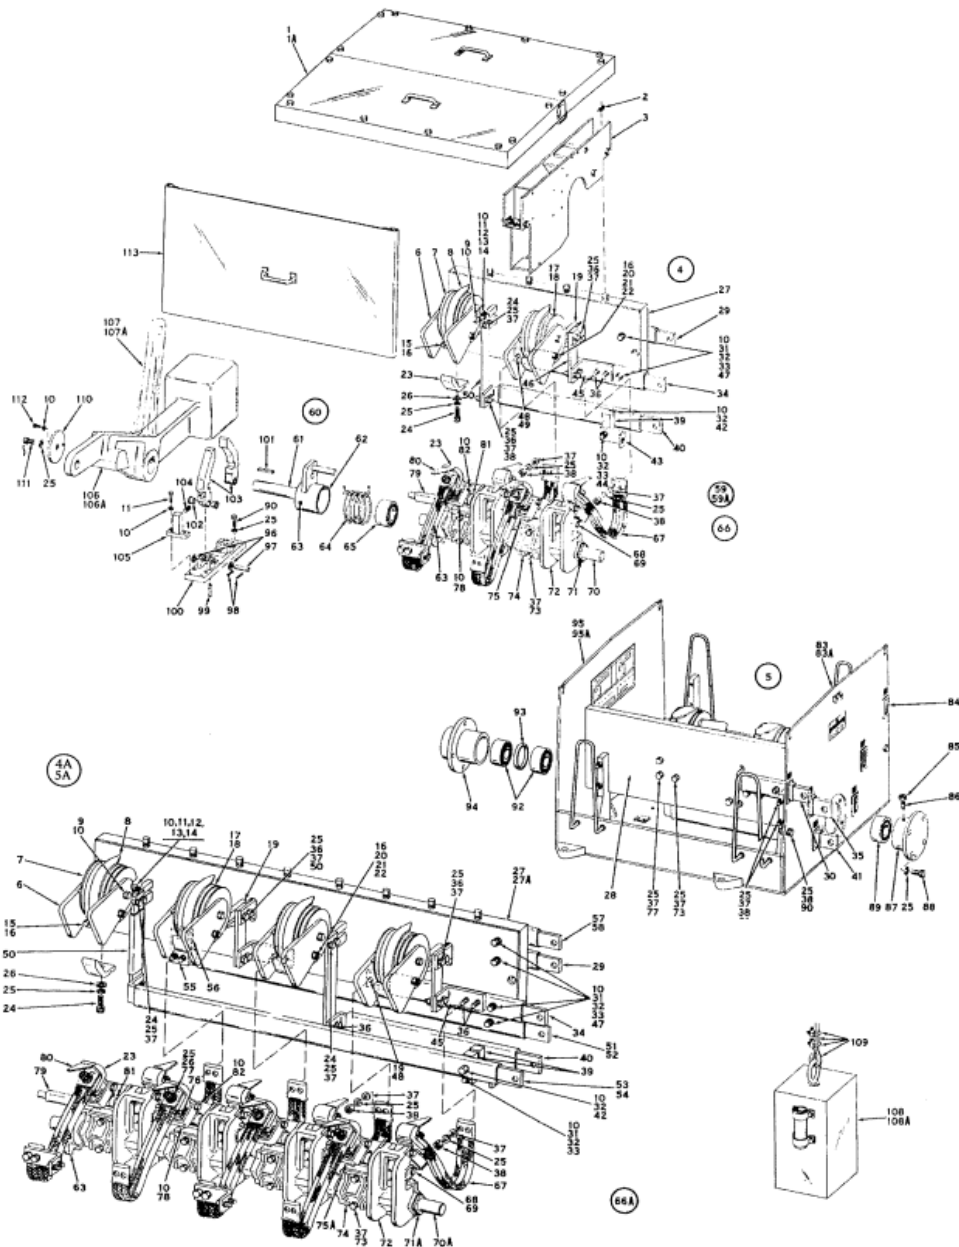

Replacement Parts for:

NO. 40 Youngstown Limit Stop Single Type EG

Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51068-007-50	Top Cover	KP9128001	46	51068-044-01	Bus Bar	KP9028046
2	RS-130	Special Cotter	KP7028015	47	23003-00280	Jam Nut	KP9028047
3	51068-046-50	Arc Chute	KP9028003	48	21401-28800	Cap Screw	KP9028048
4	51068-032-51	Stationary Contact Assembly	KP9128004	49	23002-00320	Nut	KP9028040
5	51068-032-50	Stationary Contact Assembly	KP9128005	50	51068-041-01	Bus Bar	KP9028050
6	51068-039-50	Blowout Ear	KP9028006	59	51068-015-51	Contact Shaft Assembly	KP9128052
7	50512-001-27	Blowout Insulating Washer	KP9028007	60	51068-027-50	Trip Assembly	KP9028060
8	51068-038-50	Blowout Guard	KP9028008	61	51068-028-01	Shaft	KP9028061
9	21401-24280	Cap Screw	KP7228009	62	51068-029-01	Operating Arm	KP9028062
10	23701-00240	Pl. Lk. Washer	KP7128063	64	51068-030-01	Torsion Spring	KP9028064
11	21401-24400	H.I Cap Screw	KP7328043	65	FP-24H24	Bearing	KP9028065
12	23601-00240	Washer	KP7228047	66	51068-016-51	Contact Shaft Assembly	KP9128058
13	50512-051-01	Spacer	KP9028013	67	51068-058-50	Connector Assembly	KP9028067
14	50512-001-25	Insulating Washer	KP9028014	68	L-6056	Auxiliary Arm Pin	KP9028068
15	21601-20240	Cap Screw	KP9028015	69	LT-3394	Set Screw	KP9028069
16	23701-00200	Pl. Lk. Washer	KP7128013	70	51068-017-01	Shaft	KP9128062
17	50502-776-11	Blowout Core	KP9028017	71	50512-251-24	Shaft Insulator	KP9128063
18	50512-052-16	Insulator for Blowout Core	KP9028018	72	51068-018-50	Contact Arm Assembly	KP9028072
19	51068-036-50	Contact Bracket Assembly	KP9028019	73	21401-28680	Cap Screw	KP9028073
20	50502-103-12	Stud	KP9028020	74	51068-019-01	ContactArm Clamp	KP9028074
21	51068-040-01	Blowout Ear Spacer	KP9028021	75	51031-035-50	Contact Spring Bracket	KP9128067
22	23002-00220	H.I Nut	KP7128014	76	50502-601-34	Contact Spring	KP9028075
23	50005-015-01	ContactTip	KP9028023	77	21401-28660	Cap Screw	KP9028076
24	21601-28480	Cap Screw	KP9028024	78	23003-00240	Jam Nut	KP9028077
25	23701-00280	Pl. Lock Washer	KP7228025	79	51068-026-50	Rocker Arm Assembly	KP9028078
26	23601-00282	Washer	KP9028026	80	51068-025-01	Arc Horn	KP9028079
27	51068-034-50	Base, R.H	KP9128027	81	51068-021-01	Auxiliary Arm	KP9028080
28	51068-033-50	Base, L.H	KP9128028	82	21401-24240	H.I Cap Screw	KP7328076
29	51068-042-50	Bus Bar, R.H	KP9028029	83	51068-010-50	Rear Panel Assembly	KP9128075
30	51068-043-50	Bus Bar, L.H	KP9028030	84	51202-062-01	Gasket	KP9028083
31	21401-24740	Cap Screw	KP9028031	85	23003-00200	Hex Jam Nut	KP9028084
32	23601-00240	Washer	KP7228047	86	22003-20241	Set Screw	KP9028085
33	23002-00240	H.I Nut	KP9028033	87	51068-012-01	Bearing Housing	KP9028086
34	51068-022-50	Bus Bar, R.H	KP9028034	88	21402-29480	Cap Screw	KP8628065
35	51068-022-51	Bus Bar, L.H	KP9028035	89	FP-24H24	Bearing	KP9028065
36	21401-28560	Cap Screw	KP9028036	90	21401-28400	Cap Screw	KP8628036
37	23602-13209	Washer	KP9028095	91	21401-28760	Cap Screw	KP9028090
38	23601-00280	Washer	KP8628035	92	FP-24H25	Bearing	KP9028091
39	23002-00280	Nut	KP9028038	92	FP-24H25	Bearing	KP9028091
40	51068-014-50	Bus Bar Support	KP9028039	93	50502-053-21	Bearing Spacer	KP9028092
41	51068-041-50	Bus Bar, R.H	KP9028049	94	51068-011-01	Front Bearing Housing	KP9028093
42	51068-041-51	Bus Bar, L.H	KP9028041	95	51068-005-50	Frame Assembly	KP9128088
43	21401-24480	H.I Cap Screw	KP8628055	97	50502-276-31	Pivot Pin	KP9028096
44	51068-009-01	Bus Support	KP9028043	98	24201-06320	Cotter Pin	KP7228067
45	21401-24660	H. St. Cap	KP8628038	99	24209-32480	Roll Pin	KP9028098
	51068-022-03	Bus Bar	KP9028045	100	51068-013-50	Base Assembly	KP9028099


Replacement Parts for:

NO. 40 Youngstown Limit Stop Single Type EG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
101	50502-407-22	Key	KP9028100				
102	FP-24B35	Oilite Bearing	KP9028101				
103	51068-031-01	Latch Arm	KP9028102				
104	50502-601-37	Latch Arm Spring	KP9028103				
105	51068-045-01	Stop Plate	KP9028104				
106	51068-053-50	Weight Arm Assembly	KP9128098				
107	51068-059-50	Weight Arm Assembly	KP9128099				
108	51068-055-50	Suspended Weight Assembly	KP9128100				
109	51068-056-50	Wire Rope & Fittings	KP9028108				
110	X-3332	Cap Washer	KP8628018				
111	X-2319	Cap Screw	KP7228026				
112	X-2222	Special Cap Screw	KP7228027				
113	51068-051	Side Cover Assembly	KP9028112				

Replacement Parts for:

NO. 40 Youngstown Limit Stop Duplex Type EEG Series A

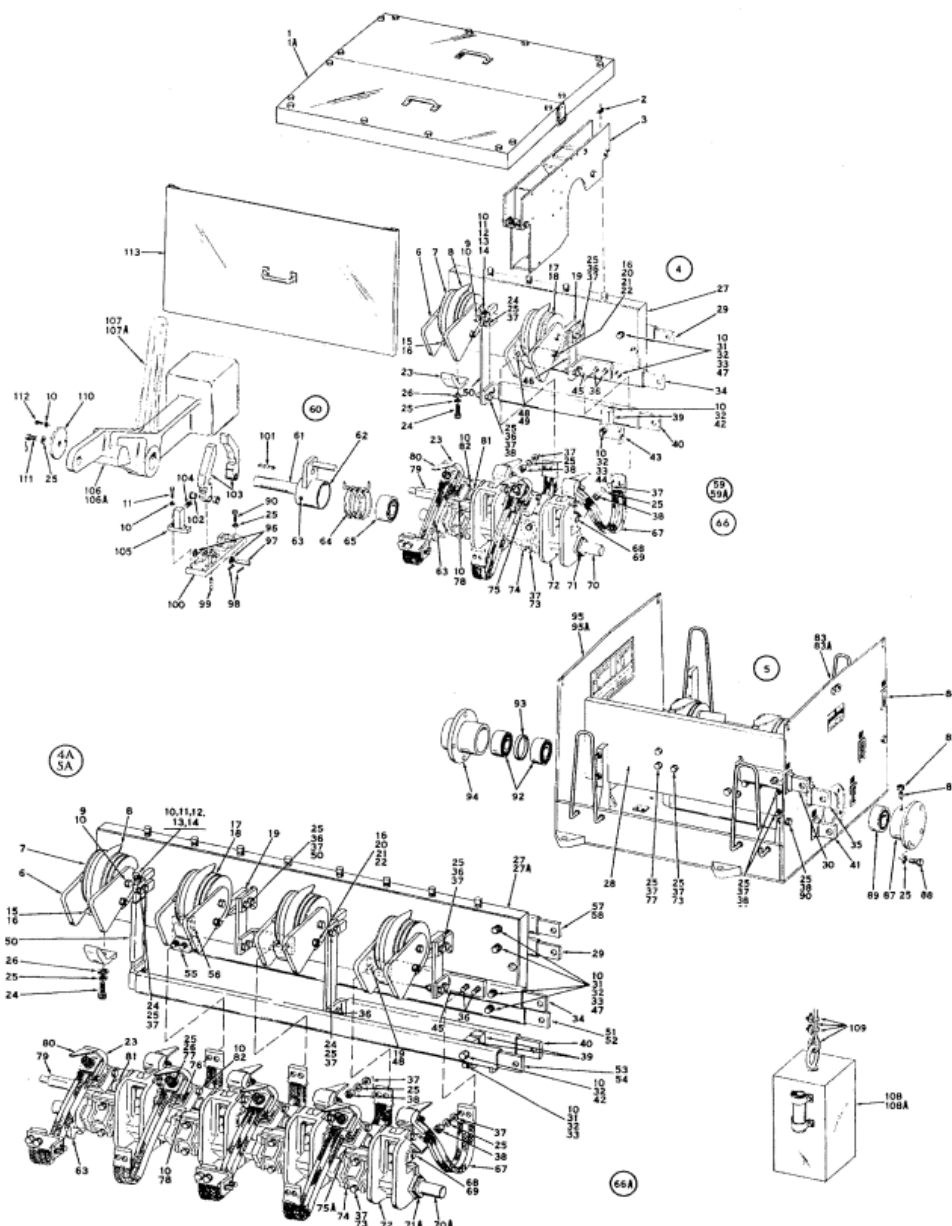

Replacement Parts for:

NO. 40 Youngstown Limit Stop Duplex Type EEG Series A


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1A	51068-084-50	Top Cover	KP9028001	50	51068-041-01	Bus Bar	KP9028050
2	RS-130	Special Coner	KP7028015	51	51068-090-50	Bus Bar, R.H	KP9028051
3	51068-046-50	Arc Chute	KP9028003	52	51068-090-51	Bus Bar, L.H	KP9028052
4A	51068-087-51	Stationary Contact Assembly	KP9028004	53	51068-041-52	Bus Bar, R.H	KP9028053
5A	51068-087-50	Stationary Contact Assembly	KP9028005	54	51068-041-53	Bus Bar, L.H	KP9028054
6	51068-039-50	Blowout Ear	KP9028006	55	51068-066-01	Bus Bar	KP9028055
7	50512-001-27	Blowout Insulating Washer	KP9028007	56	50502-408-07	Spacer	KP9028056
8	51068-038-50	Blowout Guard	KP9028008	57	51068-091-50	Bus Bar, R.H	KP9028057
9	21401-24280	Cap Screw	KP7228009	58	51068-092-50	Bus Bar, L.H	KP9028058
10	23701-00240	Pl. Lk. Washer	KP7128063	59A	51068-085-51	Contact Shaft Assembly	KP9028059
11	21401-24400	H.I Cap Screw	KP7328043	60	51068-027-50	Trip Assembly	KP9028060
12	23601-00240	Washer	KP7228047	61	51068-028-01	Shaft	KP9028061
13	50512-051-01	Spacer	KP9028013	62	51068-029-01	Operating Arm	KP9028062
14	50512-001-25	Insulating Washer	KP9028014	63	24209-32780	Pin	KP9028063
15	21601-20240	Cap Screw	KP9028015	64	51068-030-01	Torsion Spring	KP9028064
16	23701-00200	Pl. Lk. Washer	KP7128013	65	FP-24H24	Bearing	KP9028065
17	50502-776-11	Blowout Core	KP9028017	66A	51068-086-51	Contact Shaft Assembly	KP9028066
18	50512-052-16	Insulator for Blowout Core	KP9028018	67	51068-058-50	Connector Assembly	KP9028067
19	51068-036-50	Contact Bracket Assembly	KP9028019	68	L-6056	Auxiliary Arm Pin	KP9028068
20	50502-103-12	Stud	KP9028020	69	LT-3394	Set Screw	KP9028069
21	51068-040-01	Blowout Ear Spacer	KP9028021	70A	51068-017-02	Shaft	KP9028070
22	23002-00200	Nut	KP7128042	71A	50512-251-25	Shaft Insulator	KP9028071
23	50005-015-01	ContactTip	KP9028023	72	51068-018-50	Contact Arm Assembly	KP9028072
24	21601-28480	Cap Screw	KP9028024	73	21401-28680	Cap Screw	KP9028073
25	23701-00280	Pl. Lock Washer	KP7228025	74	51068-019-01	Contact Arm Clamp	KP9028074
26	23601-00282	Washer	KP9028026	76	50502-601-34	Contact Spring	KP9028075
27A	51068-089-50	Base, R.H	KP9028027	77	21401-28660	Cap Screw	KP9028076
28A	51068-088-50	Base, L.H	KP9028028	78	23003-00240	Jam Nut	KP9028077
29	51068-042-50	Bus Bar, R.H	KP9028029	79	51068-026-50	Rocker Arm Assembly	KP9028078
30	51068-043-50	Bus Bar, L.H	KP9028030	80	51068-025-01	Arc Horn	KP9028079
31	21401-24740	Cap Screw	KP9028031	81	51068-021-01	Auxiliary Arm	KP9028080
32	23601-00240	Washer	KP7228047	82	21401-24240	H.I Cap Screw	KP7328076
33	23002-00240	H.I Nut	KP9028033	83A	51068-010-51	Rear Panel Assembly	KP9028082
34	51068-022-50	Bus Bar, R.H	KP9028034	84	51202-062-01	Gasket	KP9028083
35	51068-022-51	Bus Bar, L.H	KP9028035	85	23003-00200	Hex Jam Nut	KP9028084
36	21401-28560	Cap Screw	KP9028036	86	22003-20241	Set Screw	KP9028085
37	23601-00280	Washer	KP8628035	87	51068-012-01	Bearing Housing	KP9028086
38	23002-00280	Nut	KP9028038	88	21402-29480	Cap Screw	KP8628065
39	51068-014-50	Bus Bar Support	KP9028039	89	FP-24H24	Bearing	KP9028065
40	23002-00320	Nut	KP9028040	90	21401-28400	Cap Screw	KP8628036
41	51068-041-51	Bus Bar, L.H	KP9028041	91	21401-28760	Cap Screw	KP9028090
42	21401-24480	H.I Cap Screw	KP8628055	92	FP-24H25	Bearing	KP9028091
43	51068-009-01	Bus Support	KP9028043	93	50502-053-21	Bearing Spacer	KP9028092
44	21401-24660	H. St. Cap	KP8628038	94	51068-011-01	Front Bearing Housing	KP9028093
45	51068-022-03	Bus Bar	KP9028045	95A	51068-082-50	Frame Assembly	KP9028094
46	51068-044-01	Bus Bar	KP9028046	96	23602-13209	Washer	KP9028095
47	23003-00280	Jam Nut	KP9028047	97	50502-276-31	Pivot Pin	KP9028096
48	21401-28800	Cap Screw	KP9028048	98	24201-06320	Cotter Pin	KP7228067
49	51068-041-50	Bus Bar, R.H	KP9028049	99	24209-32480	Roll Pin	KP9028098

Replacement Parts for:

NO. 40 Youngstown Limit Stop Duplex Type EEG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
100	51068-013-50	Base Assembly	KP9028099				
101	50502-407-22	Key	KP9028100				
102	FP-24B35	Oilite Bearing	KP9028101				
103	51068-031-01	LatchArm	KP9028102				
104	50502-601-37	Latch Arm Spring	KP9028103				
105	51068-045-01	Stop Plate	KP9028104				
106A	51068-053-51	Weight Arm Assembly	KP9028105				
107A	51068-059-51	Weight Arm Assembly	KP9028106				
108A	51068-055-51	Suspended Weight Assembly	KP9028107				
109	51068-056-50	Wire Rope & Fittings	KP9028108				
110	X-3332	Cap Washer	KP8628018				
111	X-2319	Cap Screw	KP7228026				
112	X-2222	Special Cap Screw	KP7228027				
113	51068-051	Side Cover Assembly	KP9028112				

NO. 50 DC Youngstown Limit Stop Simplex Type FG
Series A



Replacement Parts for:

NO. 50 DC Youngstown Limit Stop Simplex Type FG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	51068-007-50	Top Cover	KP9128001	46	51068-044-01	Bus Bar	KP9028046
2	RS-130	Special Cotter	KP7028015	47	23003-00280	Jam Nut	KP9028047
3	51068-046-51	Arc Chute	KP9228003	48	21401-28800	Cap Screw	KP9028048
4	51068-032-51	Stationary Contact Assembly	KP9128004	49	23002-00320	Nut	KP9028040
5	51068-032-50	Stationary Contact Assembly	KP9128005	50	51068-041-01	Bus Bar	KP9028050
6	51068-039-50	Blowout Ear	KP9028006	59	51068-015-51	Contact Shaft Assembly	KP9128052
7	50512-001-27	Blowout Insulating Washer	KP9028007	60	51068-027-50	Trip Assembly	KP9028060
8	51068-038-50	Blowout Guard	KP9028008	61	51068-028-01	Shaft	KP9028061
9	21401-24280	Cap Screw	KP7228009	62	51068-029-01	Operating Arm	KP9028062
10	23701-00240	Pl. Lk. Washer	KP7128063	64	51068-030-01	Torsion Spring	KP9028064
11	21401-24400	H.I Cap Screw	KP7328043	65	FP-24H24	Bearing	KP9028065
12	23601-00240	Washer	KP7228047	66	51068-016-51	Contact Shaft Assembly	KP9128058
13	50512-051-01	Spacer	KP9028013	67	51068-020-50	Connector Assembly	KP9228067
14	50512-001-25	Insulating Washer	KP9028014	68	L-6056	Auxiliary Arm Pin	KP9028068
15	21601-20240	Cap Screw	KP9028015	69	LT-3394	Set Screw	KP9028069
16	23701-00200	Pl. Lk. Washer	KP7128013	70	51068-017-01	Shaft	KP9128062
17	50502-776-11	Blowout Core	KP9028017	71	50512-251-24	Shaft Insulator	KP9128063
18	50512-052-16	Insulator for Blowout Core	KP9028018	72	51068-018-50	Contact Arm Assembly	KP9028072
19	51068-036-50	Contact Bracket Assembly	KP9028019	73	21401-28680	Cap Screw	KP9028073
20	50502-103-12	Stud	KP9028020	74	51068-019-01	Contact Arm Clamp	KP9028074
21	51068-040-01	Blowout Ear Spacer	KP9028021	75	51031-035-50	Contact Spring Bracket	KP9128067
22	23002-00200	Nut	KP7128042	76	50502-601-34	Contact Spring	KP9028075
23	50005-015-01	Contact Tip	KP9028023	77	21401-28660	Cap Screw	KP9028076
24	21601-28480	Cap Screw	KP9028024	78	23003-00240	Jam Nut	KP9028077
25	23701-00280	Pl. Lock Washer	KP7228025	79	51068-026-50	Rocker Arm Assembly	KP9028078
26	23601-00282	Washer	KP9028026	80	51068-025-01	Arc Horn	KP9028079
27	51068-034-50	Base, R.H	KP9128027	81	51068-021-01	Auxiliary Arm	KP9028080
28	51068-033-50	Base, L.H	KP9128028	82	21401-24240	H.I Cap Screw	KP7328076
29	51068-042-50	Bus Bar, R.H	KP9028029	83	51068-010-50	Rear Panel Assembly	KP9128075
30	51068-043-50	Bus Bar, L.H	KP9028030	84	51202-062-01	Gasket	KP9028083
31	21401-24740	Cap Screw	KP9028031	85	23003-00200	Hex Jam Nut	KP9028084
32	23003-00240	Jam Nut	KP9028077	86	22003-20241	Set Screw	KP9028085
33	23002-00240	H.I Nut	KP9028033	87	51068-012-01	Bearing Housing	KP9028086
34	51068-022-50	Bus Bar, R.H	KP9028034	88	21402-29480	Cap Screw	KP8628065
35	51068-022-51	Bus Bar, L.H	KP9028035	89	FP-24H24	Bearing	KP9028065
36	21401-28560	Cap Screw	KP9028036	90	21401-28400	Cap Screw	KP8628036
37	23601-00280	Washer	KP8628035	91	21401-28760	Cap Screw	KP9028090
38	23002-00280	Nut	KP9028038	92	FP-24H25	Bearing	KP9028091
39	51068-014-50	Bus Bar Support	KP9028039	93	50502-053-21	Bearing Spacer	KP9028092
40	51068-041-50	Bus Bar, R.H	KP9028049	94	51068-011-01	Front Bearing Housing	KP9028093
41	51068-041-51	Bus Bar, L.H	KP9028041	95	51068-005-50	Frame Assembly	KP9128088
42	21401-24480	H.I Cap Screw	KP8628055	96	23602-13209	Washer	KP9028095
43	51068-009-01	Bus Support	KP9028043	97	50502-276-31	Pivot Pin	KP9028096
44	21401-24660	H. St. Cap	KP8628038	98	24201-06320	Cotter Pin	KP7228067
45	51068-022-03	Bus Bar	KP9028045	99	24209-32480	Roll Pin	KP9028098


Replacement Parts for:

NO. 50 DC Youngstown Limit Stop Simplex Type FG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
100	51068-013-50	Base Assembly	KP9028099				
101	50502-407-22	Key	KP9028100				
102	FP-24B35	Oilite Bearing	KP9028101				
103	51068-031-01	Latch Arm	KP9028102				
104	50502-601-37	Latch Arm Spring	KP9028103				
105	51068-045-01	Stop Plate	KP9028104				
106	51068-053-50	Weight Arm Assembly	KP9128098				
107	51068-059-50	Weight Arm Assembly	KP9128099				
108	51068-055-50	Suspended Weight Assembly	KP9128100				
109	51068-056-50	Wire Rope & Fittings	KP9028108				
110	50502-005-21	Washer	KP9228109				
111	X-2319	Cap Screw	KP7228026				
112	X-2222	Special Cap Screw	KP7228027				
113	51068-051	Side Cover Assembly	KP9028112				

Replacement Parts for:

NO. 50 DC Youngstown Limit Stop Duplex Type FFG Series A

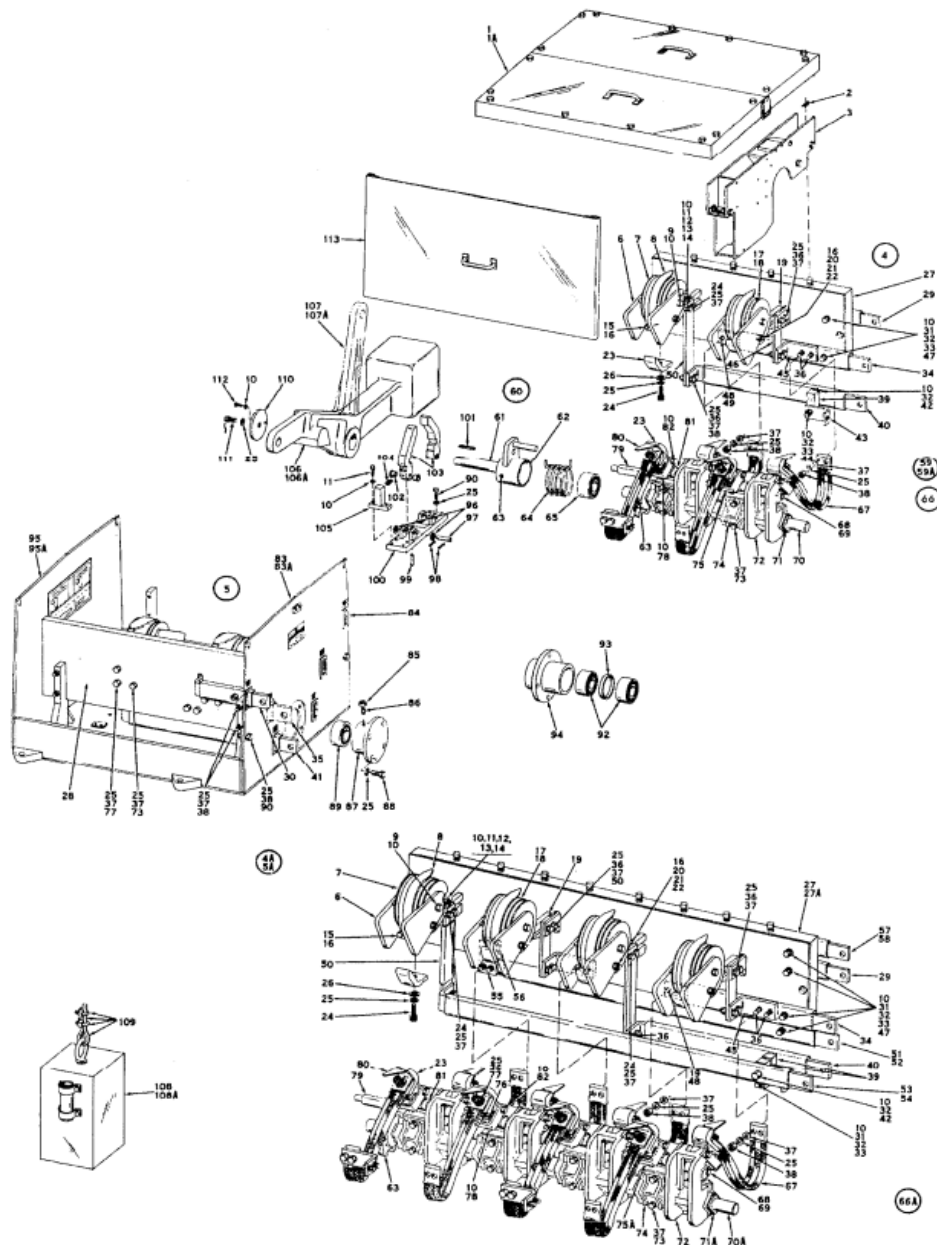

Replacement Parts for:

NO. 50 DC Youngstown Limit Stop Duplex Type FFG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1A	51068-084-50	Top Cover	KP9028001	46	51068-044-01	Bus Bar	KP9028046
2	RS-130	Special Cotter	KP7028015	47	23003-00280	Jam Nut	KP9028047
3	51068-046-51	Arc Chute	KP9228003	48	21401-28800	Cap Screw	KP9028048
4A	51068-087-51	Stationary Contact Assembly	KP9028004	49	23002-00320	Nut	KP9028040
5A	51068-087-50	Stationary Contact Assembly	KP9028005	50	51068-041-01	Bus Bar	KP9028050
6	51068-039-50	Blowout Ear	KP9028006	51	51068-090-50	Bus Bar, R.H	KP9028051
7	50512-001-27	Blowout Insulating Washer	KP9028007	52	51068-090-51	Bus Bar, L.H	KP9028052
8	51068-038-50	Blowout Guard	KP9028008	53	51068-041-52	Bus Bar, R.H	KP9028053
9	21401-24280	Cap Screw	KP7228009	54	51068-041-53	Bus Bar, L.H	KP9028054
10	23701-00240	Pl. Lk. Washer	KP7128063	55	51068-066-01	Bus Bar	KP9028055
11	21401-24400	H.I Cap Screw	KP7328043	56	50502-408-07	Spacer	KP9028056
12	23601-00240	Washer	KP7228047	57	51068-091-50	Bus Bar, R.H	KP9028057
13	50512-051-01	Spacer	KP9028013	58	51068-092-50	Bus Bar, L.H	KP9028058
14	50512-001-25	Insulating Washer	KP9028014	59A	51068-085-50	Contact Shaft Assembly	KP9228059
15	21601-20240	Cap Screw	KP9028015	60	51068-027-50	Trip Assembly	KP9028060
16	23701-00200	Pl. Lk. Washer	KP7128013	61	51068-028-01	Shaft	KP9028061
17	50502-776-11	Blowout Core	KP9028017	62	51068-029-01	Operating Arm	KP9028062
18	50512-052-16	Insulator for Blowout Core	KP9028018	63	24209-32780	Pin	KP9028063
19	51068-036-50	Contact Bracker Assembly	KP9028019	64	51068-030-01	Torsion Spring	KP9028064
20	50502-103-12	Stud	KP9028020	65	FP-24H24	Bearing	KP9028065
21	51068-040-01	Blowout Ear Spacer	KP9028021	66A	51068-086-50	Contact Shaft Assembly	KP9228066
22	23002-00200	Nut	KP7128042	67	51068-020-50	Connector Assembly	KP9228067
23	50005-015-01	Contact Tip	KP9028023	68	L-6056	Auxiliary Arm Pin	KP9028068
24	21601-28480	Cap Screw	KP9028024	69	LT-3394	Set Screw	KP9028069
25	23701-00280	Pl. Lock Washer	KP7228025	70A	51068-017-02	Shaft	KP9028070
26	23601-00282	Washer	KP9028026	71A	50512-251-25	Shaft Insulator	KP9028071
27A	51068-089-50	Base, R.H	KP9028027	72	51068-018-50	Contact Arm Assembly	KP9028072
28A	51068-088-50	Base, L.H	KP9028028	73	21401-28680	Cap Screw	KP9028073
29	51068-042-50	Bus Bar, R.H	KP9028029	74	51068-019-01	Contact Arm Clamp	KP9028074
30	51068-043-50	Bus Bar, L.H	KP9028030	76	50502-601-34	Contact Spring	KP9028075
31	21401-24740	Cap Screw	KP9028031	77	21401-28660	Cap Screw	KP9028076
32	23003-00240	Jam Nut	KP9028077	78	23003-00240	Jam Nut	KP9028077
33	23002-00240	H.I Nut	KP9028033	79	51068-026-50	Rocker Arm Assembly	KP9028078
34	51068-022-50	Bus Bar, R.H	KP9028034	80	51068-025-01	Arc Horn	KP9028079
35	51068-022-51	Bus Bar, L.H	KP9028035	81	51068-021-01	Auxiliary Arm	KP9028080
36	21401-28560	Cap Screw	KP9028036	82	21401-24240	H.I Cap Screw	KP7328076
37	23601-00280	Washer	KP8628035	83	51068-010-51	Rear Panel Assembly	KP9028082
38	23002-00280	Nut	KP9028038	84	51202-062-01	Gasket	KP9028083
39	51068-014-50	Bus Bar Support	KP9028039	85	23003-00200	Hex Jam Nut	KP9028084
40	51068-041-50	Bus Bar, R.H	KP9028049	86	22003-20241	Set Screw	KP9028085
41	51068-041-51	Bus Bar, L.H	KP9028041	87	51068-012-01	Bearing Housing	KP9028086
42	21401-24480	H.I Cap Screw	KP8628055	88	21402-29480	Cap Screw	KP8628065
43	51068-009-01	Bus Support	KP9028043	89	FP-24H24	Bearing	KP9028065
44	21401-24660	H. St. Cap	KP8628038	90	21401-28400	Cap Screw	KP8628036
45	51068-022-03	Bus Bar	KP9028045	91	21401-28760	Cap Screw	KP9028090


Replacement Parts for:

NO. 50 DC Youngstown Limit Stop Duplex Type FFG Series A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
92	FP-24H25	Bearing	KP9028091				
93	50502-053-21	Bearing Spacer	KP9028092				
94	51068-011-01	Front Bearing Housing	KP9028093				
95A	51068-082-50	Frame Assembly	KP9028094				
96	23602-13209	Washer	KP9028095				
97	50502-276-31	Pivot Pin	KP9028096				
98	24201-06320	Cotter Pin	KP7228067				
99	24209-32480	Roll Pin	KP9028098				
100	51068-013-50	Base Assembly	KP9028099				
101	50502-407-22	Key	KP9028100				
102	FP-24B35	Oilire Bearing	KP9028101				
103	51068-031-01	LarchArm	KP9028102				
104	50502-601-37	Larch Arm Spring	KP9028103				
105	51068-045-01	Stop Plate	KP9028104				
106A	51068-053-51	Weight Arm Assembly	KP9028105				
107A	51068-059-51	Weight Arm Assembly	KP9028106				
108A	51068-055-51	Suspended Weight Assembly	KP9028107				
109	51068-056-50	Wire Rope & Fittings	KP9028108				
110	50502-005-21	Washer	KP9228109				
111	X-2319	CapScrew	KP7228026				
112	X-2222	Special Cap Screw	KP7228027				
113	51068-051	Side Cover Assembly	KP9028112				

Replacement Parts for:

Type DM Master Switch Folio 1-A

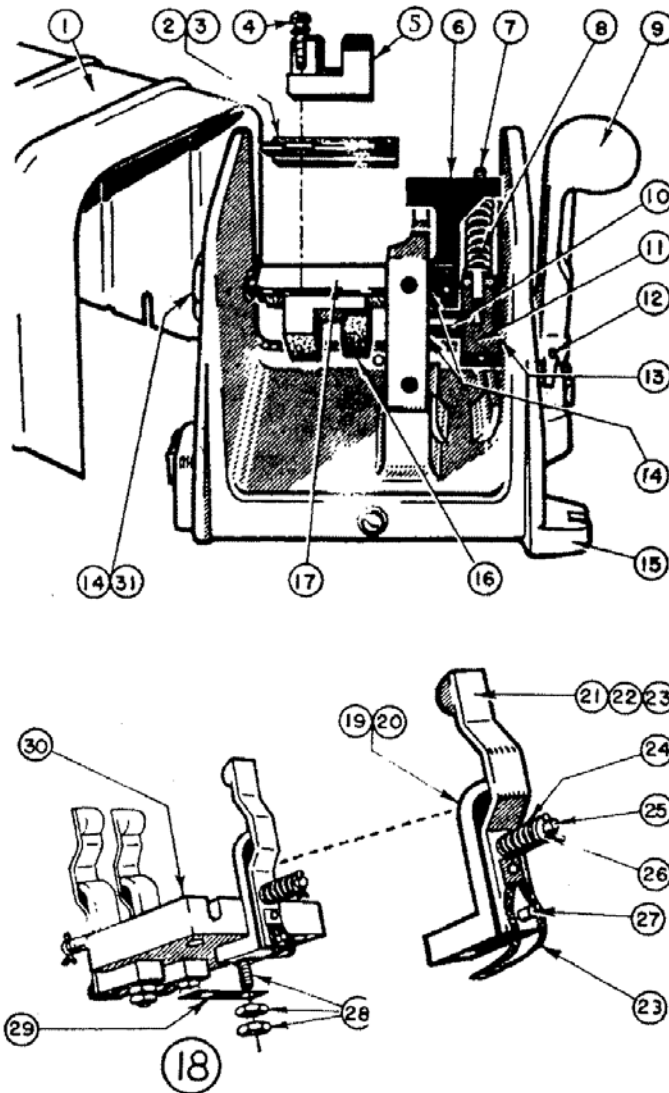


Replacement Parts for:

Type DM Master Switch Folio 1-A

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	DM-214	Cover	KP9628001				
2	MM-8	Shaft Insulator	KP9628002				
3	MM-9	Shaft Insulator	KP9628003				
4	21001-18240	R.I Mch. Screw	KP9628004				
4	23701-00200	Pl. Lk. Washer	KP7128013				
5	DM-211	Cylinder Contact	KP9628006				
6	DM-207	Cylinder Lever	KP9628007				
7	DM-205	Spring Rod	KP9628008				
8	DM-206	Spring	KP9628009				
9	DM-202	Operating Lever	KP9628010				
10	DM-204	Operating Shaft	KP9628011				
11	DM-203-A	Cam	KP9628012				
12	24209-12400	Roll Pin	KP9628013				
13	FP-24C24	Oilite Bearing	KP9628014				
14	FP-24C234	Oilite Bearing	KP9628015				
15	DM-228-A	Frame Assembled	KP9628016				
16	DM-210	Cylinder Contact	KP9628017				
17	DM-209	Cylinder Shaft	KP9628018				
18	DM-226-A	Finger Board Complete	KP9628019				
19	DM-230-A	Finger Holder Assembly	KP9628020				
20	DM-234	Holder	KP9628021				
21	DM-231-A	Finger	KP9628022				
22	DM-233	Contact	KP9628023				
23	A-228-A	Connector	KP9628024				
24	ZO-1247	Spring	KP9628025				
25	A-233	Spring Stud	KP9628026				
26	A-234	Spring Bushing	KP9628027				
27	DM-235	Stud	KP9628028				
29	DM-219	Jumper	KP9628029				
30	DM-215	Finger Board	KP9628030				
31	DM-229-A	Bearing Plug	KP9628031				

Replacement Parts for:

EC&M Type NT Master Controller, Folio 1

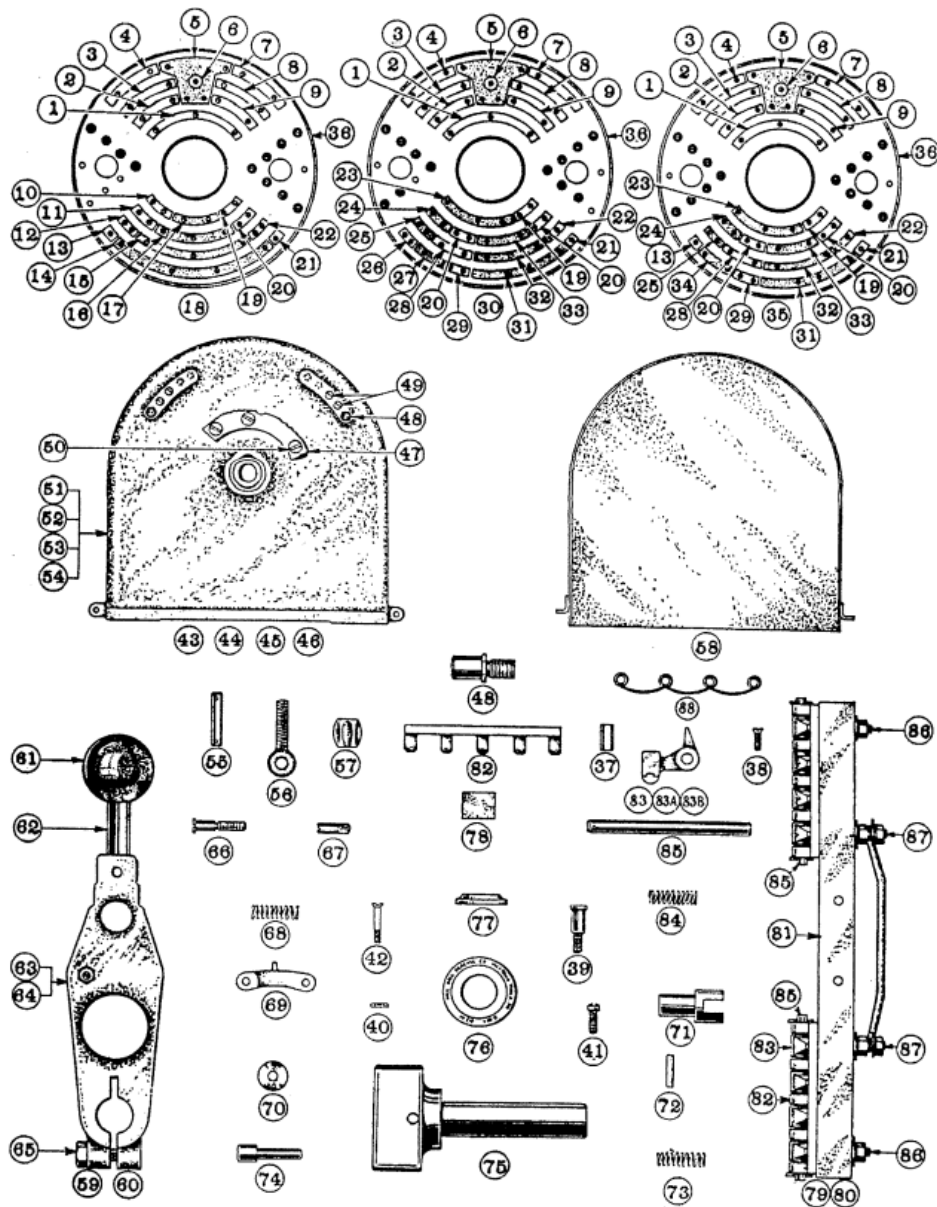


Replacement Parts for:

EC&M Type NT Master Controller, Folio 1


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	NT-29	Contact	KP9728001	54	NT-88	Frame	KP9728051
2	NT-31	Contact	KP9728002	55	NT-94	Pin	KP9728052
3	NT-33	Contact	KP9728003	56	A-176	Clevis Pin, Steel	KP9728053
4	NT-35	Contact	KP9728004	57	A-201	Clevis Bolt	KP9728054
5	NT-87	Dead Block	KP9728005	58	NT-12-A	Cover, Complete	KP9728055
6	NT-1158	Contact	KP9728006	59	NT-9-A	Lever	KP9728056
7	NT-34	Contact	KP9728007	60	NT-96-A	Operating Lever	KP9728057
8	NT-32	Contact	KP9728008	61	NT-1333	Ball Handle	KP9728058
9	NT-30	Contact	KP9728009	62	NT-95	Handle Stud	KP9728059
10	NT-38	Contact	KP9728010	63	NT-15	Operating Lever	KP9728060
11	NT-40	L.H Contact	KP9728011	64	NT-79	Operating Lever	KP9728061
12	NT-42	L.H Contact	KP9728012	66	NT-23	Roller Bracket Pin	KP9728062
13	NT-44	L.H Contact	KP9728013	67	NT-26	Roller Pin	KP9728063
14	NT-65	Dead Block	KP9728014	68	NT-74	Roller Spring	KP9728064
15	NT-64	Dead Block	KP9728015	69	NT-22	Roller Bracket	KP9728065
16	NT-63	Dead Block	KP9728016	70	NT-68	Roller	KP9728066
17	NT-62	Dead Block	KP9728017	71	NX-248	Lock Casing	KP9728067
18	NT-4-A	Plate Face Assy	KP9728018	72	NX-249	Pin	KP9728068
19	NT-37	Contact	KP9728019	73	NT-93	Lock Spring	KP9728069
20	NT-39	R.H Contact	KP9728020	74	NT-91	Lock Pin	KP9728070
21	NT-43	Contact, Copper	KP9728021	75	NT-13-A	Shaft	KP9728071
22	NT-41	R.H Contact	KP9728022	76	NT-701	Ball Bearing	KP9728072
23	NT-51	Dead Block	KP9728023	77	NT-25	Bearing	KP9728073
24	NT-55	Dead Block	KP9728024	78	NT-76	Shaft Key	KP9728074
25	NT-56	Dead Block	KP9728025	79	NT-8-A	Contact Arm	KP9728075
26	NT-47	R.H Contact	KP9728026	81	NT-20	Arm	KP9728076
27	NT-57	R.H Contact	KP9728027	82	NT-19	Finger Holder	KP9728077
28	NT-46	R.H Contact	KP9728028	83	NT-567	Contact Finger	KP9728078
29	NT-45	R.H Contact	KP9728029	83	NT-18-A	Contact Finger	KP9728079
30	NT-5	Plate	KP9728030	83	NT-566	FingerTip	KP9728080
31	NT-54	Dead Block	KP9728031	84	NT-75	Spring	KP9728081
32	NT-53	Dead Block	KP9728032	85	NT-69	Finger Pin	KP9728082
33	NT-52	Dead Block	KP9728033	88	NT-568-a	Finger Connector	KP9728083
34	NT-58	Dead Block	KP9728034				
35	NT-6-A	Face Plate	KP9728035				
36	NT-28	Face Plate	KP9728036				
37	NT-70	Spacer	KP9728037				
38	NT-71	Screw	KP9728038				
39	NT-73	Terminal, Steel	KP9728039				
40	Z0-1150	Cup Washer	KP7528057				
43	NT-10-A	Assembled Frame	KP9728041				
44	NT-11-A	Assembled Frame	KP9728042				
45	NT-97-A	Assembled Frame	KP9728043				
46	NT-98-A	Assembled Frame	KP9728044				
47	NT-16	Rail	KP9728045				
48	NT-24	Stop Stud	KP9728046				
49	NT-72	Frame Stud	KP9728047				
51	NT-77	Frame	KP9728048				
52	NT-14	Frame	KP9728049				
53	NT-89	Frame	KP9728050				

Replacement Parts for: SI Acceleration Relay, Folio 1A & 1B

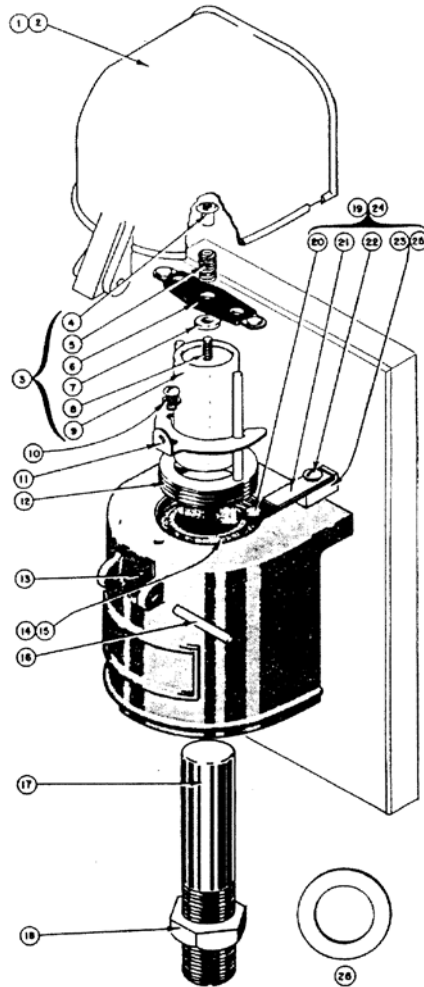

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	S1-140-A	Cover	KP9428001	18	S1-16	Nut	KP9428010
2	S1-3	Cover Spring	KP9428002	19	S1-87-A	Assembled Contact Stud	KP9428011
3	S1-125-A	Assembled Inductor Tube	KP9428003	20	S1-86-A	Contact Blade	KP9428012
4	FP-23A10	Binding Post	KP7528003	21	S1-82	Contact Blade Guard	KP9428013
7	S1-133	Spacer	KP9428005	23	S1-83	Contact Stud	KP9428014
11	S1-12	Bushing Lock	KP9428006	24	S1-88-A	Assembled Contact Stud	KP9428015
12	S1-24-A	Bushing	KP9428007	25	S1-84	Contact Stud	KP9428016
15	S1-128-A	Coil	KP9428008	26	S1-68	Gasket	KP9428017
17	S1-14	Core	KP9428009				

Replacement Parts for: SIP Plugging Relay, Folio 1A & 1B

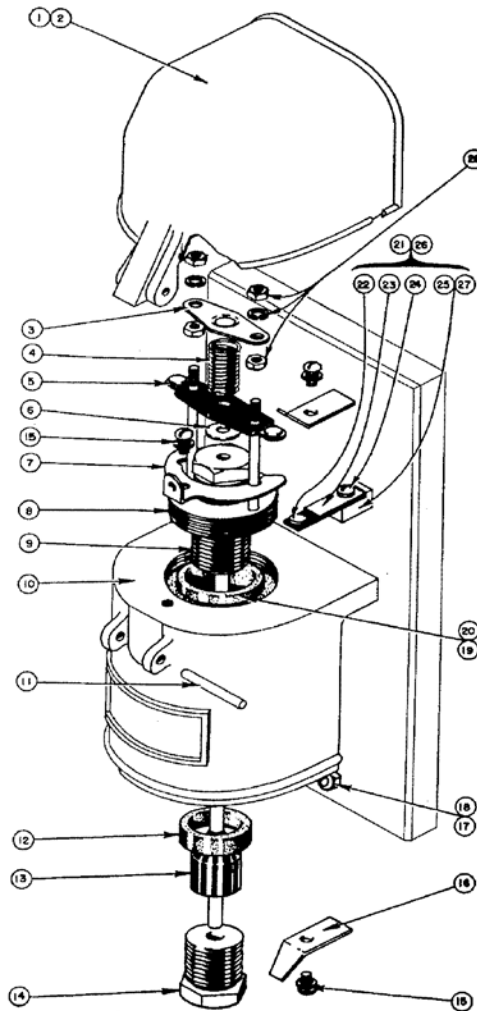

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	S1-140-A	Cover	KP9428001	16	S1P-27	Lock Spring	KP9528013
2	S1-3	Cover Spring	KP9428002	17	SS-3022	Coil Terminal Stud, Steel	KP9528014
3	S1P-8	Stop	KP9528003	18	SS-3065	Coil Terminal Stud, Steel	KP9528015
4	S1P-19	Spring	KP9528004	19	S1P-21-A	Coil	KP9528016
6	S1P-24	Washer	KP9528005	20	S1P-22-A	Coil	KP9528017
7	S1-12	Bushing Lock	KP9428006	21	S1-87-A	Assembled Contact Stud	KP9428011
8	S1P-1-A	Bushing	KP9528007	22	S1-86-A	Contact Blade	KP9428012
9	S1P-26	Plug	KP9528008	23	S1-82	Contact Blade Guard	KP9428013
10	S1-129	Case	KP9528009	25	S1-83	Contact Stud	KP9428014
12	S1P-16	Sleeve	KP9528010	26	S1-88-A	Assembled Contact Stud	KP9428015
13	S1P-2-A	Plunger	KP9528011	27	S1-84	Contact Stud	KP9428016
14	S1P-25	Bottom Adj. Plug	KP9528012				



Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com


Replacement Parts Catalog for **GENERAL ELECTRIC** Table of Contents

BRAKES

Form C103AA DC Magnetic Brake.....	162
IC9528 A100 8" Brake.....	163-164
IC9528 A101 10" Brake.....	165-166
IC9528 A102 13" Brake.....	167-168
IC9528 A103 16" Brake.....	169-170
IC9528 A104 19" Brake.....	171-172
IC9528 A105 23" Brake.....	173-174

If you are unable to locate the part you need, call our sales department and they can further assist you.
General Electric is a registered trademark.

Replacement Parts for: FORM C103AA DC MAGNETIC BRAKE

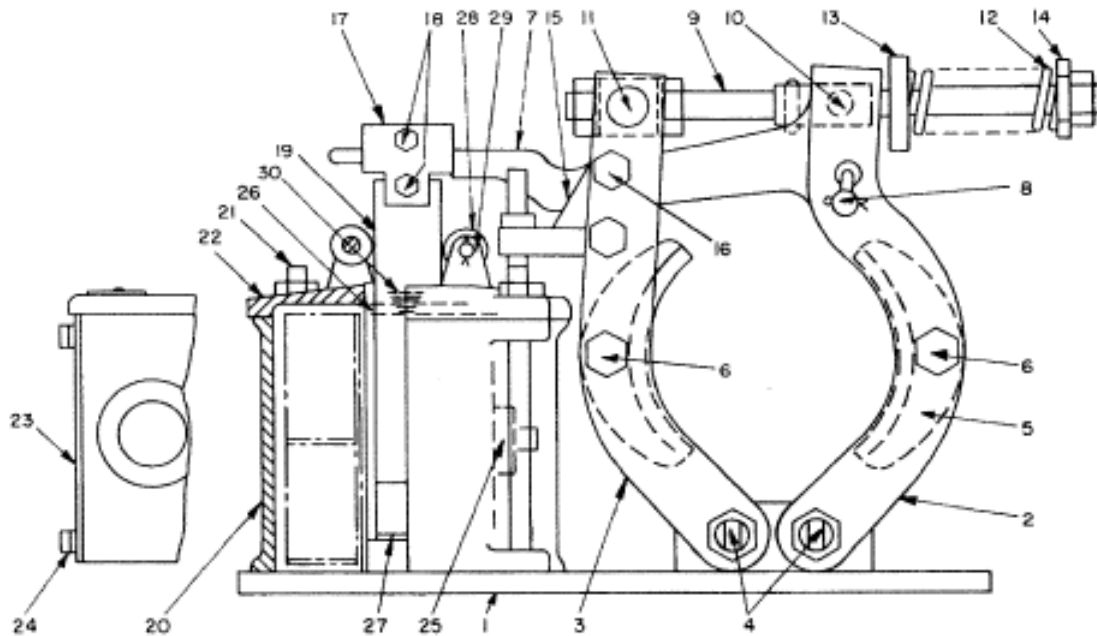

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	3818987G2	Base	KP3501001	23	2437944	Back Cover	KP3501023
2	3647907P2	Yoke, RH Front	KP3501002	24	N21P21008	Screw	KP3501024
3	3647907P1	Yoke, LH Front and Rear	KP3501003	25	577A101P5	Pipe Plug	KP3501025
4	2468478	Pin for Base and Yokes	KP3501004	26	2439424	Sleeve	KP3501026
5	2841055G4	Brake Shoe with Lining	KP3501005	27	2439437	Disc	KP3501027
6	N22P25080B6	Bolt	KP3501006	28	2463746	Roller	KP3501028
7	3647908P14	Operating Layer	KP3501007	29	1434518	Pin	KP3501029
8	2841044G3	Pin	KP3501008	30	2413332	Spring	KP3501030
9	2841052G1	Connection Rod	KP3501009	*	5189824P2	Lining Rivets	KP3501031
10	2468485	Pin	KP3501010	*	3647907P3	Yoke, RH Rear	KP3501032
11	2468480	Guide Block	KP3501011	*	3641064P2	Brake Shoe	KP3501033
12	2412650	Spring	KP3501012	*	205A4704P1	Brake Shoe Lining	KP3501034
13	2841053G1	Spring Seat, Inner	KP3501013	*	286A113P27	Set Screw	KP3501035
14	2468479	Spring Seat, Outer	KP3501014	*	278A167G1	Core Assembly	KP3501036
15	2841045G4	Back Stop Assembly	KP3501015	*	3024265	Coil	KP3501037
16	N22P25016B6	Screw Fastening Support	KP3501016	*	9645027	Roller	KP3501038
17	9645025	Link	KP3501017				
18	9645024	Pin	KP3501018				
19	2437946	Movable Core	KP3501019				
20	3818928P1	Magnet Frame	KP3501020				
21	8048527	Stud	KP3501021				
22	3818928P2	Top Cover	KP3501022				

8" GE IC9528 A100 BRAKE




Replacement Parts for:

8" GE IC9528 A100 BRAKE

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
4	171C229P1	Frame, Front	KP0801001	55	N57P2100080B	Screw	KP0801049
4	171C229P3	Frame, Front	KP0801002	56	171C235G3	Magnet Frame	KP0801050
5	171C229P4	Frame, Rear	KP0801003	57	577A190P1	Screw	KP0801051
6	171C266G19	Yoke w/Bushings	KP0801004	59	282A772P1	Armature Gap Indicator	KP0801052
7	573A6080P1	Bushing for Yoke	KP0801005	60	N22P25028B	Hinge Pin	KP0801053
8	171C213P1	Brake Shoe	KP0801006	61	N530P806B	Drive Screw	KP0801054
9	151A7931P1	Lining and Supporting Plate	KP0801007	62	5144475	Torque Spring	KP0801055
9	151A7931P1	Lining and Supporting Plate	KP0801008	63	282A886P1	Spring Seat for Torque Spring	KP0801056
10	282A875P7	Clamp for Lining, Upper	KP0801009	64	282A750P1	Retainer for Torque Spring	KP0801057
11	282A875P1	Clamp for Lining, Lower	KP0801010	65	282A768P1	Adj. Screw for Torque Spring	KP0801058
12	N22P23012B	Screw Fastening Stop Bracket	KP0801011	66	282A856P1	Magnet Core	KP0801059
13	972C161G1	Bearing Pin	KP0801012	66A	282A767P1	Shim between Magnet Core	KP0801060
14	245P29B6	Nut for Bearing Pin	KP0801013	67	282A859P1	Retainer for Magnet Coil	KP0801061
15	972C161G7	Bearing Pin	KP0801014	68	282A861P2	Stud for Magnet Core	KP0801062
16	282A763P1	Seal	KP0801015	69	282A883P1	Back Plate	KP0801063
17	282A770P6	Thrust Washer	KP0801016	70	N22P29052B	Screw	KP0801064
18	577A124P1	Set Screw for Armature	KP0801017				
19	282A862P1	Friction Plug for Brake Shoe	KP0801018				
20	5144476	Spring for Friction Plug	KP0801019				
21	282A869P4	Guide Pin for Spring	KP0801020				
22	N9080P219B	Retaining Ring/Friction Plug	KP0801021				
24A	138A1173P1	Pivot Arm for Yoke	KP0801022				
25	282A762P1	Pivot Pin for Yoke	KP0801023				
33A	138A1174P1	Spring Strip for Pivot Arm	KP0801024				
33B	138A1178P1	Backing Strip	KP0801025				
33C	N22P21016B	Screw Fastening Spring Strip	KP0801026				
33D	104B9965P1	Support for Pivot Arm	KP0801027				
33E	N22P23010B	Screw Fastening Support	KP0801028				
33F	138A1175P1	Guide for Pivot Arm	KP0801029				
33G	N22P21016B	Screw Fastening Spring Strip	KP0801026				
33H	N25P23016	Adjusting Screw for Pivot Arm	KP0801031				
34	104B9964P1	Tie Rod	KP0801032				
35	577A142P17	Spacer for Tie Rod	KP0801033				
36	5144474	Compression Spring	KP0801034				
37	N402P45B	Spring Seat for Comp. Spring	KP0801035				
38	285A839P1	Rocker Pin for Tie Rod	KP0801036				
39	233B565P1	Nut for Tie Rod	KP0801037				
40	282A796P1	Stop Bracket for Tie Rod	KP0801038				
40	N70P1606B	Set Screw for Tie Rod Nut	KP0801039				
40	N22P23010B	Screw Fastening Stop Bracket	KP0801040				
43	138A1176P1	Rocker Pin	KP0801041				
46	229B796G1	Armature with Bushings	KP0801042				
47	282A871P1	Bushing For Armature	KP0801043				
48	577A124P1	Set Screw for Armature	KP0801017				
50	282A888P1	Spring Seat	KP0801045				
52	972C161G13	Bearing Pin for Armature	KP0801046				
53	N245P29B	Nut for Bearing Pin	KP0801047				
54	282A775P1	Dust Cap	KP0801048				

Replacement Parts for:

10" GE IC9528 A101 BRAKE

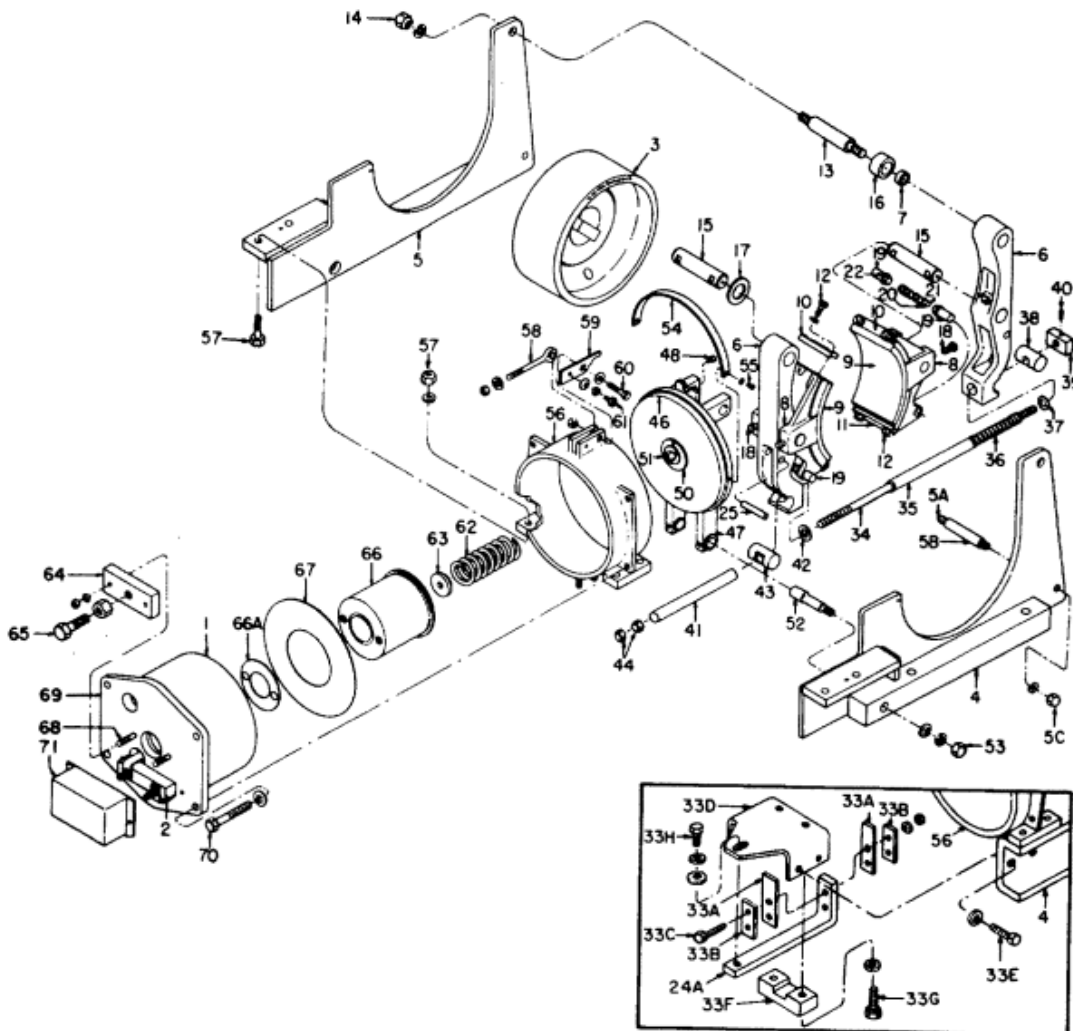

Replacement Parts for:

10" GE IC9528 A101 BRAKE

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1D177G110	Coil, 25-33 HP	KP1001001	40	N70P1601B6	Set Screw	KP1001053
1	1D177G112	Coil	KP1001002	41	577A129P8	Tube	KP1001054
1	F1D177G1A	Coil	KP1001003	42	N402AP17B6	Spring Seat	KP1001049
1	1D177G107	Series Coil, 15-19 HP	KP1001004	43	138A1176P2	Rocker Pin	KP1001056
1	1D177G111	Coil, 30-39 HP	KP1001005	43	138A1191P2	Stainless Steel Rocker Pin	KP1001057
1	1D177G100	Coil	KP1001006	44	N227P32	Tie Rod Nut	KP1001058
1	1D177G101	Coil	KP1001007	46	229B796G2	Armature with Bushings	KP1001059
1	1D177G102	Coil	KP1001008	47	573A608P12	Bushing For Armature	KP1001060
1	1D177G103	Coil	KP1001009	48	577A124P1	Set Screw for Brake Shoe	KP0801017
1	1D177G104	Coil	KP1001010	50	282A774P1	Spring Seat	KP1001062
1	1D177G106	Coil	KP1001011	51	N21 P25016	Screw	KP1001063
1	1D177G108	Coil	KP1001012	52	323A1972P2	Bearing Pin	KP1001064
1	1D177G109	Coil	KP1001013	53	N200P29	Nut For Bearing Pit1	KP1001027
1	1D177G105	Series Coil	KP1001014	54	282A775P2	Dust Cap	KP1001066
4	171C262G21	Frame, Front	KP1001015	55	N57P21008B	Screw	KP0801049
5	171C262G22	FrameRear	KP1001016	56	111C9013P1	Magnet Frame	KP1001068
05A	N22P29088B	Tie Bolt	KP1001017	57	577A190P2	Screw	KP1001069
05B	229B790P2	Spacer for Tie Stud	KP1001018	58	282A867P1	Manual-Release Rod	KP1001070
6	171C266G20	Yoke With Bushings	KP1001019	59	282A772P1	Armature Gap Indicator	KP0801052
7	573A608P2	Bushing for Yoke	KP1001020	60	N22P25028B6	Hinge Screw	KP1001072
8	171C215P1	Brake Shoe	KP1001021	61	N530P806B6	Drive Screw	KP1001073
9	305A4800P2	Bonded Lining & Support Plate	KP1001022	62	5144472P1	Torque Spring	KP1001074
10	282A875P8	Clamp for Lining, Upper	KP1001023	63	282A886P2	Spring Seat for Torque Spring	KP1001075
11	282A875P2	Clamp for Lining, Lower	KP1001024	64	282A751P1	Retainer for Torque Spring	KP1001076
12	N93P23012	Screw	KP1001025	65	282A768P2	Adj Screw for Torque Spring	KP1001077
13	287A121P2	Bearing Pin For RH Yoke, SS	KP1001026	66	282A873P1	Magnet Core	KP1001078
14	N200P29	Nut For Bearing Pin	KP1001027	66A	282A767P2	Shim between Magnet Core	KP1001079
15	287A122P2	Bearing Pin For LH Yoke	KP1001028	67	282A859P2	Retainer for Magnet Coil	KP1001080
16	282A763P1	Seal	KP0801015	68	282A861 P9	Stud for Magnet Core	KP1001081
17	282A770P7	Thrust Washer	KP1001030	69	229B778P1	Back Plate	KP1001082
18	577A124P1	Set Screw for Brake Shoe	KP0801017	70	N93P29056	Screw	KP1001083
19	282A862P2	Friction Plug for Brake Shoe	KP1001032	71	218A6420G1	Conduit Cover	KP1001084
20	2418892P1	Spring For Friction Plug	KP1001033				
21	282A869P12	Guide Pin for Spring	KP1001034				
22	N908P221B	Retaining Ring/Friction Plug	KP1001035				
24A	138A1173P2	Pivot Arm for Yoke	KP1001036				
25	287A120P2	Pivot Pin For Yoke	KP1001037				
33A	138A1174P2	Spring Strip for Pivot Arm	KP1001038				
33B	138A1178P2	Backing Strip	KP1001039				
33C	N22P23020B6	Screw Fastening Spring Strip	KP1001040				
33D	104B9965P2	Support for Pivot Arm	KP1001041				
33E	N25P23012	Screw	KP1001042				
33F	138A1175P2	Guide for Pivot Arm	KP1001043				
33G	N21P23020	Screw	KP1001044				
33H	N21P25020	Adjusting Screw	KP1001045				
34	104B9964P2	Tie Rod	KP1001046				
35	577A142P18	Spacer for Tie Rod	KP1001047				
36	5144474P1	Compression Spring	KP1001048				
37	N402AP17B6	Spring Seat	KP1001049				
38	285A839P2	Rocker Pin for Tie Rod	KP1001050				
38	287A125P2	Stainless Steel Rocker Pin	KP1001051				
39	233B565P2	Nut for Tie Rod	KP1001052				

13" GE IC9528 A102 BRAKE




Replacement Parts for:

13" GE IC9528 A102 BRAKE

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1D178G104	Coil	KP1301001	41	577A129P9	Tube	KP1301057
1	1D178G114	Coil	KP1301002	42	N402AP48B6	Spring Seat	KP1301051
1	1D178G107	Coil	KP1301003	43	138A1191P3	Stainless Steel Rocker Pin	KP1301059
1	1D178G1A	Shunt Coil	KP1301004	44	N227P34	Tie Rod Nut	KP1301060
1	1D178G100	Coil	KP1301005	46	229B796G3	Armature with Bushings	KP1301061
1	1D178G101	Coil	KP1301006	47	573A608P13	Bushing for Armature	KP1301062
1	1D178G105	Coil	KP1301007	48	577A124P2	Set Screw for Armature	KP1301033
1	1D178G103	Coil	KP1301008	50	282A892P1	Spring Seat	KP1301064
1	1D178G106	Coil	KP1301009	51	N21P29020	Adjusting Screw for Pivot Arm	KP1301046
1	1D178G108	Coil	KP1301010	52	N910P98C6	Armature PinE Clip	KP1301066
1	1D178G109	Coil	KP1301011	52	323A1972P3	Bearing Pin	KP1301067
1	1D178G110	Coil	KP1301012	53	N200P35	Nut For Bearing Pin	KP1301029
1	1D178G111	Coil	KP1301013	54	282A775P3	Dust Cap	KP1301069
1	1D178G112	Coil	KP1301014	55	N57P21008B	Screw	KP0801049
1	1D178G113	Coil	KP1301015	56	111C9015P1	MagnetFrame	KP1301071
1	1D178G102	Coil	KP1301016	57	577A190P3	Screw	KP1301072
4	171C232G21	FrameFronr	KP1301017	58	282A867P2	Manual-Release Rod	KP1301073
5	171C232G22	FrameRear	KP1301018	59	282A885P1	Armature Gap Indicator	KP1301074
05A	282A796P2	Stop Bracket for Tie Rod	KP1301019	60	N22P29040B6	Hinge Screw	KP1301075
05C	N21P25016	Screw	KP1001063	61	N530P1008B6	Drive Screw	KP1301076
6	171C266G21	Yoke With Bushings	KP1301021	62	5144470P1	Torque Spring	KP1301077
7	573A608P3	Bushing for Yoke	KP1301022	63	282A886P3	Spring Seat for Torque Spring	KP1301078
8	171C217P1	BrakeShoe	KP1301023	64	282A752P1	Retainer for Torque Spring	KP1301079
9	305A4800P3	Lining And Support Plate Assy	KP1301024	65	282A768P3	Adj Screw for Torque Spring	KP1301080
10	282A875P9	Clamp for Lining, Upper	KP1301025	66	194A7625P1	Magnet Core	KP1301081
11	282A875P3	Clamp for Lining, Lower	KP1301026	66A	282A852P1	Shim between Magnet Core	KP1301082
12	N93P29016	Screw	KP1301027	67	282A859P3	Retainer for Magnet Coil	KP1301083
13	287A121P3	Bearing Pin For RH Yoke	KP1301028	68	282A861P3	Srud for Magnet Core	KP1301084
14	N200P35	Nut For Bearing Pin	KP1301029	69	229B759P1	Back Plate	KP1301085
15	287A122P3	Bearing Pin For LH Yoke	KP1301030	70	N24P33064	Screw	KP1301086
16	282A763P2	Seal	KP1301031	71	218A6420G2	Conduit Cover	KP1301087
17	282A770P8	Thrust Washer	KP1301032				
18	577A124P2	Set Screw for Armature	KP1301033				
19	282A862P3	Friction Plug for Brake Shoe	KP1301034				
20	2418884P1	Spring For Friction Plug	KP1301035				
21	282A869P1	Guide Pin for Spring	KP1301036				
22	N908P227B	Retain Ring for Friction Plug	KP1301037				
24A	138A1173P3	PivotArm for Yoke	KP1301038				
25	287A120P3	Pivot Pin For Yoke	KP1301039				
33A	138A1174P3	Spring Strip for Pivot Arm	KP1301040				
33B	138A1178P3	Backing Strip	KP1301041				
33C	N22P23024B6	Screw Fastening Spring Strip	KP1301042				
33D	104B9965P3	Support for Pivot Arm	KP1301043				
33e	N21P25016	Screw	KP1001063				
33F	138A1175P3	Guide for Pivot Arm	KP1301045				
33g	N21P29020	Adjusting Screw for Pivot Arm	KP1301046				
33h	N21P29020	Adjusting Screw for Pivot Arm	KP1301046				
34	104B9964P3	Tie Rod	KP1301048				
35	577A142P19	Spacer for Tie Rod	KP1301049				
36	5144482P1	Compression Spring	KP1301050				
37	N402AP48B6	Spring Seat	KP1301051				
38	285A839P3	Rocker Pin for Tie Rod	KP1301052				
38	138A1176P3	RockerPin	KP1301053				
38	287A125P3	Stainless Steel Rocker Pin	KP1301054				
39	233B565P3	Nut for Tie Rod	KP1301055				
40	N72P2108B6	Set Screw for Tie Rod Nut	KP1301056				

Replacement Parts for:

16" GE IC9528 A103 BRAKE

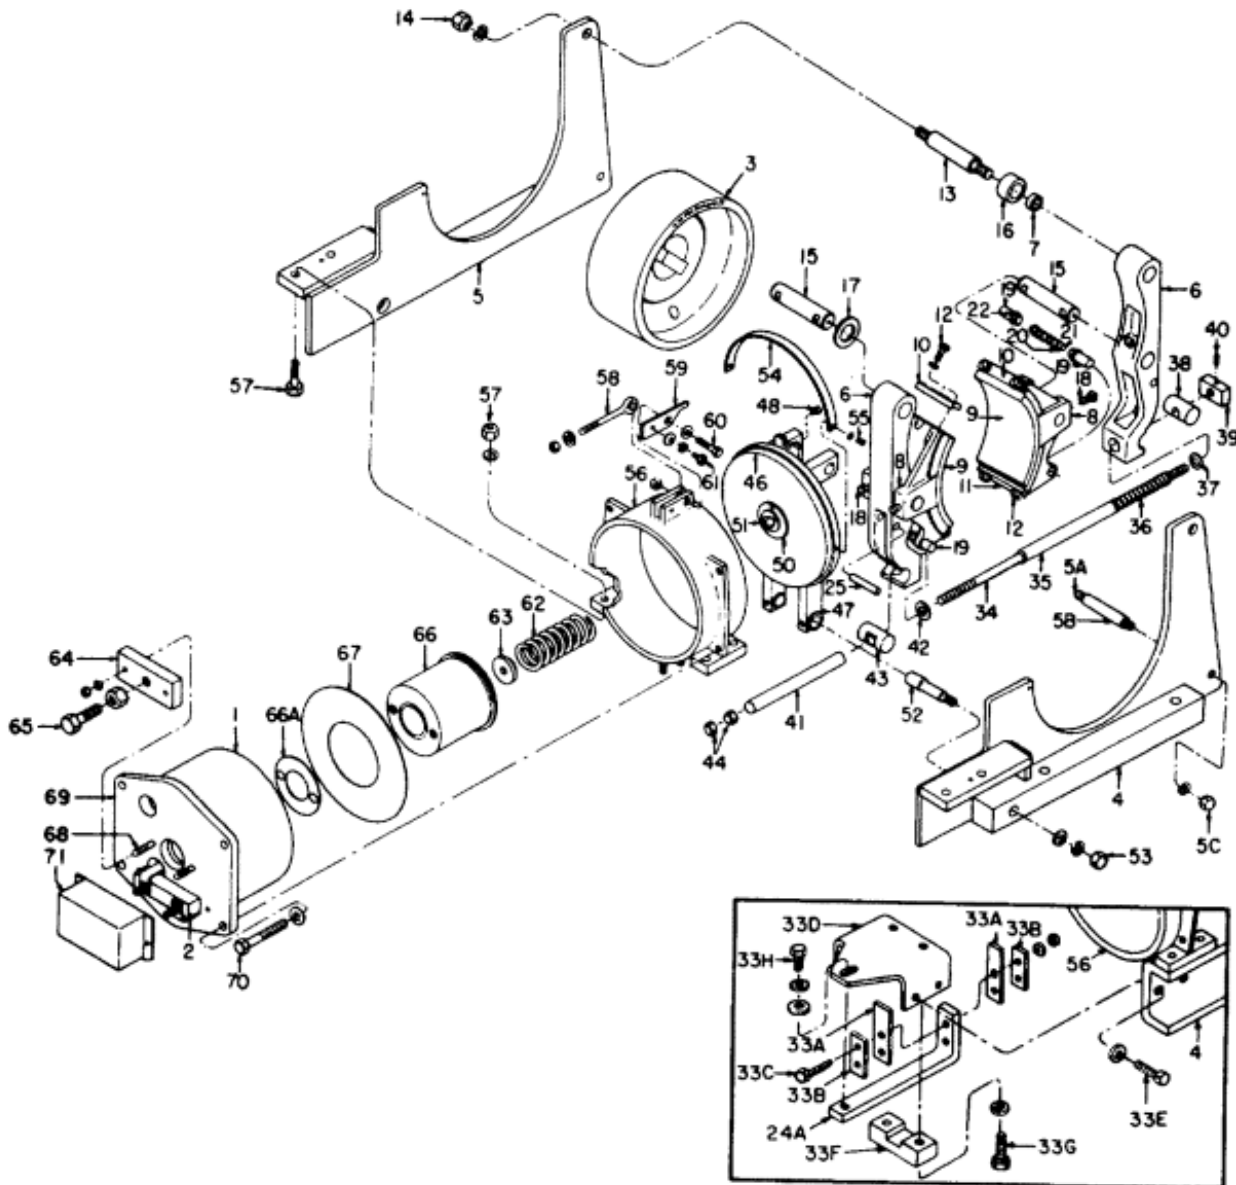


Replacement Parts for:

16" GE IC9528 A103 BRAKE

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1D179G1	Shunt Coil	KP1601001	38	285A839P4	Rocker Pin	KP1601049
1	1D179G106	Coil	KP1601002	39	233B565P4	Nut for Tie Rod	KP1601050
1	1D179G110	Coil	KP1601003	40	N70P2110B6	Set Screw	KP1601051
1	1D179G1A	Coil	KP1601004	41	577A129P28	Tube	KP1601052
1	1D179G103	Coil	KP1601005	42	282A770P13	Washer	KP1601053
1	1D179G100	Coil	KP1601006	43	287A125P4	Stainless Steel Rocker Pin	KP1601054
1	1D179G107	Coil	KP1601007	43	138A1176P4	Rocker Pin	KP1601055
1	1D179G108	Coil	KP1601008	43	138A1191P4	Stainless Steel Rocker Pin	KP1601056
1	1D179G109	Coil	KP1601009	44	N227P82	Tie Rod Nut	KP1601057
1	1D179G101	Coil	KP1601010	46	229B796G4	Armature with Bushings	KP1601058
1	1D179G105	Coil	KP1601011	47	573A608P11	Bushing for Armature	KP1601059
1	1D179G104	Coil	KP1601012	48	577A124P3	Set Screw for Brake Shoe	KP1601031
1	1D179G102	Coil	KP1601013	50	282A765P1	Spring Seat	KP1601061
2	229B781G10	Terminal Board	KP1601014	51	N21P29020	Adjusting Screw for Pivot Arm	KP1301046
4	171C247G17	Frame Front	KP1601015	52	323A1972P4	Bearing Pin	KP1601063
5	171C247G18	Frame Rear	KP1601016	53	N200P39	Nut For Bearing Pin	KP1601027
05A	282A872P4	Tie Stud	KP1601017	54	282A775P4	Dust Cap	KP1601065
05B	229B790P10	Spacer	KP1601018	55	N57P21008B	Screw	KP0801049
6	171C266G22	Yoke With Bushings	KP1601019	56	111C9017P1	Magnet Frame	KP1601067
7	573A608P5	Bushing for Yoke	KP1601020	57	577A190P4	Screw	KP1601068
8	171C219P1	Brake Shoe	KP1601021	58	282A867P2	Manual-Release Rod	KP1301073
9	305A4800P4	Lining And Support Plate Assy	KP1601022	59	282A766P1	Armature Gap Indicator	KP1601070
10	282A875P10	Clamp for Lining	KP1601023	60	N22P29040B6	Hinge Screw	KP1301075
11	282A875P4	Clamp for Lining	KP1601024	61	N530P1008B6	Drive Screw	KP1301076
12	N93P29016	Screw	KP1301027	62	5144467P1	Torque Spring	KP1601073
13	287A121P4	Bearing Pin For RH Yoke	KP1601026	63	282A886P4	Spring Seat	KP1601074
14	N200P39	Nut For Bearing Pin	KP1601027	64	282A753P1	Retainer	KP1601075
15	287A122P4	Bearing Pin For LH Yoke	KP1601028	65	282A768P4	Adjusting Screw	KP1601076
16	282A763P3	Seal	KP1601029	66	978B347P2	Magnet Core	KP1601077
17	282A770P9	Thrust Washer	KP1601030	66A	282A852P2	Shim	KP1601078
18	577A124P3	Set Screw for Brake Shoe	KP1601031	67	282A859P4	Retainer for Magnet Coil	KP1601079
19	282A862P4	Friction Plug for Brake Shoe	KP1601032	68	282A861P8	Stud for Magnet Core	KP1601080
21	282A860P14	Guide Pin For Spring	KP1601033	69	394B561P1	Back Plate, Outer	KP1601081
22	N908P227B	Retain Ring for Friction Plug	KP1301037	69	394B588P1	Back Plate, Inner	KP1601082
24A	138A1173P4	Pivot Arm for Yoke	KP1601035	70	N93P35076	Screw	KP1601083
25	287A120P4	Pivot Pin For Yoke	KP1601036	71	218A6420G3	Conduit Cover	KP1601084
33A	138A1174P4	Spring Strip for Pivot Arm	KP1601037	*	139B8693G1	Torque Gauge Assy	KP1601085
33B	138A1178P4	Backing Strip	KP1601038	*	139B8693G1	Torque Gauge Assy	KP1601086
33C	N22P25032B6	Screw Fastening Spring Strip	KP1601039				
33D	104B9965P4	Support for Pivot Arm	KP1601040				
33e	N21P29020	Adjusting Screw for Pivot Arm	KP1301046				
33F	138A1175P4	Guide for Pivot Arm	KP1601042				
33g	N21P29024	Adj Screw for Pivot Arm	KP1601043				
33h	N21P29024	Adj Screw for Pivot Arm	KP1601043				
34	104B9964P4	Tie Rod	KP1601045				
35	577A142P20	Spacer for Tie Rod	KP1601046				
36	5144483P1	Compression Spring	KP1601047				
37	N402AP50B6	Spring Seat	KP1601048				

Replacement Parts for:

19" GE IC9528 A104 BRAKE

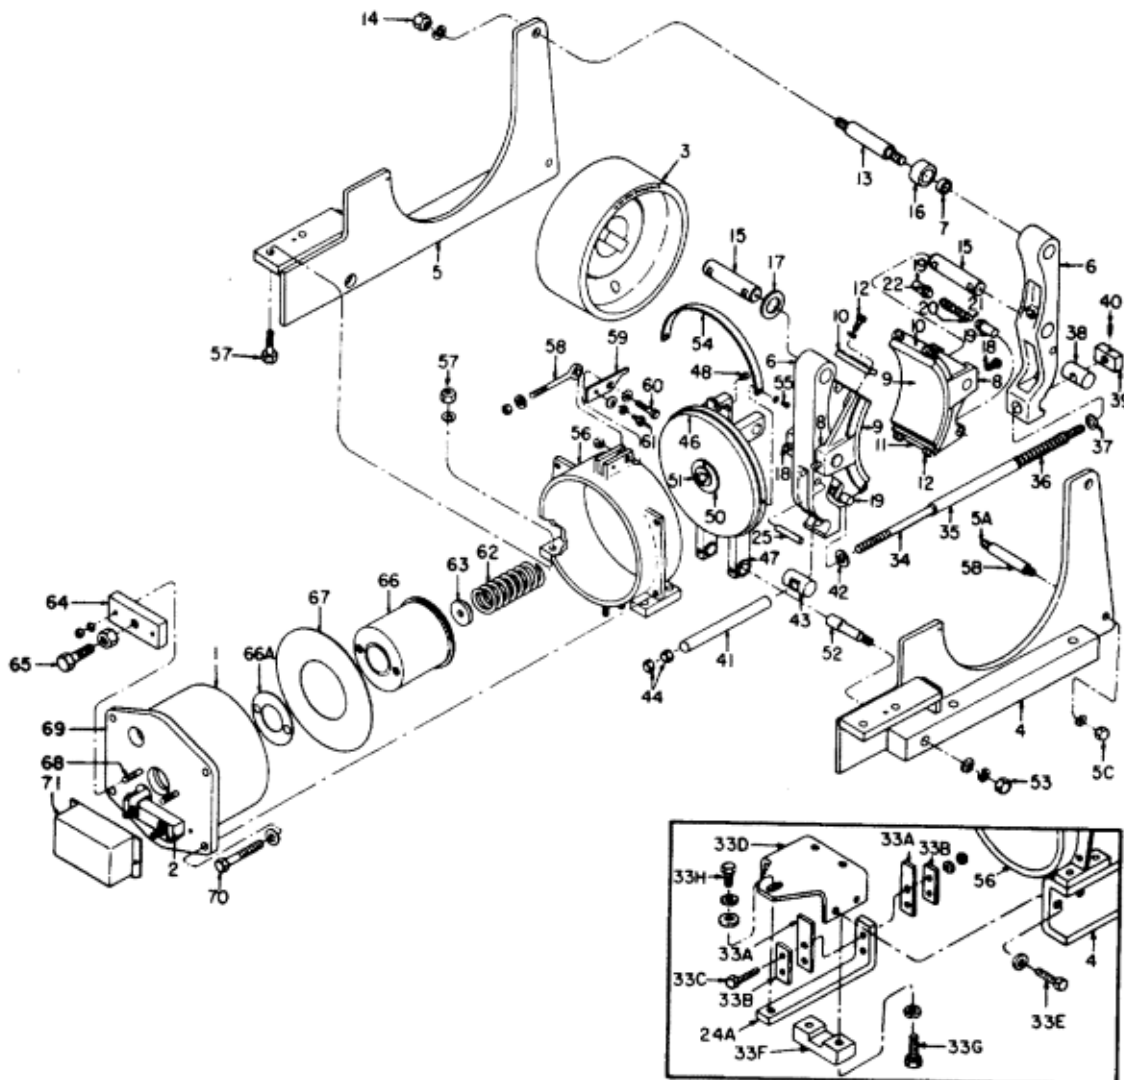


Replacement Parts for:

19" GE IC9528 A104 BRAKE

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1D180G101	Coil	KP1901001	39	233B565P4	Nut for Tie Rod	KP1601050
1	1D180G112	Coil	KP1901002	40	N70P2110B6	Set Screw	KP1601051
1	1D180G103	Coil	KP1901003	41	577A129P28	Tube	KP1601052
1	1D180G001	Shunt Coil	KP1901004	42	N402AP50B6	Spring Seat	KP1601048
1	1D180G101	Coil, 75-100 HP	KP1901005	43	287A125P5	Stainless Steel Rocker Pin	KP1901053
1	1D180G104	Coil	KP1901006	43	138A1191P5	Stainless Steel Rocker Pin	KP1901054
1	1D180G105	Coil	KP1901007	43	138A1176P5	Rocker Pin	KP1901055
1	1D180G106	Coil	KP1901008	44	N227P82	Tie Rod Nut	KP1601057
1	1D180G107	Coil	KP1901009	46	229B796G5	Armature with Bushings	KP1901057
1	1D180G108	Coil	KP1901010	47	573A608P8	Bushing for Armature	KP1901058
1	1D180G109	Coil	KP1901011	48	577A124P4	Set Screw for Armature	KP1901059
1	1D180G100	SeriesCoil	KP1901012	50	282A758P1	Spring Seat	KP1901060
4	171C246G21	Frame Front	KP1901013	51	N21P29020	Adjusting Screw for Pivot Arm	KP1301046
5	171C246G22	Frame Rear	KP1901014	52	576A106P1	Bearing Pin	KP1901062
05A	282A872P5	Tie Stud	KP1901015	53	N206P45B	Nut for Bearing Pin	KP1901063
05B	229B790P11	Spacer For Tie Stud	KP1901016	53	N200P45	Nut For Bearing Pin	KP1901025
6	171C266G23	Yoke With Bushings	KP1901017	54	282A775P5	Dust Cap	KP1901065
7	573A608P7	Bushing for Yoke	KP1901018	55	N57P21008B	Screw	KP0801049
8	171C221P1	Brake Shoe	KP1901019	56	111C9019P1	MagnetFrame	KP1901067
9	305A4800P5	Bonded Lining & Support Plate	KP1901020	57	577A190P12	Screw	KP1901068
10	282A875P11	Clamp for Lining	KP1901021	58	282A867P3	Manual-Release Rod	KP1901069
11	282A875P5	Clamp for Lining	KP1901022	59	282A760P1	Armature Gap Indicator	KP1901070
12	N24P33020	Screw	KP1901023	60	N22P39064B6	Hinge Screw	KP1901071
13	287A121P5	Bearing Pin For RH Yoke	KP1901024	61	N530P1008B6	Drive Screw	KP1301076
14	N200P45	Nut For Bearing Pin	KP1901025	62	5144480P1	Torque Spring	KP1901073
15	287A122P5	Bearing Pin For LH Yoke	KP1901026	63	282A886P5	Spring Seat	KP1901074
16	282A763P4	Seal	KP1901027	64	282A754P1	Retainer	KP1901075
17	282A770P10	SpringWasher	KP1901028	65	282A768P5	Adjusting Screw	KP1901076
18	577A124P4	Set Screw for Brake Shoe	KP1901029	66	978B347P3	Magnet Core	KP1901077
19	282A862P5	Friction Plug for Brake Shoe	KP1901030	66A	282A852P3	Shim	KP1901078
20	2418893P1	Spring For Friction Plug	KP1901031	67	138A2586P1	Retainer for Magnet Coil	KP1901079
21	282A869P11	Guide Pin for Spring	KP1901032	68	282A861P5	Stud for Magnet Core	KP1901080
22	N908P229B	Retain Ring for Friction Plug	KP1901033	69	394B562P1	Back Plate, Outer	KP1901081
24A	138A1173P5	Pivot Arm for Yoke	KP1901034	69	394B589P1	Back Plate, Inner	KP1901082
25	287A120P5	Pivot Pin For Yoke	KP1901035	70	N93P39096	Screw	KP1901083
33A	138A1174P5	Spring Strip for Pivot Arm	KP1901036	71	218A6420G3	Conduit Cover	KP1601084
33B	138A1178P5	Backing Strip	KP1901037				
33C	N22P29036B6	Screw Fastening Spring Strip	KP1901038				
33D	104B9965P5	Support for Pivot Arm	KP1901039				
33e	N24P33020	Screw	KP1901023				
33F	138A1175P5	Guide for Pivot Arm	KP1901041				
33g	N21P33032	Adj Screw for Pivot Arm	KP1901042				
33h	N21P33032	Adj Screw for Pivot Arm	KP1901042				
34	104B9964P5	Tie Rod	KP1901044				
35	577A142P21	Spacer for Tie Rod	KP1901045				
36	5144484P1	Compression Spring	KP1901046				
37	N402AP50B6	Spring Seat	KP1601048				
38	285A839P5	Rocker Pin	KP1901048				

Replacement Parts for:

23" GE IC9528 A105 BRAKE

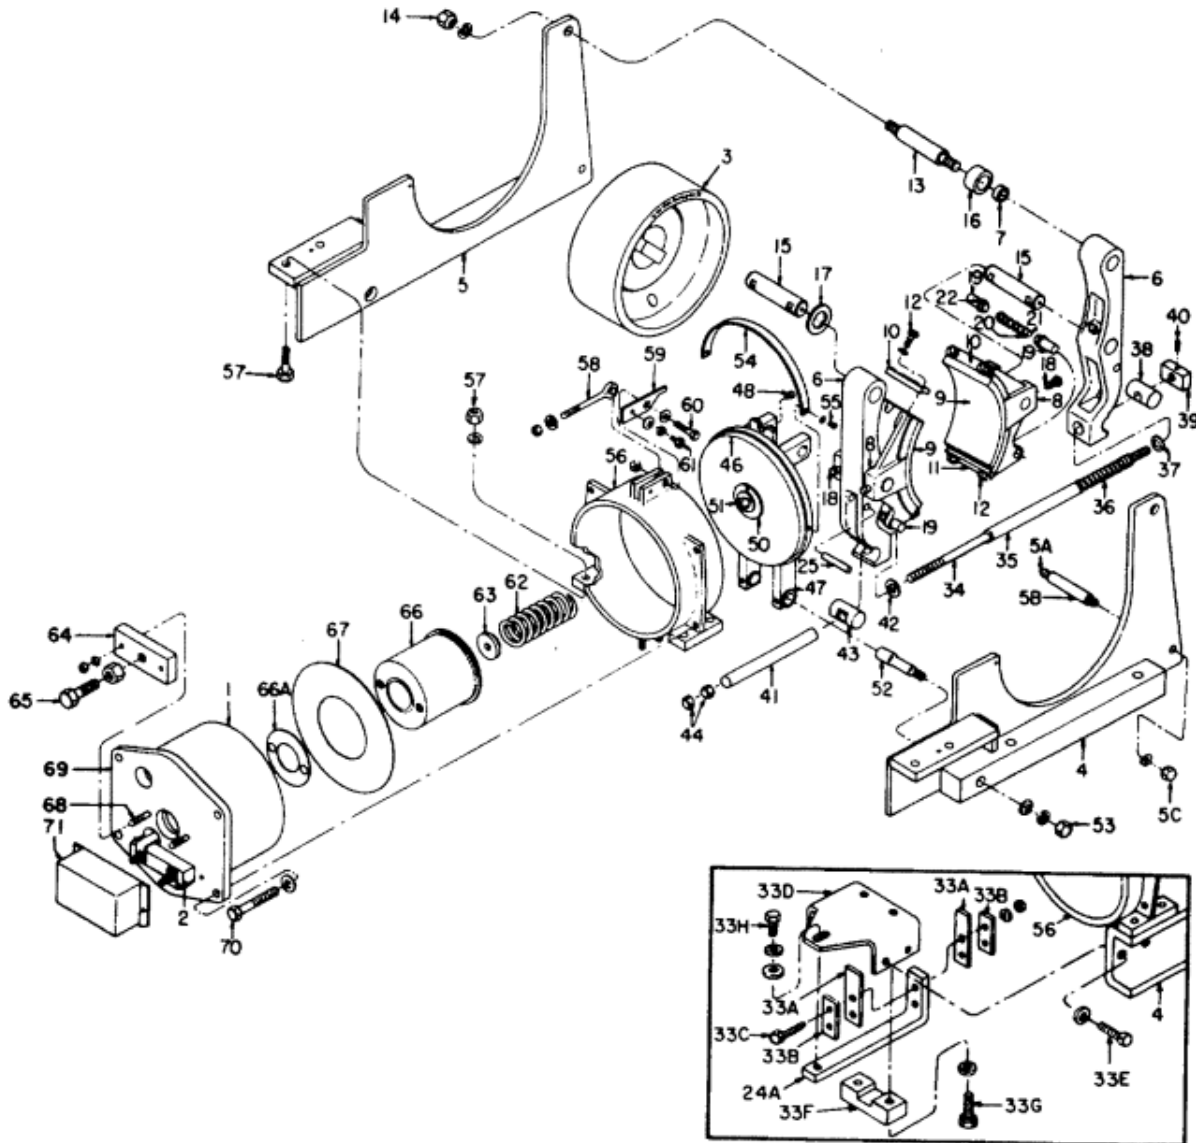

Replacement Parts for:

23" GE IC9528 A105 BRAKE

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1D181G100	Coil	KP2301001	34	104B9964P6	Tie Rod	KP2301049
1	1D181G113	Coil	KP2301002	35	138A1177G1	Spacer for Tie Rod	KP2301050
1	1D181G114	Coil	KP2301003	36	5144473P1	Compression Spring	KP2301051
1	1D181G108	Coil	KP2301004	37	285A820P1	Spring Seat	KP2301052
1	1D181G001	Coil	KP2301005	38	285A839P6	Rocker Pin	KP2301053
1	1D181G111	Coil	KP2301006	39	233B565P5	Nut for Tie Rod	KP2301054
1	1D181G105	Coil	KP2301007	40	N72P2310B6	Set Screw	KP2301055
1	1D181G101	Coil	KP2301008	41	577A129P12	Tube	KP2301056
1	1D181G102	Coil	KP2301009	42	285A820P1	Spring Seat	KP2301052
1	1D181G103	Coil	KP2301010	43	287A125P6	Stainless Steel Rocker Pin	KP2301058
1	1D181G104	Coil	KP2301011	43	138A1191P6	Stainless Steel Rocker Pin	KP2301059
1	1D181G107	Coil	KP2301012	43	138A1176P6	Rocker Pin	KP2301060
1	1D181G109	Coil	KP2301013	44	N227P43	Tie Rod Nut	KP2301061
1	1D181G110	Coil	KP2301014	46	229B796G6	Armature with Bushings	KP2301062
1	1D181G112	Coil	KP2301015	47	573A608P10	Bushing for Armature	KP2301063
1	1D181G106	Coil	KP2301016	48	577A124P4	Set Screw for Armature	KP1901059
4	171C230G15	Frame Front	KP2301017	50	282A879P1	Spring Seat	KP2301065
5	171C230G16	Frame Rear	KP2301018	51	N21P29032	Screw	KP2301066
05A	282A872P6	Tie Stud	KP2301019	52	287A123P1	Bearing Pin	KP2301067
05B	229B790P12	Spacer For Tie Stud	KP2301020	53	N206P45B	Nut for Bearing Pin	KP1901063
6	171C266G24	Yoke With Bushings	KP2301021	53	N200P45	Nut For Bearing Pin	KP1901025
7	573A608P9	Bushing for Yoke	KP2301022	54	282A775P6	Dust Cap	KP2301070
8	171C223P1	BrakeShoe	KP2301023	55	N57P21008B	Screw	KP0801049
9	305A4800P6	Lining & Support Plate	KP2301024	56	111C9021P1	Magnet Frame	KP2301072
10	282A875P12	Clamp for Lining	KP2301025	57	577A190P13	Screw	KP2301073
11	282A875P6	Clamp for Lining	KP2301026	58	282A867P3	Manual-Release Rod	KP1901069
12	N93P33024	Screw	KP2301027	59	282A760P1	Armature Gap Indicator	KP1901070
13	287A121P6	Bearing Pin For RH Yoke	KP2301028	60	N22P39064B6	Hinge Screw	KP1901071
14	N200P45	Nut For Bearing Pin	KP1901025	61	N530P1008B6	Drive Screw	KP1301076
15	287A122P6	Bearing Pin For LH Yoke	KP2301030	62	5144457P1	Spring, Outer	KP2301078
16	282A763P5	Seal	KP2301031	62	5144458P1	Torque Spring, Inner	KP2301079
17	282A770P11	Thrust Washer	KP2301032	62	514457P1	Torque Spring, Outer	KP2301080
18	577A124P4	Set Screw for Brake Shoe	KP1901029	64	282A755P1	Retainer	KP2301081
19	282A862P6	Friction Plug for Brake Shoe	KP2301034	65	282A768P6	Adjusting Screw	KP2301082
20	5144464P1	Spring For Friction Plug	KP2301035	66	978B347P4	Magnet Core	KP2301083
20	2418884P1	Spring For Friction Plug	KP1301035	66A	282A852P4	Shim	KP2301084
21	282A869P7	Guide Pin for Spring	KP2301037	67	138A2586P2	Retainer for Magnet Coil	KP2301085
22	N908P237B	Retain Ring for Friction Plug	KP2301038	68	282A861P5	Stud for Magnet Core	KP1901080
24A	138A1173P6	Pivot Arm for Yoke	KP2301039	69	394B590P1	Back Plate, Inner	KP2301087
25	287A120P6	Pivot Pin For Yoke	KP2301040	69	394B563P1	Back Plate, Outer	KP2301088
33A	138A1174P6	Spring Strip for Pivot Arm	KP2301041	70	N93P39096	Screw	KP1901083
33B	138A1178P6	BackingStrip	KP2301042	71	218A6420G5	Conduit Cover	KP2301090
33C	N22P29036B6	Screw Fastening Spring Strip	KP1901038	*	282A888P1	Spring Seat	KP0801045
33D	104B9965P6	Support for Pivot Arm	KP2301044				
33E	N21P33024	Screw	KP2301045				
33F	138A1175P6	Guide for Pivot Arm	KP2301046				
33G	N21P33032	Adj. Screw for Pivot Arm	KP1901042				
33H	N21P325028	Adjusting Screw	KP2301048				

Replacement Parts Catalog for

CLARK

Table of Contents

106 TYPE B DC MAGNETIC BRAKES

CLARK 8" DC MAGNETIC BRAKE.....	177-178
CLARK 10" DC MAGNETIC BRAKE.....	179-180
CLARK 13" DC MAGNETIC BRAKE.....	181-182
CLARK 16" DC MAGNETIC BRAKE.....	183-184
CLARK 19" DC MAGNETIC BRAKE.....	185-186
CLARK 23" DC MAGNETIC BRAKE.....	187-188

CONTACTORS

D.C. MAGNETIC CONTACTOR FORM 100-4RD.....	189-190
D.C. MAGNETIC CONTACTOR FORM 150-4RD.....	191-192
D.C. MAGNETIC CONTACTOR FORM 300-4RD.....	193-194
D.C. MAGNETIC CONTACTOR FORM 400-4RD.....	195-196
D.C. MAGNETIC CONTACTOR FORM 600-4RD.....	197-198
D.C. MAGNETIC CONTACTOR FORM 900-4RD.....	199-200
D.C. MAGNETIC CONTACTOR FORM 100-4RT.....	201-202
D.C. MAGNETIC CONTACTOR FORM 150-4RT.....	203-204
D.C. MAGNETIC CONTACTOR FORM 300-4RT.....	205-206
D.C. MAGNETIC CONTACTOR FORM 400-4RT.....	207-208
D.C. MAGNETIC CONTACTOR FORM 100-4RS.....	209-210
D.C. MAGNETIC CONTACTOR FORM 150-5RS.....	211-212
D.C. MAGNETIC CONTACTOR FORM 300-5RS.....	213-214
D.C. MAGNETIC CONTACTOR FORM 400-5RS.....	215-216
D.C. MAGNETIC CONTACTOR FORM 600-5RS.....	217-218
D.C. MAGNETIC CONTACTOR FORM 100-3L3A.....	219
D.C. MAGNETIC CONTACTOR FORM 150-3R3A.....	220
D.C. MAGNETIC CONTACTOR FORM 400-3R3A.....	221
D.C. MAGNETIC CONTACTOR TYPE KD 100 AMP.....	222-223
D.C. MAGNETIC CONTACTOR TYPE KD 150 AMP.....	224-225
D.C. MAGNETIC CONTACTOR TYPE KD 300 AMP.....	226-227

If you are unable to locate the part you need, call our sales department and they can further assist you.

Clark is a registered trademark of Sylvania Electrical Control

Replacement Parts Catalog for

CLARK

Table of Contents


106 TYPE B DC MAGNETIC BRAKES

MASTER SWITCH - TYPE RD, RDS.....	228
HATCHWAY LIMIT SWITCH, TYPE HL.....	229
TYPE AP ANTI-PLUG RELAY.....	230
TYPE CH RELAY.....	231
TYPE FL FIELD LOSS RELAY.....	232
TYPE P PLUGGING RELAY.....	233
TYPE VT VARI-TIME RELAY.....	234
TYPE VR VOLTAGE RELAY.....	235
TYPE VTH VARI-TIME RELAY.....	236
TYPE XVR RELAY.....	237

If you are unable to locate the part you need, call our sales department and they can further assist you.

Clark is a registered trademark of Sylvania Electrical Control

Replacement Parts for: 8" Clark DC Magnetic Brake

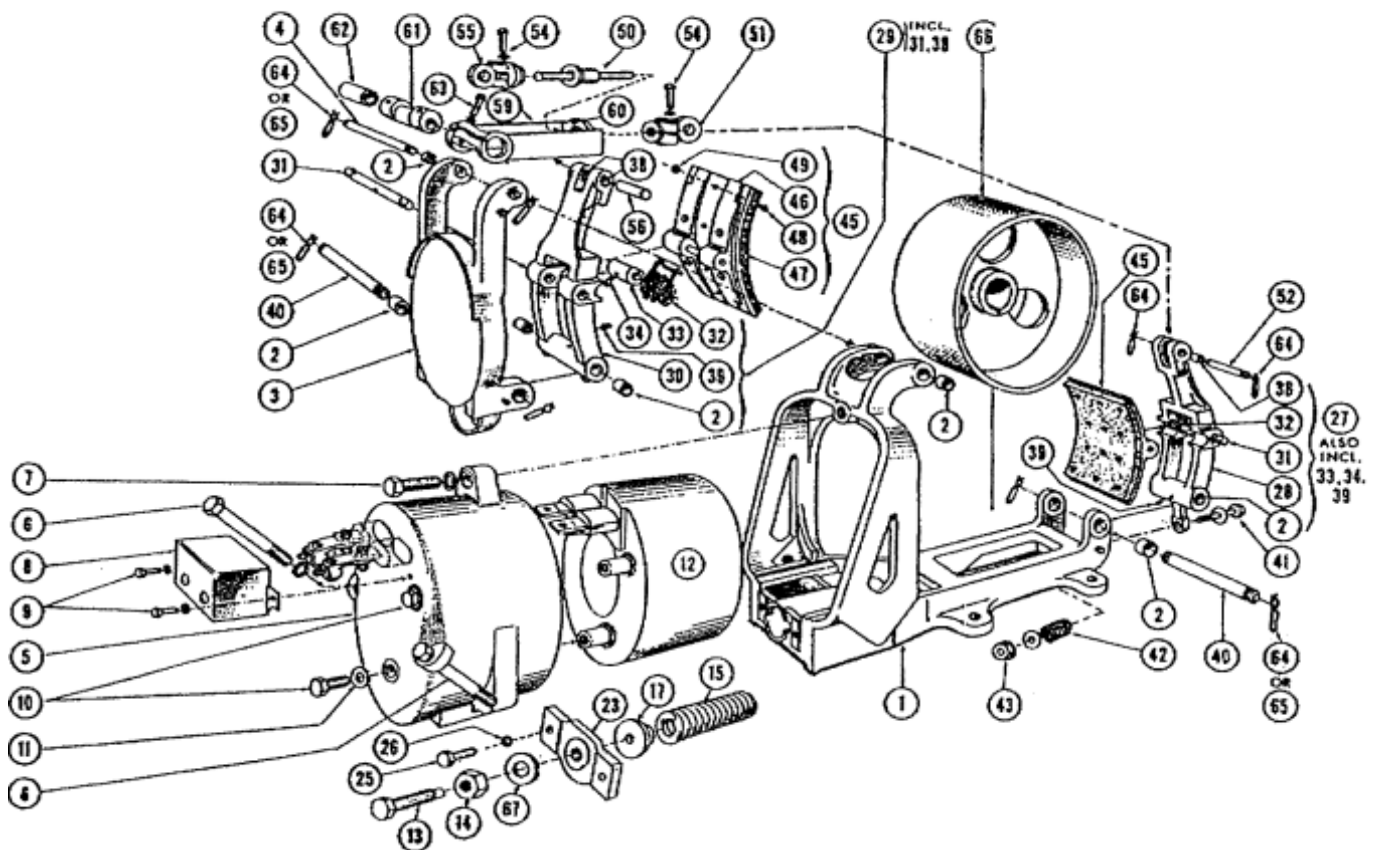


Replacement Parts for: 8" Clark DC Magnetic Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	B106-230103A	Frame	KP0831001	64	A106-230148	Retainers, Bearing Pin	KP0831051
2	A106-230140	Bushing	KP0831002	67	T-282-1	Spring Washer	KP0831052
3	A106-230105A	Armature	KP0831003				
4	T-103-49	Bearing Pin	KP0831004				
5	B106-230162A	Magnet Case	KP0831005				
6	T-121-151	Magnet Case Bolts	KP0831006				
7	T-121-136	Bolt	KP0831007				
8	B106-230155	Terminal Shield	KP0831008				
9	T-121-45	Terminal Shield Bolts	KP0831009				
10	T-121-76	Magnet Coil Bolts	KP0831010				
11	T-2-392	Washer	KP0831011				
12	B106-230108-A1	8" Shunt Coil	KP0831012				
12	A106-230101	8" Brake Assembly	KP0831013				
12	B106-230108-A13	Coil	KP0831014				
12	B106-230108-A14	Coil	KP0831015				
12	B106-230108-A16	Coil	KP0831016				
13	A106-230139-1	Torque Adjusting Screw	KP0831017				
14	T-115-58	Nut	KP0831018				
15	A106-230135	Torque Spring	KP0831019				
17	A106-230138	Spring Seat	KP0831020				
18	T-152-31	Torque Indicator Pin	KP0831021				
23	A106-230 136A	Pressure Plate	KP0831022				
25	T-121-83	Bolt	KP0831023				
26	T-155-15	Washer	KP0831024				
28	A106-230 111A	Assembled Outer Arm	KP0831025				
30	A106-230113A	Assembled Inner Arm	KP0831026				
35	A106-230141A	Shoe Retainer Plate Assembly	KP0831027				
36	T-145-1	Lock Screw	KP0831028				
37	T-155-14	Washer	KP0831029				
38	A106-230140	Bushing	KP0831002				
39	T-233-1	Alemite Fittings	KP0831031				
40	T-103-48	Bearing Pin, Lower Arm	KP0831032				
41	T-121-62	Bolt, Outer Arm Release	KP0831033				
42	A106-230158	Release Spring, Outer Arm	KP0831034				
43	T-281-3	Lock Nut	KP0831035				
45	A106-230128A	Assembled Brake Shoe & Lining	KP0831036				
46	A106-230129A	Brake Shoe, less lining	KP0831037				
47	A106-230131	Shoe Lining	KP0831038				
48	T-122-24	Shoe Lining Screw	KP0831039				
49	T-281-1	Lock Nut	KP0831040				
50	A106-230116A	Adjusting Bar	KP0831041				
51	A106-230122A	Outer Bar Eye	KP0831042				
52	T-103-47	Bearing Pin, Outer Bar Eye	KP0831043				
54	T-121-241	Bar Eye Clamp Bolt	KP0831044				
55	A106-230124A	Inner Bar Eye	KP0831045				
56	A106-230147	Bearing Pin, Inner Bar Eye	KP0831046				
59	B106-230169	Equalizer Yoke	KP0831047				
60	T-152-21	Gauge Pin	KP0831048				
61	A106-230132A	Bushing	KP0831049				
63	T-121-50	Lock Bolt, Equalizer Yoke	KP0831050				

Replacement Parts for:

10" Clark DC Magnetic Brake

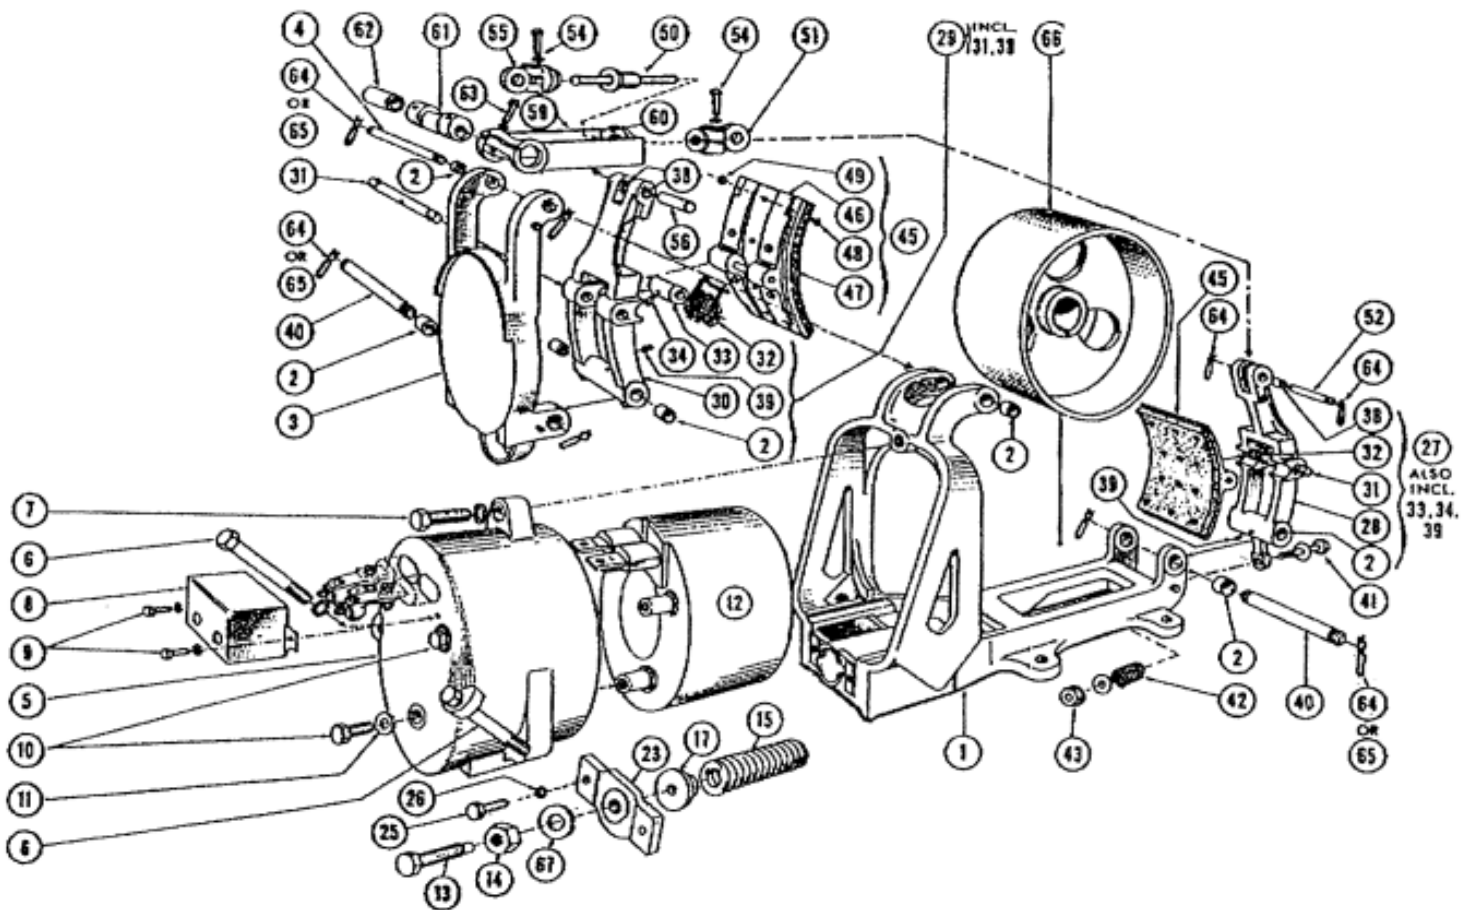

Replacement Parts for:

10" Clark DC Magnetic Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	C106-194781A	Frame	KP1031001	55	A106-194786A	Inner Bar Eye	KP1031049
2	A106-194824	Bushing	KP1031002	56	A1 06-194815-4	Bearing Pin, Inner Bar Eye	KP1031050
3	A106-194707A	Armature	KP1031003	59	B106-194783	Equalizer Yoke	KP1031051
4	T-103-33	Bearing Pin	KP1031004	60	T-152-2I	Gauge Pin	KP0831048
5	C106-194709	Magnet Case	KP1031005	61	A106-194731	Eccentric Bushing	KP1031053
6	T-121-230	Bolt	KP1031006	63	T-121-86	Lock Bolt, Equalizer Yoke	KP1031054
7	T-121-160	Bolt	KP1031007	64	A106-65143	Retainer, Bearing Pin	KP1031055
8	A106-194739	Terminal Shield	KP1031008	67	T-282-2	Spring Washer	KP1031056
9	T-121-41	Bolt	KP1031009				
10	T-121-75	Bolt	KP1031010				
11	T-2-392	Washer	KP0831011				
12	B106-194710-A1	10" Shunt Coil	KP1031012				
12	B106-194710-A7	Coil	KP1031013				
12	B106-194710-A8	10" Series Coil	KP1031014				
12	B106-194710-A9	Coil	KP1031015				
12	B106-194710-A4	Series Coil	KP1031016				
12	B106-194710-A8	Coil	KP1031017				
13	A106-230139-1	Torque Adjusting Screw	KP0831017				
14	T-115-58	Nut	KP0831018				
15	A106-194723	Torque Spring	KP1031020				
17	A106-230138-2	Spring Seat	KP1031021				
23	A106-194782	Pressure Plate	KP1031022				
24	T-215-2	Release Spring, Outer Arm	KP1031023				
25	T-121-136	Bolt	KP0831007				
26	T-155-20	Washer	KP1031025				
27	A106-194773A	Assembled Outer Arm & Shoe	KP1031026				
28	A106-194772A	Assembled Outer Arm	KP1031027				
29	A106-194771A	Assembled Inner Arm & Shoe	KP1031028				
30	A106-194770A	Assembled Inner Arm	KP1031029				
31	A106-194774A	Shoe Clamp Shaft & Stop Pin	KP1031030				
32	B106-194839	Shoe Clamp Spring	KP1031031				
33	A106-194776	Shoe Clamp Cam	KP1031032				
34	T-143-2	Shoe Clamp Cam Shaft Screw	KP1031033				
38	A106-194824	Bushing	KP1031002				
39	T-233-1	Alemite Fittings	KP0831031				
40	T-103-32	Bearing Pin, Lower Arm	KP1031036				
41	T-121-182	Bolt	KP1031037				
42	T-215-2	Release Spring, Outer Arm	KP1031023				
43	T-281-4	Lock Nut	KP1031039				
45	A106-194720A	Assembled Brake Shoe & Lining	KP1031040				
46	A106-194734A	Brake Shoe without Lining	KP1031041				
47	B106-194722	Shoe Lining	KP1031042				
48	T-122-25	Shoe Lining Screws	KP1031043				
49	T-281-1	Lock Nut	KP0831040				
50	B106-194718A	Adjusting Bar	KP1031045				
51	A106-194784A	Outer Bar Eye	KP1031046				
52	T-103-22	Bearing Pin, Outer Bar Eye	KP1031047				
54	T-121-242	Lock Bolt	KP1031048				

13" Clark DC Magnetic Brake




Replacement Parts for:

13" Clark DC Magnetic Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	C106-200844A	Frame	KP1331001	52	T-103-22	Bearing Pin, Outer Bar Eye	KP1031047
2	A106-194836	Bushing	KP1331002	54	T-121-242	Lock Bolt	KP1031048
3	A106-194819A	Armature	KP1331003	55	A106-194786A	Inner Bar Eye	KP1031049
4	T-103-20	Bearing Pin	KP1331004	56	A106-194815-4	Bearing Pin, Inner Bar Eye	KP1031050
5	D106-194821	Magnet Case	KP1331005	59	B106-200549	Equalizer Yoke	KP1331053
6	T-121-197	Magnet Case Bolts (Bottom)	KP1331006	60	T-152-21	Gauge Pin	KP0831048
7	T-121-70	Magnet Case Bolt	KP1331007	61	A106-194831	Eccentric Bushing	KP1331055
8	A106-194873	Terminal Shield	KP1331008	63	T-121-249	Lock Bolt, Equalizer Yoke	KP1331056
9	T-121-43	Terminal Shield Bolts	KP1331009	64	A106-65143	Retainer, Bearing Pin	KP1031055
10	T-121-132	Magnet Coil Bolts	KP1331010	67	T-282-2	Spring Washer	KP1031056
11	T-2-386	Washer	KP1331011	*	T-121-170	Magnet Case Bolts (Top)	KP1331059
12	B106-194872-A7	13" Series Coil	KP1331012				
12	B106-194872-A1	13" Shunt Coil	KP1331013				
12	B106-194872-A3	13" Series Coil	KP1331014				
12	B106-194872-A4	13" Series Coil	KP1331015				
12	B106-194872-A5	13" Series Coil	KP1331016				
12	B106-194872-A6	13" Series Coil	KP1331017				
12	B106-194872-A11	13" Series Coil	KP1331018				
12	B106-194872-A16	Coil	KP1331019				
12	B106-194872-A13	Series Coil	KP1331020				
13	A106-230139-2	Torque Adj Screw	KP1331021				
14	T-115-61	Nut	KP1331022				
15	A106-194830	Torque Spring	KP1331023				
17	A106-230138-3	Spring Seat	KP1331024				
23	A106-200547	Pressure Plate	KP1331025				
25	T-121-136	Bolt	KP0831007				
26	T-155-20	Washer	KP1031025				
27	A106-200536A	Outer Arm, Complete	KP1331028				
28	A106-200537A	Assembled Outer Arm	KP1331029				
29	A106-200538A	Inner Arm, Complete	KP1331030				
30	A106-200539A	Inner Arm Assembled	KP1331031				
31	A106-200540A	Shoe Clamp Shaft & Stop Pin	KP1331032				
32	B106-194839	Shoe Clamp Spring	KP1031031				
33	A106-194776	Shoe Clamp Cam	KP1031032				
34	T-143-2	Shoe Clamp Cam Shaft Screw	KP1031033				
38	A106-194824	Bushing	KP1031002				
39	T-233-1	Alemite Fittings	KP0831031				
40	T-103-21	Bearing Pin, Lower Ann	KP1331038				
41	T-121-183	Bolt, Outer Arm Release	KP1331039				
42	T-215-2	Release Spring, Outer Arm	KP1031023				
43	T-281-4	Lock Nut	KP1031039				
45	A106-194805A	Assembled Brake Shoe & Lining	KP1331042				
46	A106-194876A	Brake Shoe less lining	KP1331043				
47	C106-194828	Shoe Lining	KP1331044				
48	T-122-55	Shoe Lining Screws	KP1331045				
49	T-281-2	Lock Nut	KP1331046				
50	B106-194832A	Adjusting Bar	KP1331047				
51	A106-194784A	Outer Bar Eye	KP1031046				

Replacement Parts for:

16" Clark DC Magnetic Brake

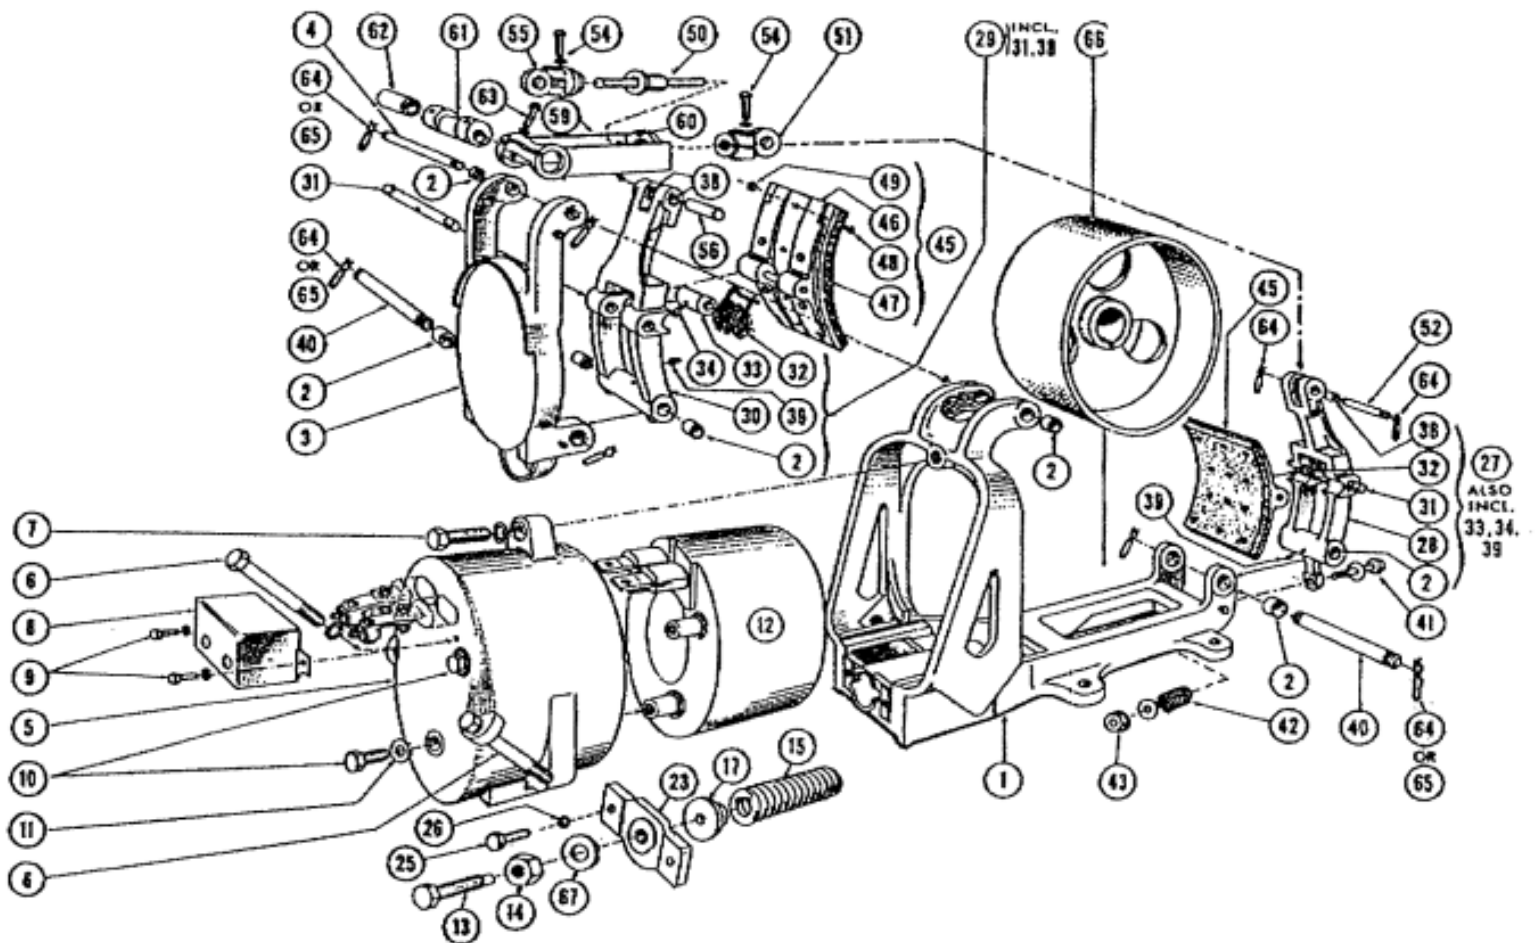


Replacement Parts for:

16" Clark DC Magnetic Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	C106-194966A	Frame	KP1631001	54	T-121-140	Lock Bolt	KP1631049
2	A106-200686	Bushing	KP1631002	55	A106-194986A	Inner Bar Eye	KP1631050
3	A106-194907	Armature	KP1631003	56	A106-194815-3	Bearing Pin, Inner Bar Eye	KP1631051
4	T-103-23	Bearing Pin	KP1631004	59	B106-194983	Equalizer Yoke	KP1631052
5	D 106-194909	Magnet Case	KP1631005	60	T-152-22	Gauge Pin	KP1631053
6	T-121-228	Magnet Case Bolts (Bottom)	KP1631006	61	A106-194924	Eccentric Bushing	KP1631054
7	T-121-200	Magnet Case Bolts (Top)	KP1631007	64	A106-65143	Retainer, Bearing Pin	KP1031055
8	B106-194944	Terminal Shield	KP1631008	65	A106-65072	Retainer, Bearing Pin	KP1631056
9	T-121-43	Terminal Shield Bolts	KP1331009	67	T-282-3	Washer	KP1631057
10	T-121-206	Magnet Coil Bolts	KP1631010				
11	T-2-389	Washer	KP1631011				
12	B106-194941-0001	16" Shunt Coil	KP1631012				
12	B106-194941-A8	16" Series Coil	KP1631013				
12	B 106-194941-A3	16" Series Coil	KP1631014				
12	B 106-194941-A4	16" Series Coil	KP1631015				
12	B106-194941-A5	16" Series Coil	KP1631016				
12	B106-194941-A6	16" Series Coil	KP1631017				
12	B106-194941-A7	16" Series Coil	KP1631018				
12	B106-194941-A10	16" Series Coil	KP1631019				
12	B106-194941-A11	16" Series Coil	KP1631020				
13	A106-230139-3	Torque Adj Screw	KP1631021				
14	T-115-69	Nut	KP1631022				
15	A106-194930	Torque Spring	KP1631023				
17	A106-230138-4	Spring Seat	KP1631024				
23	A106-194981	Pressure Plate	KP1631025				
25	T-121-159	Bolt for Pressure Plate	KP1631026				
26	T-155-23	Washer	KP1631027				
27	A106-194913A	Outer Arm, Complete	KP1631028				
28	A106-194914A	Assembled Outer Arm	KP1631029				
29	A106-194938A	Inner Arm, Complete	KP1631030				
30	A106-194939A	Inner Arm Assembled	KP1631031				
31	A106-194975A	Shoe Clamp Shaft & Stop Pin	KP1631032				
32	B106-200669	Shoe Clamp Spring	KP1631033				
33	A106-200688	Shoe Clamp Cam	KP1631034				
34	T-143-2	Shoe Clamp Cam Shaft Screw	KP1031033				
38	A106-194836	Bushing	KP1331002				
39	T-233-1	Alemite Fittings	KP0831031				
40	T-103-25	Bearing Pin, Lower Arm	KP1631038				
42	T-215-3	Release Spring, Outer Arm	KP1631039				
43	T-281-4	Lock Nut	KP1031039				
45	A106-194927A	Assembled Brake Shoe & Lining	KP1631041				
46	A106-194940A	Brake Shoe less lining	KP1631042				
47	C106-194929	Shoe Lining	KP1631043				
48	T-122-57	Shoe Lining Screws	KP1631044				
49	T-281-2	Lock Nut	KP1331046				
50	B106-194918A	Adjusting Bar	KP1631046				
51	A106-194984A	Outer Bar Eye	KP1631047				
52	T-103-24	Bearing Pin, Outer Bar Eye	KP1631048				

Replacement Parts for:

19" Clark DC Magnetic Brake

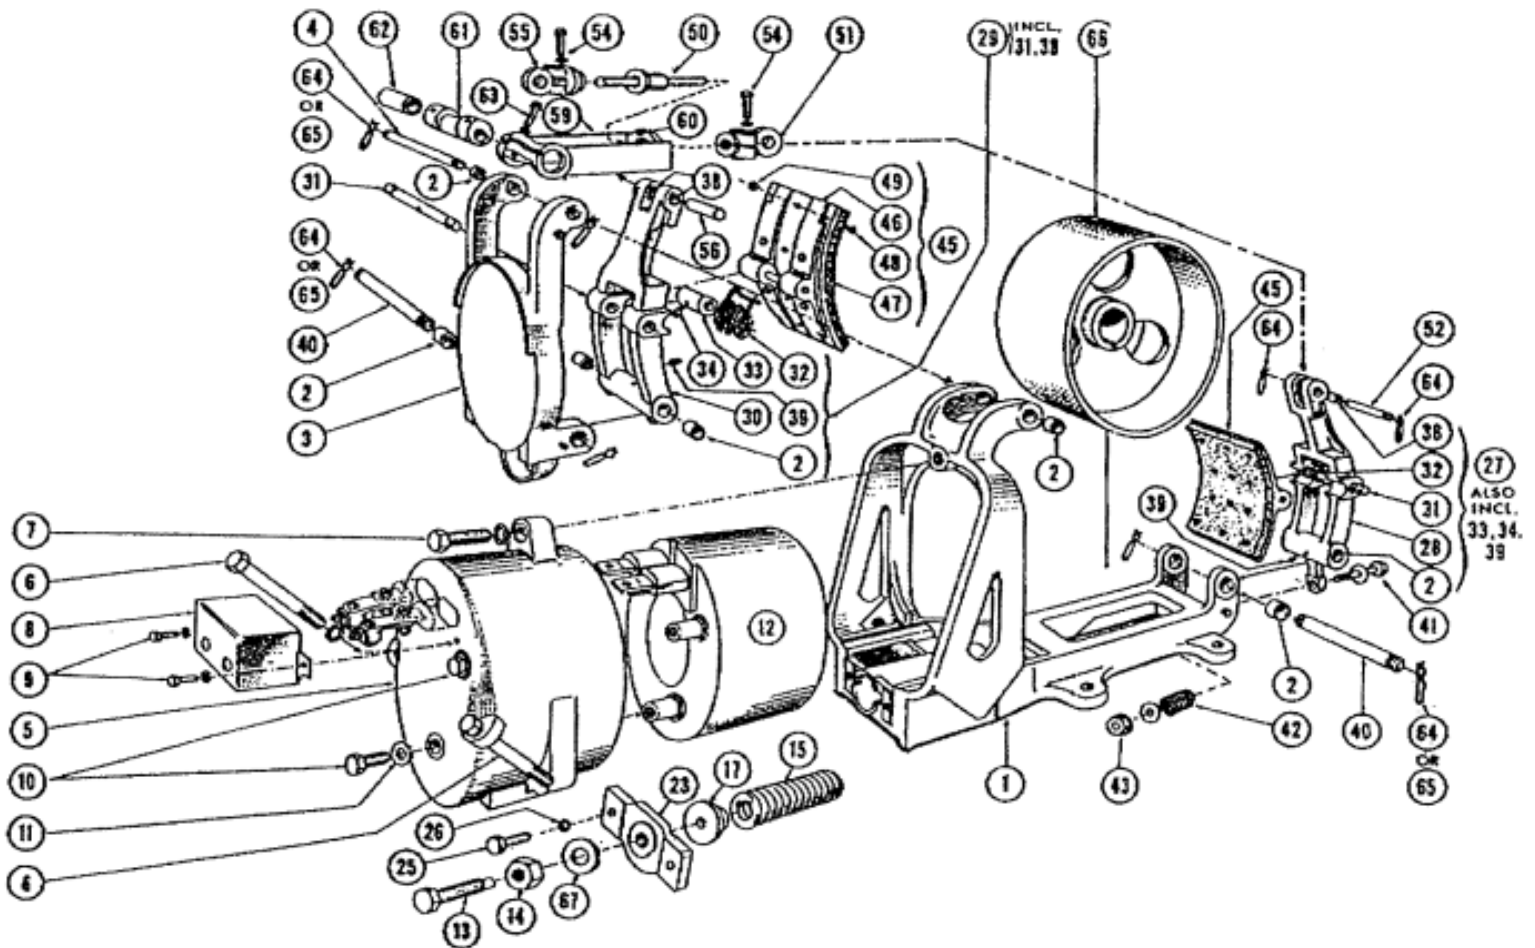


Replacement Parts for:

19" Clark DC Magnetic Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	C106-200712A	Frame	KP1931001	54	T-121-160	Bolt	KP1031007
2	A106-200687	Bushing	KP1931002	55	A106-200720A	Inner Bar Eye	KP1931050
3	A106-200657A	Armature	KP1931003	56	A106-194815-2	Bearing Pin, Inner Bar Eye	KP1931051
4	T-103-26	Bearing Pin	KP1931004	59	B106-200717	Equalizer Yoke	KP1931052
5	D106-200660	Magnet Case	KP1931005	60	T-152-23	Gauge Pin	KP1931053
6	T-121-229	Magnet Case Bolts (Bottom)	KP1931006	61	A106-200677	Eccentric Bushing	KP1931054
7	T-121-175	Magnet Case Bolts (Top)	KP1931007	63	T-121-242	Lock Bolt	KP1031048
8	B106-200696	Terminal Shield	KP1931008	64	A106-65072	Retainer, Bearing Pin	KP1631056
9	T-121-43	Terminal Shield Bolts	KP1331009	65	A106-79064	Retainer, Bearing Pin	KP1931057
10	1121-206	Magnet Coil Bolts	KP1631010	67	T-282-4	Spring Washer	KP1931058
11	T-2-389	Washer	KP1631011				
12	B106-200703-A5	19" Series Coil	KP1931012				
12	B106-200703-A2	19" Series Coil	KP1931013				
12	B106-200703-A3	19" Series Coil	KP1931014				
12	B106-200703-A4	19" Series Coil	KP1931015				
12	B106-200703-A6	19" Series Coil	KP1931016				
12	B106-200703-A7	19" Series Coil	KP1931017				
12	B106-200703-A8	19" Series Coil	KP1931018				
12	B106-200703-A1	19" Shunt Coil	KP1931019				
13	A106-230139-4	Torque Adj Screw	KP1931020				
14	T-115-89	Nut	KP1931021				
15	A106-200683	Torque Spring	KP1931022				
17	A106-230138-5	Spring Seat	KP1931023				
23	A106-200715	Pressure Plate	KP1931024				
25	T-121-136	Bolt	KP0831007				
26	T-155-20	Washer	KP1031025				
27	A106-200664A	Outer Arm, Complete	KP1931027				
28	A106-200665A	Assembled Outer Arm	KP1931028				
29	A106-200693A	Inner Arm, Complete	KP1931029				
30	A106-200694A	Inner Arm Assembled	KP1931030				
31	A106-200709A	Shoe Clamp Shaft & Stop Pin	KP1931031				
32	B106-200669	Shoe Clamp Spring	KP1631033				
33	A106-200688	Shoe Clamp Cam	KP1631034				
34	T-143-2	Shoe Clamp Cam Shaft Screw	KP1031033				
38	A106-200686	Bushing	KP1631002				
39	T-233-1	Alemite Fittings	KP0831031				
40	T-103-28	Bearing Pin, Lower Arm	KP1931037				
41	T-121-255	Bolt, Outer Arm Release	KP1931038				
42	T-215-3	Release Spring, Outer Arm	KP1631039				
43	T-281-4	Lock Nut	KP1031039				
45	A106-200680A	Assembled Brake Shoe & Lining	KP1931041				
46	A106-200704A	Brake Shoe less lining	KP1931042				
47	C106-200682	Shoe Lining	KP1931043				
48	T-122-57	Shoe Lining Screws	KP1631044				
49	T-281-2	Locknut	KP1331046				
50	B106-200671A	Adjusting Bar	KP1931046				
51	A106-200718A	Outer Bar Eye	KP1931047				
52	T-103-27	Bearing Pin, Outer Bar Eye	KP1931048				

23" Clark DC Magnetic Brake

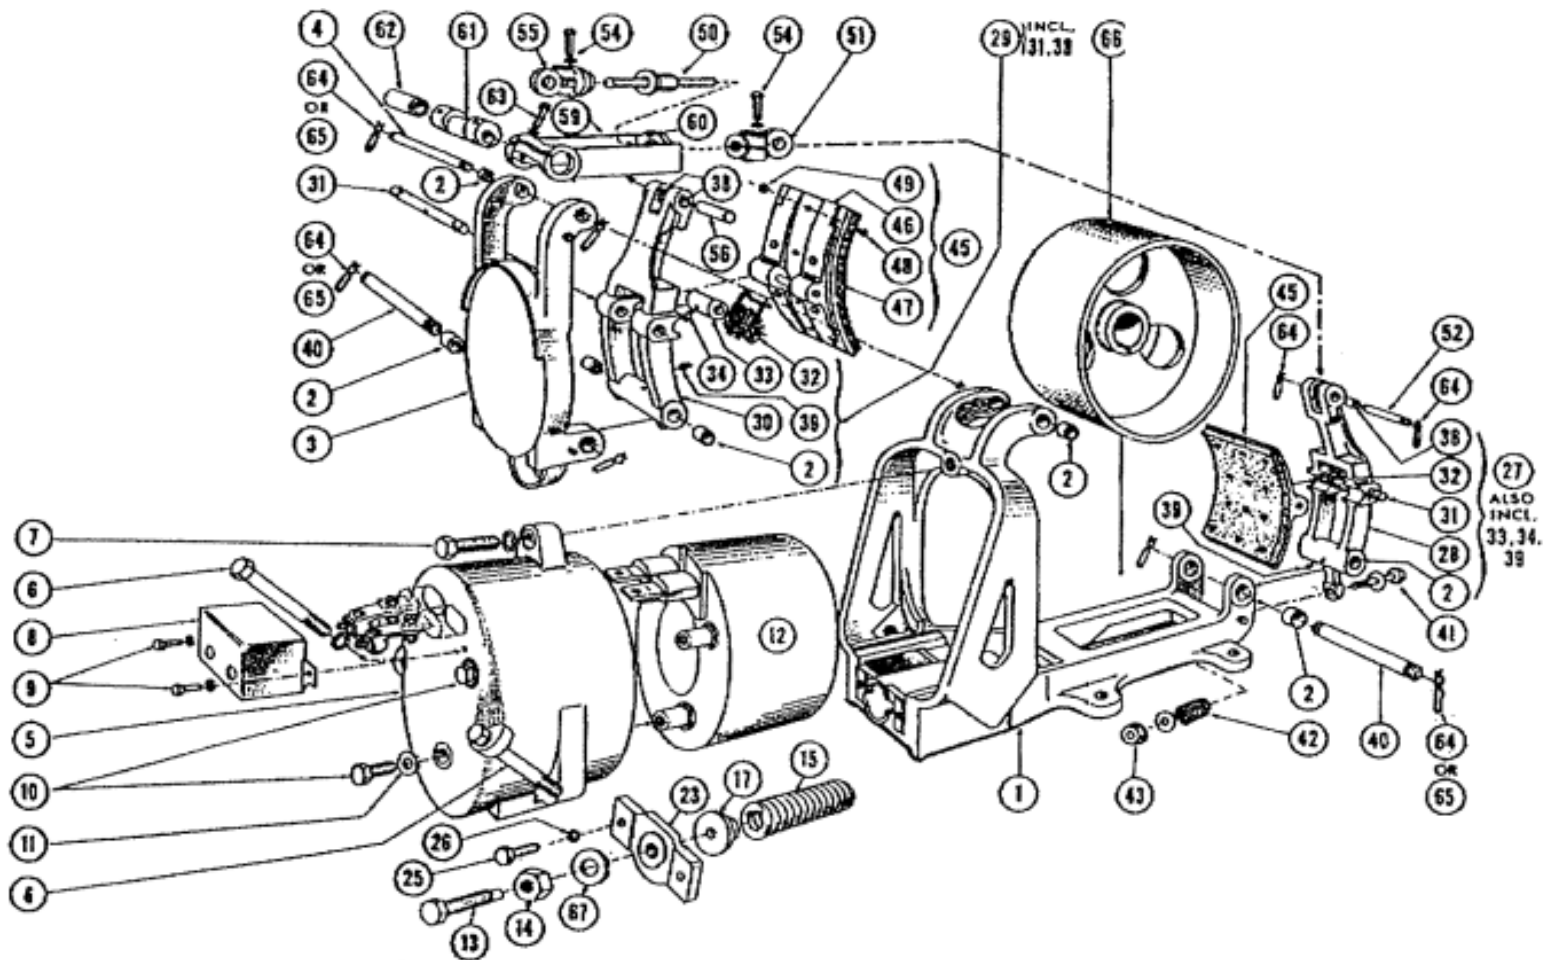


Replacement Parts for:

23" Clark DC Magnetic Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	D106-200504A	Frame	KP2331001	51	A106-200718A	Outer Bar Eye	KP1931047
2	A106-200687	Bushing	KP1931002	52	T-103-27	Bearing Pin, Outer Bar Eye	KP1931048
3	A106-200457A	Armature	KP2331003	54	T-121-160	Bolt	KP1031007
4	T-1 03-29	Bearing Pin	KP2331004	55	A106-200720A	Inner Bar Eye	KP1931050
5	D106-200459	Magnet Case	KP2331005	56	A106-194815-2	Bearing Pin, Inner Bar Eye	KP1931051
6	T-121-204	Magnet Case Bolts (Bottom)	KP2331006	59	B106-200511	Equalizer Yoke	KP2331054
7	T-121-203	Magnet Case Bolts (Top)	KP2331007	60	T-152-23	Gauge Pin	KP1931053
8	B106-200476	Terminal Shield	KP2331008	61	A106-200474	Eccentric Bushing	KP2331056
8	T-121-43	Terminal Shield Bolts	KP1331009	62	A106-200471	Eccentric Bushing Spacer	KP2331057
10	T-121-167	Magnet Coil Bolts	KP2331010	63	T-121-205	Lock Bolt, Equalizer Yoke	KP2331058
11	T-2-388	Washer	KP2331011	64	A106-65072	Retainer, Bearing Pin	KP1631056
12	B106-200460-A5	23" Series Coil	KP2331012	65	A106-79064	Retainer, Bearing Pin	KP1931057
12	B106-200460-A2	23" Series Coil	KP2331013	67	T-282-4	Spring Washer	KP1931058
12	B106-200460-A3	23" Series Coil	KP2331014				
12	B106-200460-A4	23" Series Coil	KP2331015				
12	B106-200460-A1	23" Shunt Coil	KP2331016				
13	A10G-220139-4	Torque Adj Screw	KP2331017				
14	T-115-89	Nut	KP1931021				
15	A106-200480	Torque Spring	KP2331019				
17	A10G-230138-6	Spring Seat	KP2331020				
18	A106-194850A	Torque Indicator Rod	KP2331021				
19	A106-194859	Spring	KP2331022				
20	A106-194861	Rod Spring	KP2331023				
21	T-2-145	Washer	KP2331024				
22	T-115-19	Hex Nut	KP2331025				
24	A106-200509	Pressure Plate	KP2331026				
25	T-121-159	Bolt for Pressure Plate	KP1631026				
26	T-155-23	Washer	KP1631027				
27	A106-200497A	Outer Arm, Complete	KP2331029				
28	A106-200499A	Assembled Outer Arm	KP2331030				
29	A106-200498A	Inner Arm, Complete	KP2331031				
30	A106-200500A	Inner Arm Assembled	KP2331032				
31	A106-200494A	Shoe Clamp Shaft & Stop Pin	KP2331033				
32	B106-200669	Shoe Clamp Spring	KP1631033				
33	A106-200688	Shoe Clamp Cam	KP1631034				
34	T-143-2	Shoe Clamp Cam Shaft Screw	KP1031033				
38	A106-200686	Bushing	KP1631002				
39	T-233-1	Alemite Fittings	KP0831031				
40	T-103-30	Bearing Pin, Lower Arm	KP2331039				
41	T-121-255	Bolt, Outer Arm Release	KP1931038				
42	T-215-3	Release Spring, Outer Arm	KP1631039				
43	T-281-4	Lock Nut	KP1031039				
45	A106-200477A	Assembled Brake Shoe & Lining	KP2331043				
46	A106-200472A	Brake Shoe less lining	KP2331044				
47	B106-200479	23" Shoe Lining	KP2331045				
48	T-122-57	Shoe Lining Screws	KP1631044				
49	T-281-2	Lock Nut	KP1331046				
50	B106-200468A	Adjusting Bar	KP2331048				

Replacement Parts for:

D.C. Magnetic Contactor Form 100-4RD

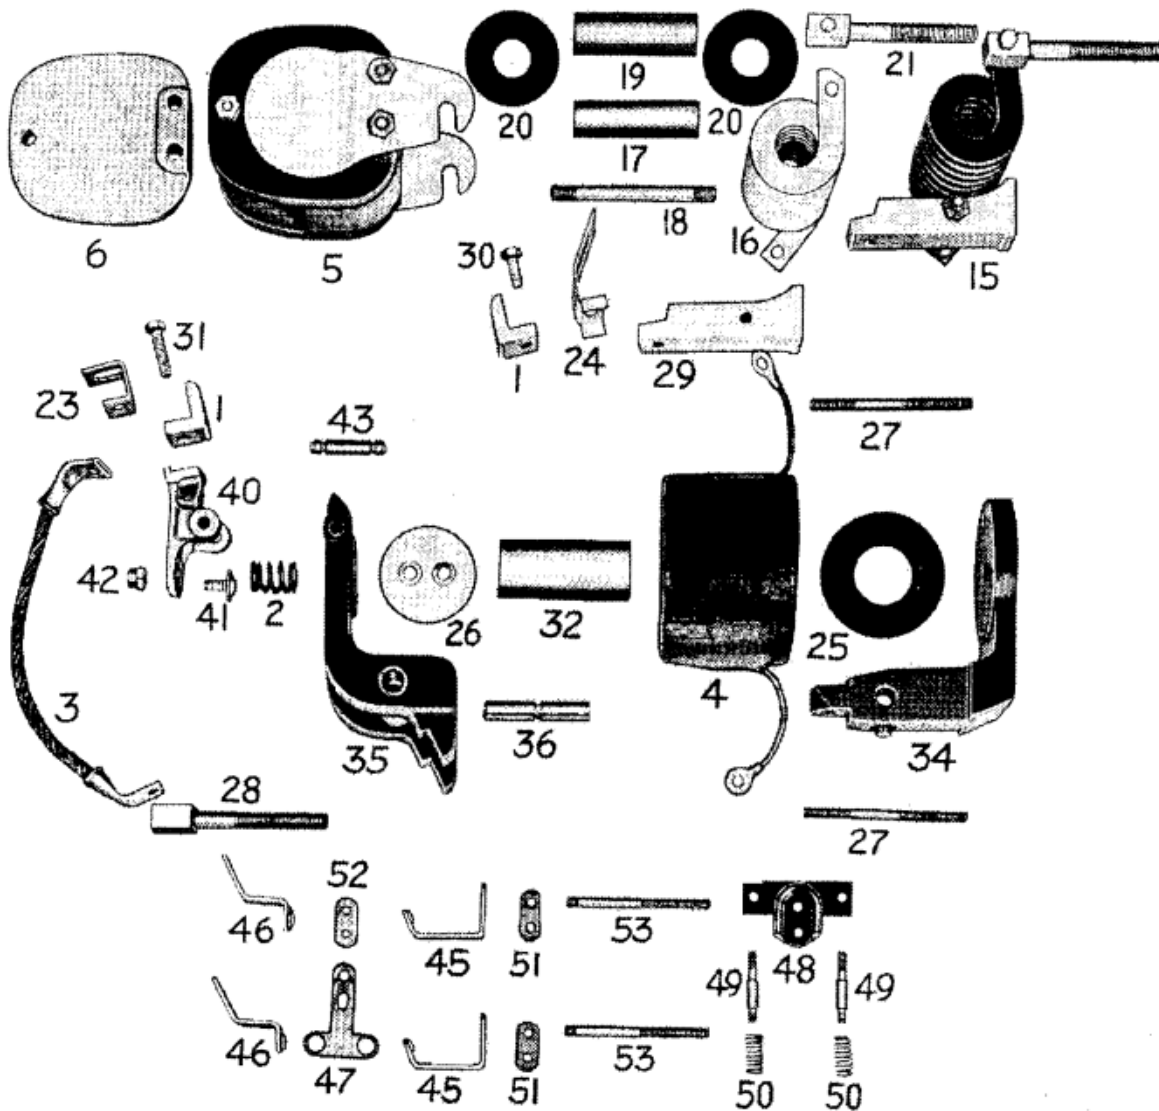


Replacement Parts for:

D.C. Magnetic Contactor Form 100-4RD

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-1936	Contact (Main-Mov& Sta)	KP4031001	42	A18-9469	Mov Contact Support Lock Nut	KP4131049
2	A18-2518	Contact Spring-Back Connected	KP4131002	43	A18-24379	Moving Contact Support Pin	KP4131050
3	A18-2510A	Connector	KP4131003	44	A18-2535	Stop Stud	KP4131051
4	TB-17-3	Coil, 115V	KP4131004	45	A18-9465A	Stationary Control Contact	KP4131052
4	TB-17-1	Coil, 230V	KP4131005	46	A18-9466A	Stationary Control Contact	KP4131053
4	TB-17-2	Coil, 550V	KP4131006	47	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
4	TB-16-3	Coil, 115V	KP4131007	48	A18-2544	Aux Contact Insulator	KP4131055
4	TB-16-1	Coil, 230V	KP4131008	49	A18-9477	Aux Contact Stud	KP4131056
4	TB-16-2	Coil, 550V	KP4131009	50	A18-9483	Spring	KP4131057
5	A18-22027A	Arc Shield, Assembly	KP4131010	51	A18-2543	Aux Contact Base Plate	KP4131058
6	A18-21305	Arc Shield Side Plate	KP4131011	52	A18-2542	Aux Contact Plate	KP4131059
7	T-38-65	Arc Shield Washer	KP4131012	53	T-7-36	Aux Stud	KP4131060
8	T-120-99	Arc Shield Stud	KP4131013	53	T-7-150	Aux Stud	KP4131061
9	T-120-96	Arc Shield Stud	KP4131014				
10	A18-21324	Arc Barrier, Front	KP4131015				
11	A18-8124	Arc Barrier, Rear	KP4131016				
11	A16-8124	Arc Barrier, Rear	KP4131017				
13	A18-2528	Blowout Ear, R.H	KP4131018				
14	A18-2529	Blowout Ear, L.H	KP4131019				
15	A18-23678A	Blowout Coil, Assembly	KP4131020				
16	A18-23679	Blowout Coil	KP4131021				
17	T-24-92	Blowout Core	KP4131022				
18	T-121-28	Blowout Core Stud	KP4131023				
19	T-39-169	Blowout Core Insulator	KP4131024				
20	T-38-38	Blowout Washer	KP4131025				
21	A18-23680	Blowout Stud	KP4131026				
22	A18-23682	Blowout Spacer	KP4131027				
24	A16-8126	Arc Horn, Rear	KP4131028				
*	A18-2534	Arc Horn, Front	KP4131029				
25	A18-6710	Coil Washer	KP4131030				
26	A18-2548	Coil Clamp	KP4131031				
27	T-7-47	Coil Terminal Stud	KP4131032				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-2551	Connector Stud	KP4131034				
28	A18-16994	Connector Stud	KP4131035				
29	A18-23681	Contact Stud	KP4131036				
30	T-132-21	Contact Screw	KP4031016				
31	T-121-13	Contact Screw	KP4031017				
32	A18-3469	Core	KP4131039				
33	T-2-29	Core Spacer	KP4131040				
34	A18-25357A	Frame	KP4131041				
35	A18-25339A	Main Arm, Assembly	KP4131042				
36	T-66-1	Main Arm Pin	KP4131043				
37	A18-9491-1	Main Arm Bushing, Upper	KP4131044				
38	A18-9474-9	Main Arm Bushing, Lower	KP4131045				
39	T-40-21	Main Arm Bushing, Lower, Brass	KP4131046				
40	A18-26288A	Main Contact Support-Back Conn	KP4131047				
41	A18-5065A	Mov Contact Support Adj Screw	KP4031024				

Replacement Parts for:

D.C. Magnetic Contactor Form 150-4RD

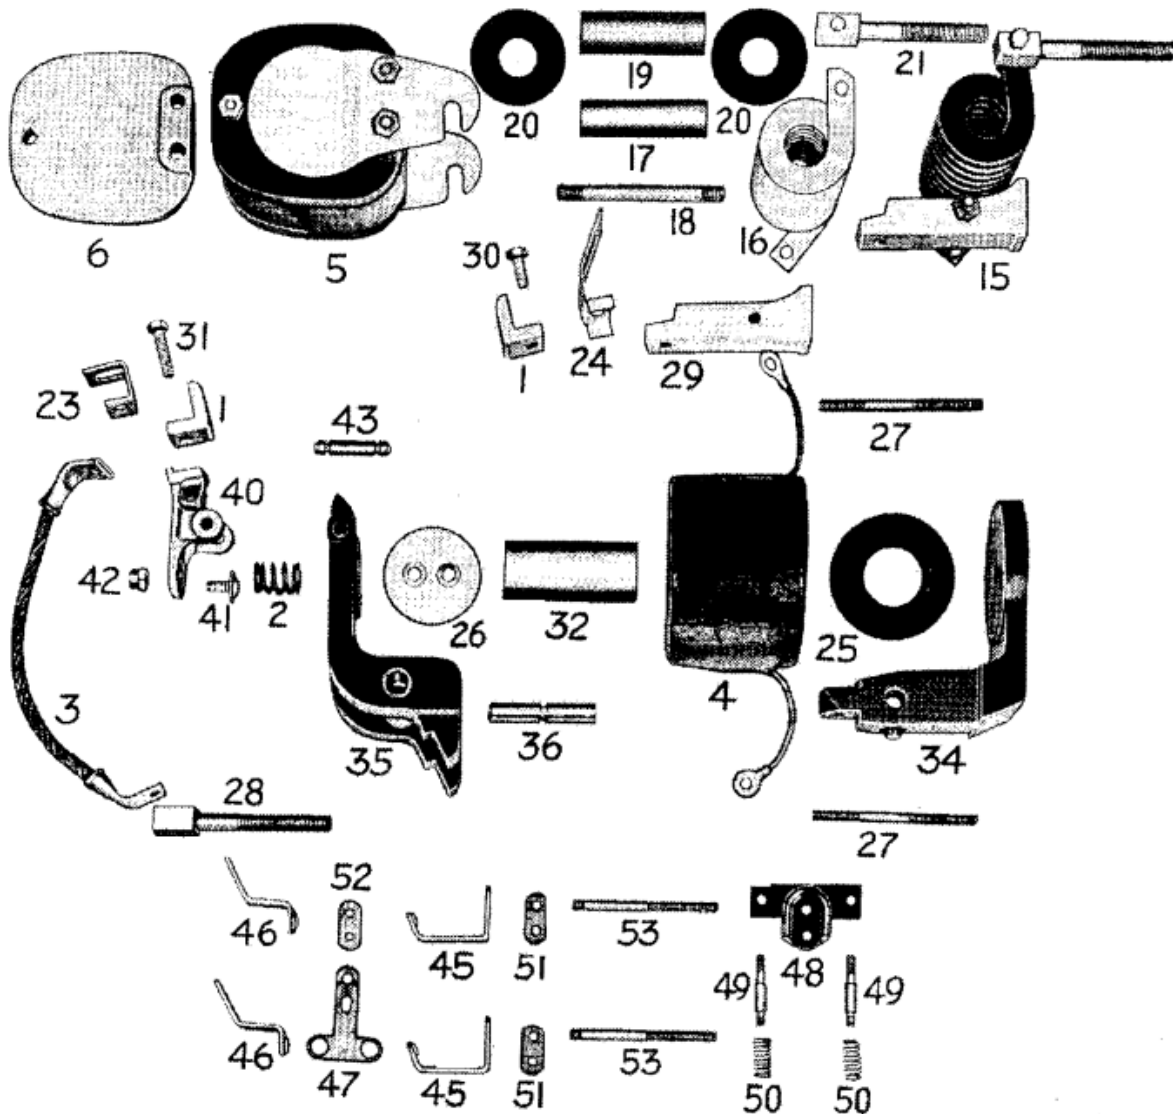


Replacement Parts for:

D.C. Magnetic Contactor Form 150-4RD

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-7980	Contact	KP4431001	42	A18-9469	Mov Contact Support Lock Nut	KP4131049
2	A18-8897	Contact Spring-Back Connected	KP4531002	43	A18-24296	Moving Contact Support Pin	KP4431028
3	A18-8863A	Connector	KP4531003	44	A18-8890	Stop Stud	KP4531051
4	TB-41-1	Coil, 115V	KP4231004	45	A18-9465A	Stationary Control Contact	KP4131052
4	TB-40-1	Coil, 115V	KP4531005	46	A18-9466A	Stationary Control Contact	KP4131053
4	TB-41-2	Coil, 230V	KP4231005	47	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
4	TB-40-2	Coil, 230V	KP4531007	48	A18-2544	Aux Contact Insulator	KP4131055
4	TB-41-3	Coil, 550 VDC	KP4231006	49	A18-9477	Aux Contact Stud	KP4131056
4	TB-40-3	Coil, 550	KP4531009	50	A18-9483	Spring	KP4131057
5	A18-22026A	Arc Shield, Assembly	KP4531010	51	A18-2543	Aux Contact Baseplate	KP4131058
6	A18-21322	Arc Shield Side Plate	KP4531011	52	A18-2542	Aux Contact Plate	KP4131059
7	T-38-65	Arc Shield Washer	KP4131012	53	T-7-47	Coil Terminal Stud	KP4131032
8	T-7-122	Arc Shield Stud	KP4531013	53	T-7-36	Aux Stud	KP4131060
9	T-120-186	Arc Shield Stud	KP4531014	53	T-7-150	Aux Stud	KP4131061
10	A18-21323	Arc Barrier, Front	KP4531015	*	A77-207707-A	Silver Contact Tip	KP4531063
II	A16-8005	Arc Barrier, Rear	KP4531016				
13	A18-3510	Blowout Ear, R.H	KP4531017				
14	A18-3511	Blowout Ear, L.H	KP4531018				
15	A18-23688A	Blowout Coil, Assembly	KP4531019				
16	A18-23689	Blowout Coil	KP4531020				
17	T-24-93	Blowout Core	KP4531021				
18	T-7-123	Blowout Core Stud	KP4431011				
19	T-39-86	Blowout Core Insulator	KP4531023				
20	T-38-36	Blowout Washer	KP4431013				
21	A18-23690	Blowout Stud	KP4431014				
22	A18-23692	Blowout Spacer	KP4531026				
24	A16-8007	Arc Horn, Rear	KP4431004				
*	A16-8008	Arc Horn, Front	KP4531028				
25	A18-24397	Coil Washer	KP4531029				
26	A18-8887	Coil Clamp	KP4531030				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-16994	Connector Stud	KP4131035				
28	A18-8002	Connector Stud	KP4531033				
28	A16-8002	Connector Stud	KP4531034				
29	A18-23691	Contact Stud	KP4431016				
30	T-104-1	Contact Screw	KP4431017				
31	T-104-1	Contact Screw	KP4431017				
32	A18-8883	Core	KP4531038				
33	T-2-29	Core Spacer	KP4131040				
34	A18-25367A	Frame	KP4531040				
35	A18-25343A	Main Arm Assembly	KP4531041				
36	T-66-2	Main Arm Pin	KP4531042				
37	A18-9491-2	Main Arm Bushing, Upper	KP4531043				
38	A18-9474-10	Main Arm Bushing, Lower	KP4531044				
39	T-40-22	Main Arm Bushing, Lower, Brass	KP4531045				
40	A18-26290A-M1	Moving Contact Support	KP4531046				
41	A18-7987A	Mov Contact Support Adj Screw	KP4531047				
41	A16-7981A	Adjusting Screw	KP4431025				

Replacement Parts for:

D.C. Magnetic Contactor Form 300-4RD

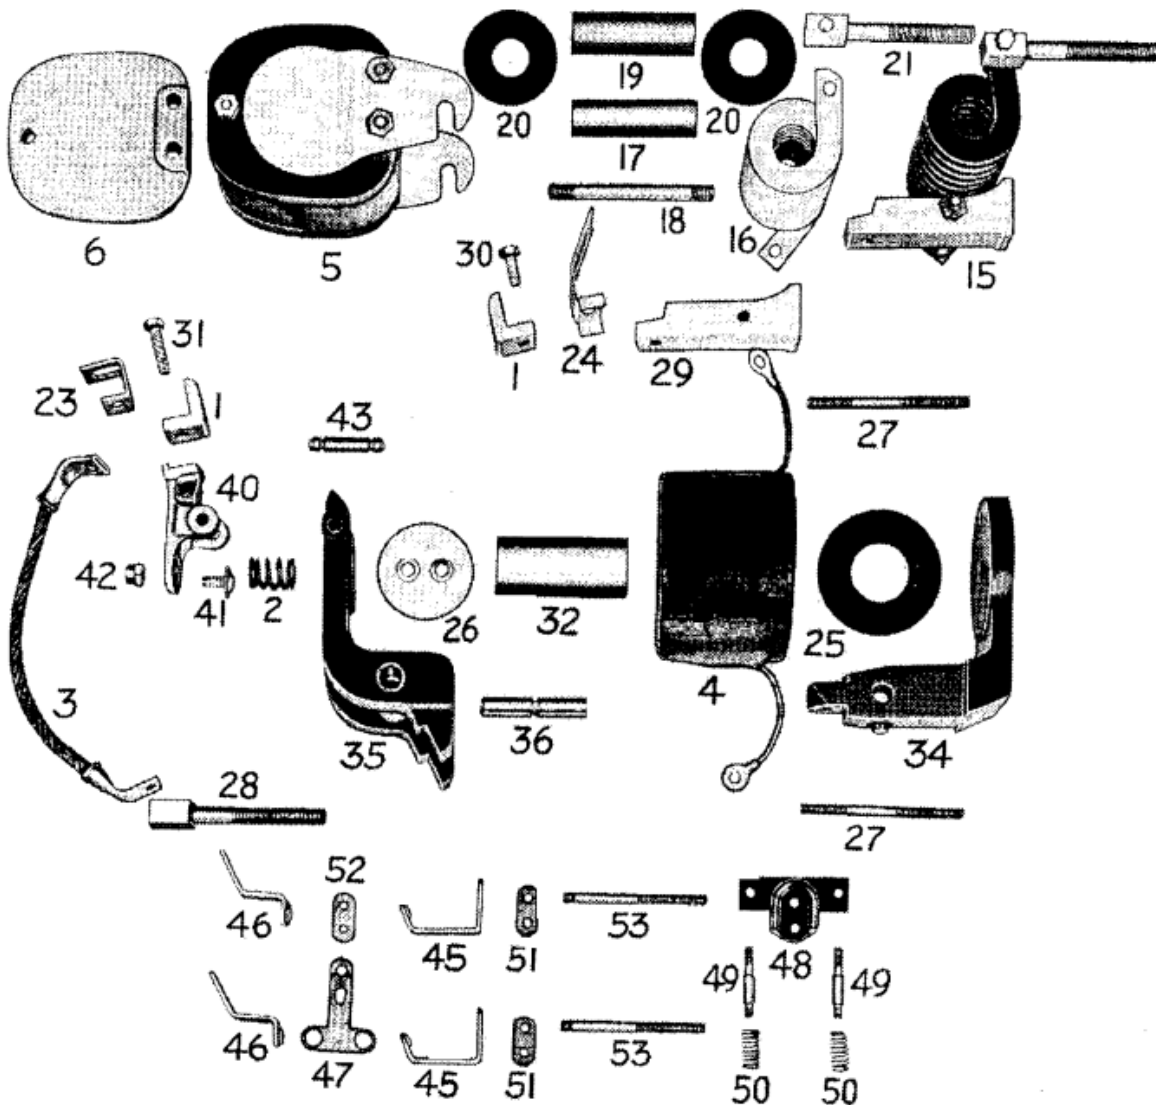


Replacement Parts for:

D.C. Magnetic Contactor Form 300-4RD

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-3504	Contact (Main-Mov & Sta)	KP4831001	40	A18-26292A	Main Contact Support-Back Conn	KP4831049
2	A18-9383	Contact Spring-Back Connected	KP4831002	40	A18-26292A-M1	Moving Contact Support	KP4831050
3	A18-9356A	Connector	KP4831003	41	A18-5594A	Mov Contact Support Adj Screw	KP4731008
4	TB-44-1	Coil, 115V	KP4731004	42	T-115-32	Mov Contact Support Lock Nut	KP4831052
4	TB-43-1	Coil, 115V	KP4831005	43	A18-22714	Moving Contact Support Pin	KP4831053
4	TB-44-2	Coil, 230V	KP4731005	44	A18-9378	Stop Stud	KP4831054
4	TB-43-2	Coil, 230V	KP4831007	45	A18-9109A	Stationary Control Contact	KP4831055
4	TB-44-3	Coil, 550V	KP4731006	46	A18-9110A	Stationary Control Contact	KP4831056
4	TB-43-4	Coil, 550V	KP4831009	47	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
5	A18-21984A	Arc Shield, Assembly	KP4831010	48	A18-2544	Aux Contact Insulator	KP4131055
6	A18-21378	Arc Shield Side Plate	KP4831011	49	A18-9477	Aux Contact Stud	KP4131056
7	T-38-65	Arc Shield Washer	KP4131012	50	A18-9483	Spring	KP4131057
8	T-7-116	Arc Shield Stud	KP4831013	51	A18-2543	Aux Contact Base Plate	KP4131058
9	T-120-187	Arc Shield Stud	KP4831014	52	A18-2542	Aux Contact Plate	KP4131059
10	A18-21379	Arc Barrier, Front	KP4831015	53	T-7-36	Aux Stud	KP4131060
11	A18-8159	Arc Barrier, Rear	KP4831016	53	T-7-150	Aux Stud	KP4131061
11	A16-8159	Arc Barrier, Rear	KP4831017				
13	A18-5573	Blowout Ear, R.H	KP4831018				
14	A18-5574	Blowout Ear, L.H	KP4831019				
15	A18-23883A	Blowout Coil, Assembly	KP4831020				
15	A18-23683A	Blowout Coil Assembly	KP4831021				
16	A18-23684	Blowout Coil	KP4831022				
17	T-24-95	Blowout Core	KP4831023				
18	T-7-117	Blowout Core Stud	KP4831024				
19	T-39-87	Blowout Core Insulator	KP4831025				
20	T-38-37	Blowout Washer	KP4831026				
21	A18-23685	Blowout Stud	KP4831027				
22	A18-23687	Blowout Spacer	KP4831028				
23	A18-3516	Arc Horn, Front	KP4831029				
24	A16-6957	Arc Horn, Rear	KP4831030				
25	A18-24397	Coil Washer	KP4531029				
26	A18-8887	Coil Clamp	KP4531030				
27	T-7-47	Coil Terminal Stud	KP4131032				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-6950	Connector Stud	KP4831035				
28	A16-18115	Connector Stud	KP4831036				
29	A18-23686	Contact Stud	KP4831037				
30	T-104-2	Contact Screw	KP4831038				
31	T-104-2	Contact Screw	KP4831038				
32	A18-9374	Core	KP4831040				
33	T-2-42	Core Spacer	KP4831041				
34	A18-25369A	Frame	KP4831042				
35	A18-25347A	Main Arm Assembly	KP4831043				
36	T-66-3	Main Arm Pin	KP4831044				
37	A18-9491-3	Main Arm Bushing, Upper	KP4831045				
38	A18-9474-11	Main Arm Bushing, Lower	KP4831046				
38	A16-6950	Connector Stud	KP4831047				
39	T-40-23	Main Arm Bushing, Lower, Brass	KP4831048				

Replacement Parts for:

D.C. Magnetic Contactor Form 400-4RD

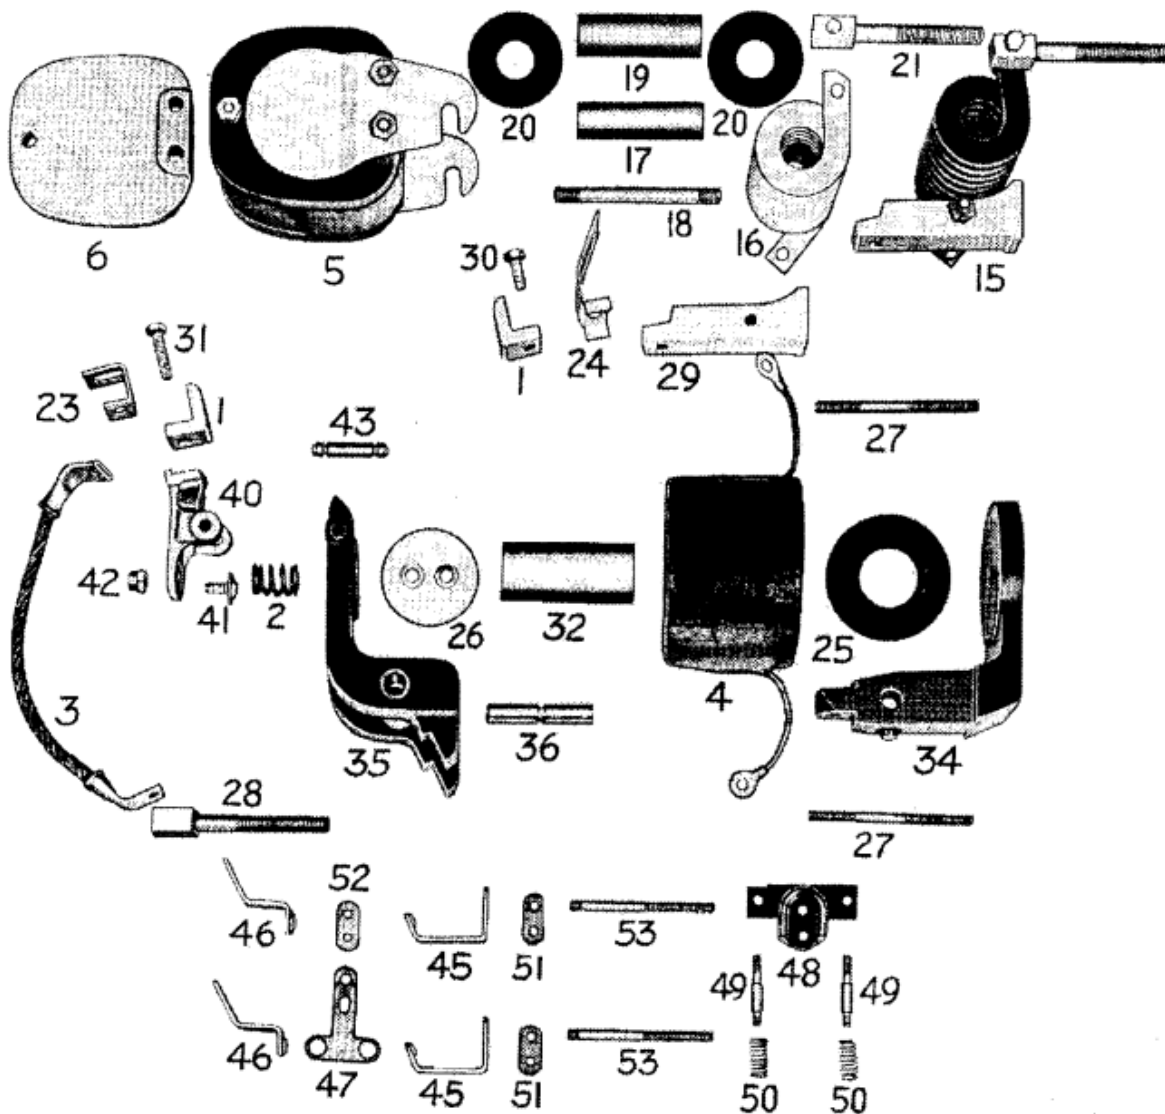


Replacement Parts for:

D.C. Magnetic Contactor Form 400-4RD

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-5581	Contact	KP5231001	45	A18-13823A	Contact	KP5231049
2	A18-5597	Contact Spring-Back Connected	KP5231002	46	A18-13824A	Aux Contact	KP5231050
3	A18-5558A	Connector	KP5231003	47	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
4	TB-31-1	Coil, 115V	KP5231004	48	A18-5586	Aux Contact Insulator	KP5231052
4	TB-30-1	Coil	KP5031004	49	A18-9477	Aux Contact Stud	KP4131056
4	TB-31-2	Coil, 230V	KP5231006	50	A18-9483	Spring	KP4131057
4	TB-30-2	Coil, 230V	KP5031005	51	A18-2543	Aux Contact Base Plate	KP4131058
4	TB-31-3	Coil, 550V	KP5231008	52	A18-2542	Aux Contact Plate	KP4131059
4	TB-30-3	Coil, 550V	KP5231009	53	T-7-47	Coil Terminal Stud	KP4131032
5	A18-22028A	Arc Shield, Assembly	KP5231010	53	T-7-36	Aux Stud	KP4131060
6	A18-21378	Arc Shield Side Plate	KP4831011	53	T-7-150	Aux	KP4131061
7	T-38-65	Arc Shield Washer	KP4131012	*	A18-5579	Aux Stud	KP5231060
8	T-7-99	Arc Shield Stud	KP5231013				
9	T-120-188	Arc Shield Stud	KP5231014				
10	A18-22004	Arc Barrier, Front	KP5231015				
11	A18-5571	Arc Barrier, Rear	KP5231016				
13	A18-5573	Blowout Ear, R.H	KP4831018				
14	A18-5574	Blowout Ear, L.H	KP4831019				
15	A18-23693A	Blowout Coil, Assembly	KP5231019				
16	A18-23694	Blowout Coil	KP5231020				
17	T-24-170	Blowout Core	KP5231021				
18	T-7-101	Blowout Core Stud	KP5231022				
19	T-39-146	Blowout Core Insulator	KP5231023				
20	T-38-56	Blowout Washer	KP5231024				
21	A18-23695	Blowout Stud	KP5231025				
22	A18-23697	Blowout Spacer	KP5231026				
23	A18-5583	Arc Horn, Front	KP5231027				
24	A18-152938	Arc Horn, Rear	KP5231028				
25	A18-22649	Coil Washer	KP5031028				
26	A18-5587	Coil Clamp	KP5231030				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-5593	Connector Stud	KP5231032				
28	A18-24376	Connector Stud	KP5231033				
29	A18-23696	Contact Stud	KP5231034				
30	T-104-3	Contact Screw	KP5231035				
31	T-104-4	Contact Screw	KP5231036				
33	T-2-47	Core Spacer	KP5231037				
34	A18-25488A	Frame	KP5231038				
35	A18-25351A	Main Arm Assembly	KP5231039				
36	T-66-4	Main Arm Pin	KP5231040				
37	A18-9474-6	Main Arm Bushing, Upper	KP5231041				
38	A18-9474-12	Main Arm Bushing, Lower	KP5231042				
39	T-40-24	Main Arm Bushing, Lower, Brass	KP5231043				
40	A18-26294A	Main Contact Support-Back Conn	KP5231044				
41	A18-5594A	Mov Contact Support Adj Screw	KP4731008				
42	T-115-32	Mov Contact Support Lock Nut	KP4831052				
43	A18-24297	Moving Contact Support Pin	KP5231047				
44	A18-3518	Stop Stud	KP5231048				

Replacement Parts for:

D.C. Magnetic Contactor Form 600-4RD

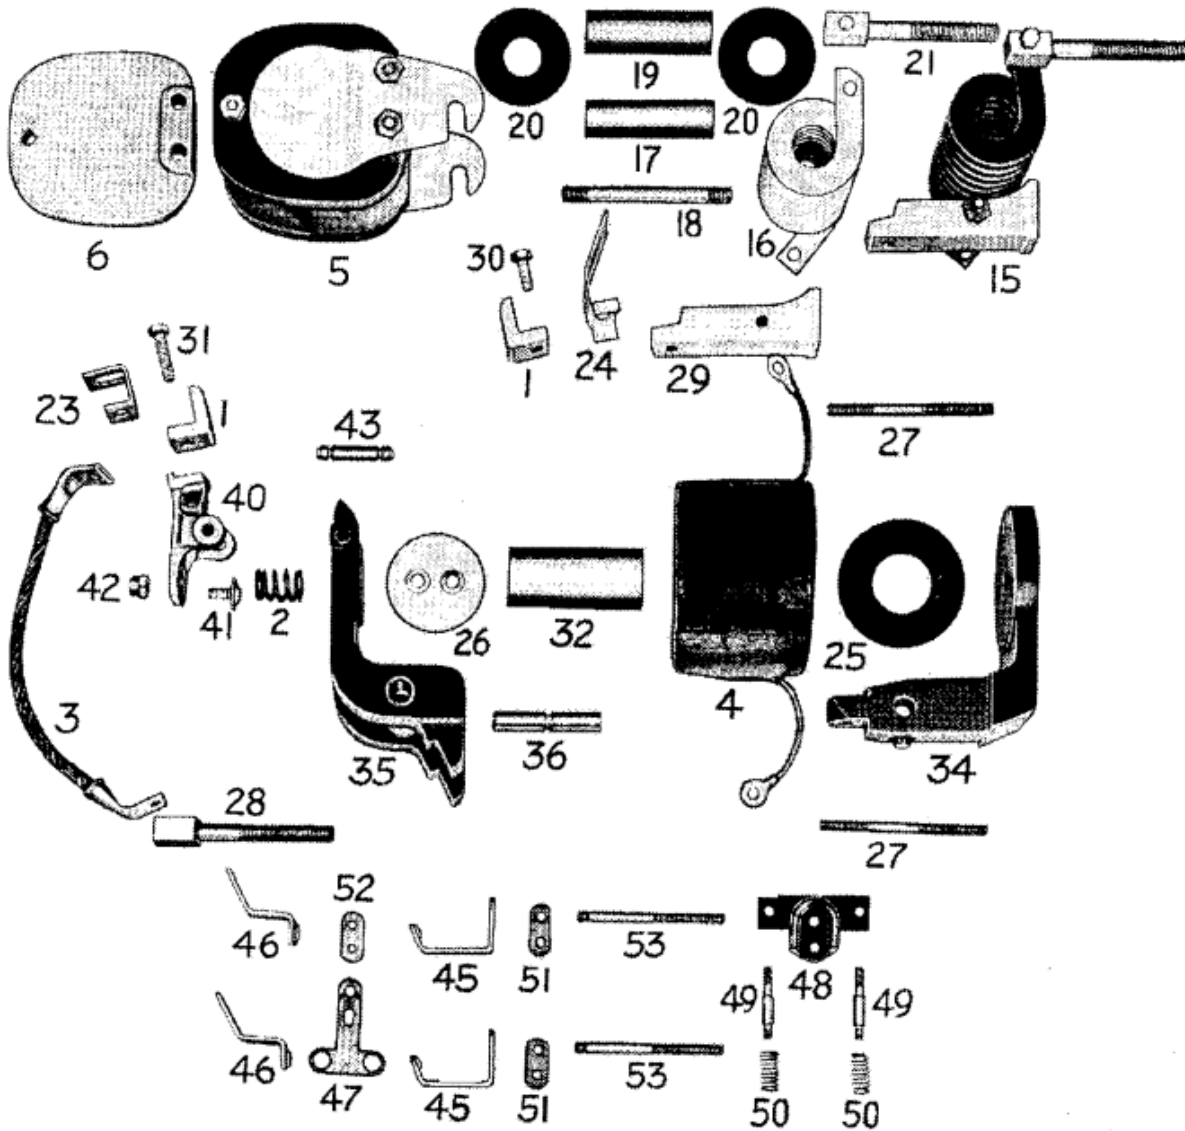


Replacement Parts for:

D.C. Magnetic Contactor Form 600-4RD

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-9091	Contact	KP5531001	36	T-66- 5	Main Arm Pin	KP5531049
2	A18-9103	Contact Spring-Back Connected	KP5531002	37	A18-9491-4	Main Arm Bushing, Upper	KP5531050
2A	T-45-264	Contact Spring-Front Connected	KP5531003	38	A18-9474-13	Main Arm Bushing, Lower	KP5531051
3	A18-9060A	Shunt	KP5531004	39	T-40-25	Main Arm Bushing, Lower, Brass	KP5531052
4	TB-58-1	Coil, 115V	KP5531005	40	A18-26296A	Main Contact Support-Back Conn	KP5531053
4	TB-57-1	Coil, 115V	KP5531006	40A	A74-144438A	Mov Contact Support-Front Conn	KP5531054
4	TB-58-2	Coil, 230V	KP5531007	41	A18-9076A	Mov Contact Support Adj Screw	KP5031008
4	TB-57-2	Coil, 230V	KP5531008	42	T-115-36	Mov Contact Support Lock Nut	KP5531056
4	TB-157-4	Coil, 45 Volt	KP5531009	43	A18-24378	Moving Contact Support Pin	KP5531057
4	TB-157-5	Coil, 60Volt	KP5531010	44	A18-9106	Stop Stud	KP5531058
4	TB-157-6	Coil, 30 Volt	KP5531011	45	A18-9109A	Stationary Control Contact	KP4831055
4	TB-157-7	Coil, 18 Volt	KP5531012	46	A18-9110A	Stationary Control Contact	KP4831056
4	TB-157-9	Coil, 12 Volt	KP5531013	47	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
4	TB-157-10	Coil, 24 Volt	KP5531014	48	A18-5586	Aux Contact Insulator	KP5231052
4	TB-157-11	Coil, 88Volt	KP5531015	49	A18-9477	Aux Contact Stud	KP4131056
4	TB-157-12	Coil, 176Volt	KP5531016	50	A18-9483	Spring	KP4131057
4	TB-157-13	Coil, 550Volt	KP5531017	51	A18-2543	Aux Contact Base Plate	KP4131058
5	A18-22029A	Arc Shield, Assembly	KP5531018	52	A18-2542	Aux Contact Plate	KP4131059
6	A18-21380	Arc Shield Side Plate	KP5531019	53	T-7-47	Coil Terminal Stud	KP4131032
6	A18-21380-LH	Arc Shield Left Hand Side Plate	KP5531020	53	T-7-36	Aux Stud	KP4131060
7	T-38-66	Arc Shield Washer	KP5531021	53	T-7-150	Aux Stud	KP4131061
8	T-7-148	Arc Shield Stud	KP5531022				
9	T-7-149	Arc Shield Stud	KP5531023				
10	A18-21381	Arc Barrier, Front	KP5531024				
11	A18-9096	Arc Barrier, Rear	KP5531025				
13	A18-9102	Blowout Ear, R.H	KP5531026				
14	A18-9101	Blowout Ear, L.H	KP5531027				
15	A18-9121A	Blowout Coil, Assembly	KP5531028				
15A	A74-257318A	Blowout Coil, Assembly	KP5531029				
16	A18-9090	Blowout Coil	KP5531030				
17	A18-9079	Blowout Core	KP5531031				
19	T-39-92	Blowout Core Insulator	KP5531032				
20	T-38-42	Blowout Washer	KP5531033				
21	A18-9093	Blowout Stud	KP5531034				
23	A18-9099	Arc Horn, Front	KP5531035				
24	A18-9098	Arc Horn, Rear	KP5531036				
25	A18-22649	Coil Washer	KP5031028				
26	A18-13627A	Coil Clamp	KP5531038				
27	T-7-47	Coil Terminal Stud	KP4131032				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-9092	Connector Stud	KP5531041				
29	A18-9085	Contact Stud	KP5531042				
30	T-104-5	Contact Screw	KP5531043				
31	T-104-6	Contact Screw	KP5531044				
32	A18-11842	Core	KP5531045				
34	A18-25492A	Frame	KP5531046				
35	A18-25355A	Main Arm Assembly	KP5531047				
35	A74-419615A	Main Arm Assembly	KP5531048				

Replacement Parts for:

D.C. Magnetic Contactor Form 900-4RD

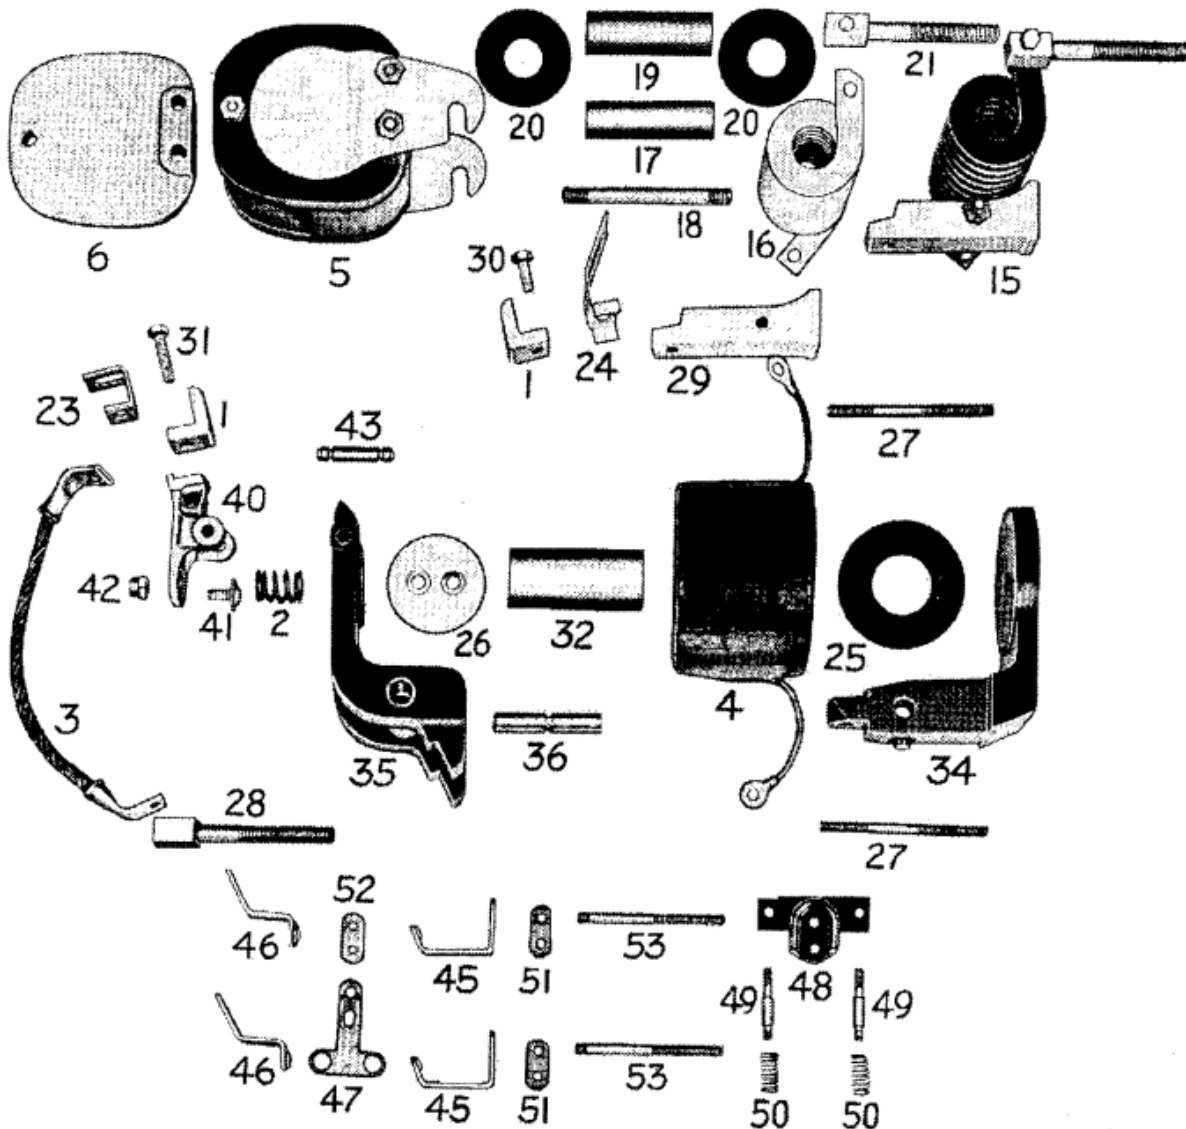


Replacement Parts for:

D.C. Magnetic Contactor Form 900-4RD

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-11544	Contact	KP5731001	39	T-40-25	Main Arm Bushing, Lower, Brass	KP5531052
2	A18-9103	Contact Spring-Back Connected	KP5531002	40	A18-26296A	Main Contact Support-Back Conn	KP5531053
3	A18-11187A	Connector	KP5731003	40A	A74-144438A	Mov Contact Support-Front Conn	KP5531054
4	TB-58-1	Coil, 115V	KP5531005	41	A18-9076A	Mov Contact Support Adj Screw	KP5031008
4	TB-57-1	Coil, 115V	KP5531006	42	T-115-36	Mov Contact Support Lock Nut	KP5531056
4	TB-58-2	Coil, 230V	KP5531007	43	A18-24378	Moving Contact Support Pin	KP5531057
4	TB-57-2	Coil, 230V	KP5531008	44	A18-9106	Stop Stud	KP5531058
4	TB-157-4	Coil, 45 Volt	KP5531009	45	A18-9109A	Stationary Control Contact	KP4831055
4	TB-157-5	Coil, 60 Volt	KP5531010	46	A18-9110A	Stationary Control Contact	KP4831056
4	TB-157-6	Coil, 30 Volt	KP5531012	47	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
4	TB-157-7	Coil, 18 Volt	KP5531012	48	A18-5586	Aux Contact Insulator	KP5231052
4	TB-157-9	Coil, 12 Volt	KP5531013	49	A18-9477	Aux Contact Stud	KP4131056
4	TB-157-10	Coil, 24 Volt	KP5531014	50	A18-9483	Spring	KP4131057
4	TB-157-11	Coil, 88 Volt	KP5531015	51	A18-2543	Aux Contact Base Plate	KP4131058
4	TB-157-12	Coil, 176 Volt	KP5531016	53	T-7-47	Coil Terminal Stud	KP4131032
4	TB-157-13	Coil, 550 Volt	KP5531017	53	A18-2542	Aux Contact Plate	KP4131059
5	A18-22030A	Arc Shield Assembly, 900 AMP	KP5731017	53	T-7-36	Aux Stud	KP4131060
6	A18-21380	Arc Shield Side Plate	KP5531019	53	T-7-150	Aux Stud	KP4131061
7	T-38-66	Arc Shield Washer	KP5531021	58	T-7-199	Coil Terminal Stud	KP4131033
8	T-7-161	Arc Shield Stud	KP5731020				
9	T-7-162	Arc Shield Stud	KP5731021				
10	A18-22005	Arc Barrier, Front	KP5731022				
11	A16-11537	Arc Barrier, Rear	KP5731023				
13	A16-11229	Blowout Ear, R.H	KP5731024				
14	A16-11228	Blowout Ear, L.H	KP5731025				
15	A18-18205A	Blowout Coil, Assembly	KP5731026				
15A	A74-257334A	Blowout Coil, Assembly	KP5731027				
16	A18-18206	Blowout Coil	KP5731028				
17	A18-11841	Blowout Core	KP5731029				
19	T-39-98	Blowout Core Insulator	KP5731030				
20	T-38-42	Blowout Washer	KP5531033				
21	A18-11186	Blowout Stud	KP5731032				
23	A18-9099	Arc Horn, Front	KP5531035				
24	A18-9098	Arc Horn, Rear	KP5531036				
25	A18-22649	Coil Washer	KP5031028				
26	A18-13527A	Coil Clamp	KP5731036				
27	T-7-47	Coil Terminal Stud	KP4131032				
28	A18-11185	Connector Stud	KP5731038				
29	A18-11500	Contact Stud	KP5731039				
30	T-104-5	Contact Screw	KP5531043				
31	T-104-7	Contact Screw	KP5731041				
32	A18-11842	Core	KP5531045				
34	A18-25492A	Frame	KP5531046				
35	A18-25355A	Main Arm Assembly	KP5531047				
35	A74-419615A	Main Arm Assembly	KP5531048				
36	T-66-5	Main Arm Pin	KP5531049				
37	A18-9491-4	Main Arm Bushing, Upper	KP5531050				
38	A18-9474-13	Main Arm Bushing, Lower	KP5531051				

Replacement Parts for:

D.C. Magnetic Contactor Form 100-4RT

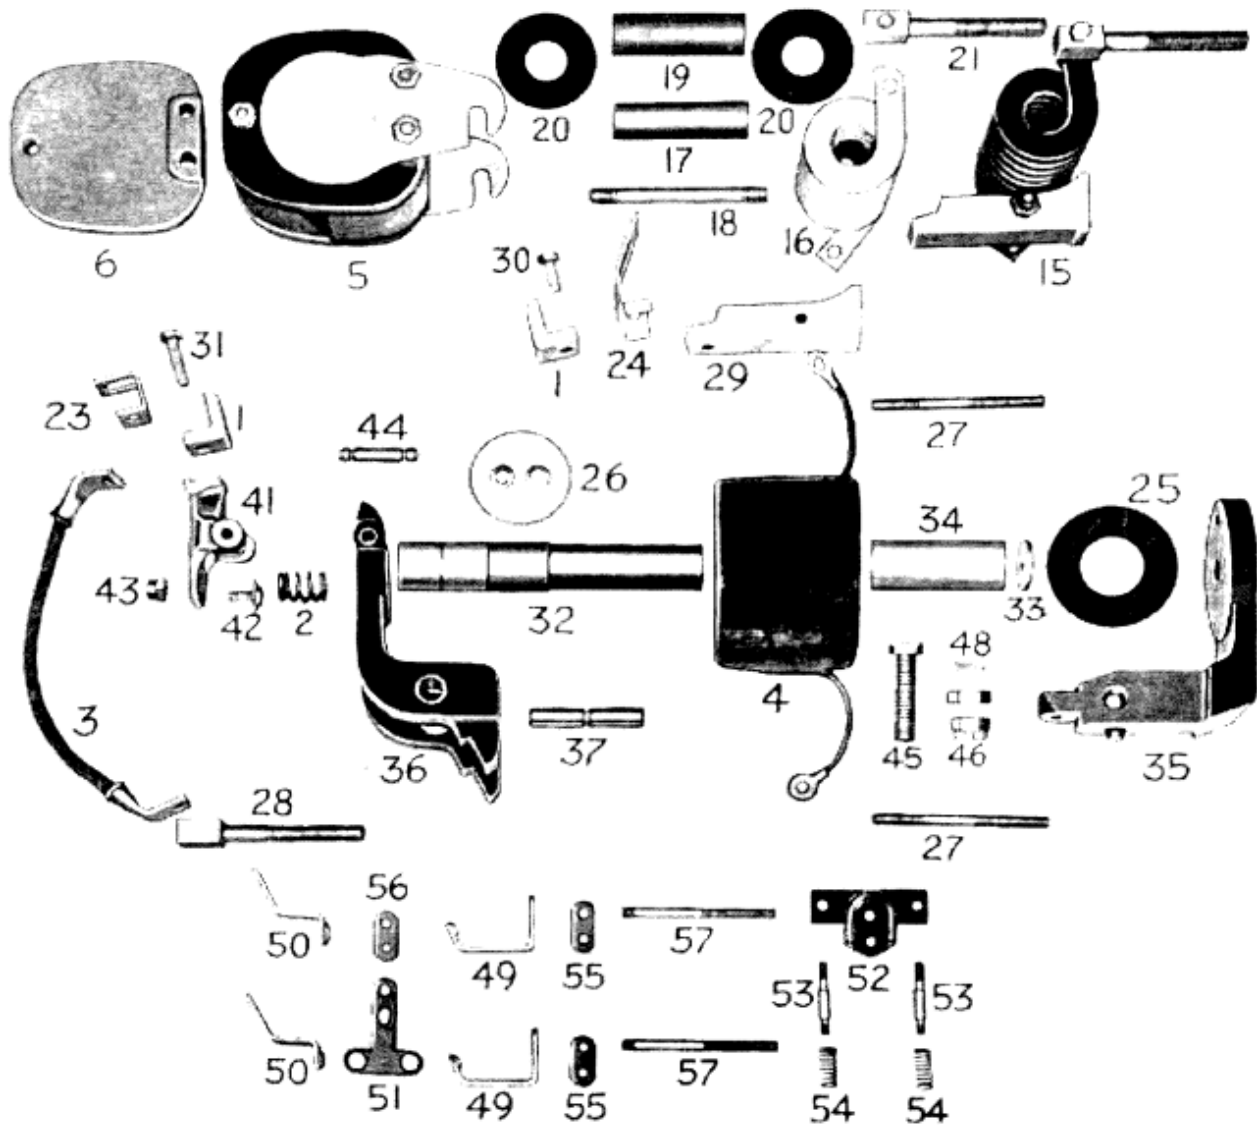


Replacement Parts for:

D.C. Magnetic Contactor Form 100-4RT

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-1936	Contact (Main-Mov & Sta)	KP4031001	50	A18-9466A	Stationary Control Contact	KP4131053
2	A18-2518	Contact Spring-Back Connected	KP4131002	51	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
3	A18-2510A	Connector	KP4131003	52	A18-2544	Aux Contact Insulator	KP4131055
5	A18-22027A	Arc Shield, Assembly	KP4131010	53	A18-9477	Aux Contact Stud	KP4131056
6	A18-21305	Arc Shield Side Plate	KP4131011	54	A18-9483	Spring	KP4131057
7	T-38-65	Arc Shield Washer	KP4131012	55	A18-2543	Aux Contact Base Plate	KP4131058
8	T-120-99	Arc Shield Stud	KP4131013	56	A18-2542	Aux Contact Plate	KP4131059
9	T-120-96	Arc Shield Stud	KP4131014	57	T-7-36	Aux Stud	KP4131060
10	A18-21324	Arc Barrier, Front	KP4131015				
II	A16-8124	Arc Barrier, Rear	KP4131017				
13	A18-2528	Blowout Ear, R.H	KP4131018				
14	A18-2529	Blowout Ear, L.H	KP4131019				
15	A18-23678A	Blowout Coil, Assembly	KP4131020				
16	A18-23679	Blowout Coil	KP4131021				
17	T-24-92	Blowout Core	KP4131022				
19	T-39-169	Blowout Core Insulator	KP4131024				
20	T-38-38	Blowout Washer	KP4131025				
21	A18-23680	Blowout Stud	KP4131026				
22	A18-23682	Blowout Spacer	KP4131027				
24	A16-8126	Arc Horn, Rear	KP4131028				
25	A18-6710	Coil Washer	KP4131030				
26	A18-2548	Coil Clamp	KP4131031				
27	T-7-47	Coil Terminal Stud	KP4131032				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-2551	Connector Stud	KP4131034				
28	A18-16994	Connector Stud	KP4131035				
29	A18-23681	Contact Stud	KP4131036				
30	T-132-21	Contact Screw	KP4031016				
31	T-121-13	Contact Screw	KP4031017				
32	A18-5103A	Core	KP4331030				
32	A18-5063A	Core	KP4331031				
33	T-2-14	Core Washer	KP4331032				
34	T-24-41	Core Spacer	KP4331033				
35	A18-25359A	Frame	KP4331034				
36	A18-25339A	Main Arm, Assembly	KP4131042				
37	T-66-1	Main Arm Pin	KP4131043				
38	A18-9491-I	Main Arm Bushing, Upper	KP4131044				
39	A18-9474-9	Main Arm Bushing, Lower	KP4131045				
40	T-40-21	Main Arm Bushing, Lower, Brass	KP4131046				
41	A18-26288A	Main Contact Support-Back Conn	KP4131047				
42	A18-5065A	Mov Contact Support Adj Screw	KP4031024				
43	A18-9469	Mov Contact Support Lock Nut	KP4131049				
44	A18-24379	Moving Contact Support Pin	KP4131050				
45	A18-80338	Stop Stud	KP4331044				
45	A18-2547	Stop Stud Nut	KP4331045				
47	T-3-17	Stop Stud Pin	KP4331046				
48	T-2-18	Stop Stud Washer	KP4331047				
49	A18-9465A	Stationary Control Contact	KP4131052				

Replacement Parts for:

D.C. Magnetic Contactor Form 150-4RT

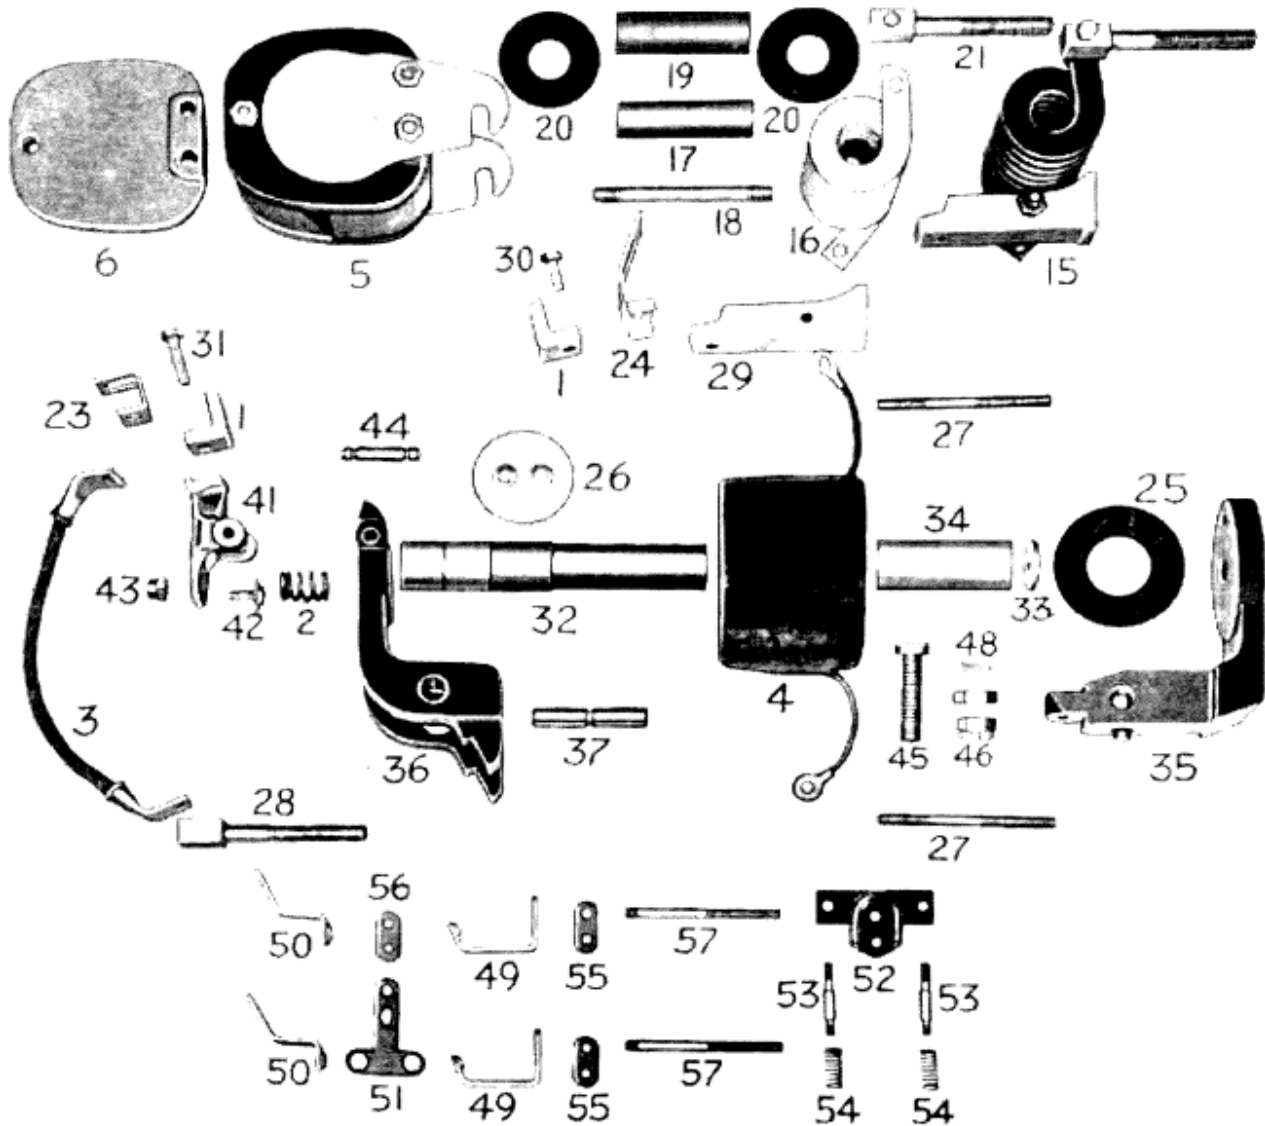


Replacement Parts for:

D.C. Magnetic Contactor Form 150-4RT

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-7980	Contact	KP4431001	52	A18-2544	Aux Contact Insulator	KP4131055
2	A18-8897	Contact Spring-Back Connected	KP4531002	53	A18-9477	Aux Contact Stud	KP4131056
3	A18-8863A	Connector	KP4531003	54	A18-9483	Spring	KP4131057
5	A18-22026A	Arc Shield, Assembly	KP4531010	55	A18-2543	Aux Contact Base Plate	KP4131058
6	A18-21322	Arc Shield Side Plate	KP4531011	56	A18-2542	Aux Contact Plate	KP4131059
7	T-38-65	Arc Shield Washer	KP4131012	57	T-7-47	Coil Terminal Stud	KP4131032
8	T-7-122	Arc Shield Stud	KP4531013	57	T-7-36	Aux Stud	KP4131060
9	T-120-186	Arc Shield Stud	KP4531014	57	T-7-150	Aux Stud	KP4131061
10	A18-21323	Arc Barrier, Front	KP4531015				
11	A16-8005	Arc Barrier, Rear	KP4531016				
13	A18-3510	Blowout Ear, R.H	KP4531017				
14	A18-3511	Blowout Ear, L.H	KP4531018				
15	A18-23688A	Blowout Coil, Assembly	KP4531019				
16	A18-23689	Blowout Coil	KP4531020				
17	T-24-93	Blowout Core	KP4531021				
18	T-7-123	Blowout Core Stud	KP4431011				
19	T-39-86	Blowout Core Insulator	KP4531023				
20	T-38-36	Blowout Washer	KP4431013				
21	A18-23690	Blowout Stud	KP4431014				
22	A18-23692	Blowout Spacer	KP4531026				
24	A16-8007	Arc Horn, Rear	KP4431004				
25	A18-24397	Coil Washer	KP4531029				
26	A18-13663	Coil Clamp	KP4631023				
27	T-7-47	Coil Terminal Stud	KP4131032				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-16994	Connector Stud	KP4131035				
28	A18-8002	Connector Stud	KP4531033				
29	A18-23691	Contact Stud	KP4431016				
30	T-104-1	Contact Screw	KP4431017				
33	T-2-14	Core Washer	KP4331032				
34	T-24-94	Core Spacer	KP4631031				
35	A18-25365A	Frame	KP4631032				
36	A18-25343A	Main Arm Assembly	KP4531041				
37	T-66-2	Main Arm Pin	KP4531042				
38	A18-9491-2	Main Arm Bushing, Upper	KP4531043				
39	A18-9474-10	Main Arm Bushing, Lower	KP4531044				
40	T-40-22	Main Arm Bushing, Lower, Brass	KP4531045				
41	A18-26290A	Main Contact Support-Back Conn	KP4631038				
42	A18-7987A	Mov Contact Support Adj Screw	KP4531047				
43	A18-9469	Mov Contact Support Lock Nut	KP4131049				
44	A18-24296	Moving Contact Support Pin	KP4431028				
45	A18-2547	Stop Stud Nut	KP4331045				
45	A18-61330	Stop Stud	KP4631043				
47	T-3-17	Stop Stud Pin	KP4331046				
48	T-2-18	Stop Stud Washer	KP4331047				
49	A18-9465A	Stationary Control Contact	KP4131052				
50	A18-9466A	Stationary Control Contact	KP4131053				
51	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054				

Replacement Parts for:

D.C. Magnetic Contactor Form 300-4RT

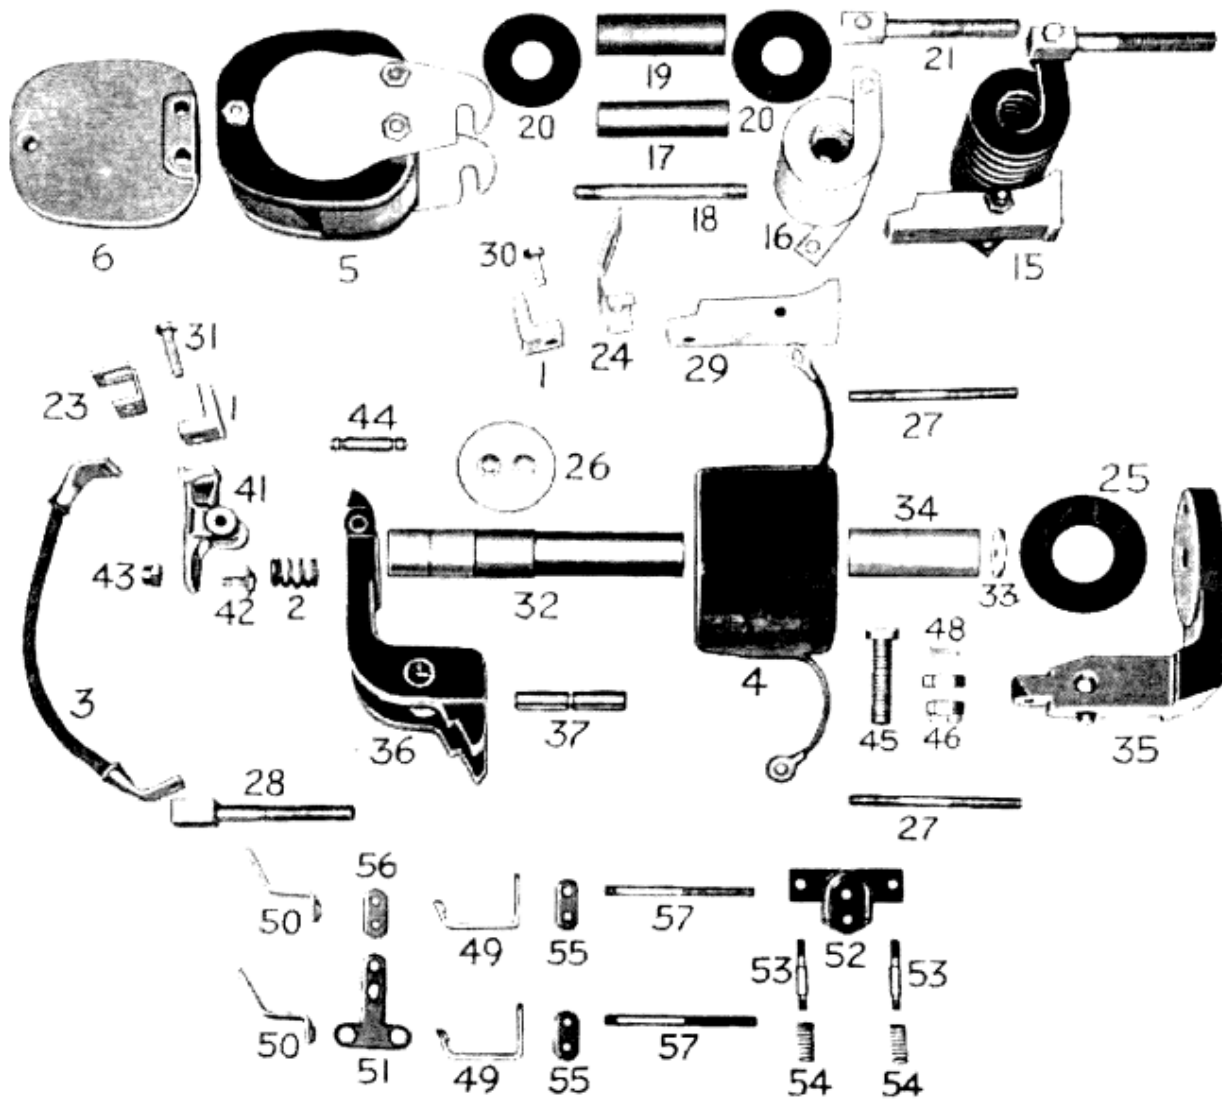


Replacement Parts for:

D.C. Magnetic Contactor Form 300-4RT

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-3504	Contact (Main-Mov & Sta)	KP4831001	52	A18-2544	Aux Contact Insulator	KP4131055
2	A18-9383	Contact Spring-Back Connected	KP4831002	53	A18-9477	Aux Contact Stud	KP4131056
3	A18-9356A	Connector	KP4831003	54	A18-9483	Spring	KP4131057
5	A18-21984A	Arc Shield, Assembly	KP4831010	55	A18-2543	Aux Contact Base Plate	KP4131058
6	A18-21378	Arc Shield Side Plate	KP4831011	56	A18-2542	Aux Contact Plate	KP4131059
7	T-38-65	Arc Shield Washer	KP4131012	57	T-7-47	Coil Terminal Stud	KP4131032
8	T-7-116	Arc Shield Stud	KP4831013	57	T-7-36	Aux Stud	KP4131060
10	A18-21379	Arc Barrier, Front	KP4831015	57	T-7-150	Aux Stud	KP4131061
11	A18-8159	Arc Barrier, Rear	KP4831016				
13	A18-5573	Blowout Ear, R.H	KP4831018				
14	A18-5574	Blowout Ear, L.H	KP4831019				
15	A18-23683A	Blowout Coil Assembly	KP4831021				
16	A18-23684	Blowout Coil	KP4831022				
17	T-24-95	Blowout Core	KP4831023				
18	T-7-117	Blowout Core Stud	KP4831024				
19	T-39-87	Blowout Core Insulator	KP4831025				
20	T-38-37	Blowout Washer	KP4831026				
21	A18-23685	Blowout Stud	KP4831027				
22	A18-23687	Blowout Spacer	KP4831028				
23	A18-3516	Arc Horn, Front	KP4831029				
24	A16-6957	Arc Horn, Rear	KP4831030				
25	A18-24397	Coil Washer	KP4531029				
26	A18-13663	Coil Clamp	KP4631023				
27	T-7-47	Coil Terminal Stud	KP4131032				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-6950	Connector Stud	KP4831035				
28	A16-18115	Connector Stud	KP4831036				
29	A18-23686	Contact Stud	KP4831037				
30	T-104-2	Contact Screw	KP4831038				
33	T-2-14	Core Washer	KP4331032				
34	T-24-94	Core Spacer	KP4631031				
35	A18-25371A	Frame	KP4931032				
36	A18-25347A	Main Arm Assembly	KP4831043				
37	T-66-3	Main Arm Pin	KP4831044				
38	A18-9491-3	Main Arm Bushing, Upper	KP4831045				
39	A18-9474-11	Main Arm Bushing, Lower	KP4831046				
40	T-40-23	Main Arm Bushing, Lower, Brass	KP4831048				
41	A18-26292A	Main Contact Support-Back Conn	KP4831049				
42	A18-5594A	Mov Contact Support Adj Screw	KP4731008				
43	T-115-32	Mov Contact Support Lock Nut	KP4831052				
44	A18-22714	SS Moving Contact Support Pin	KP4831053				
45	A18-3519	Stop Stud	KP4931042				
45	A18-3520	Stop Stud Nut	KP4931043				
47	T-3-17	Stop Stud Pin	KP4331046				
48	T-2-30	Stop Stud Washer	KP4931045				
49	A18-9109A	Stationary Control Contact	KP4831055				
50	A18-9110A	Stationary Control Contact	KP4831056				
51	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054				

Replacement Parts for:

D.C. Magnetic Contactor Form 400-4RT

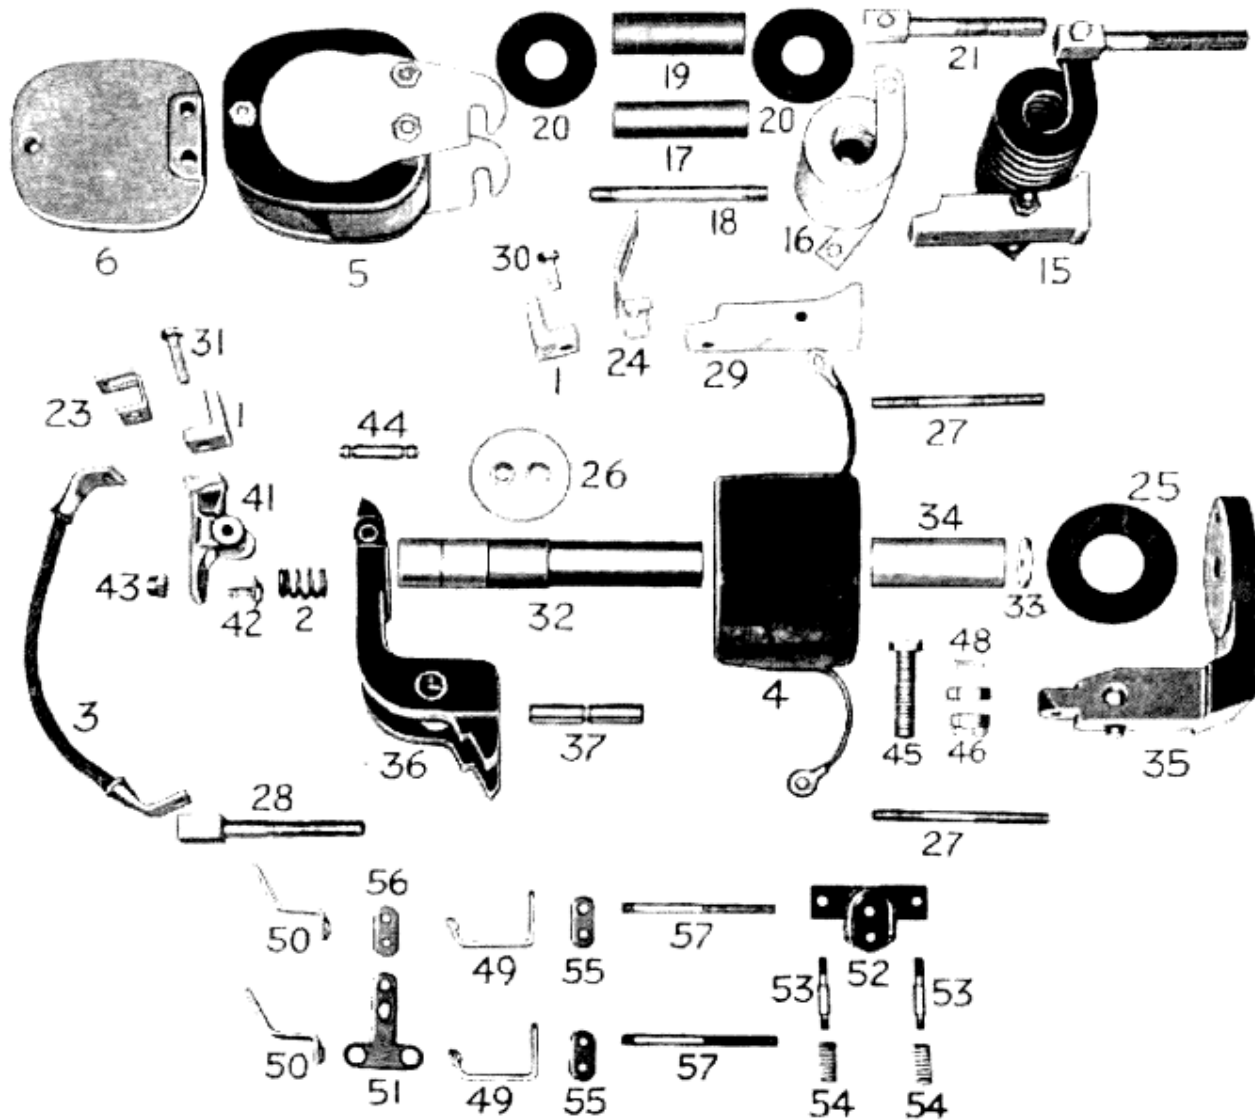


Replacement Parts for:

D.C. Magnetic Contactor Form 400-4RT

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-5581	Contact	KP5231001	49	A18-13823A	Contact	KP5231049
2	A18-5597	Contact Spring-Back Connected	KP5231002	50	A18-13824A	Aux Contact	KP5331050
3	A18-5558A	Connector	KP5231003	52	A18-5586	Aux Contact Insulator	KP5231052
5	A18-22028A	Arc Shield, Assembly	KP5231010	53	A18-9477	Aux Contact Stud	KP4131056
6	A18-21378	Arc Shield Side Plate	KP4831011	54	A18-9483	Spring	KP4131057
7	T-38-65	Arc Shield Washer	KP4131012	55	A18-2543	Aux Contact Base Plate	KP4131058
8	T-7-99	Arc Shield Stud	KP5231013	56	A18-2542	Aux Contact Plate	KP4131059
9	T-120-188	Arc Shield Stud	KP5231014	57	T-7-36	Aux Stud	KP4131060
10	A18-22004	Arc Barrier, Front	KP5231015	57	T-7-150	Aux Stud	KP4131061
11	A18-5571	Arc Barrier, Rear	KP5231016				
13	A18-5573	Blowout Ear, R.H	KP4831018				
14	A18-5574	Blowout Ear, L.H	KP4831019				
15	A18-23693A	Blowout Coil, Assembly	KP5231019				
16	A18-23694	Blowout Coil	KP5231020				
17	T-24-170	Blowout Core	KP5231021				
18	T-7-101	Blowout Core Stud	KP5231022				
19	T-39-146	Blowout Core Insulator	KP5231023				
20	T-38-56	Blowout Washer	KP5231024				
21	A18-23695	Blowout Stud	KP5231025				
22	A18-23697	Blowout Spacer	KP5231026				
23	A18-5583	Arc Horn, Front	KP5231027				
24	A18-152938	Arc Horn, Rear	KP5231028				
25	A18-22649	Coil Washer	KP5031028				
26	A18-5587	Coil Clamp	KP5231030				
27	T-7-47	Coil Terminal Stud	KP4131032				
27	T-7-199	Coil Terminal Stud	KP4131033				
28	A18-5593	Connector Stud	KP5231032				
28	A18-24376	Connector Stud	KP5231033				
29	A18-23696	Contact Stud	KP5231034				
30	T-104-3	Contact Screw	KP5231035				
31	T-104-1	Contact Screw	KP4431017				
33	T-2-50	Core Washer	KP5331032				
34	T-24-78	Core Spacer	KP5331033				
35	A18-25490A	Frame	KP5331034				
36	A18-25351A	Main Arm Assembly	KP5231039				
37	T-66-4	Main Arm Pin	KP5231040				
38	A18-9474-6	Main Arm Bushing, Upper	KP5231041				
39	A18-9474-12	Main Arm Bushing, Lower	KP5231042				
40	T-40-24	Main Arm Bushing, Lower, Brass	KP5231043				
41	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054				
41	A18-26294A	Main Contact Support-Back Conn	KP5231044				
42	A18-5594A	Mov Contact Support Adj Screw	KP4731008				
43	T-115-32	Mov Contact Support Lock Nut	KP4831052				
44	A18-24297	Moving Contact Support Pin	KP5231047				
45	A18-3519	Stop Stud	KP4931042				
45	A18-3520	Stop Stud Nut	KP4931043				
47	T-3-17	Stop Stud Pin	KP4331046				
48	T-2-30	Stop Stud Washer	KP4931045				

Replacement Parts for:

D.C. Magnetic Contactor Form 100-4RS

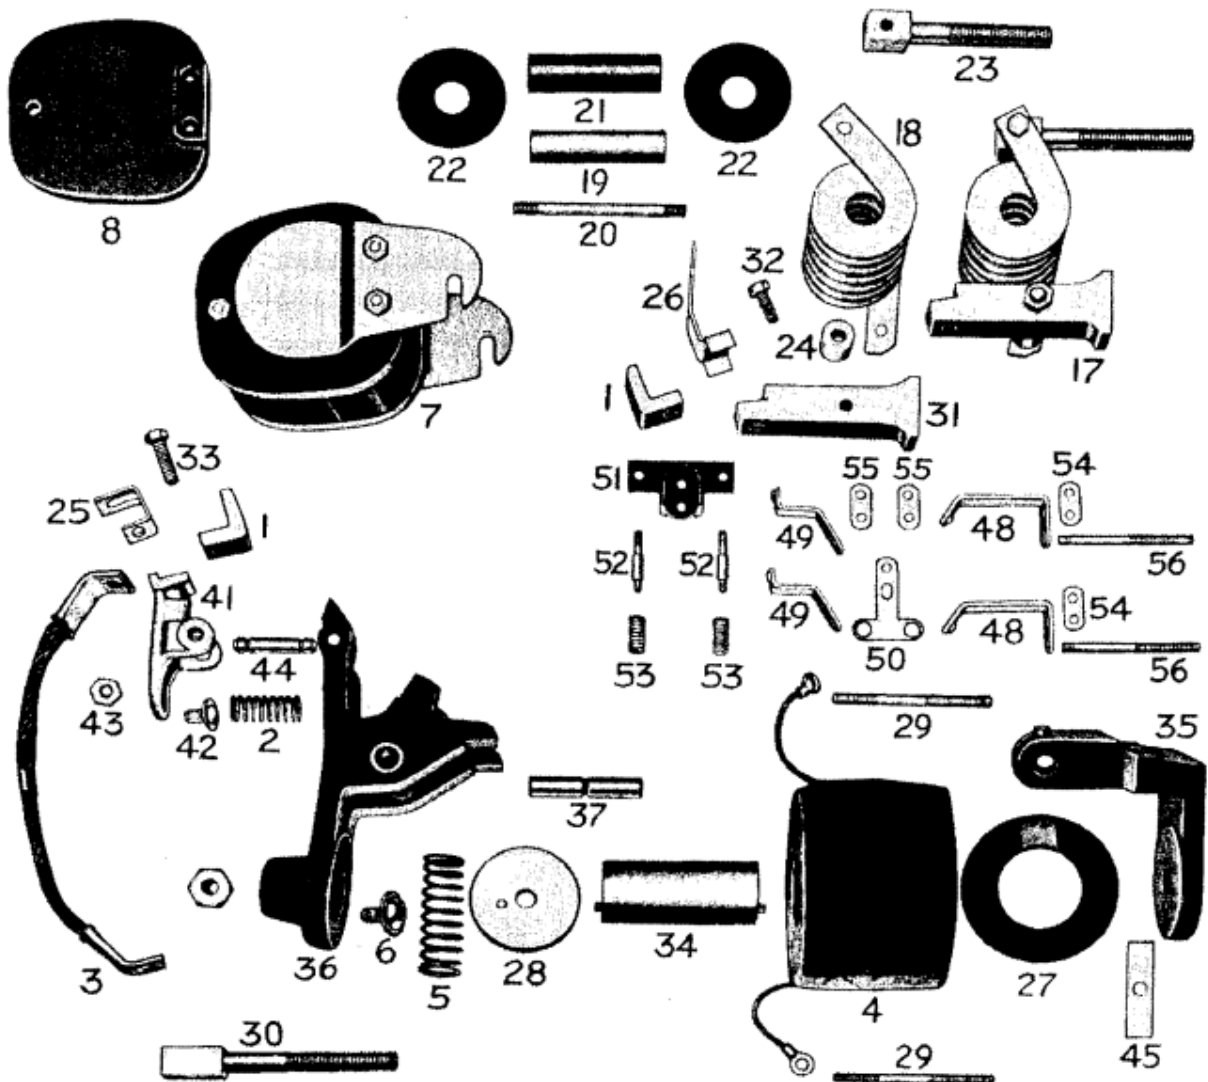


Replacement Parts for:

D.C. Magnetic Contactor Form 100-4RS

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-1936	Contact (Main-Mov& Sta)	KP4031001	49	A18-9466A	Stationary Control Contact	KP4131053
2	T-45-216	Contact Spring	KP4231002	50	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
3	A18-2510A	Connector	KP4131003	51	A18-2544	Aux Contact Insulator	KP4131055
4	TB-41-1	Coil, 115V	KP4231004	52	A18-9477	Aux Contact Stud	KP4131056
4	TB-41-2	Coil, 230V	KP4231005	53	A18-9483	Spring	KP4131057
4	TB-41-3	Coil, 550 VDC	KP4231006	54	A18-2543	Aux Contact Base Plate	KP4131058
5	T-45-215	Operating Spring	KP4231007	55	A18-2542	Aux Contact Plate	KP4131059
6	A16-10878A	Adj Screw	KP4231008	56	T-7-47	Coil Terminal Stud	KP4131032
7	A18-22027A	Arc Shield, Assembly	KP4131010	56	T-7-36	Aux Stud	KP4131060
8	A18-21305	Arc Shield Side Plate	KP4131011	56	T-7-150	Aux Stud	KP4131061
9	T-38-65	Arc Shield Washer	KP4131012				
10	T-120-99	Arc Shield Stud	KP4131013				
II	T-120-96	Arc Shield Stud	KP4131014				
12	A18-21324	Arc Barrier, Front	KP4131015				
13	A16-8124	Arc Barrier, Rear	KP4131017				
15	A 18-2528	Blowout Ear, R.H	KP4131018				
16	A18-2529	Blowout Ear, L.H	KP4131019				
17	A18-23678A	Blowout Coil, Assembly	KP4131020				
18	A18-23679	Blowout Coil	KP4131021				
19	T-24-92	Blowout Core	KP4131022				
21	T-39-1 69	Blowout Core Insulator	KP4131024				
22	T-38-38	Blowout Washer	KP4131025				
23	A18-23680	Blowout Stud	KP4131026				
24	A18-23682	Blowout Spacer	KP4131027				
25	A18-2534	Arc Horn, Front	KP4131029				
26	A16-8126	Arc Horn, Rear	KP4131028				
27	A18-671 0	Coil Washer	KP4131030				
28	A18-66731	Coil Clamp	KP4231028				
29	T-7-47	Coil Terminal Stud	KP4131032				
29	T-7-199	Coil Terminal Stud	KP4131033				
30	A18-2551	Connector Stud	KP4131034				
30	A18-16994	Connector Stud	KP4131035				
31	A18-23681	Contact Stud	KP4131036				
32	T-132-21	Contact Screw	KP4031016				
33	T-121-13	Contact Screw	KP4031017				
34	A18-10736A	Core Assembly	KP4231036				
35	A18-25361A	Frame	KP4231037				
36	A18-25337A	Main Arm Assembly	KP4231038				
37	T-66-1	Main Arm Pin	KP4131043				
38	A18-9491-1	Main Arm Bushing, Upper	KP4131044				
39	A18-9474-9	Main Arm Bushing, Lower	KP4131045				
40	T-40-21	Main Arm Bushing, Lower, Brass	KP4131046				
41	A18-26288A	Main Contact Support-Back Con	KP4131047				
42	A18-5065A	Mov Contact Support Adj Screw	KP4031024				
43	A18-9469	Mov Contact Support Lock Nut	KP4131049				
44	A18-24379	Moving Contact Support Pin	KP4131050				
45	A18-2588	Stop Plate	KP4231047				
48	A18-9465A	Stationary Control Contact	KP4131052				

Replacement Parts for:

D.C. Magnetic Contactor Form 150-5RS

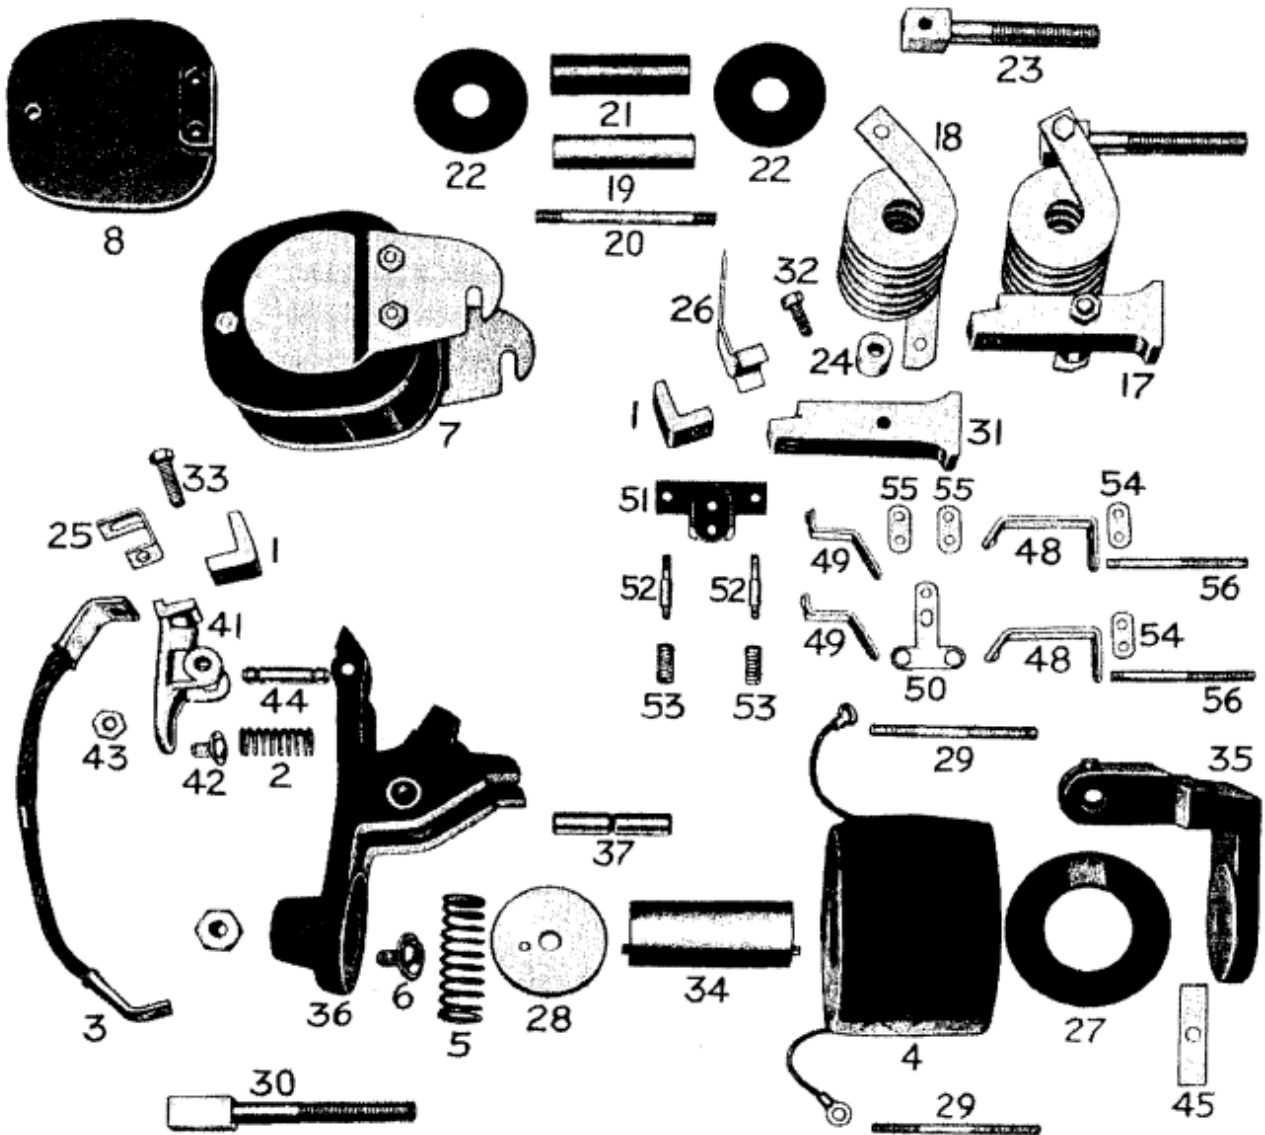


Replacement Parts for:

D.C. Magnetic Contactor Form 150-5RS

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-1936	Contact (Main-Mov& Sta)	KP4031001	49	A18-9466A	Stationary Control Contact	KP4131053
2	T-45-216	Contact Spring	KP4231002	50	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
3	A18-2510A	Connector	KP4131003	51	A18-2544	Aux Contact Insulator	KP4131055
4	TB-41-1	Coil, 115V	KP4231004	52	A18-9477	Aux Contact Stud	KP4131056
4	TB-41-2	Coil, 230V	KP4231005	53	A18-9483	Spring	KP4131057
4	TB-41-3	Coil, 550 VDC	KP4231006	54	A18-2543	Aux Contact Base Plate	KP4131058
5	T-45-215	Operating Spring	KP4231007	55	A18-2542	Aux Contact Plate	KP4131059
6	A16-10878A	Adj Screw	KP4231008	56	T-7-47	Coil Terminal Stud	KP4131032
7	A18-22027A	Arc Shield, Assembly	KP4131010	56	T-7-36	Aux Stud	KP4131060
8	A18-21305	Arc Shield Side Plate	KP4131011	56	T-7-150	Aux Stud	KP4131061
9	T-38-65	Arc Shield Washer	KP4131012	56	T-7-180	Aux Stud	KP4731059
10	T-120-99	Arc Shield Stud	KP4131013				
II	T-120-96	Arc Shield Stud	KP4131014				
12	A18-21324	Arc Barrier, Front	KP4131015				
13	A16-8124	Arc Barrier, Rear	KP4131017				
15	A 18-2528	Blowout Ear, R.H	KP4131018				
16	A18-2529	Blowout Ear, L.H	KP4131019				
17	A18-23678A	Blowout Coil, Assembly	KP4131020				
18	A18-23679	Blowout Coil	KP4131021				
19	T-24-92	Blowout Core	KP4131022				
21	T-39-1 69	Blowout Core Insulator	KP4131024				
22	T-38-38	Blowout Washer	KP4131025				
23	A18-23680	Blowout Stud	KP4131026				
24	A18-23682	Blowout Spacer	KP4131027				
25	A18-2534	Arc Horn, Front	KP4131029				
26	A16-8126	Arc Horn, Rear	KP4131028				
27	A18-671 0	Coil Washer	KP4131030				
28	A18-66731	Coil Clamp	KP4231028				
29	T-7-47	Coil Terminal Stud	KP4131032				
29	T-7-199	Coil Terminal Stud	KP4131033				
30	A18-2551	Connector Stud	KP4131034				
30	A18-16994	Connector Stud	KP4131035				
31	A18-23681	Contact Stud	KP4131036				
32	T-132-21	Contact Screw	KP4031016				
33	T-121-13	Contact Screw	KP4031017				
34	A18-10736A	Core Assembly	KP4231036				
35	A18-25361A	Frame	KP4231037				
36	A18-25337A	Main Arm Assembly	KP4231038				
37	T-66-1	Main Arm Pin	KP4131043				
38	A18-9491-1	Main Arm Bushing, Upper	KP4131044				
39	A18-9474-9	Main Arm Bushing, Lower	KP4131045				
40	T-40-21	Main Arm Bushing, Lower, Brass	KP4131046				
41	A18-26288A	Main Contact Support-Back Con	KP4131047				
42	A18-5065A	Mov Contact Support Adj Screw	KP4031024				
43	A18-9469	Mov Contact Support Lock Nut	KP4131049				
44	A18-24379	Moving Contact Support Pin	KP4131050				
45	A18-2588	Stop Plate	KP4231047				
48	A18-9465A	Stationary Control Contact	KP4131052				

Replacement Parts for:

D.C. Magnetic Contactor Form 300-5RS

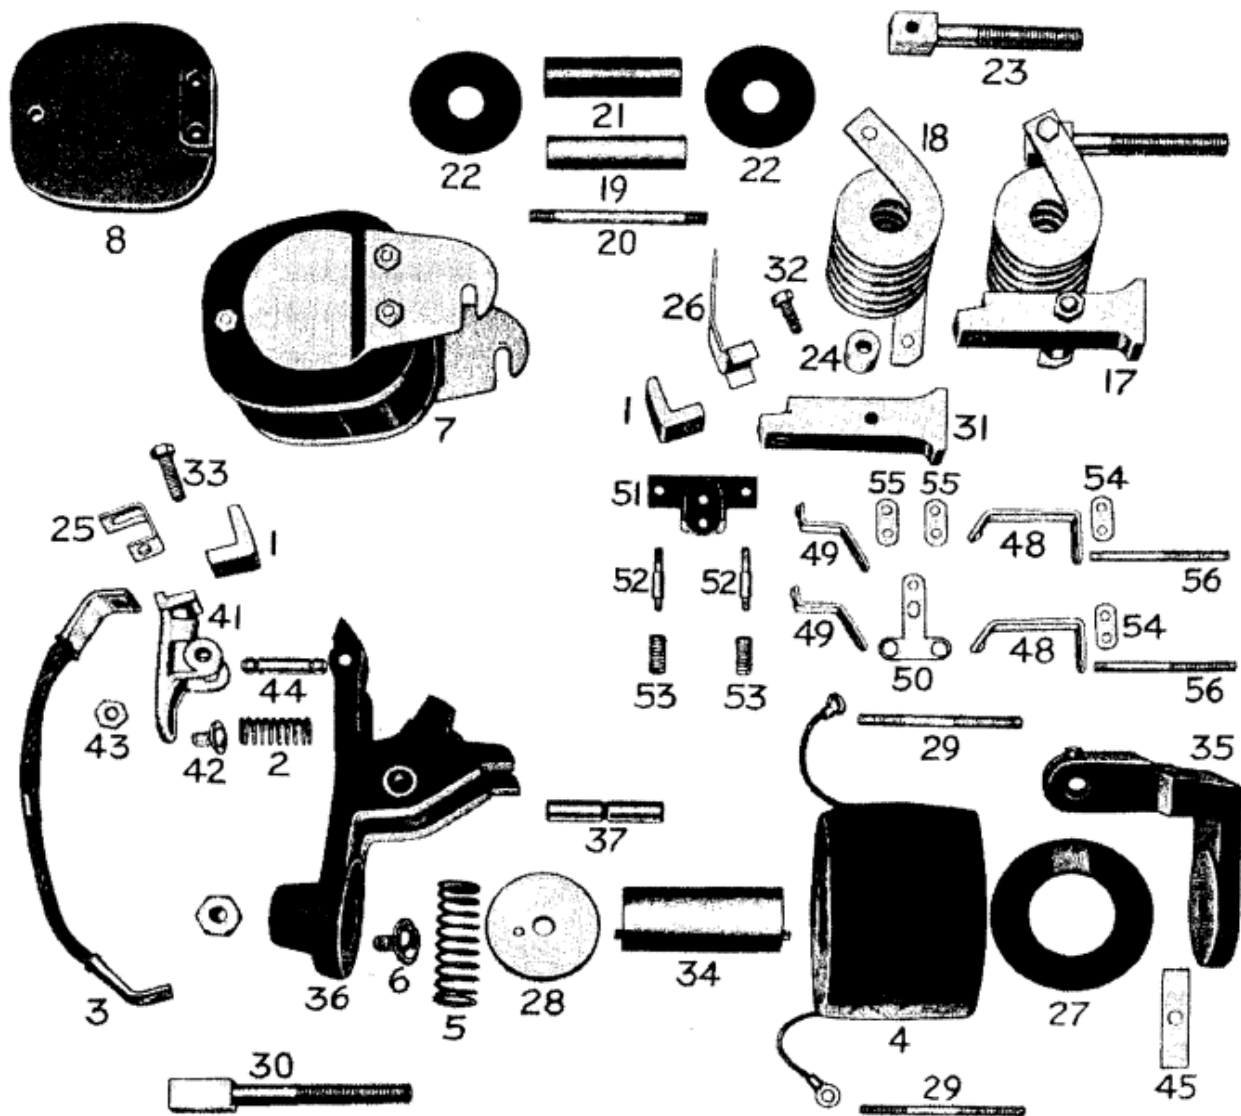


Replacement Parts for:

D.C. Magnetic Contactor Form 300-5RS

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-3504	Contact (Main-Mov& Sta)	KP4831001	48	A18-9109A	Stationary Control Contact	KP4831055
2	A18-9383	Contact Spring-Back Connected	KP4831002	49	A18-9110A	Stationary Control Contact	KP4831056
3	A18-9356A	Connector	KP4831003	50	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
4	TB-30-1	Coil	KP5031004	51	A18-2544	Aux Contact Insulator	KP4131055
4	TB-30-2	Coil, 230V	KP5031005	52	A18-9477	Aux Contact Stud	KP4131056
4	TB-30-4	Coil, 60 VDC	KP5031006	53	A18-9483	Spring	KP4131057
5	T-45-210	Operating Spring	KP5031007	54	A18-2543	Aux Contact Base Plate	KP4131058
6	A18-9076A	Mov Contact Support Adj Screw	KP5031008	55	A18-2542	Aux Contact Plate	KP4131059
7	A18-21984A	Arc Shield, Assembly	KP4831010	56	T-7-47	Coil Terminal Stud	KP4131032
8	A18-21378	Arc Shield Side Plate	KP4831011	56	T-7-36	Aux Stud	KP4131060
9	T-38-65	Arc Shield Washer	KP4131012	56	T-7-150	Aux Stud	KP4131061
10	T-7-116	Arc Shield Stud	KP4831013				
11	T-120-187	Arc Shield Stud	KP4831014				
12	A18-21379	Arc Barrier, Front	KP4831015				
13	A16-8159	Arc Barrier, Rear	KP4831017				
15	A18-5573	Blowout Ear, R.H	KP4831018				
16	A18-5574	Blowout Ear, L.H	KP4831019				
17	A18-23683A	Blowout Coil Assembly	KP4831021				
18	A18-23684	Blowout Coil	KP4831022				
19	T-24-95	Blowout Core	KP4831023				
20	T-7-117	Blowout Core Stud	KP4831024				
21	T-39-87	Blowout Core Insulator	KP4831025				
22	T-38-37	Blowout Washer	KP4831026				
23	A18-23685	Blowout Stud	KP4831027				
24	A18-23687	Blowout Spacer	KP4831028				
25	A18-3516	Arc Horn, Front	KP4831029				
26	A16-6957	Arc Horn, Rear	KP4831030				
27	A18-22649	Coil Washer	KP5031028				
28	A18-66732	Coil Clamp	KP5031029				
29	T-7-47	Coil Terminal Stud	KP4131032				
29	T-7-199	Coil Terminal Stud	KP4131033				
30	A16-18115	Connector Stud	KP4831036				
30	A16-6950	Connector Stud	KP4831047				
31	A18-23686	Contact Stud	KP4831037				
32	T-104-2	Contact Screw	KP4831038				
33	T-104-2	Contact Screw	KP4831038				
34	A18-10555A	Core Assembly	KP5031037				
35	A18-25373A	Frame	KP5031038				
36	A18-25349A	Main Arm Assembly	KP5031039				
37	T-66-3	Main Arm Pin	KP4831044				
38	A18-9491-3	Main Arm Bushing, Upper	KP4831045				
39	A18-9474-11	Main Arm Bushing, Lower	KP4831046				
40	T-40-23	Main Arm Bushing, Lower, Brass	KP4831048				
41	A18-26292A	Main Contact Support-Back Conn	KP4831049				
42	A18-5594A	Mov Contact Support Adj Screw	KP4731008				
43	T-115-32	Mov Contact Support Lock Nut	KP4831052				
44	A18-22714	SS Moving Contact Support Pin	KP4831053				
45	A18-3539	Stop Plate	KP5031048				

Replacement Parts for:

D.C. Magnetic Contactor Form 400-5RS

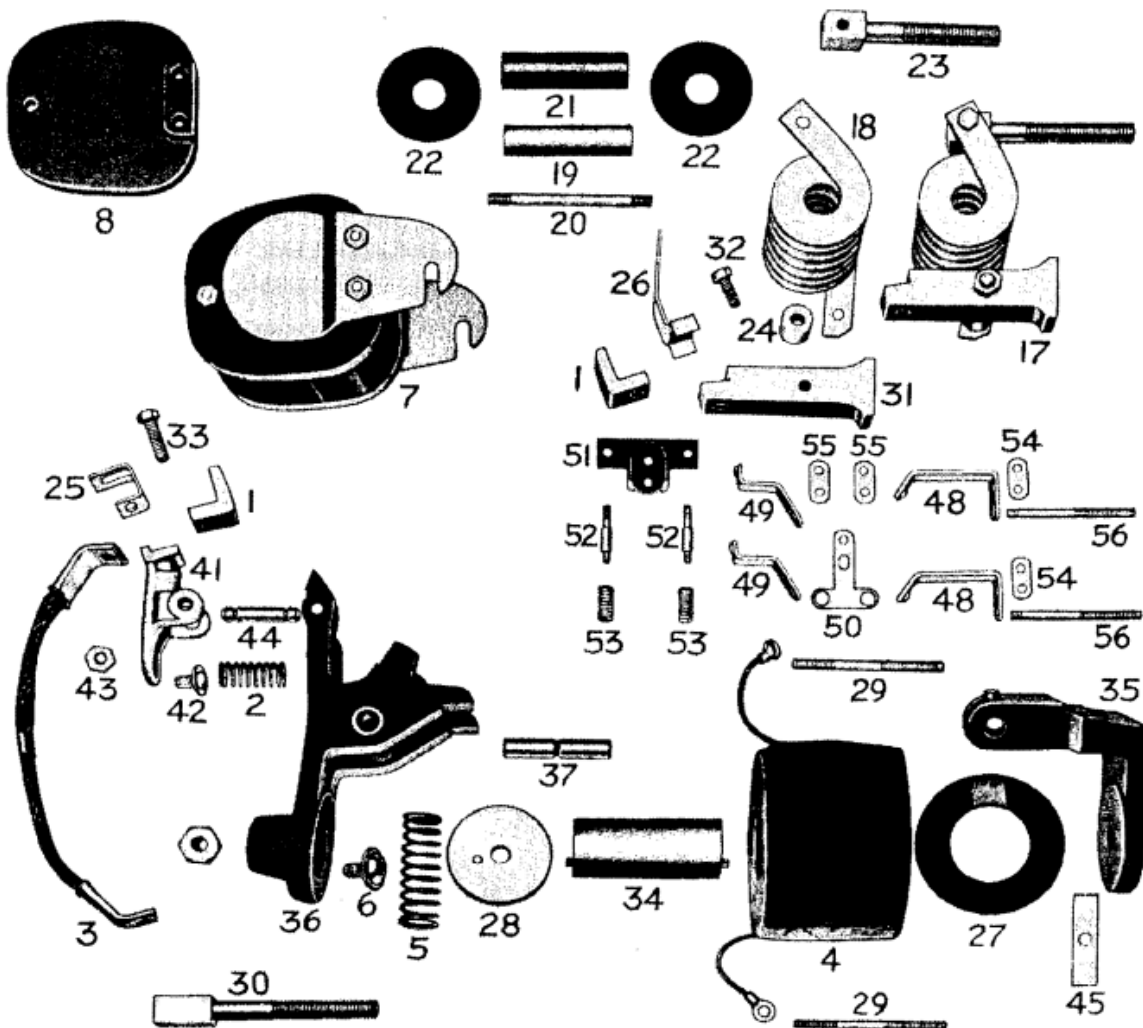


Replacement Parts for:

D.C. Magnetic Contactor Form 400-5RS

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-5581	Contact	KP5231001	54	A18-2543	Aux Contact Base Plate	KP4131058
3	A18-5558A	Connector	KP5231003	55	A18-2542	Aux Contact Plate	KP4131059
4	TB-30-1	Coil	KP5031004	56	T-7-47	Coil Terminal Stud	KP4131032
4	TB-30-2	Coil, 230V	KP5031005	56	T-7-36	Aux Stud	KP4131060
4	TB-30-4	Coil, 60 VDC	KP5031006	56	T-7-150	Aux Stud	KP4131061
5	T-45-210	Operating Spring	KP5031007				
7	A18-22028A	Arc Shield, Assembly	KP5231010				
8	A18-21378	Arc Shield Side Plate	KP4831011				
9	T-38-65	Arc Shield Washer	KP4131012				
10	T-7-99	Arc Shield Stud	KP5231013				
11	T-120-188	Arc Shield Stud	KP5231014				
12	A18-22004	Arc Barrier, Front	KP5231015				
13	A18-5571	Arc Barrier, Rear	KP5231016				
15	A18-5573	Blowout Ear, R.H	KP4831018				
16	A18-5574	Blowout Ear, L.H	KP4831019				
17	A18-23693A	Blowout Coil, Assembly	KP5231019				
18	A18-23694	Blowout Coil	KP5231020				
19	T-24-170	Blowout Core	KP5231021				
20	T-7-101	Blowout Core Stud	KP5231022				
21	T-39-146	Blowout Core Insulator	KP5231023				
22	T-38-56	Blowout Washer	KP5231024				
23	A18-23695	Blowout Stud	KP5231025				
24	A18-23697	Blowout Spacer	KP5231026				
25	A18-5583	Arc Horn, Front	KP5231027				
26	A18-152938	Arc Horn, Rear	KP5231028				
27	A18-22649	Coil Washer	KP5031028				
28	A18-66732	Coil Clamp	KP5031029				
29	T-7-47	Coil Terminal Stud	KP4131032				
29	T-7-199	Coil Terminal Stud	KP4131033				
30	A18-5593	Connector Stud	KP5231032				
30	A18-24376	Connector Stud	KP5231033				
31	A18-23696	Contact Stud	KP5231034				
32	T-104-3	Contact Screw	KP5231035				
33	T-104-4	Contact Screw	KP5231036				
34	A18-10555A	Core Assembly	KP5031037				
36	A18-25375A	Frame	KP5431036				
37	T-66-4	Main Arm Pin	KP5231040				
38	A18-9474-6	Main Arm Bushing, Upper	KP5231041				
39	A18-9474-12	Main Arm Bushing, Lower	KP5231042				
40	T-40-24	Main Arm Bushing, Lower, Brass	KP5231043				
41	A18-26294A	Main Contact Support-Back Conn	KP5231044				
42	A18-5594A	Mov Contact Support Adj Screw	KP4731008				
43	T-115-32	Mov Contact Support Lock Nut	KP4831052				
44	A18-24297	Moving Contact Support Pin	KP5231047				
50	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054				
51	A18-5586	Aux Contact Insulator	KP5231052				
52	A18-9477	Aux Contact Stud	KP4131056				
53	A18-9483	Spring	KP4131057				

Replacement Parts for:

D.C. Magnetic Contactor Form 600-5RS

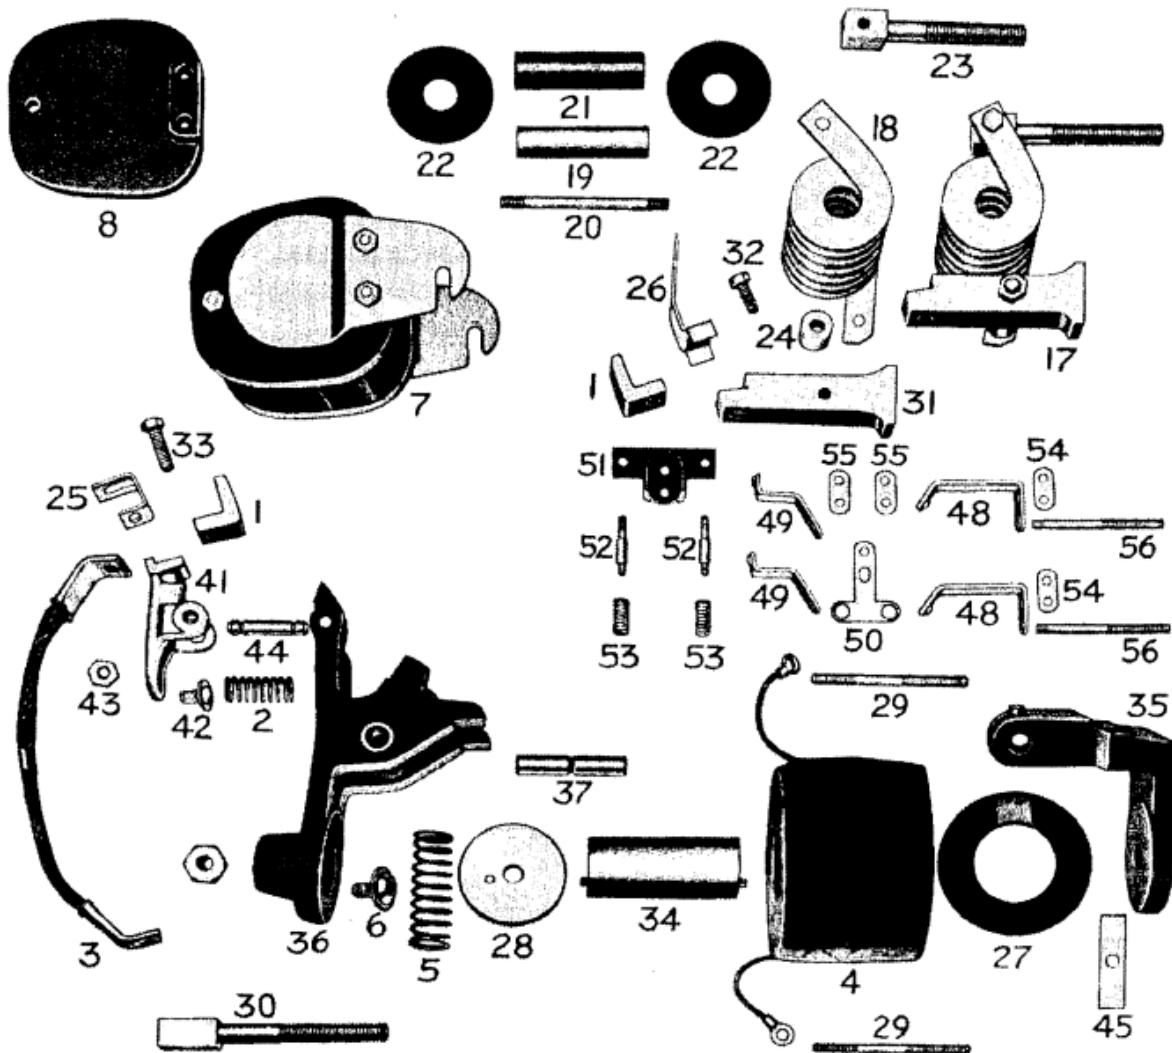


Replacement Parts for:

D.C. Magnetic Contactor Form 600-5RS

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A18-9091	Contact	KP5531001	51	A74-408570	Aux, Contact Insulator	KP5631049
3	A18-9060A	Shunt	KP5531004	52	A18-9477	Aux Contact Stud	KP4131056
4	TB-166-1	Encapsulated Coil, 230 VDC	KP5631003	53	A18-9483	Spring	KP4131057
4	TB-66-4	Coil, 230VDC Continuous	KP5631004	54	A13-26615	Base Plate	KP5631052
4	TB-166-2	Coil, 115VDC	KP5631005	55	A18-2542	Aux Contact Plate	KP4131059
5	A18-22999	Operating Spring	KP5631006	56	T-7-47	Coil Terminal Stud	KP4131032
6	A18-22993A	Operating Spring Adj. Screw	KP5631007	56	T-7-36	Aux Stud	KP4131060
7	A18-22029A	Arc Shield, Assembly	KP5531018	57	T-7-150	Aux Stud	KP4131061
8	A18-21380	Arc Shield Side Plate	KP5531019	57	A74-408572	Neman 6 N.C.S.P Contactor	KP5631057
9	T-38-66	Arc Shield Washer	KP5531021				
10	T-7-148	Arc Shield Stud	KP5531022				
11	T-7-149	Arc Shield Stud	KP5531023				
12	A18-21381	Arc Barrier, Front	KP5531024				
15	A18-9012	Blowout Ear R.H	KP5631014				
16	A18-9101	Blowout Ear, L.H	KP5531027				
17	A18-9121A	Blowout Coil, Assembly	KP5531028				
17a	A74-257318A	Blowout Coil Assy, Frt. Con	KP5531029				
18	A18-9090	Blowout Coil	KP5531030				
19	A18-9079	Blowout Core	KP5531031				
21	T-39-92	Blowout Core Insulator	KP5531032				
22	T-38-42	Blowout Washer	KP5531033				
23	A18-9093	Blowout Stud	KP5531034				
25	A18-9099	Arc Horn, Front	KP5531035				
26	A18-9098	Arc Horn, Rear	KP5531036				
27	A18-27618	Coil Washer	KP5631025				
28	A18-22996	Coil Clamp	KP5631026				
29	T-7-47	Coil Terminal Stud	KP4131032				
29	T-7-199	Coil Terminal Stud	KP4131033				
30	A18-9092	Connector Stud	KP5531041				
30a	A74-239877A	Connector Terminal (Front)	KP5631030				
31	A18-9085	Contact Stud	KP5531042				
32	T-104-5	Contact Screw	KP5531043				
33	T-104-6	Contact Screw	KP5531044				
34	A18-22994A	Core Assem	KP5631034				
35	A18-22991	Frame	KP5631035				
36	A18-22989A	Main Arm Assembly	KP5631036				
37	A74-413282	Stainless Steel Main Arm Pin	KP5631037				
37a	A74-413277	Spring Clip	KP5631038				
38	A18-9491-4	Main Arm Bushing, Upper	KP5531050				
39	A18-9474-14	Main Arm Bushing, Lower	KP5631040				
40	T-40-26	Main Arm Bushing	KP5631041				
41	A74-419607A	Moving Contact Support	KP5631042				
42	A18-9076A	Mov Contact Support Adj Screw	KP5031008				
44	A74-413296	SS Moving Contact Support Pin	KP5631044				
45	A18-22997	Stop Plate	KP5631045				
48	A18-22986A	Contact	KP5631046				
49	A18-22987A	Aux Contact (C.T. Sta)	KP5631047				
50	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054				


Replacement Parts for:

D.C. Magnetic Contactor Form 100-3L3A

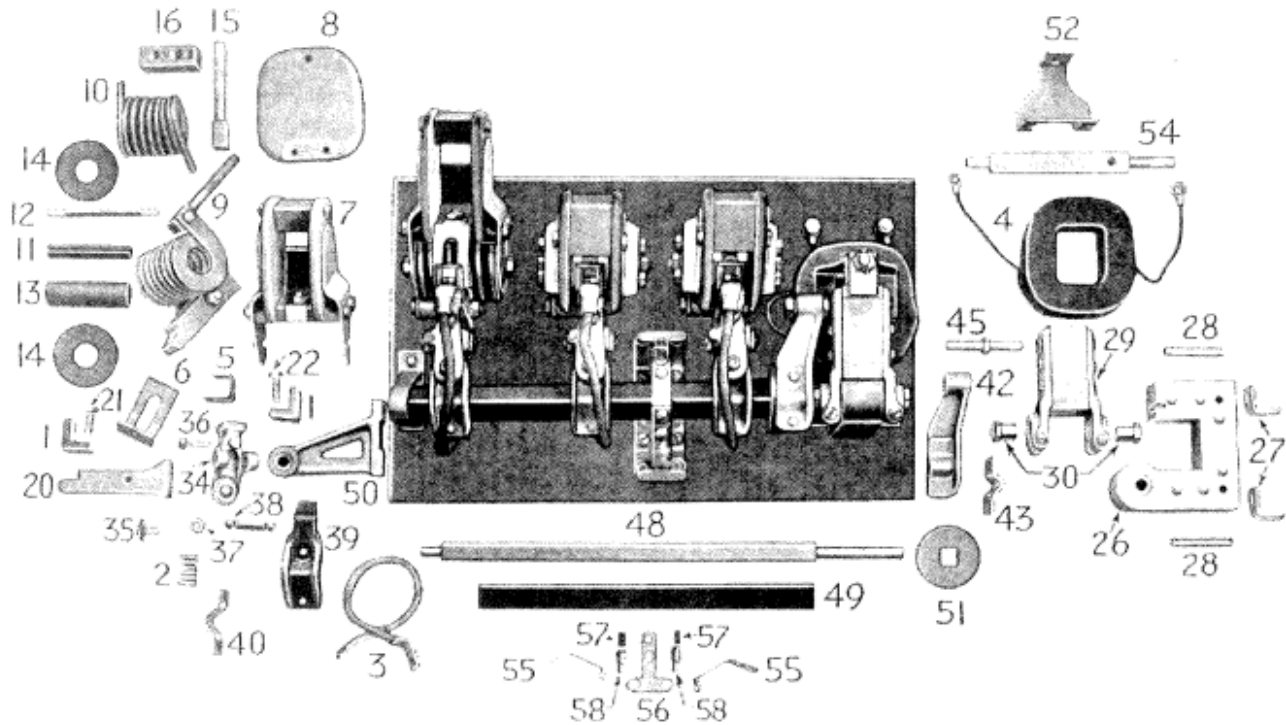

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-1936	Contact (Main-Mov & Sta)	KP4031001	35	A18-5065A	Mov Contact Support Adj Screw	KP4031024
2	A77-20545	Contact Spring	KP4031002	36	T-159-1	Mov Contact Support Stop Screw	KP4031025
3	A16-8113A	Connector	KP4031003	38	T-37-36	Moving Cont Sup Pin	KP4031026
7	A18-4950A	Arc Shield Assembly	KP4031004	39	A16-31753	Main Contact Arm	KP4031027
08a	A18-4972	Arc Shield Side Plate, RH	KP4031005	40	A16-1939	Main Contact Arm Clamp	KP4031028
08b	A18-4973	Arc Shield Side Plate, LH	KP4031006	42	A16-1940	Operating Arm	KP4031029
9	A16-92608A	B/O Coil Assembly	KP4031007	43	A16-1941	Operating Arm Clamp	KP4031030
10	A16-31756	B/O Coil	KP4031008	45	A16-1957	Operating Stud	KP4031031
11	A16-1947	Blowout Core	KP4031009	48	TB-5-2	Shaft, 2 Pole	KP4031032
12	T-120-201	Blowout Core Stud	KP4031010	48	TB-5-3	Shaft, 3 Pole	KP4031033
13	T-39-24	Blowout Core Insulator	KP4031011	49	TB-4-2	Shaft Insulator, 2 Pole	KP4031034
14	A16-1950	Blowout Washer	KP4031012	49	TB-4-3	Shaft Insulator, 3 Pole	KP4031035
15	A16-31758	Blowout Stud, Back Connected	KP4031013	50	A16-1934	Shaft Bearing	KP4031036
15	A16-31765	Blowout Stud, Front Connected	KP4031014	51	A16-1964	Shaft Spacer	KP4031037
20	A16-31757	Contact Stud	KP4031015	52	A16-1969	Shading Coil, 60 Cycle	KP4031038
21	T-132-21	Contact Screw	KP4031016	52	A16-1970	Shading Coil, 25 Cycle	KP4031039
22	T-121-13	Contact Screw	KP4031017	54	A16-1960	Stop Stud, 1-1/4" Slate	KP4031040
26	A16-1929A	Magnet Core	KP4031018	55	A16-10263A	Stationary Tip	KP4031041
27	A16-1951	Magnet Core Mounting Angle	KP4031019	56	A16-10265A	Movable Contact	KP4031042
28	T-51-2	Magnet Core Pin	KP4031020	57	T-45-24	Aux Contact Spring	KP4031043
29	A16-1930A	Magnet Arm	KP4031021	58	T-5-1	Aux Contact Spring Stud	KP4031044
30	A16-1952	Magnet Arm Adj Bushing	KP4031022				
34	A16-18890A	Moving Contact Support	KP4031023				


Replacement Parts for: D.C. Magnetic Contactor Form 150—3R3A

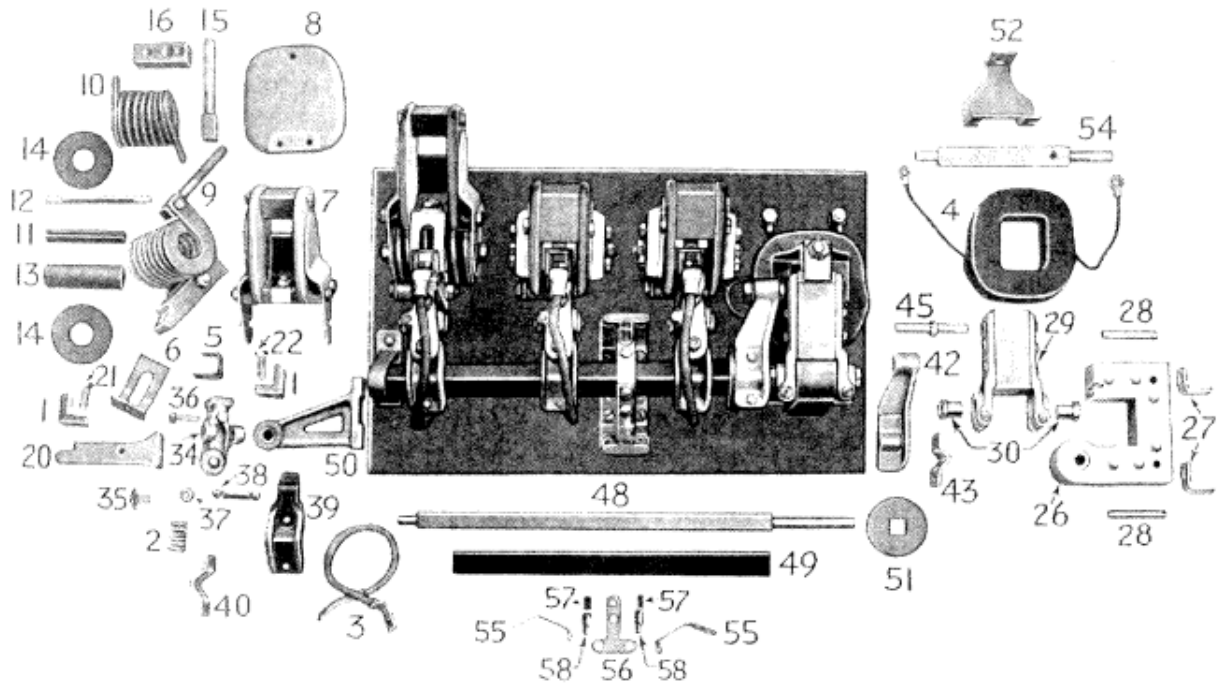

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-7980	Contact	KP4431001	36	T-16-30546	Moving Cont Sup Stop Screw	KP4431026
2	A16-8009	Contact Spring	KP4431002	37	A18-9469	Mov Contact Support Lock Nut	KP4131049
3	A16-7966A	Connector	KP4431003	38	A18-24296	Moving Contact Support Pin	KP4431028
6	A16-8007	Arc Horn, Rear	KP4431004	39	A16-30563A	Main Contact Arm	KP4431029
7	A16-7965A	Arc Shield Assembly	KP4431005	40	A16-7975	Main Contact Arm Clamp	KP4431030
8	A18-3514	Arc Shield Side Plate	KP4431006	42	A16-13681	Operating Arm	KP4431031
9	A16-100636A	B/O Coil Assy, Back Connected	KP4431007	43	A16-7977	Operating Arm Clamp	KP4431032
9	A16-30558A	B/O Coil Assy, Front Connected	KP4431008	45	A16-7978	Operating Stud	KP4431033
10	A16-30549	Blowout Coil	KP4431009	48	TB-5-14	Shaft, 2 Pole	KP4431034
II	A16-8003	Blowout Core	KP4431010	48	TB-5-15	Shaft, 3 pole	KP4431035
12	T-7-123	Blowout Core Stud	KP4431011	49	A77-117246A-2	Shaft Insulator, 2 Pole	KP4431036
13	T-39-79	Blowout Core Insulator	KP4431012	49	A77-117246A-3	Shaft Insulator, 3 Pole	KP4431037
14	T-38-36	Blowout Washer	KP4431013	50	A16-13411A	Shaft Bearing	KP4431038
15	A18-23690	Blowout Stud	KP4431014	51	A16-8161	Shaft Spacer	KP4431039
16	A16-30557	Blowout Terminal	KP4431015	52	A16-8011A	Shading Coil, 60 Cycle	KP4431040
20	A18-23691	Contact Stud	KP4431016	53	A16-8012A	Shading Coil, 25 Cycle	KP4431041
21	T-104-1	Contact Screw	KP4431017	54	A16-7993	Stop Stud, 1-1/4" Slate	KP4431042
22	T-104-1	Contact Screw	KP4431017	55	A16-10264A	Aux Contact Stationary	KP4431043
26	A16-7967A	Magnet Core	KP4431019	56	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
27	A16-7989	Magnet Core Mounting Angle	KP4431020	57	T-45-38	Aux Contact Spring	KP4431045
28	T-37-43	Magnet Core Pin	KP4431021	58	T-13-1	Aux Contact Spring Stud	KP4431046
29	A16-7968A	Magnet Arm	KP4431022				
30	A16-7982	Magnet Arm Adjusting Bushing	KP4431023				
34	A16-30548A	Moving Contact Support	KP4431024				
35	A16-7981A	Adjusting Screw	KP4431025				

Replacement Parts for:

D.C. Magnetic Contactor Form 400-3R3A

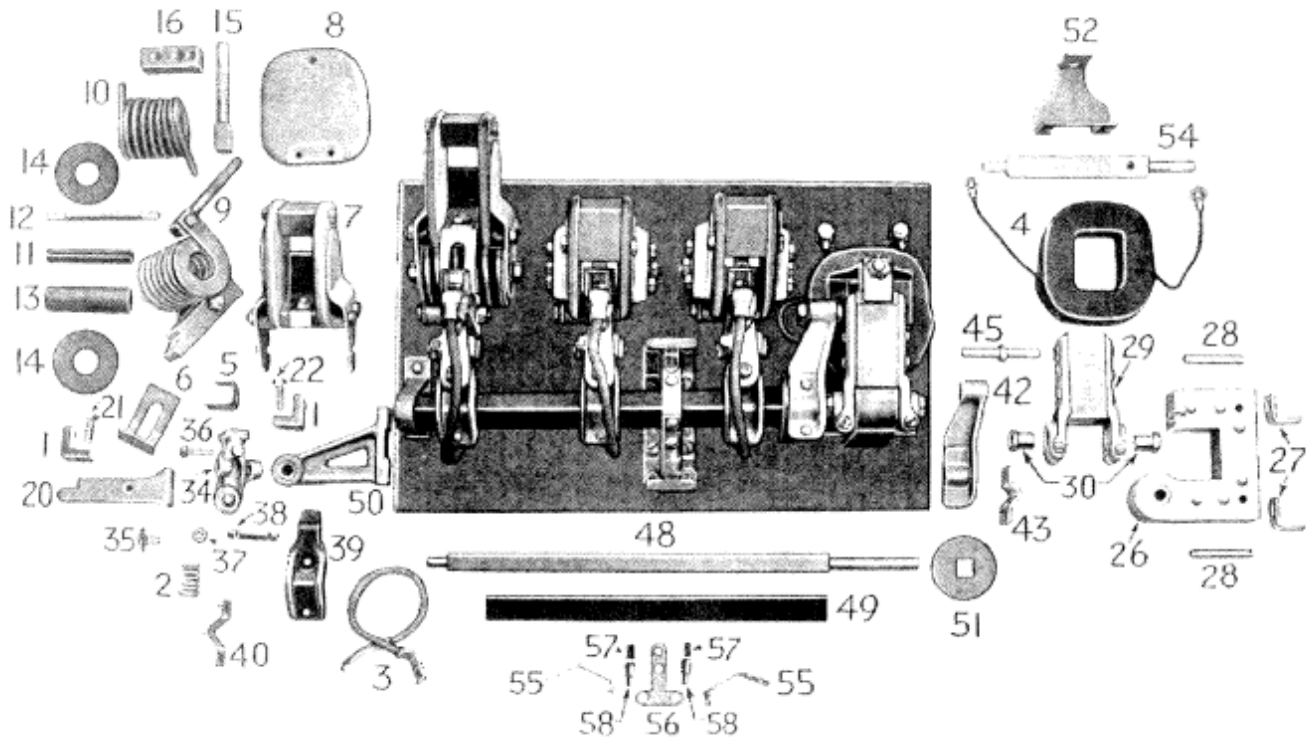

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A16-1936	Contact (Main-Mov & Sta)	KP4031001	35	A18-5065A	Mov Contact Support Adj Screw	KP4031024
2	A77-20545	Contact Spring	KP4031002	36	T-159-1	Mov Contact Support Stop Screw	KP4031025
3	A16-8113A	Connector	KP4031003	38	T-37-36	Moving Cont Sup Pin	KP4031026
7	A18-4950A	Arc Shield Assembly	KP4031004	39	A16-31753	Main Contact Arm	KP4031027
08a	A18-4972	Arc Shield Side Plate, RH	KP4031005	40	A16-1939	Main Contact Arm Clamp	KP4031028
08b	A18-4973	Arc Shield Side Plate, LH	KP4031006	42	A16-1940	Operating Arm	KP4031029
9	A16-92608A	B/O Coil Assembly	KP4031007	43	A16-1941	Operating Arm Clamp	KP4031030
10	A16-31756	B/O Coil	KP4031008	45	A16-1957	Operating Stud	KP4031031
11	A16-1947	Blowout Core	KP4031009	48	TB-5-2	Shaft, 2 Pole	KP4031032
12	T-120-201	Blowout Core Stud	KP4031010	48	TB-5-3	Shaft, 3 Pole	KP4031033
13	T-39-24	Blowout Core Insulator	KP4031011	49	TB-4-2	Shaft Insulator, 2 Pole	KP4031034
14	A16-1950	Blowout Washer	KP4031012	49	TB-4-3	Shaft Insulator, 3 Pole	KP4031035
15	A16-31758	Blowout Stud, Back Connected	KP4031013	50	A16-1934	Shaft Bearing	KP4031036
15	A16-31765	Blowout Stud, Front Connected	KP4031014	51	A16-1964	Shaft Spacer	KP4031037
20	A16-31757	Contact Stud	KP4031015	52	A16-1969	Shading Coil, 60 Cycle	KP4031038
21	T-132-21	Contact Screw	KP4031016	52	A16-1970	Shading Coil, 25 Cycle	KP4031039
22	T-121-13	Contact Screw	KP4031017	54	A16-1960	Stop Stud, 1-114" Slate	KP4031040
26	A16-1929A	Magnet Core	KP4031018	55	A16-10263A	Stationary Tip	KP4031041
27	A16-1951	Magnet Core Mounting Angle	KP4031019	56	A16-10265A	Movable Contact	KP4031042
28	T-51-2	Magnet Core Pin	KP4031020	57	T-45-24	Aux Contact Spring	KP4031043
29	A16-1930A	Magnet Arm	KP4031021	58	T-5-1	Aux Contact Spring Stud	KP4031044
30	A16-1952	Magnet Arm Adj Bushing	KP4031022				
34	A16-18890A	Moving Contact Support	KP4031023				

Replacement Parts for:

D.C. Magnetic Contactor Type KD 100 Amp


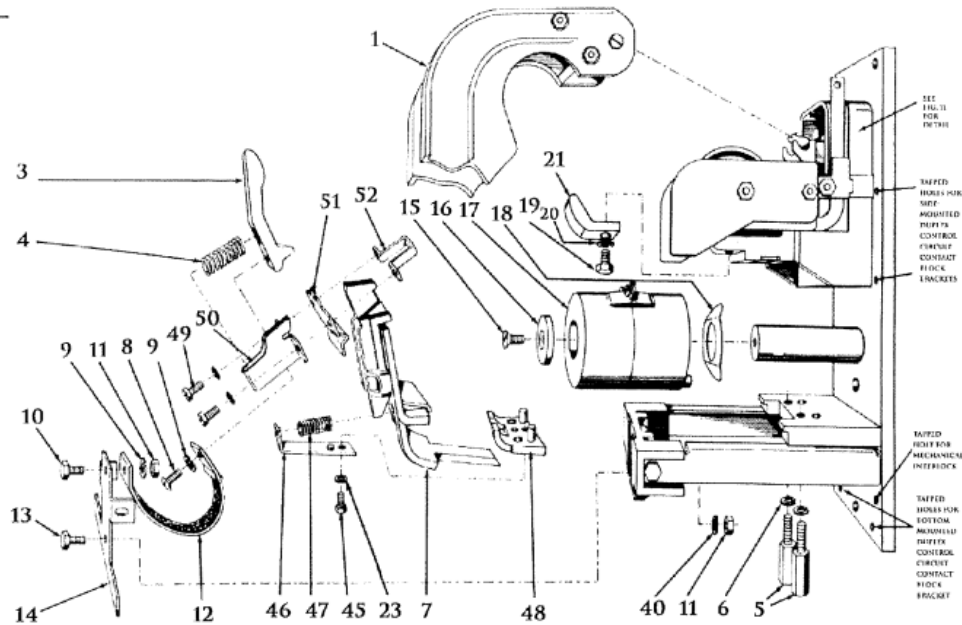


FIG. 10 EXPLODED VIEW, ARMATURE, COIL - ARC SHIELD ASSEMBLY

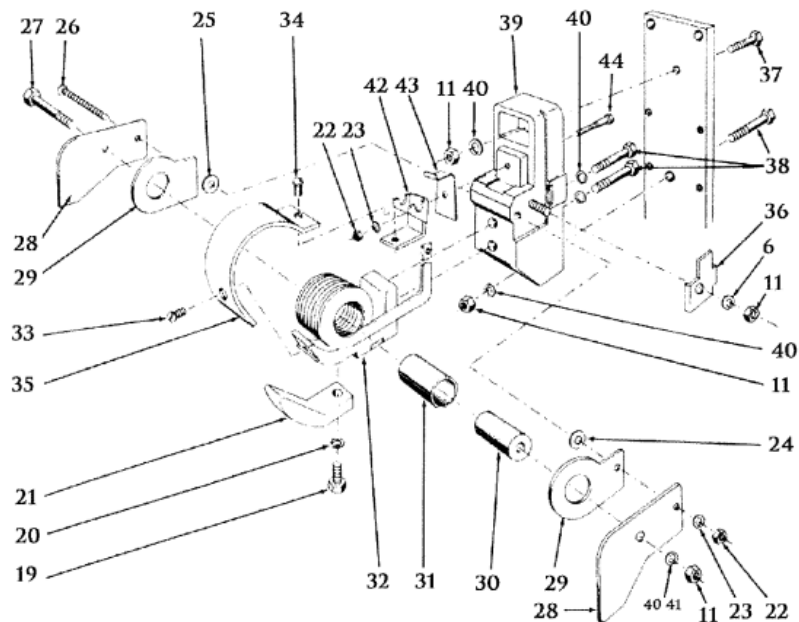

Replacement Parts for:

D.C. Magnetic Contactor Type KD 100 Amp

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	KKD-101	Assem Arc Shield	KP5831001	46	A74-243832	Spring Retainer	KP5831049
2	KKD-100	Contact Kit	KP5831002	47	A74-243833	Spring	KP5831050
3	B74-243831	Contact	KP5831003	48	A74-243835-A	Pivot Support Assembly	KP5831051
4	KKD-102	Movable Contact Spring (only)	KP5831004	49	T-132-20	Std. Fil. Head Screw	KP5831052
4	A74-253067-3	Contact Spring	KP5831005	50	A74-243841-1	Contact Spring Retainer	KP5831053
5	A74-243825-1	Shoulder Bolt	KP5831006	51	B74-243843-1	Pivot Plate	KP5831054
6	T-155-14	Washer	KP0831029	52	A74-243842	Clamp	KP5831055
7	B74-243844-A	Armature Molding Assembly	KP5831008				
8	T-121-8	Slotted Hex Head Screw	KP5831009				
9	T-155-11	Thin Spring Lockwasher	KP5831010				
10	T-121-13	Contact Screw	KP4031017				
11	T-115-25	Hex Nut	KP5831012				
12	KKD-104	Flexible Connector Kit	KP5831013				
12	A74-253067-5	Connector Kit	KP5831014				
13	T-121-12	Hex Head Screw	KP5831015				
14	A74-243824-1	Front Connector Plate	KP5831016				
15	T-122-61	Coil Retainer Screw	KP5831017				
16	A74-243823-A	Coil Retainer	KP5831018				
17	TB- 109-1	Encapsulated Coil 240 VDC	KP5831019				
17	TB-109-2	Coil 120V DC	KP5831020				
17	TB-109-7	Coil 95V DC	KP5831021				
17	TB-109-9	Coil, 24 VDC	KP5831022				
18	A74-243820	Coil Spring Washer	KP5831023				
19	A74-244395	Stationary Contact Screw	KP5831024				
20	T-155-13	Thin Spring Lockwasher	KP5831025				
21	A74-190300	Stationary Contact	KP5831026				
22	T-115-19	Hex Nut	KP2331025				
23	T-155-10	Spring Lockwasher	KP5831028				
24	A74-244360-1	Spacer	KP5831029				
26	T-120-142	Brass Rd Head Screw	KP5831030				
27	T-121-34	Hex Head Screw	KP5831031				
28	A74-243809	Blowout Ears	KP5831032				
29	A74-243806	Blowout Washer	KP5831033				
30	A74-243808-1	Blowout Core	KP5831034				
31	A74-243807-1	Blowout Core Insulator	KP5831035				
32	A74-243812-A	Blowout Coil Assembly	KP5831036				
33	T-122-110	Std. Flat Head Screw	KP5831037				
34	T-123-15	P.A Rd. Head Screw	KP5831038				
35	A74-243804-1	Rear Arc Runner	KP5831039				
36	A74-243805-1	Blowout Clip	KP5831040				
37	T-121-19	Hex Head Screw	KP5831041				
38	T-121-24	Hex Head Screw	KP5831042				
39	C74-243801	Base Insulator	KP5831043				
40	T-155-12	Spring Lockwasher	KP5831044				
42	A74-243803	Arc Shield Pivot Support	KP5831045				
43	A74-243802	Arc Shield Spring Clip	KP5831046				
44	T-121-250	Std. Hex Head Screw	KP5831047				
45	T-121-244	Std. Hex Head Screw	KP5831048				

Replacement Parts for:

D.C. Magnetic Contactor Type KD 150 Amp


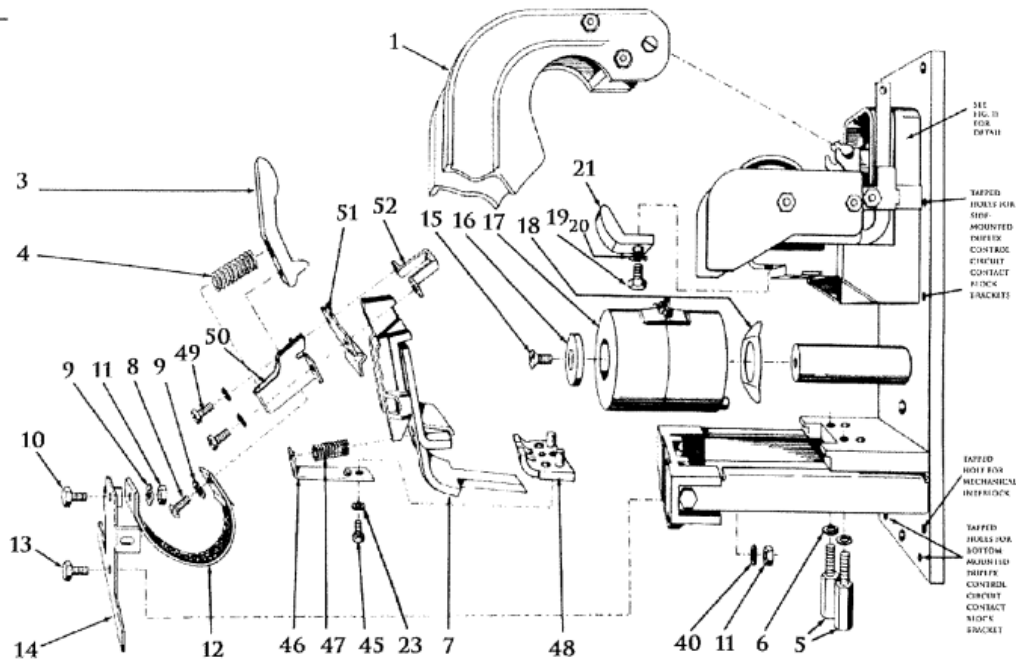


FIG. 10 EXPLODED VIEW, ARMATURE, COIL - ARC SHIELD ASSEMBLY

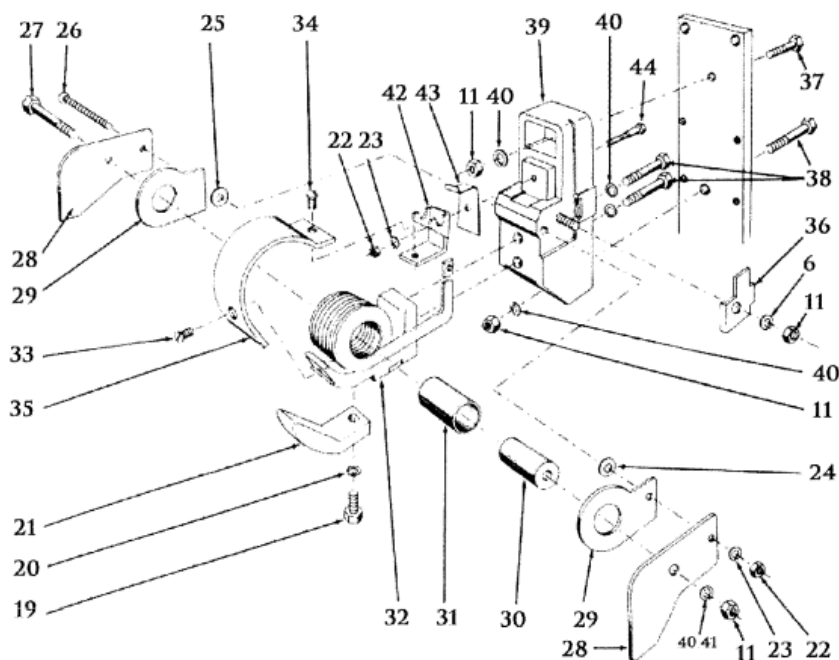

Replacement Parts for:

D.C. Magnetic Contactor Type KD 150 Amp

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	KKD-151	Assem Arc Shield	KP5931001	48	A74-243835-A	Pivot Support Assembly	KP5831051
2	KKD-150	Contact Kit	KP5931002	49	T-132-20	Std. Fil. Head Screw	KP5831052
3	A74-244363	Movable Contact	KP5931003	50	A74-243841-2	Contact Spring Retainer	KP5931051
4	KKD-152	Movable Contact Spring	KP5931004	51	B74-243843-2	Pivot Plate	KP5931052
5	A74-243825-1	Shoulder Bolt	KP5831006	52	A74-243842	Clamp	KP5831055
6	T-155-14	Washer	KP0831029				
7	B74-243844-A	Armature Molding Assembly	KP5831008				
8	T-121-8	Slotted Hex Head Screw	KP5831009				
9	T-155-11	Thin Spring Lockwasher	KP5831010				
10	T-121-13	Contact Screw	KP4031017				
11	T-115-25	Hex Nut	KP5831012				
12	KKD-154	Connector Kit	KP5931012				
13	T-121-12	Hex Head Screw	KP5831015				
14	A74-243824-2	Front Connector Plate	KP5931014				
15	T-122-61	Coil Retainer Screw	KP5831017				
16	A74-243823-A	Coil Retainer	KP5831018				
17	TB-109-1	Encapsulated Coil 240 VDC	KP5831019				
17	TB-109-2	Coil 120V DC	KP5831020				
17	TB-109-9	Coil, 24 VDC	KP5831022				
18	A74-243820	Coil Spring Washer	KP5831023				
19	A74-244395	Stationary Contact Screw	KP5831024				
20	T-155-13	Thin Spring Lockwasher	KP5831025				
21	A74-244356	Stationary Contact	KP5931023				
22	T-115-19	Hex Nut	KP2331025				
23	T-155-10	Spring Lockwasher	KP5831028				
24	A74-244360-2	Spacer	KP5931026				
25	A74-244360-3	Spacer	KP5931027				
26	T-120-142	Brass Rd. Head Screw	KP5831030				
27	T-121-34	Hex Head Screw	KP5831031				
28	A74-243809	Blowout Ears	KP5831032				
29	A74-243806	Blowout Washer	KP5831033				
30	A74-243808-2	Blowout Core	KP5931032				
31	A74-243807-2	Blowout Core Insulator	KP5931033				
32	A74-244353-A	Blowout Coil Assembly	KP5931034				
33	T-122-110	Std. Flat Head Screw	KP5831037				
34	T-123-15	P.A Rd. Head Screw	KP5831038				
35	A74-243804-2	Rear Arc Runner	KP5931037				
36	A74-243805-2	Blowout Clip	KP5931038				
37	T-121-19	Hex Head Screw	KP5831041				
38	T-121-24	Hex Head Screw	KP5831042				
39	C74-243801	Base Insulator	KP5831043				
41	T-155-11	Thin Spring Lockwasher	KP5831010				
42	A74-243803	Arc Shield Pivot Support	KP5831045				
43	A74-243802	Arc Shield Spring Clip	KP5831046				
44	T-121-250	Std. Hex Head Screw	KP5831047				
45	T-121-244	Std. Hex Head Screw	KP5831048				
46	A74-243832	Spring Retainer	KP5831049				
47	A74-243833	Spring	KP5831050				

Replacement Parts for:

D.C. Magnetic Contactor Type KD 300 Amp


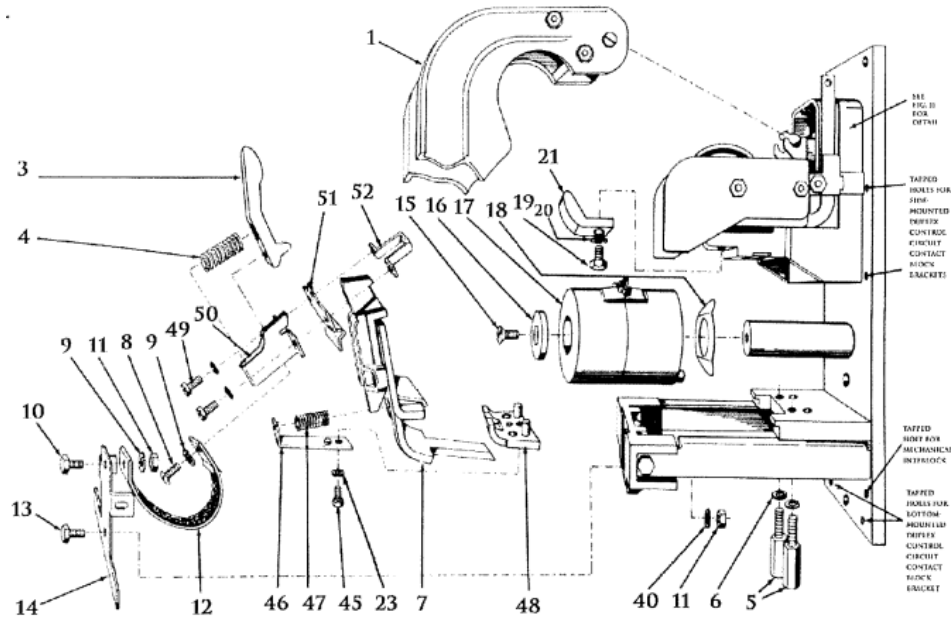


FIG. 10 EXPLODED VIEW, ARMATURE, COIL - ARC SHIELD ASSEMBLY

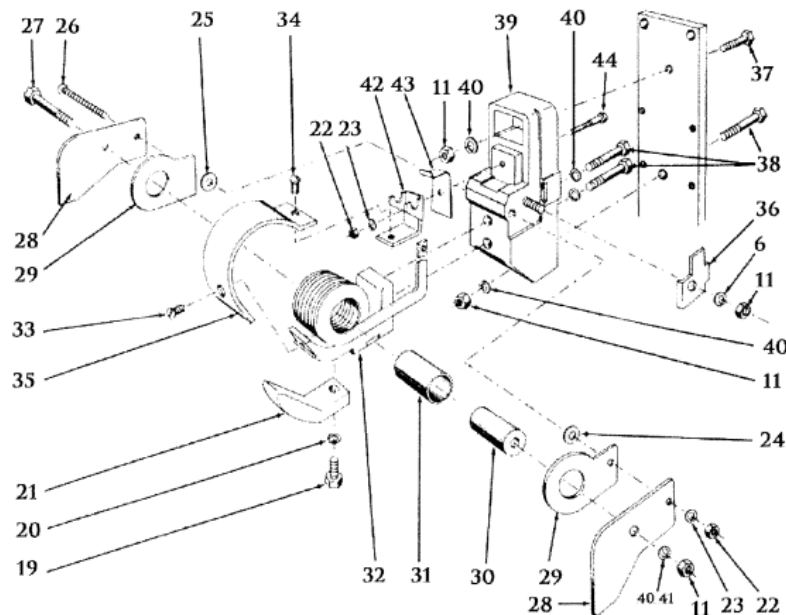


Replacement Parts for:

D.C. Magnetic Contactor Type KD 300 Amp

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	KKD-301	Arc Shield	KP6031001	45	T-121-9	Std. Head Hex Screw	KP6031049
2	KKD-300	Contact Kit	KP6031002	46	A74-250834	Spring Retainer	KP6031050
3	B74-250831	Movable Contact	KP6031003	47	A74-250833	Spring	KP6031051
4	KKD-302	Moveable Contact Spring Only	KP6031004	48	A74-250818-A	Pivot Support Assembly	KP6031052
4	A74-253069-3	Contact Spring	KP6031005	49	T-132-25	Std. Til. Head Screw	KP6031053
5	A74-243825-2	Shoulder Bolt	KP6031006	50	A74-250829	Contact Spring Retainer	KP6031054
6	T-155-15	Washer	KP0831024	51	B74-250827	Pivot Plate	KP6031055
6	T-155-14	Washer	KP0831029	52	A74-250846-A	Clamp	KP6031056
6	T-155-12	Spring Lockwasher	KP5831044				
7	B74-250826-A	Armature Molding Assembly	KP6031010				
8	T-121-77	Slotted Hex Head Screw	KP6031011				
9	T-155-16	Thin Spring Lockwash	KP6031012				
10	T-121-81	Slotted Hex Head Screw	KP6031013				
11	T-115-25	Hex Nut	KP5831012				
12	KKD-304	Flexible Connector Kit	KP6031015				
13	T-121-78	Hex Head Screw	KP6031016				
14	B74-250809	Front Connector Plate	KP6031017				
15	T-172-23	Coil Retainer Screw	KP6031018				
16	A74-250840-A	Coil Retainer	KP6031019				
17	TB-144-1	Encapsulated Coil 240 VDC	KP6031020				
17	TB-144-2	Coil 120V DC	KP6031021				
17	TB-144-8	Coil 95V DC	KP6031022				
18	A74-244379	Coil Spring Washer	KP6031023				
20	T-121-76	Magnet Coil Bolts	KP0831010				
20	T-155-16	Thin Spring Lockwash	KP6031012				
21	A74-250814	Stationary Contact	KP6031026				
22	T-115-25	Hex Nut	KP5831012				
23	T-155-12	Spring Lockwasher	KP5831044				
24	A74-244360-4	Spacer	KP6031029				
26	T-121-258	Brass Rd Head Screw	KP6031030				
27	T-121-10	Hex Head Screw	KP6031031				
28	A74-250819	Blowout Ears	KP6031032				
29	A74-250816	Blowout Washer	KP6031033				
30	A74-250847	Blowout Core	KP6031034				
31	A74-243807-3	Blowout Core Insulator	KP6031035				
32	A74-250822-A	Blowout Coil Assembly	KP6031036				
33	T-122-110	Std. Flat Head Screw	KP5831037				
34	T-123-15	P.A. Rd. Head Screw	KP5831038				
35	B74-250813	Rear Arc Runner	KP6031039				
36	A74-250815	Blowout Clip	KP6031040				
37	T-121-90	Hex Head Screw	KP6031041				
38	T-121-92	Hex Head Screw	KP6031042				
39	D74-250801	Base Insulator	KP6031043				
40	T-155-15	Washer	KP0831024				
40	T-155-12	Spring Lockwasher	KP5831044				
42	A74-250812	Arc Shield Pivot Support	KP6031046				
43	A74-250811	Arc Shield Spring Clip	KP6031047				
44	T-120-195	Std. Hex Head Screw	KP6031048				


Replacement Parts for: Master Switch- Type RD, RDS

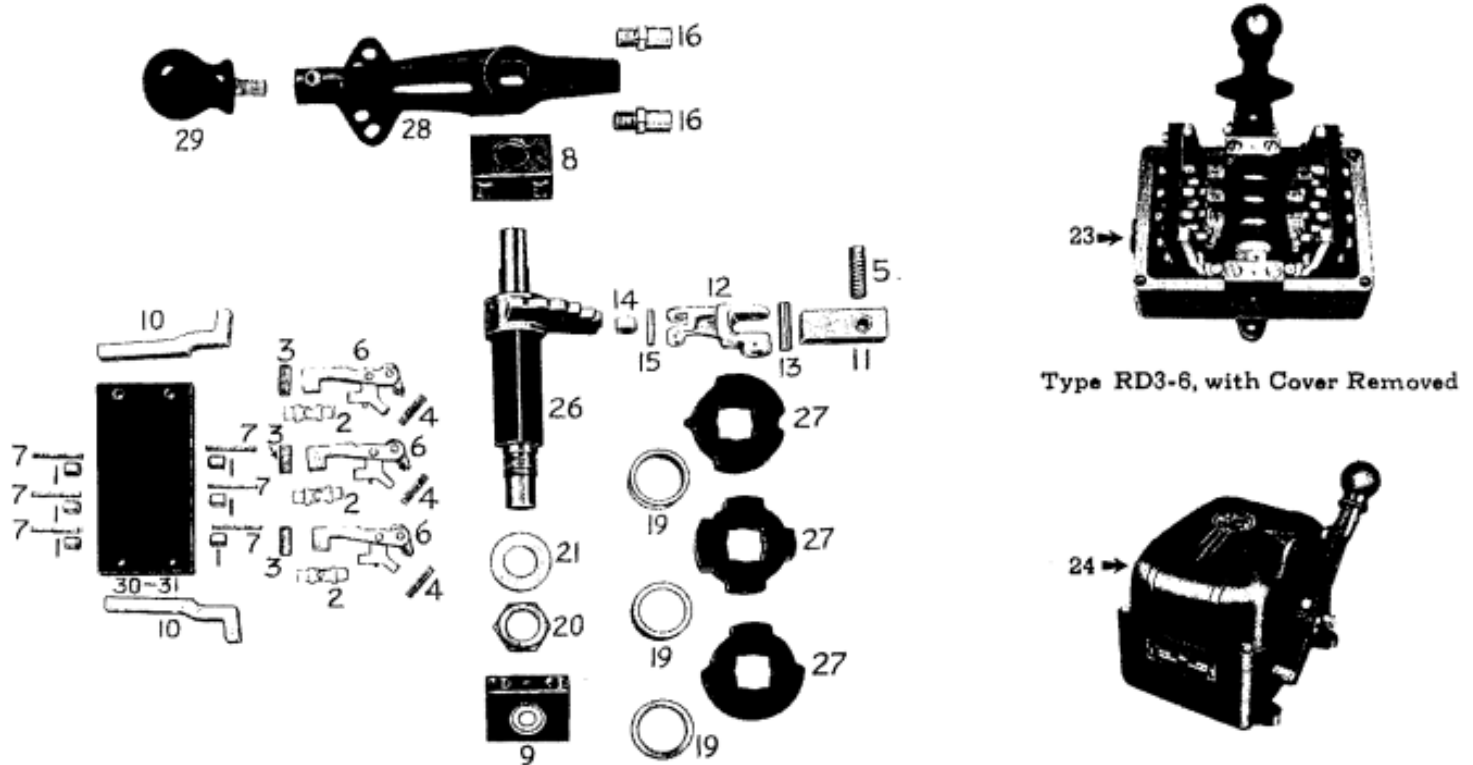

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A102-237821	Stationary Contact	KP6231001	19	T-24-220	Spacer	KP6231020
1a	T-2-420	Steel Washer	KP6231002	20	A1 01-28962	Locknut	KP6231021
2	A101-28965A	Movable Contact	KP6131002	21	[1]	Washer	
3	A101-34114	Contact Spring	KP6131003	22	[1]	Washer	
4	T-45-151	Operating Spring	KP6131004	23	[1]	Case Only	
5	T-45-150	Cam Roller Arm Spring	KP6231006	24	[1]	Cover Only	
6	A101-34104A	Contact Arm	KP6231007	25	[1]	Shaft and Cam Assembly	
7	A102-237820-1	Stud	KP6231008	26	[1]	Shaft & Quadrant Assembly	
8	A101-28969A	Front Bearing Block	KP6231009	27	[1]	Cam	
9	A101-28970A	Rear Bearing Block Assembled	KP6231010	28	[1]	Lever	
10	A101-34103A	Slate Bracket Assembled	KP6231011	29	[1]	Handle	
11	A101-28950	Roller Arm Block	KP6231012	30	[1]	Slate, RH	
12	A101-28951	Cam Roller Arm	KP6231013	31	[1]	Slate, LH	
13	A101-28959	Roller Arm Pin	KP6231014	32	[1]	Return Spring	
14	A101-28958	Cam Roller	KP6231015				
15	A101-28961	Cam Roller Pin	KP6231016				
16	A101-28964	Stop Stud	KP6231017				
17	A101-34125	Connector	KP6231018				
18	A101-34124	Jumper	KP6231019				



[1] Parts determined by the cam arrangement specified for each application. Furnish complete name plate data.

Replacement Parts for: Hatchway Limit Switch, Type HL

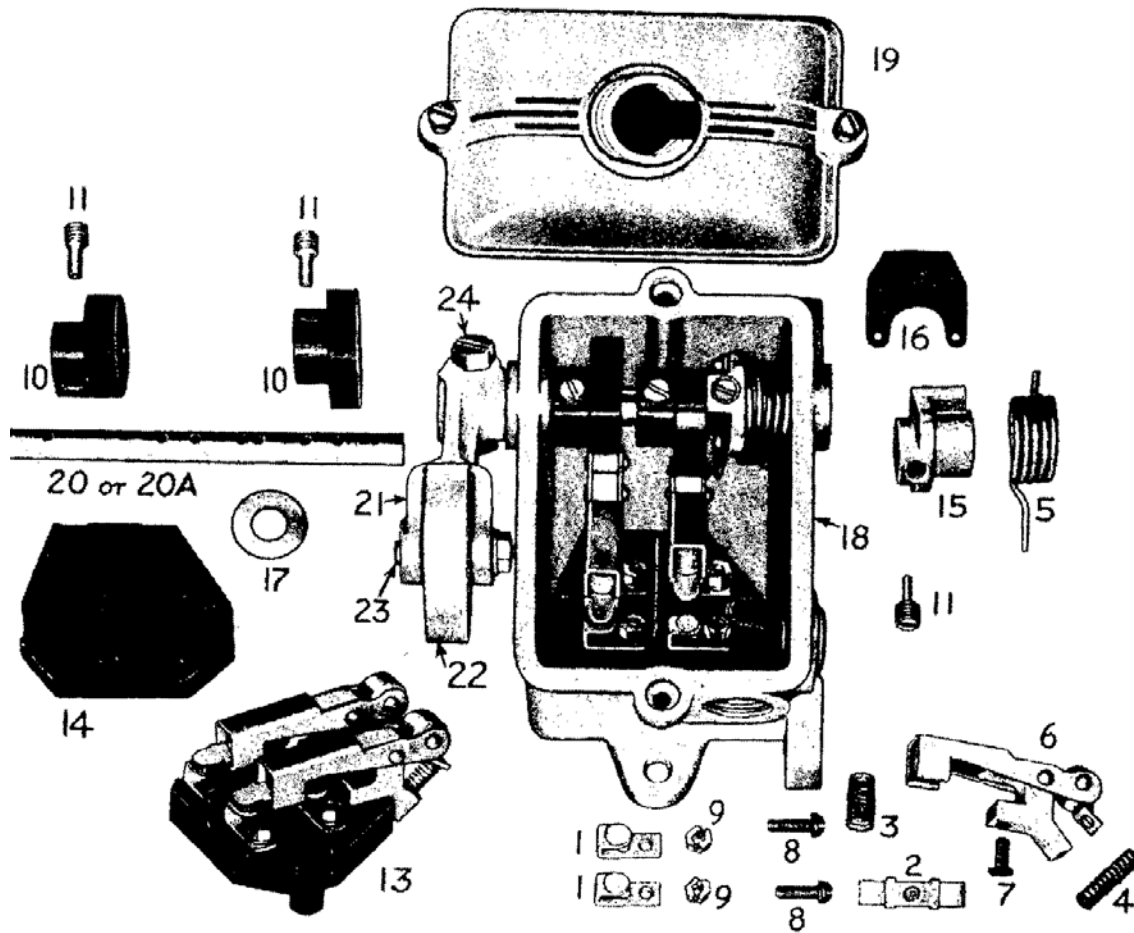


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A102-41257A	Stationary Contact	KP6131001	16	A102-41264	Insulator	KP6131016
2	A101-28965A	Movable Contact	KP6131002	17	A102-54633	Spring Washer	KP6131017
3	A101-34114	Contact Spring	KP6131003	18	A102-41253A	Box, Assembled	KP6131018
4	T-45-151	Operating Spring	KP6131004	19	A102-41254A	Cover, Assembled	KP6131019
5	A101-62988	Spring	KP6131005	20	A102-41260	Shaft	KP6131020
6	A102-77222A	Assembled Contact Arm	KP6131006	20A	A102-53536	Shaft	KP6131021
7	T-124-11	Lockwasher & Screw	KP6131007	21	A102-41276	Lever	KP6131022
8	T-127-4	Lockwasher & Screw	KP6131008	22	A102-127784A	Roller, Standard Cast Iron	KP6131023
9	A73-46228	Slotted Nut	KP6131009	22	A102-36408	Roller, Textolite	KP6131024
10	A102-52625	Cam for A101-88361A	KP6131010	23	A102-41266	Roller Stud	KP6131025
11	A102-52858	Cam Screw	KP6131011	24	T-161-8	Arm. Adj. Bolt	KP6131026
12	A102-41256A	Contact Base Assembled	KP6131012	25	T-24-91	Spacer	KP6131027
13	A102-41255A	Contact Base Assembled	KP6131013				
14	A102-41258	Contact Base Only	KP6131014				
15	A102-41262	Spring Arm	KP6131015				

Replacement Parts for: Type AP Anti-Plug Relay

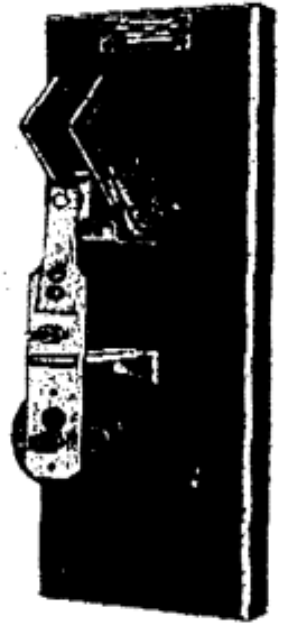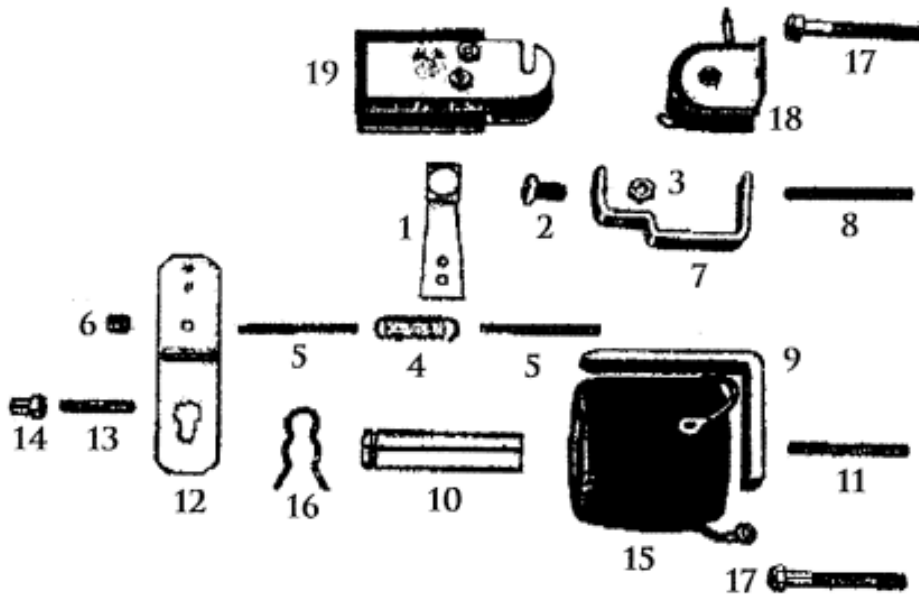


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A29-82927A	Front Contact Assembled	KP6331001	19	A29-2659A	Arc Shield Assembly	KP6331020
2	A29-2691A	Rear Contact Assembled	KP6331002	*	A29-16351A	AP Relay Complete	KP6331021
3	A29-2684	Lock Nut	KP6331003	*	AP RELAY	AP Relay Complete	KP6331022
4	T-46-14	Spring	KP6331004	*	A29-2656-2	Blowout Coil, 5 Amp	KP6331023
5	A18-1978	Adjusting Stud	KP6331005	*	A29-2656-1	Blowout Coil, 2 Amp	KP6331024
6	A29-2689	Adjusting Nut	KP6331006	*	A73-280057	Base	KP6331025
7	A29-2671	Rear Contact Bracket	KP6331007	*	T-120-200	Screw	KP6331026
8	T-7-36	Aux Stud	KP4131060				
8	T-7-150	Aux Stud	KP4131061				
9	A29-2668	Magnet Frame	KP6331010				
10	A29-2705A	Magnet Core Assembled	KP6331011				
11	T-7-81	Stud (magnet Core)	KP6331012				
11	T-7-73	Stud (magnet Core)	KP6331013				
12	A29-5952	Magnet Arm	KP6331014				
13	A29-2706	Adjusting Stud	KP6331015				
14	A29-2680	Adjusting Nut	KP6331016				
16	T-55-5	Special Cotter	KP6331017				
17	A29-2676	Stud	KP6331018				
18	A29-2656A	Blowout Coil Assembled	KP6331019				

Replacement Parts for: Type CH Relay

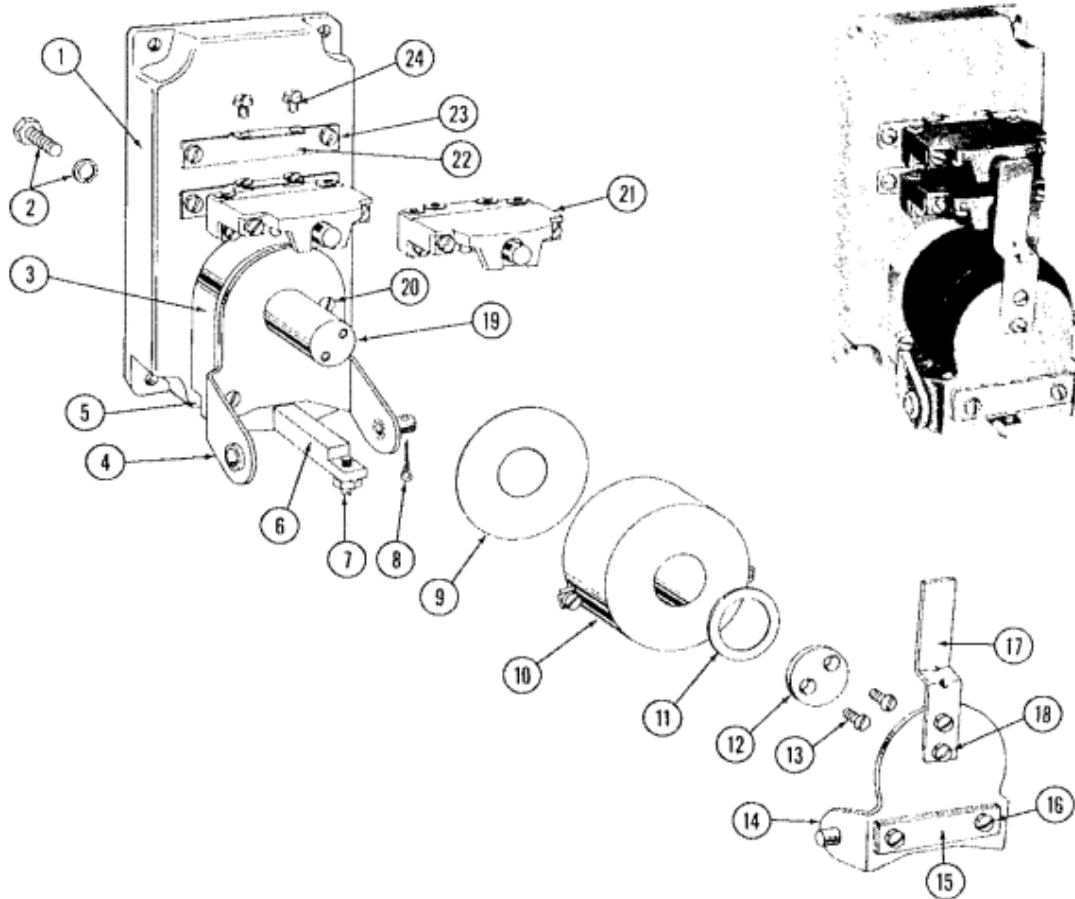


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	T-155-15	Washer	KP0831024	17	A73-260918	Operating Arm, 4" Long	KP6431017
4	A13-10002A	Frame	KP6431002	18	T-155-10	Spring Lockwasher	KP5831028
5	T-121-50	Lock Bolt, Equalizer Yoke	KP0831050	18	T-2-27	Brass Washer	KP6431019
5	T-155-14	Washer	KP0831029	18	T-120-148	Screw	KP6431020
6	A13-74585A	Stop Post with Mounting Post	KP6431005	19	A13-10028	Core (LD)	KP6431021
7	T-159-1	Mov Contact Support Stop Screw	KP4031025	20	T-155-10	Spring Lockwasher	KP5831028
9	T-38-22	Coil Spacer (top)	KP6431007	21	KKD-1	Contact Block	KP6431023
10	TB-147-2	Coil 230 VDC	KP6431008	21	KKD-2	Contact Block	KP6431024
10	TB-147-1	Coil 115 VDC	KP6431009	21	KKD-3	Contact Block	KP6431025
10	TB-147-3	Coil 550 VDC	KP6431010	22	A73-257301	Contact Mounting Bracket	KP6431026
11	T-38-89	Coil Spacers	KP6431011	23	T-155-10	Spring Lockwasher	KP5831028
12	A13-26383	Coil Clamp	KP6431012	23	T-120-105	Screw	KP6431028
15	A13-10040	Counter Weight	KP6431013	24	T-147-6	Screw	KP6431029
16	T-155-10	Spring Lockwasher	KP5831028				
16	T-120-150	Screw	KP6431015				
17	A73-260924	Operating Arm, 2-1/2" Long	KP6431016				

Replacement Parts for: Type FL Field Loss Relay

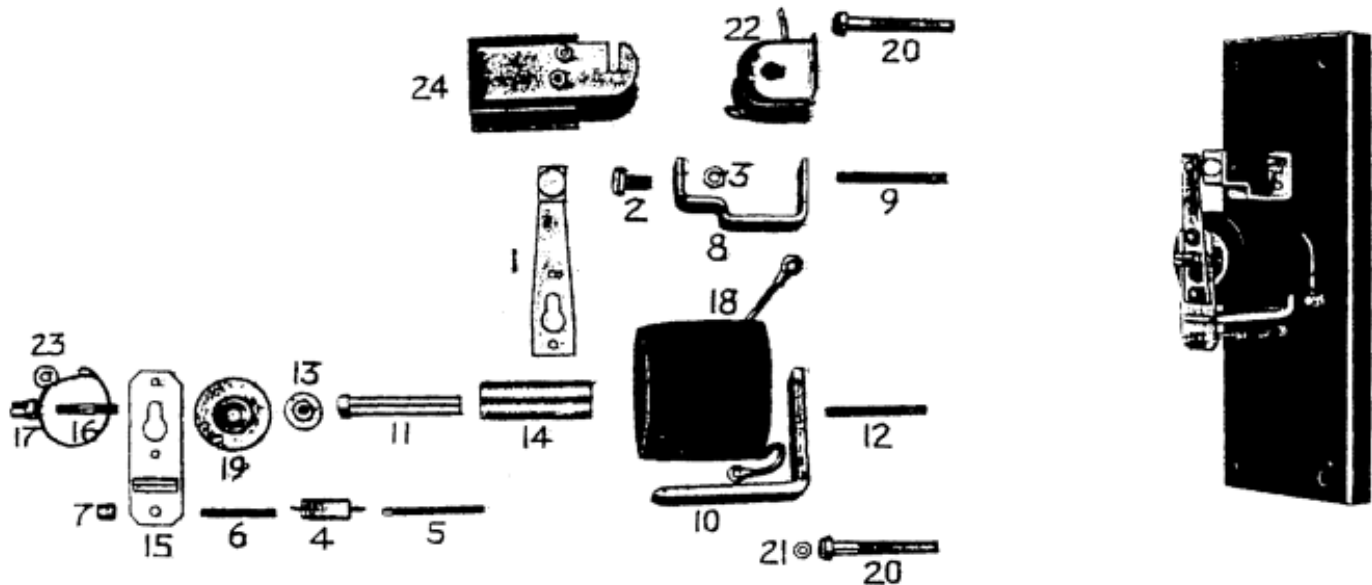


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A29-81955A	Front Contact (movable)	KP6531001	21	T-2-27	Brass Washer	KP6431019
2	A29-2691A	Rear Contact Assembled	KP6331002	22	A29-2656A	Blowout Coil Assembled	KP6331019
3	A29-2684	Lock Nut	KP6331003	23	A14-1074	Wire Clamp	KP6531025
4	T-46-13	Spring	KP6531004	24	A29-2659A	Arc Shield Assembly	KP6331020
5	A18-1978	Adjusting Stud	KP6331005	*	T-46-14	Spring	KP6331004
6	A29-2688	Adjusting Stud, Front	KP6531006	*	A29-34051A	Type FL Field Loss Relay	KP6531028
7	A29-2689	Adjusting Nut	KP6331006				
8	A29-2671	Rear Contact Bracket	KP6331007				
9	T-7-36	Aux Stud	KP4131060				
9	T-7-150	Aux Stud	KP4131061				
10	A29-2668	Magnet Frame	KP6331010				
11	A29-34054	Magnet Core	KP6531012				
12	T-7-122	Arc Shield Stud	KP4531013				
12	E9384-40	Stud, Magnet Core	KP6531014				
13	A29-34055	Magnet Core Extension	KP6531015				
14	A29-34057	Magnet Core Tube	KP6531016				
15	A29-2669	Magnet Arm	KP6531017				
16	A29-34056	Stud, (Magnet Arm)	KP6531018				
17	A29-2680	Adjusting Nut	KP6331016				
19	A29-34053	Coil Clamp	KP6531020				
20	A29-2676	Stud	KP6331018				
20	A29-4433	Stud (Coil Terminal)	KP6531022				

Replacement Parts for: Type P Plugging Relay

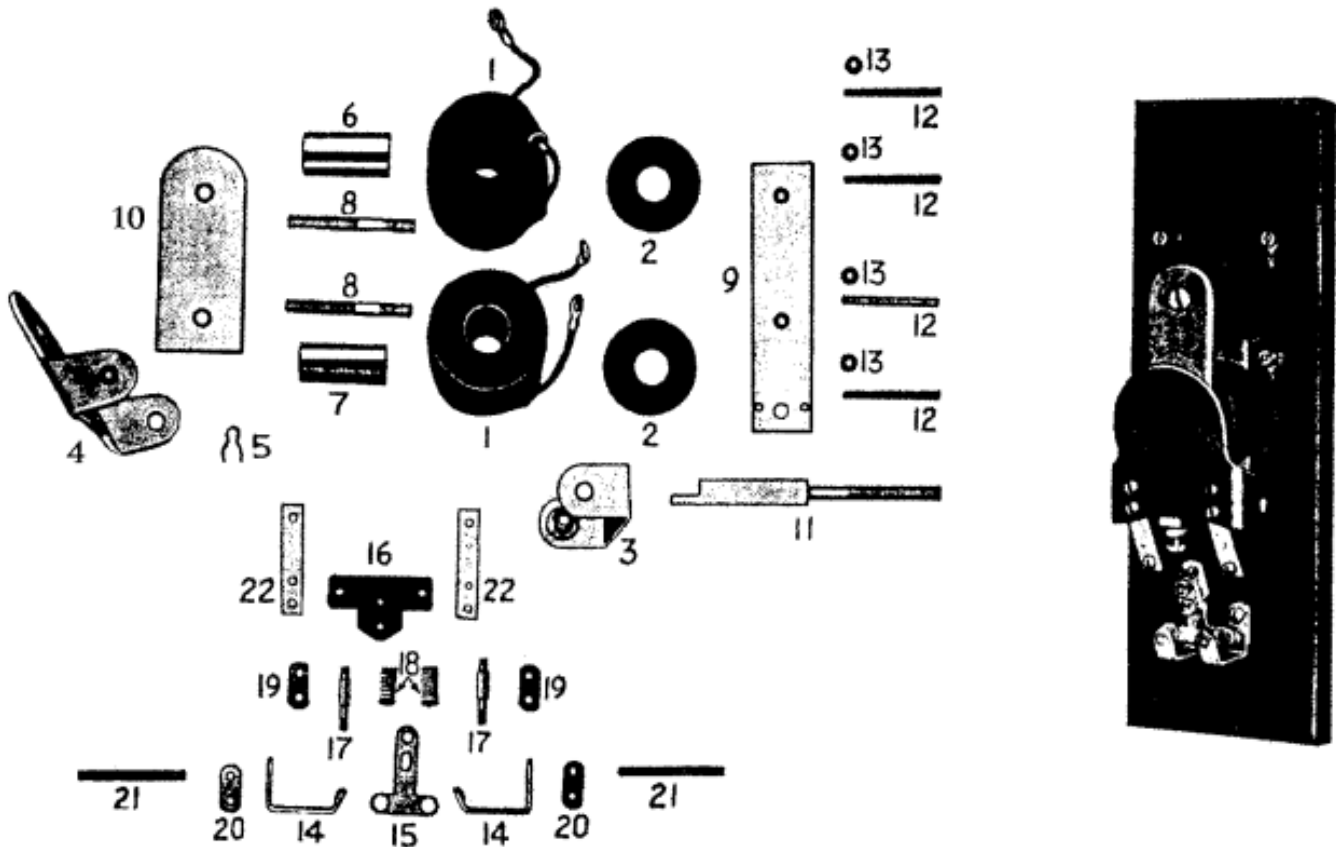


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	T-38-17	Coil Washer	KP6631001	13	T-2-27	Brass Washer	KP6431019
3	A29-3345A	Magnet Frame Assembled	KP6631002	14	A18-9465A	Stationary Control Contact	KP4131052
4	A29-3342A	Arm Assembled	KP6631003	15	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
5	T-55-3	Hair Pin Cotter (arm)	KP6631004	16	A18-2544	Aux Contact Insulator	KP4131055
6	A29-3343A	Core Assembled (top)	KP6631005	17	A18-9477	Aux Contact Stud	KP4131056
7	A29-3344A	Core Assembled (bottom)	KP6631006	18	A18-9483	Spring	KP4131057
8	T-7-204	Stud (core)	KP6631007	19	A18-2542	Aux Contact Plate	KP4131059
9	A29-3351	Magnet Plate (rear)	KP6631008	20	A18-2543	Aux Contact Base Plate	KP4131058
10	A29-3352	Magnet Plate (front)	KP6631009	21	T-7-36	Aux Stud	KP4131060
11	A29-3353	Stop Stud	KP6631010	21	T-7-150	Aux Stud	KP4131061
12	T-7-44	Coil Terminal Stud	KP6631011	22	A13-10518	Auxiliary Contact Bracket	KP6631024
12	T-7-55	Terminal Stud (1" Slate)	KP6631012	*	A29-3341A	Magnetic Plugging Relay	KP6631025
12	T-2-240	Terminal Stud	KP6631013				

Replacement Parts for: Type VT Vari-Time Relay

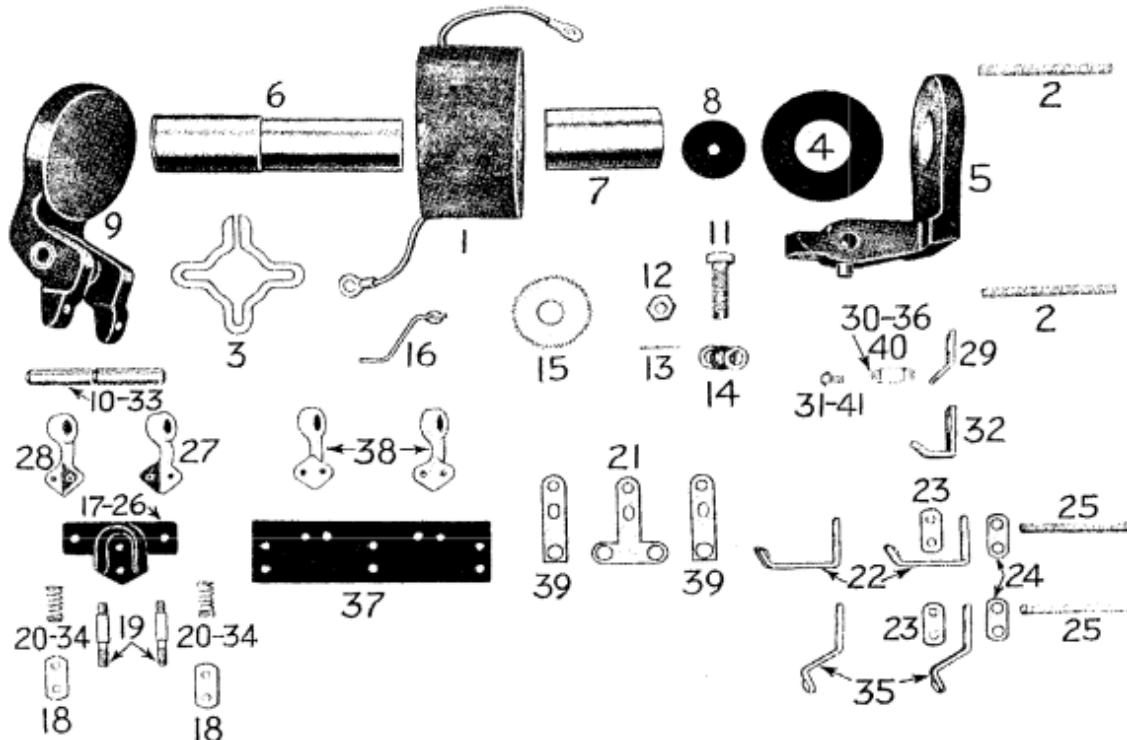


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	TB-17-3	Coil, 115V	KP4131004	20	T-45-83	Control Contact Spring	KP6831026
1	TB-17-1	Coil, 230V	KP4131005	21	A18-9464A	Auxiliary Contact Bar, Moveable	KP4131054
1	TB-17-2	Coil, 550V	KP4131006	22	A18-9465A	Stationary Control Contact	KP4131052
1	TB-16-3	Coil, 115V	KP4131007	23	A18-2543	Aux Contact Base Plate	KP4131058
1	TB-16-1	Coil, 230 VDC	KP4131008	24	A18-3590	Contact Spacer Plate	KP6831030
1	TB-16-2	Coil, 550V	KP4131009	25	T-7-36	Aux Stud	KP4131060
2	T-7-47	Coil Terminal Stud	KP4131032	25	T-7-150	Aux Stud	KP4131061
3	A18-2548	Coil Clamp	KP4131031	26	A18-3610	Control Cont Insul	KP6831033
4	A18-6710	Coil Washer	KP4131030	27	A18-25587	Insulator Arm R.H	KP6831034
5	A18-25359A	Frame	KP4331034	28	A18-25588	Insulator Arm L.H	KP6831035
6	A18-2505A	Assembled Core	KP6831011	29	A18-3590	Contact Spacer Plate	KP6831030
6	A18-2564A	Core Assembled	KP6831012	30	T-46-9	Spring	KP6831037
7	T-24-41	Core Spacer	KP4331033	31	A18-3742	Spring Screw	KP6831038
8	T-2-14	Core Washer	KP4331032	33	A18-9481	Stop	KP6831039
9	A18-23933A	Arm Assembled	KP6831015	33	T-66-6	Arm Pin	KP6831040
10	T-66-10	Arm Pin	KP6831016	34	T-45-81	Auxiliary Contact Spring	KP6831041
11	A18-2536	Stop Stud	KP6831017	35	A18-9466A	Stationary Control Contact	KP4131053
12	A18-2547	Stop Stud Nut	KP4331045	36	T-46-32	Spring	KP6831043
13	T-3-17	Stop Stud Pin	KP4331046	37	A73-39220	Control Cont Insulator	KP6831044
14	T-2-18	Stop Stud Washer	KP4331047	38	A73-38561	Insulator Arm	KP6831045
15	A18-10496	Adjusting Wheel	KP6831021	39	A18-10404A	Control Contact	KP6831046
16	A18-10497A	Lock Spring	KP6831022	40	T-46-21	Spring	KP6831047
17	A18-2544	Aux Contact Insulator	KP4131055	41	T-65-1	Spring Screw	KP6831048
18	A18-2542	Aux Contact Plate	KP4131059				
19	A18-9477	Aux Contact Stud	KP4131056				

Replacement Parts for: Type VR Voltage Relay

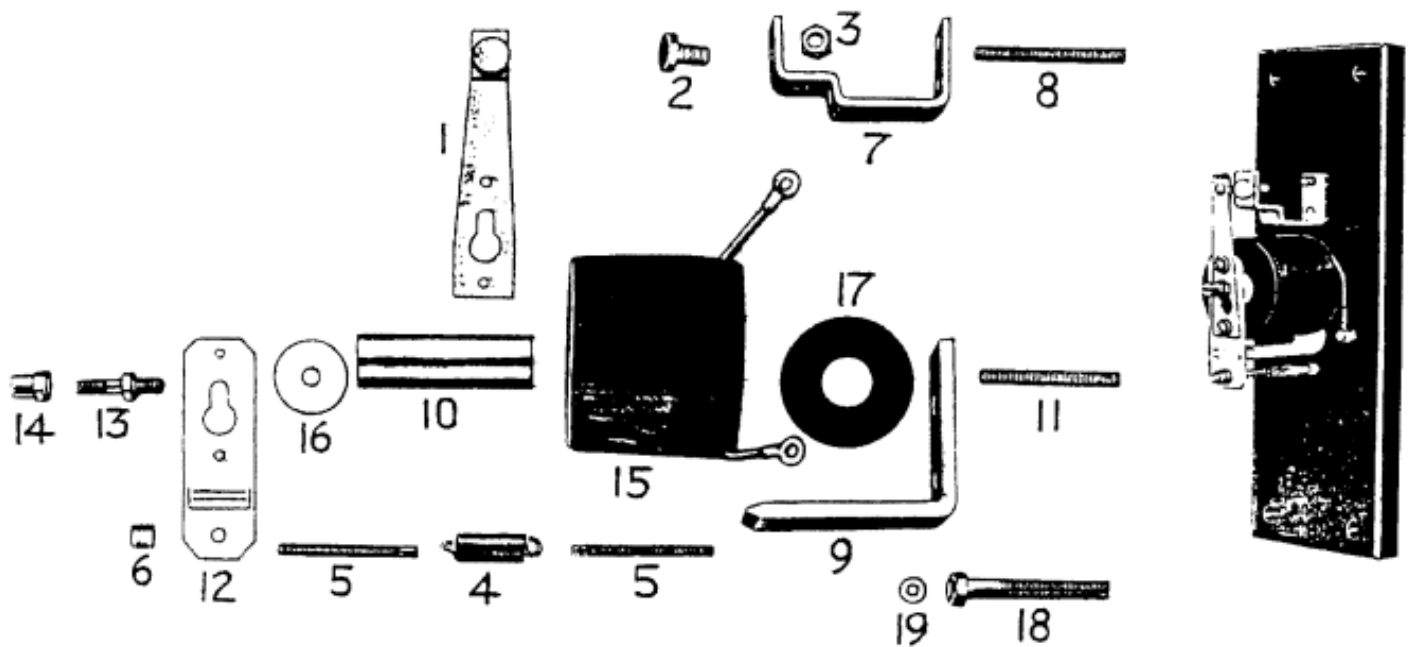


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A29-81955A	Front Contact (movable)	KP6531001	17	T-38-17	Coil Washer	KP6631001
2	A29-2691A	Rear Contact Assembled	KP6331002	18	A29-2676	Stud	KP6331018
3	A29-2684	Lock Nut	KP6331003	19	T-2-27	Brass Washer	KP6431019
4	T-46-24	Spring	KP6731004	*	A29-7105A	VR Relay 7311 .3 Complete	KP6731022
5	A18-1978	Adjusting Stud	KP6331005	*	T-3-139	Locking Pin	KP6731023
05a	A77-24732	Adj Stud	KP6731006				
6	A29-2689		KP6331006				
7	A29-2671	Rear Contact Bracket	KP6331007				
8	T-7-36	Aux Stud	KP4131060				
8	T-7-150	Aux Stud	KP4131061				
9	A29-2668	Magnet Frame	KP6331010				
10	A29-2679	Magnet Core	KP6731012				
11	T-7-81	Stud (magnet Core)	KP6331012				
11	T-7-73	Stud (magnet Core)	KP6331013				
12	A29-2669	Magnet Arm	KP6531017				
13	A29-2681	Adjusting Stud	KP6731016				
14	A29-2680		KP6331016				
16	T-2-33	Coil Clamp	KP6731018				

Replacement Parts for: Type VTH Vari-Time Relay

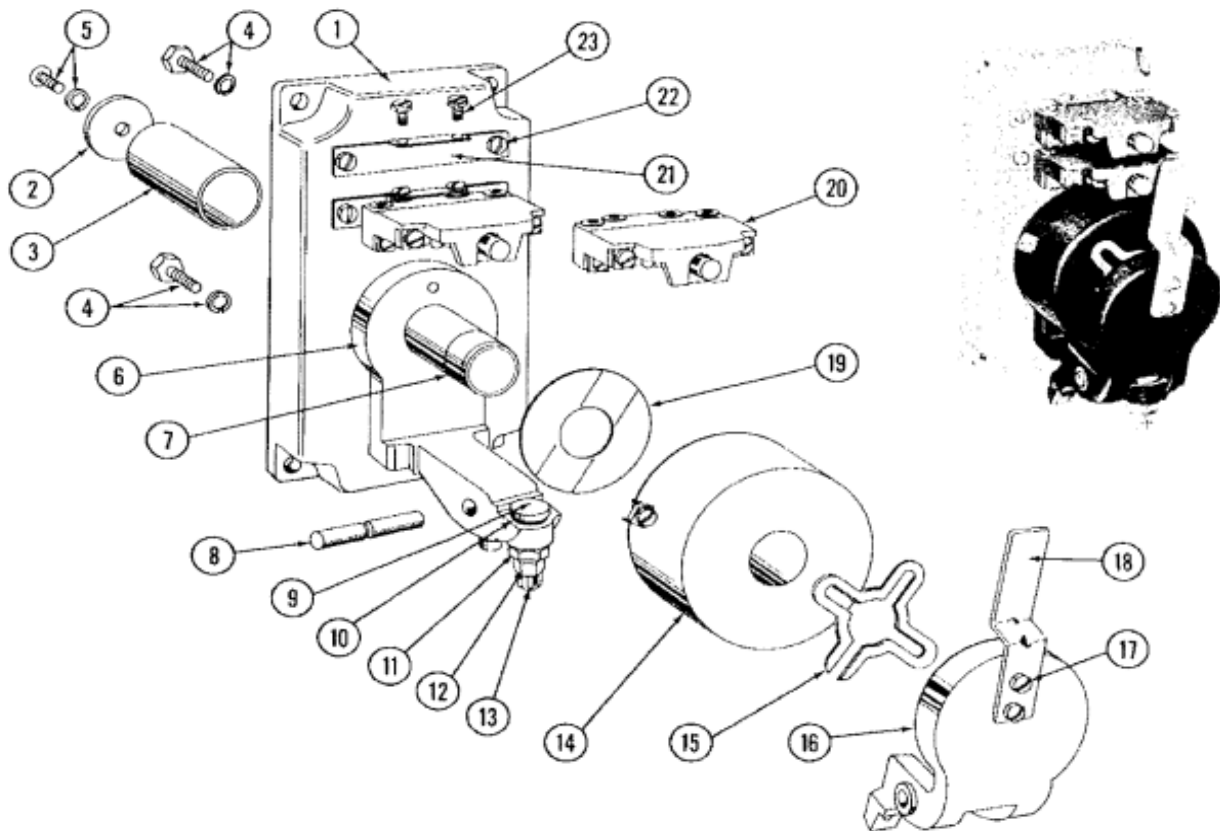

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A73-260922	Mounting Base	KP6931001	14	TB-148-3	Coil, 115 VDC	KP6931018
2	T-2-14	Core Washer	KP4331032	15	A18-2548	Coil Clamp	KP4131031
3	T-24-41	Core Spacer	KP4331033	16	A73-257304A	Assembled Arm	KP6931020
4	T-121-12	Hex Head Screw	KP5831015	17	T-155-10	Spring Lockwasher	KP5831028
4	T-155-12	Spring Lockwasher	KP5831044	17	T-120-150	Screw	KP6431015
5	T-155-12	Spring Lockwasher	KP5831044	18	A73-260924	Operating Arm, 2-1/2" Long	KP6431016
5	T-120-176	Brass Screw	KP6931007	18	A73-260918	Operating Arm, 4" Long	KP6431017
6	A18-25359A	Frame	KP4331034	19	A18-6710	Coil Washer	KP4131030
7	A18-2505A	Assembled Core	KP6831011	20	KKD-1	Contact Block	KP6431023
8	T-66-1	Main Arm Pin	KP4131043	20	KKD-2	Contact Block	KP6431024
9	A18-2536	Stop Stud	KP6831018	20	KKD-3	Contact Block	KP6431025
10	T-2-18	Stop Stud Washer	KP4331047	21	A73-257301	Contact Mounting Bracket	KP6431026
11	T-115-39	Jam Nut	KP6931013	22	T-155-10	Spring Lockwasher	KP5831028
12	A18-2547	Stop Stud Nut	KP4331045	22	T-120-105	Screw	KP6431028
13	T-3-17	Stop Stud Pin	KP4331046	23	T-147-6	Screw	KP6431029
14	TB-148-1	Coil, 230 VDC	KP6931016	*	A73-260931-XXX	VTH Timing Relay	KP6931033
14	TB-148-2	Coil, 550 VDC	KP6931017				



Replacement Parts for:

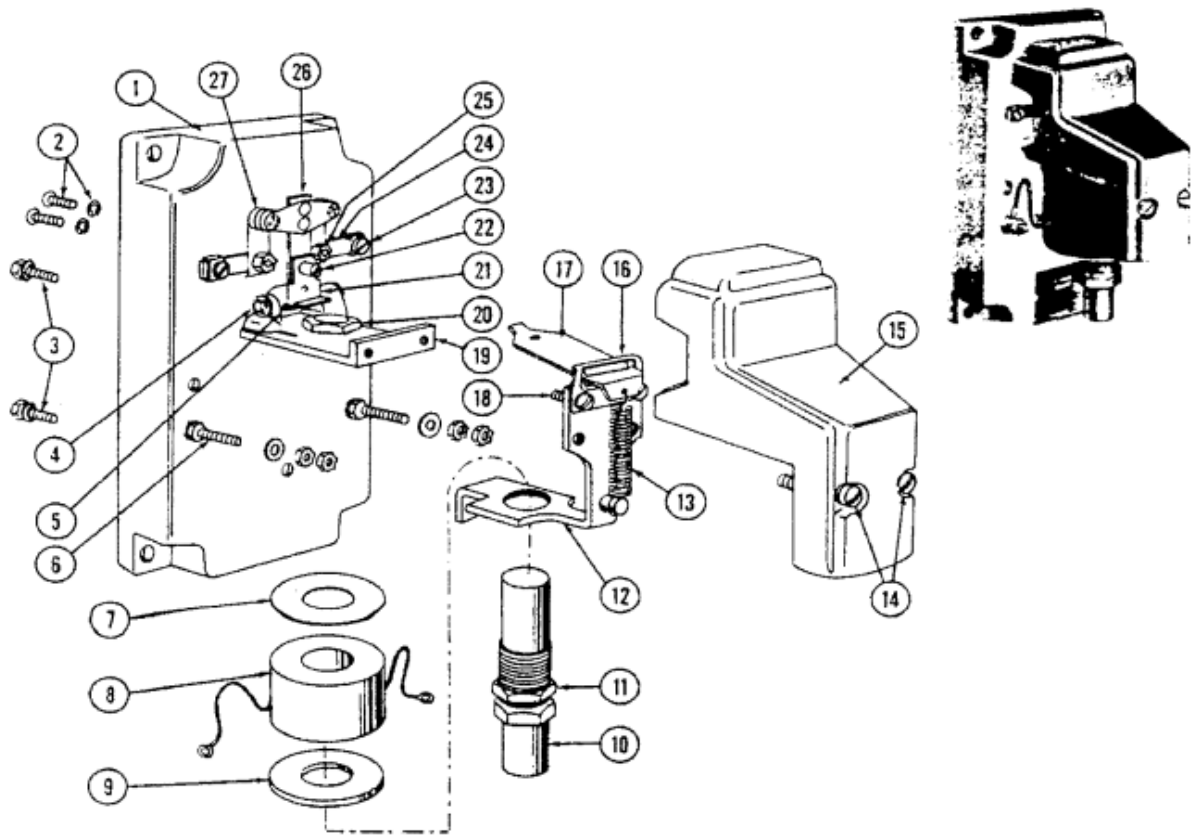

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	A73-260367	Mounting Base	KP7031001	16	A73-38666	Retaining Clamp	KP7031022
2	T-155-10	Spring Lockwasher	KP5831028	17	A73-255674A	Assembled Operating Arm	KP7031023
2	T-120-152	10-32X3/4" Screw	KP7031003	18	T-155-10	Spring Lockwasher	KP5831028
3	T-135-3	Pre-Assem Screw	KP7031004	18	T-120-105	Screw	KP6431028
4	A73-259774	Arm Bracket Pin	KP7031005	19	A73-259773A	Bracket	KP7031026
5	A29-4592	Contact Arm Spring	KP7031006	20	A29-30345	Solenoid Plug	KP7031027
6	T-155-10	Spring Lockwasher	KP5831028	21	A29-30344	Contact Arm Bracket	KP7031028
6	T-120-135	Brass Screw	KP7031008	22	T-155-11	Thin Spring Lockwasher	KP5831010
6	T-115-18	Brass Nut	KP7031009	22	T-2-27	Brass Washer	KP6431019
6	T-2-287	#6 Black Burr	KP7031010	22	T-12-6	Arm Stop Stud	KP7031031
6	T-2-27	Brass Washer	KP6431019	22	T-155-7	#8 Lock Washer	KP7031032
7	T-38-22	Coil Spacer (top)	KP6431007	22	T-115-11	Brass Nut	KP7031033
8	TB-118-3	Coil	KP7031013	23	A77-166052	Pressure Terminal	KP7031034
8	TB-118-5	115 Volt Coil	KP7031014	24	A73-257347	Terminal Plate	KP7031035
9	T-38-59	Coil Spacer (bottom)	KP7031015	25	E12501	Terminal Nut	KP7031036
10	A29-226286A	Adjusting Plug	KP7031016	25	T-155-9	3/16" Lock Washer	KP7031037
12	A29-35745A	Assembled Frame	KP7031017	26	A29-4414A	Assm Front Movable Contact	KP7031038
13	A29-4610	Spring (Red)	KP7031018	27	A29-4412A	Contact	KP7031039
14	T-155-11	Thin Spring Lockwasher	KP5831010	*	A73-260932-230	TYPE 7328, XVRRelay	KP7031040
14	T-132-22	Screw	KP7031020				
15	B73-260940	Cover	KP7031021				



- Electric Brakes
 - Magnetic Drum Brakes - SMAA
 - Magnetic Disc Brakes – CU, CX, MBC
 - Thruster Drum Brakes – SMLA, SMLB
 - Thruster Disc Brakes – CL, TBC
- Pressure Operated Brakes
 - Air Applied Brakes
 - Hydraulic Applied Brakes
 - Spring / Air Brakes
 - Spring / Hydraulic Brakes
- Storm & Parking Brakes
 - Rail Head Clamps
 - Rail Head Brakes
 - Wheel Clamps and Brakes
 - Electro-Mechanical Clamps and Brakes
- Accessories
 - Air Power Units
 - Hydraulic Power Units
 - Discs, Wheels, and Couplings
 - Solenoids and Controls

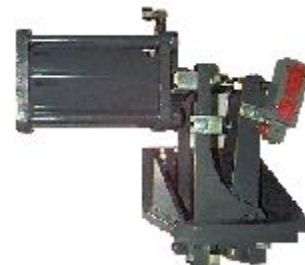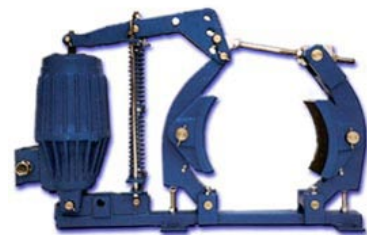

* Please provide serial number when inquiring about spare parts for Johnson / Elevanja brakes



Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts Catalog for

JOHNSON

Table of Contents

SMLB 6" BRAKE PARTS LIST.....	240
SMLB 8" BRAKE PARTS LIST.....	241
SMLB 10" BRAKE PARTS LIST.....	242
SMLB 13" BRAKE PARTS LIST.....	243
SMLB 16" BRAKE PARTS LIST.....	244
SMLB 19" BRAKE PARTS LIST.....	245

Replacement Parts for:

SMLB 6" BRAKE PARTS LIST

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	JDAB152EJ023	BASE (1X)	KP0645001	75	EJ02305046060LO	EJ023/5LO THRUSTOR (1X)	KP0645050
2	JDLML160	MAIN LEVER (2X)	KP0645002	77	-----	BOSTIK	
3	JDLL160	UPPER LEVER (2X)	KP0645003	78	-----	GREASE	
4	JDLML160	UPPER LEVER NV (1X)	KP0645002	80	JDLW160LS	BRAKE OPEN SWITCH "FIA" (1X)	KP0645054
5	JDA5152N3904	BRAKE SHOE (2X)	KP0645005	81	JDLW160RW	LINING WEAR SWITCH "FIC" (1X)	KP0645055
6	JDL160TR	TIE ROD (1X)	KP0645006	82	JDLH160LK	MANUAL OPENING "HAN" (1X)	KP0645056
7	JDL160TRNV	TIE ROD (1X)	KP0645007	83	JDLO160VS	SUPPORTING SPHERES FOR VERTICAL BRAKE AXIS "ORZ" (1X)	KP0645057
10	JDL160SF	SPRING FENDER (1X)	KP0645008	84		SPECIAL	
11	JDL160H	HINGE (1X)	KP0645009				
12	JDL160BTM	BOTTOM (1X)	KP0645010				
14	JDLMS160	MAIN SPRING (1X)	KP0645011				
15	JDL160BS	BIAS SPRING (2X)	KP0645012				
16	JDL160SHS	SHOE HOLDER SPRING (2X)	KP0645013				
18	JDL160RP1	ROLL PIN (2X)	KP0645014				
19	JDL160D	DISC (2X)	KP0645015				
20	JDL160W1	WASHER (_X)	KP0645016				
21	JDL-DP	DATA PLATE FOR SHOE BRAKES (1X)	KP1945018				
22	JDL-BTQ6	BRAKING TORQUE (1X)	KP0645018				
23	JDLP160-SS-BP	BASE PIN (2X)	KP0645019				
24	JDLP160-SS-SP	SHOE PIN (2X)	KP0645020				
25	JDLP160-SS-TP	TRUNNION PIN (1X)	KP0645021				
26	JDLP160-SS-ST	S/A TRUNNION (1X)	KP0645022				
27	JDLP160-SS-LP	LEVER PIN (1X)	KP0645023				
28	JDLP160-SS-SPT	TOP SPRING PIN (1X)	KP0645024				
29	JDLP160-SS-TPT	THRUSTOR TOP PIN (1X)	KP0645025				
30	JDLP160-SS-TPB	THRUSTOR BOTTOM PIN (1X)	KP0645026				
31	JDLP160-SS-SPB	BOTTOM SPRING PIN (1X)	KP0645027				
33	JDL160W2	SPECIAL WASHER (18X)	KP0645028				
34	JDL160W3	SPECIAL WASHER (2X)	KP0645029				
35	JDL160W4	SPECIAL WASHER (2X)	KP0645030				
36	JDL160FRK	FORK (1X)	KP0645031				
38	JDL160NT1	NUT (2X)	KP0645032				
40	JDL160NT2	NUT (1X)	KP0645033				
43	JDL160DSP	DISC SPRING (12X)	KP0645034				
45	JDL160SPN1	SPLIT PIN (16X)	KP0645035				
46	JDL160SPN2	SPLIT PIN (2X)	KP0645036				
47	JDL160SPN3	SPLIT PIN (2X)	KP0645037				
48	JDL160SPN4	SPLIT PIN (2X)	KP0645038				
51	JDL160W5	SPECIAL WASHER (4X)	KP0645039				
52	JDL160RP2	ROLL PIN (1X)	KP0645040				
53	LOCTITE	LOCTITE (1.5ML)	KP1945042				
54	JDL160SW	SPRING WASHER (2X)	KP0645042				
55	JDL160RP3	ROLL PIN (1X)	KP0645043				
58	JDL160S1	SCREW (2X)	KP0645044				
60	JDL160S2	SCREW (2X)	KP0645045				
61	JDL160S3	SCREW (2X)	KP0645046				
69	JDL160SLB1	SELF LUB. BUSHING (8X)	KP0645047				
70	JDL160SLB2	SELF LUB. BUSHING (2X)	KP0645048				
74	JDLA160	AUTOMATIC WEAR ADJUSTMENT DEVICE (1X)	KP0645049				

Replacement Parts for:

SMLB 8" BRAKE PARTS LIST

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	JDAB203EJ023	BASE (1X)	KP0845001	69	JDL200SLB1	SELF LUB. BUSHING (8X)	KP0845047
2	JDLML200	MAIN LEVER (2X)	KP0845002	70	JDL200SLB2	SELF LUB. BUSHING (2X)	KP0845048
3	JDLL200	UPPER LEVER (2X)	KP0845003	74	JDLA200	AUTOMATIC WEAR ADJUSTMENT DEVICE (1X)	KP0845049
4	JDLML200	UPPER LEVER NV (1X)	KP0845002	75	EJ02305046060	EJ023/5 THRUSTOR (1X)	KP0845050
5	JDAS203N3904	BRAKE SHOE (2X)	KP0845005	77	-----	BOSTIK	
6	JDL200TR	TIE ROD (1X)	KP0845006	78	-----	GREASE	
7	JDL200TRNV	TIE ROD (1X)	KP0845007	80	JDLW200LS	BRAKE OPEN SWITCH "FIA" (1X)	KP0845054
10	JDL200SF	SPRING FENDER (1X)	KP0845008	81	JDLW200RW	LINING WEAR SWITCH "FIC" (1X)	KP0845055
11	JDL200H	HINGE (1X)	KP0845009	82	JDLH200LK	MANUAL OPENING "HAN" (1X)	KP0845056
12	JDL200BTM	BOTTOM (1X)	KP0845010	83	JDL0200VS	SUPPORTING SPHERES FOR VERTICAL BRAKE AXIS "ORZ" (1X)	KP0845057
14	JDLMS200	MAIN SPRING (1X)	KP0845011	84		SPECIAL	
15	JDL200BS	BIAS SPRING (2X)	KP0845012				
16	JDL200SHS	SHOE HOLDER SPRING (2X)	KP0845013				
18	JDL200RP1	ROLL PIN (2X)	KP0845014				
19	JDL200D	DISC (2X)	KP0845015				
20	JDL200W1	WASHER (_X)	KP0845016				
21	JDL-DP	DATA PLATE FOR SHOE BRAKES (1X)	KP1945018				
22	JDL-BTQ8	BRAKING TORQUE (1X)	KP0845018				
23	JDLP200-SS-BP	BASE PIN (2X)	KP0845019				
24	JDLP200-SS-SP	SHOE PIN (2X)	KP0845020				
25	JDLP200-SS-TP	TRUNNION PIN (1X)	KP0845021				
26	JDLP200-SS-ST	S/A TRUNNION (1X)	KP0845022				
27	JDLP200-SS-LP	LEVER PIN (1X)	KP0845023				
28	JDLP200-SS-SPT	TOP SPRING PIN (1X)	KP0845024				
29	JDLP200-SS-TPT	THRUSTOR TOP PIN (1X)	KP0845025				
30	JDLP200-SS-TPB	THRUSTOR BOTTOM PIN (1X)	KP0845026				
31	JDLP200-SS-SPB	BOTTOM SPRING PIN (1X)	KP0845027				
33	JDL200W2	SPECIAL WASHER (18X)	KP0845028				
34	JDL200W3	SPECIAL WASHER (2X)	KP0845029				
35	JDL200W4	SPECIAL WASHER (2X)	KP0845030				
36	JDL200FRK	FORK (1X)	KP0845031				
38	JDL200NT1	NUT (2X)	KP0845032				
40	JDL200NT2	NUT (1X)	KP0845033				
43	JDL200DSP	DISC SPRING (12X)	KP0845034				
45	JDL200SPN1	SPLIT PIN (16X)	KP0845035				
46	JDL200SPN2	SPLIT PIN (2X)	KP0845036				
47	JDL200SPN3	SPLIT PIN (2X)	KP0845037				
48	JDL200SPN4	SPLIT PIN (2X)	KP0845038				
51	JDL200W5	SPECIAL WASHER (4X)	KP0845039				
52	JDL200RP2	ROLL PIN (1X)	KP0845040				
53	LOCTITE	LOCTITE (1.5ML)	KP1945042				
54	JDL200SW	SPRING WASHER (2X)	KP0845042				
55	JDL200RP3	ROLL PIN (1X)	KP0845043				
58	JDL200S1	SCREW (2X)	KP0845044				
60	JDL200S2	SCREW (2X)	KP0845045				
61	JDL200S3	SCREW (2X)	KP0845046				

Replacement Parts for:

SMLB 10" BRAKE PARTS LIST

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	JDAB254EJ030	BASE (1X)	KP1045001	75	EJ03005046060LO	EJ030/5LO THRUSTOR (1X)	KP1045050
2	JDLML250	MAIN LEVER (2X)	KP1045002	77	-----	BOSTIK	
3	JDLL250	UPPER LEVER (2X)	KP1045003	78	-----	GREASE	
4	JDLML250	UPPER LEVER NV (1X)	KP1045002	80	JDLW250LS	BRAKE OPEN SWITCH "FIA" (1X)	KP1045054
5	JDA5254N3904	BRAKE SHOE (2X)	KP1045005	81	JDLW250RW	LINING WEAR SWITCH "FIC" (1X)	KP1045055
6	JDL250TR	TIE ROD (1X)	KP1045006	82	JDLH250LK	MANUAL OPENING "HAN" (1X)	KP1045056
7	JDL250TRNV	TIE ROD (1X)	KP1045007	83	JDL0250VS	SUPPORTING SPHERES FOR VERTICAL BRAKE AXIS "ORZ" (1X)	KP1045057
10	JDL250SF	SPRING FENDER (1X)	KP1045008	84		SPECIAL	
11	JDL250H	HINGE (1X)	KP1045009				
12	JDL250BTM	BOTTOM (1X)	KP1045010				
14	JDLMS250	MAIN SPRING (1X)	KP1045011				
15	JDL250BS	BIAS SPRING (2X)	KP1045012				
16	JDL250SHS	SHOE HOLDER SPRING (2X)	KP1045013				
18	JDL250RP1	ROLL PIN (2X)	KP1045014				
19	JDL250D	DISC (2X)	KP1045015				
20	JDL250W1	WASHER (_X)	KP1045016				
21	JDL-DP	DATA PLATE FOR SHOE BRAKES (1X)	KP1945018				
22	JDL-BTQ10	BRAKING TORQUE (1X)	KP1045018				
23	JDLP250-SS-BP	BASE PIN (2X)	KP1045019				
24	JDLP250-SS-SP	SHOE PIN (2X)	KP1045020				
25	JDLP250-SS-TP	TRUNNION PIN (1X)	KP1045021				
26	JDLP250-SS-ST	S/A TRUNNION (1X)	KP1045022				
27	JDLP250-SS-LP	LEVER PIN (1X)	KP1045023				
28	JDLP250-SS-SPT	TOP SPRING PIN (1X)	KP1045024				
29	JDLP250-SS-TPT	THRUSTOR TOP PIN (1X)	KP1045025				
30	JDLP250-SS-TPB	THRUSTOR BOTTOM PIN (1X)	KP1045026				
31	JDLP250-SS-SPB	BOTTOM SPRING PIN (1X)	KP1045027				
33	JDL250W2	SPECIAL WASHER (18X)	KP1045028				
34	JDL250W3	SPECIAL WASHER (2X)	KP1045029				
35	JDL250W4	SPECIAL WASHER (2X)	KP1045030				
36	JDL250FRK	FORK (1X)	KP1045031				
38	JDL250NT1	NUT (2X)	KP1045032				
40	JDL250NT2	NUT (1X)	KP1045033				
43	JDL250DSP	DISC SPRING (12X)	KP1045034				
45	JDL250SPN1	SPLIT PIN (16X)	KP1045035				
46	JDL250SPN2	SPLIT PIN (2X)	KP1045036				
47	JDL250SPN3	SPLIT PIN (2X)	KP1045037				
48	JDL250SPN4	SPLIT PIN (2X)	KP1045038				
51	JDL250W5	SPECIAL WASHER (4X)	KP1045039				
52	JDL250RP2	ROLL PIN (1X)	KP1045040				
53	LOCTITE	LOCTITE (1.5ML)	KP1945042				
54	JDL250SW	SPRING WASHER (2X)	KP1045042				
55	JDL250RP3	ROLL PIN (1X)	KP1045043				
58	JDL250S1	SCREW (2X)	KP1045044				
60	JDL250S2	SCREW (2X)	KP1045045				
61	JDL250S3	SCREW (2X)	KP1045046				
69	JDL250SLB1	SELF LUB. BUSHING (8X)	KP1045047				
70	JDL250SLB2	SELF LUB. BUSHING (2X)	KP1045048				
74	JDL250SA250	AUTOMATIC WEAR ADJUSTMENT DEVICE (1X)	KP1045049				

Replacement Parts for:

SMLB 13" BRAKE PARTS LIST

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	JDAB330EJ050	BASE (1X)	KP1345001	75	EJ05006046060	EJ050/6 THRUSTOR (1X)	KP1345050
2	JDLML315	MAIN LEVER (2X)	KP1345002	77	-----	BOSTIK	
3	JDLL315	UPPER LEVER (2X)	KP1345003	78	-----	GREASE	
4	JDLML315	UPPER LEVER NV (1X)	KP1345002	80	JDLW315LS	BRAKE OPEN SWITCH "FIA" (1X)	KP1345054
5	JDAS330N3904	BRAKE SHOE (2X)	KP1345005	81	JDLW315RW	LINING WEAR SWITCH "FIC" (1X)	KP1345055
6	JDL315TR	TIE ROD (1X)	KP1345006	82	JDLH315LK	MANUAL OPENING "HAN" (1X)	KP1345056
7	JDL315TRNV	TIE ROD (1X)	KP1345007	83	JDLO315VS	SUPPORTING SPHERES FOR VERTICAL BRAKE AXIS "ORZ" (1X)	KP1345057
10	JDL315SF	SPRING FENDER (1X)	KP1345008	84		SPECIAL	
11	JDL315H	HINGE (1X)	KP1345009				
12	JDL315BTM	BOTTOM (1X)	KP1345010				
14	JDLMS315	MAIN SPRING (1X)	KP1345011				
15	JDL315BS	BIAS SPRING (2X)	KP1345012				
16	JDL315SHS	SHOE HOLDER SPRING (2X)	KP1345013				
18	JDL315RP1	ROLL PIN (2X)	KP1345014				
19	JDL315D	DISC (2X)	KP1345015				
20	JDL315W1	WASHER (X)	KP1345016				
21	JDL-DP	DATA PLATE FOR SHOE BRAKES (1X)	KP1945018				
22	JDL-BTQ13	BRAKING TORQUE (1X)	KP1345018				
23	JDLP315-SS-BP	BASE PIN (2X)	KP1345019				
24	JDLP315-SS-SP	SHOE PIN (2X)	KP1345020				
25	JDLP315-SS-TP	TRUNNION PIN (1X)	KP1345021				
26	JDLP315-SS-ST	S/A TRUNNION (1X)	KP1345022				
27	JDLP315-SS-LP	LEVER PIN (1X)	KP1345023				
28	JDLP315-SS-SPT	TOP SPRING PIN (1X)	KP1345024				
29	JDLP315-SS-TPT	THRUSTOR TOP PIN (1X)	KP1345025				
30	JDLP315-SS-TPB	THRUSTOR BOTTOM PIN (1X)	KP1345026				
31	JDLP315-SS-SPB	BOTTOM SPRING PIN (1X)	KP1345027				
33	JDL315W2	SPECIAL WASHER (18X)	KP1345028				
34	JDL315W3	SPECIAL WASHER (2X)	KP1345029				
35	JDL315W4	SPECIAL WASHER (2X)	KP1345030				
36	JDL315FRK	FORK (1X)	KP1345031				
38	JDL315NT1	NUT (2X)	KP1345032				
40	JDL315NT2	NUT (1X)	KP1345033				
43	JDL315DSP	DISC SPRING (12X)	KP1345034				
45	JDL315SPN1	SPLIT PIN (16X)	KP1345035				
46	JDL315SPN2	SPLIT PIN (2X)	KP1345036				
47	JDL315SPN3	SPLIT PIN (2X)	KP1345037				
48	JDL315SPN4	SPLIT PIN (2X)	KP1345038				
51	JDL315W5	SPECIAL WASHER (4X)	KP1345039				
52	JDL315RP2	ROLL PIN (1X)	KP1345040				
53	LOCTITE	LOCTITE (1.5ML)	KP1945042				
54	JDL315SW	SPRING WASHER (2X)	KP1345042				
55	JDL315RP3	ROLL PIN (1X)	KP1345043				
58	JDL315S1	SCREW (2X)	KP1345044				
60	JDL315S2	SCREW (2X)	KP1345045				
61	JDL315S3	SCREW (2X)	KP1345046				
69	JDL315SLB1	SELF LUB. BUSHING (8X)	KP1345047				
70	JDL315SLB2	SELF LUB. BUSHING (2X)	KP1345048				
74	JDL315SA315	AUTOMATIC WEAR ADJUSTMENT DEVICE (1X)	KP1345049				

Replacement Parts for:

SMLB 16" BRAKE PARTS LIST

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	JDAB406EJ	BASE (1X)	KP1645002	69	JDL400SLB1	SELF LUB. BUSHING (8X)	KP1645048
2	JDLML400	MAIN LEVER (2X)	KP1645003	70	JDL400SLB2	SELF LUB. BUSHING (2X)	KP1645049
3	JDLL400	UPPER LEVER (2X)	KP1645004	74	JDLA400	AUTOMATIC WEAR ADJUSTMENT DEVICE (1X)	KP1645050
4	JDLML400	UPPER LEVER NV (1X)	KP1645003	75	EJ	EJ THRUSTOR (1X)	KP1645051
5	JDAS406N3904	BRAKE SHOE (2X)	KP1645006	77	-----	BOSTIK	
6	JDL400TR	TIE ROD (1X)	KP1645007	78	-----	GREASE	
7	JDL400TRNV	TIE ROD (1X)	KP1645008	80	JDLW400LS	BRAKE OPEN SWITCH "FIA" (1X)	KP1645055
10	JDL400SF	SPRING FENDER (1X)	KP1645009	81	JDLW400RW	LINING WEAR SWITCH "FIC" (1X)	KP1645056
11	JDL400H	HINGE (1X)	KP1645010	82	JDLH400LK	MANUAL OPENING "HAN" (1X)	KP1645057
12	JDL400BTM	BOTTOM (1X)	KP1645011	83	JDLO400VS	SUPPORTING SPHERES FOR VERTICAL BRAKE AXIS "ORZ" (1X)	KP1645058
14	JDLMS400	MAIN SPRING (1X)	KP1645012	84		SPECIAL	
15	JDL400BS	BIAS SPRING (2X)	KP1645013				
16	JDL400SHS	SHOE HOLDER SPRING (2X)	KP1645014				
18	JDL400RP1	ROLL PIN (2X)	KP1645015				
19	JDL400D	DISC (2X)	KP1645016				
20	JDL400W1	WASHER (_X)	KP1645017				
21	JDL-DP	DATA PLATE FOR SHOE BRAKES (1X)	KP1945018				
22	JDL-BTQ16	BRAKING TORQUE (1X)	KP1645019				
23	JDLP400-SS- BP	BASE PIN (2X)	KP1645020				
24	JDLP400-SS- SP	SHOE PIN (2X)	KP1645021				
25	JDLP400-SS- TP	TRUNNION PIN (1X)	KP1645022				
26	JDLP400-SS- ST	S/A TRUNNION (1X)	KP1645023				
27	JDLP400-SS- LP	LEVER PIN (1X)	KP1645024				
28	JDLP400-SS- SPT	TOP SPRING PIN (1X)	KP1645025				
29	JDLP400-SS- TPT	THRUSTOR TOP PIN (1X)	KP1645026				
30	JDLP400-SS- TPB	THRUSTOR BOTTOM PIN (1X)	KP1645027				
31	JDLP400-SS- SPB	BOTTOM SPRING PIN (1X)	KP1645028				
33	JDL400W2	SPECIAL WASHER (18X)	KP1645029				
34	JDL400W3	SPECIAL WASHER (2X)	KP1645030				
35	JDL400W4	SPECIAL WASHER (2X)	KP1645031				
36	JDL400FRK	FORK (1X)	KP1645032				
38	JDL400NT1	NUT (2X)	KP1645033				
40	JDL400NT2	NUT (1X)	KP1645034				
43	JDL400DSP	DISC SPRING (12X)	KP1645035				
45	JDL400SPN1	SPLIT PIN (16X)	KP1645036				
46	JDL400SPN2	SPLIT PIN (2X)	KP1645037				
47	JDL400SPN3	SPLIT PIN (2X)	KP1645038				
48	JDL400SPN4	SPLIT PIN (2X)	KP1645039				
51	JDL400W5	SPECIAL WASHER (4X)	KP1645040				
52	JDL400RP2	ROLL PIN (1X)	KP1645041				
53	LOCTITE	LOCTITE (1.5ML)	KP1945042				
54	JDL400SW	SPRING WASHER (2X)	KP1645043				
55	JDL400RP3	ROLL PIN (1X)	KP1645044				
58	JDL400S1	SCREW (2X)	KP1645045				
60	JDL400S2	SCREW (2X)	KP1645046				
61	JDL400S3	SCREW (2X)	KP1645047				

Replacement Parts for:



SMLB 19" BRAKE PARTS LIST

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	JDAB483EJ201	BASE (1X)	KP1945002	69	JDL500SLB1	SELF LUB. BUSHING (8X)	KP1945048
2	JDLML500	MAIN LEVER (2X)	KP1945003	70	JDL500SLB2	SELF LUB. BUSHING (2X)	KP1945049
3	JDLL500	UPPER LEVER (2X)	KP1945004	74	JDL5A500	AUTOMATIC WEAR ADJUSTMENT DEVICE (1X)	KP1945050
4	JDLML500	UPPER LEVER NV (1X)	KP1945003	75	EJ20106046060	EJ201/6 THRUSTOR (1X)	KP1945051
5	JDAS483N3904	BRAKE SHOE (2X)	KP1945006	77	-----	BOSTIK	
6	JDL500TR	TIE ROD (1X)	KP1945007	78	-----	GREASE	
7	JDL500TRNV	TIE ROD (1X)	KP1945008	80	JDLW500LS	BRAKE OPEN SWITCH "FIA" (1X)	KP1945055
10	JDL500SF	SPRING FENDER (1X)	KP1945009	81	JDLW500RW	LINING WEAR SWITCH "FIC" (1X)	KP1945056
11	JDL500H	HINGE (1X)	KP1945010	82	JDLH500RK	MANUAL OPENING "HAN" (1X)	KP1945057
12	JDL500BTM	BOTTOM (1X)	KP1945011	83	JDL0500VS	SUPPORTING SPHERES FOR VERTICAL BRAKE AXIS "ORZ" (1X)	KP1945058
14	JDLMS500	MAIN SPRING (1X)	KP1945012	84		SPECIAL	
15	JDL500BS	BIAS SPRING (2X)	KP1945013				
16	JDL500SHS	SHOE HOLDER SPRING (2X)	KP1945014				
18	JDL500RP1	ROLL PIN (2X)	KP1945015				
19	JDL500D	DISC (2X)	KP1945016				
20	JDL500W1	WASHER (_X)	KP1945017				
21	JDL-DP	DATA PLATE FOR SHOE BRAKES (1X)	KP1945018				
22	JDL-BTQ19	BRAKING TORQUE (1X)	KP1945019				
23	JDLP500-SS-BP	BASE PIN (2X)	KP1945020				
24	JDLP500-SS-SP	SHOE PIN (2X)	KP1945021				
25	JDLP500-SS-TP	TRUNNION PIN (1X)	KP1945022				
26	JDLP500-SS-ST	S/A TRUNNION (1X)	KP1945023				
27	JDLP500-SS-LP	LEVER PIN (1X)	KP1945024				
28	JDLP500-SS-SPT	TOP SPRING PIN (1X)	KP1945025				
29	JDLP500-SS-TPT	THRUSTOR TOP PIN (1X)	KP1945026				
30	JDLP500-SS-TPB	THRUSTOR BOTTOM PIN (1X)	KP1945027				
31	JDLP500-SS-SPB	BOTTOM SPRING PIN (1X)	KP1945028				
33	JDL500W2	SPECIAL WASHER (18X)	KP1945029				
34	JDL500W3	SPECIAL WASHER (2X)	KP1945030				
35	JDL500W4	SPECIAL WASHER (2X)	KP1945031				
36	JDL500FRK	FORK (1X)	KP1945032				
38	JDL500NT1	NUT (2X)	KP1945033				
40	JDL500NT2	NUT (1X)	KP1945034				
43	JDL500DSP	DISC SPRING (12X)	KP1945035				
45	JDL500SPN1	SPLIT PIN (16X)	KP1945036				
46	JDL500SPN2	SPLIT PIN (2X)	KP1945037				
47	JDL500SPN3	SPLIT PIN (2X)	KP1945038				
48	JDL500SPN4	SPLIT PIN (2X)	KP1945039				
51	JDL500W5	SPECIAL WASHER (4X)	KP1945040				
52	JDL500RP2	ROLL PIN (1X)	KP1945041				
53	LOCTITE	LOCTITE (1.5ML)	KP1945042				
54	JDL500SW	SPRING WASHER (2X)	KP1945043				
55	JDL500RP3	ROLL PIN (1X)	KP1945044				
58	JDL500S1	SCREW (2X)	KP1945045				
60	JDL500S2	SCREW (2X)	KP1945046				
61	JDL500S3	SCREW (2X)	KP1945047				



Mondel

- Mill Duty Shoe Brakes
 - DC Magnet Brake – MBE
 - Thruster Brake – MBT
 - Hydraulic Brake – MBM
- Industrial Shoe Brakes
 - DC Magnet Brake – MSA
 - Thruster Brake – MST
 - Hydraulic Brake – MSH
- Heavy-Duty Disc Brakes
- Motor Mounted Brakes
- Actuators, Controllers, Rectifiers

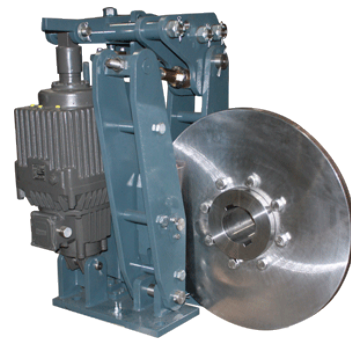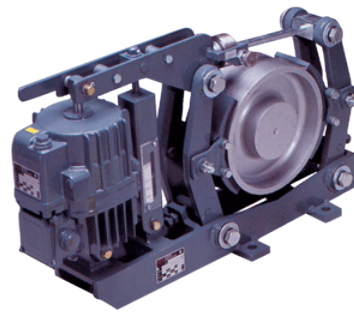

P&H




- P&H SBE – Same as MBE above
- P&H C/D – Superseded by SBE/MBE
 - Aftermarket replacement parts available

Replacement Parts Catalog for

MONDEL

Table of Contents

Drawing	248
5" MBE Shoe Brake.....	249
8" MBE Shoe Brake.....	250
10" MBE Shoe Brake.....	251
13" MBE Shoe Brake.....	252
16" MBE Shoe Brake.....	253
19" MBE Shoe Brake.....	254
23" MBE Shoe Brake.....	255
30" MBE Shoe Brake.....	256

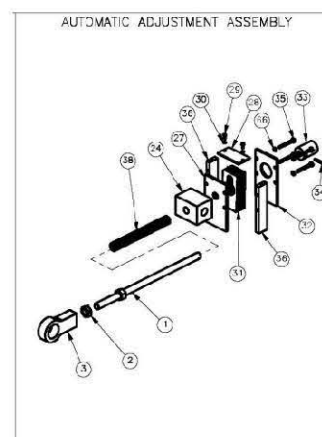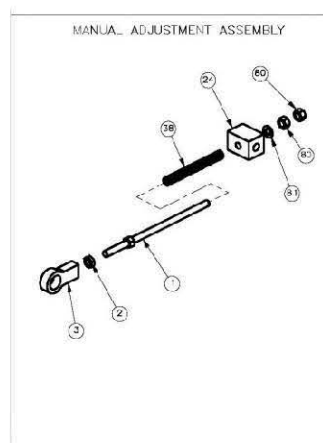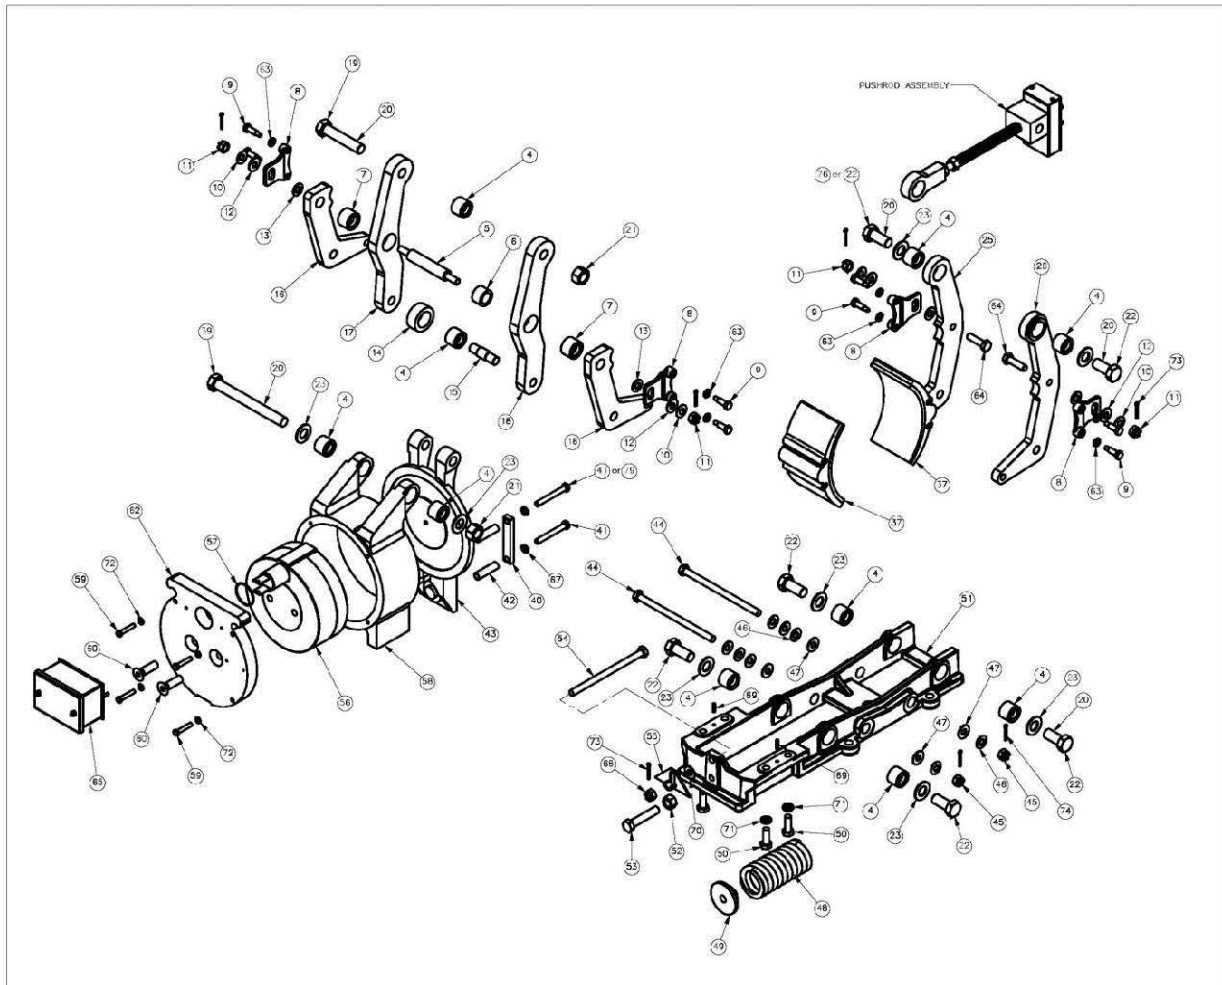

Replacement Parts for:

5" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	131316	BRAKE ROD	KP0525001	47	220287	PLAIN WASHER	KP0525012
2	200008	JAM NUT	KP0525002	48	240057	SPRING	KP0525048
3	130492	PIVOT LINK	KP0525003	49	130498	SPRING SEAT, TORQUE SPRING	KP0525049
4	111890	ASSY,BUSHING,BT-BE,5	KP0525004	50	210148	CAP SCREW	KP0525050
5	130493	SHAFT	KP0525005	51	120070	BASE M/C	KP0525051
6	130494	SPACER	KP0525006	52	200001	NUT	KP0525052
7	111890	ASSY,BUSHING,BT-BE,5	KP0525004	53	210072	BOLT, SPRING ADJUSTING	KP0525053
8	120151	SHOE HOLDER	KP0525008	54	210077	BOLT, ARMATURE	KP0525054
9	210253	BOLT, SHOE HOLDER	KP0525009	55	140402	SPACER, ARMATURE	KP0525055
10	220056	BELLEVILLE WASHER	KP0525010	56	350001	STATIC COIL	KP0525056
11	200038	SLOTTED NUT	KP0525011	57	260015	O-RING	KP0525057
12	220287	PLAIN WASHER.	KP0525012	58	150052	MAGNET CASE	KP0525058
13	----	NOT USED		59	210202	CAP SCREW	KP0525059
14	130846	ROLLER, PLT.	KP0525014	60	210248	SOCKET SCREW	KP0525060
15	130847	SHAFT	KP0525015	61	----	NOT USED	
16	140395	LINK	KP0525016	62	131151	END CAP	KP0525062
17	141032	LINK	KP0525017	63	220019	LOCK WASHER	KP0525063
18	141031	LINK	KP0525018	64	210067	BOLT, SHOE HOLDER PIVOT	KP0525064
19	210145	CAP SCREW	KP0525019	65	111131	TERMINAL BOX ASSEMBLY	KP0525065
20	282010	LOCTITE 277	KP0525020	66	220031	LOCK WASHER	KP0525030
21	200028	NUT	KP0525021	67	220020	LOCK WASHER	KP0525067
22	210146	CAP SCREW	KP0525022	68	200037	HEX SLOTTED NUT	KP0525068
23	220287	PLAIN WASHER	KP0525012	69	232023	SPRING, PIN	KP0525069
24	130495	PIVOT BLOCK	KP0525024	70	220333	PLAIN WASHER	KP0525070
25	141034	LINK	KP0525025	71	220021	LOCK WASHER	KP0525071
26	141033	LINK	KP0525026	72	220019	LOCK WASHER	KP0525063
27	141035	END WALL, SPACER HOUSING	KP0525027	73	230075	COTTER PIN	KP0525073
28	140399	COVER, SPACER HOUSING	KP0525028	74	230072	COTTER PIN	KP0525074
29	210070	SCREW	KP0525029	75	310045	BUSHING	KP0525075
30	220031	LOCK WASHER	KP0525030	76	210185	CAP SCREW	KP0525076
31	140400	SPACER	KP0525031	77	----	NOT USED	
32	141036	END WALL, SPACER HOUSING	KP0525032	78	----	NOT USED	
33	130496	STOP, BRAKE ROD	KP0525033	79	210368	CAP SCREW	KP0525079
34	230027	SPRING PIN	KP0525034				
35	210071	SCREW	KP0525035				
36	140401	SIDE WALL, SPACER HOUSING	KP0525036				
37	110060	BRAKE SHOE	KP0525037				
38	240056	SPRING, BRAKE ROD	KP0525038				
39	210147	CAP SCREW	KP0525039				
40	130499	BAR	KP0525040				
41	210074	CAP SCREW	KP0525041				
42	130497	SPACER, ARMATURE	KP0525042				
43	150044	ARMATURE	KP0525043				
44	210075	BOLT, BASE FRIC. STOP	KP0525044				
45	200038	NUT	KP0525011				
46	220032	BELLEVILLE WASHER	KP0525046				

Replacement Parts for:

8" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	130500	BRAKE ROD	KP0825001	49	130507	SPRING SEAT	KP0825049
2	200010	JAM NUT	KP0825002	50	212115	CAPSCREW	KP0825050
3	130501	PIVOT LINK	KP0825003	51	120074	BASE	KP0825051
4	111891	ASSY,BUSHING,BT-BE,8	KP0825004	52	200002	HEX NUT	KP0825052
5	130502	SHAFT	KP0825005	53	210157	ADJUSTING BOLT	KP0825053
6	130503	SPACER	KP0825006	54	210158	BOLT	KP0825054
7	111891	ASSY,BUSHING,BT-BE,8	KP0825004	55	140414	SPACER	KP0825055
8	120152	SHOE HOLDER	KP0825008	56	350003	STATIC COIL	KP0825056
9	210153	BOLT	KP0825009	57	260015	O-RING	KP0525057
10	220045	BELLEVILLE WASHER	KP0825010	58	150053	MAGNET CASE	KP0825058
11	200038	SLOTTED NUT	KP0525011	59	210078	CAPSCREW	KP0825059
12	220007	WASHER	KP0825012	60	210249	SOCKET SCREW	KP0825060
13	0	NOT USED		61	0	NOT USED	
14	130510	ROLLER	KP0825014	62	131152	END CAP	KP0825062
15	130509	SHAFT	KP0825015	63	220020	LOCKWASHER	KP0525067
16	140405	LINK	KP0825016	64	210371	CAPSCREW	KP0825064
17	141037	LINK	KP0825017	65	111132	TERMINAL BOX ASS'Y	KP0825065
18	141038	LINK	KP0825018	66	220031	LOCKWASHER	KP0525030
19	210154	CAPSCREW	KP0825019	67	220021	LOCKWASHER	KP0525071
20	282010	LOCTITE 277	KP0525020	68	200038	SLOTTED NUT	KP0525011
21	200011	HEX NUT	KP0825021	69	232023	SPRING PIN	KP0525069
22	212114	CAPSCREW	KP0825022	70	220329	WASHER	KP0825070
23		NOT USED	KP0825023	71	220023	LOCKWASHER	KP0825071
24	130504	PIVOT BLOCK	KP0825024	72	220019	LOCKWASHER	KP0525063
25	141039	LINK	KP0825025	73	230011	COTTER PIN	KP0825073
26	141040	LINK	KP0825026	74	0	NOT USED	
27	141041	END WALL	KP0825027	75	0	NOT USED	
28	140409	COVER	KP0825028	76	0	NOT USED	
29	210070	PAN HEAD SCREW	KP0525029	77	220123	PLAIN WASHER	KP0825077
30	220031	LOCKWASHER	KP0525030	78	0	NOT USED	
31	140400	SPACER	KP0525031	79	0	NOT USED	
32	141036	END WALL	KP0525032				
33	130505	STOP	KP0825033				
34	230028	SPRING PIN	KP0825034				
35	210201	PAN HEAD SCREW	KP0825035				
36	140411	SIDE WALL	KP0825036				
37	110061	BRAKE SHOE ASS'Y	KP0825037				
38	240058	SPRING	KP0825038				
39	210079	CAPSCREW	KP0825039				
40	130508	BAR	KP0825040				
41	210156	CAPSCREW	KP0825041				
42	130506	SPACER	KP0825042				
43	150045	ARMATURE	KP0825043				
44	210081	BOLT	KP0825044				
45	200039	SLOTTED NUT	KP0825045				
46	220033	BELLEVILLE WASHER	KP0825046				
47	220051	WASHER	KP0825047				
48	240059	TORQUE SPRING	KP0825048				

Replacement Parts for:

10" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	130427	BRAKE ROD	KP1025001	49	130431	SPRING SEAT	KP1025049
2	200020	JAM NUT	KP1025002	50	210082	CAPSCREW	KP1025050
3	130428	PIVOT LINK	KP1025003	51	120171	BASE	KP1025051
4	111892	ASSY,BUSHING,BT-BE,10	KP1025004	52	200020	HEX NUT	KP1025002
5	130429	SHAFT	KP1025005	53	210117	ADJUSTING BOLT	KP1025053
6	130430	SPACER	KP1025006	54	210116	BOLT	KP1025054
7	111892	ASSY,BUSHING,BT-BE,10	KP1025004	55	140345	SPACER	KP1025055
8	120153	SHOE HOLDER	KP1025008	56	350005	STATIC COIL	KP1025056
9	210087	BOLT	KP1025009	57	260005	O-RING	KP1025057
10	220034	BELLEVILLE WASHER	KP1025010	58	150054	MAGNET CASE	KP1025058
11	200040	SLOTTED NUT	KP1025011	59	210115	CAPSCREW	KP1025059
12	220051	WASHER	KP0825047	60	210322	SOCKET CAPSCREW	KP1025060
13		NOT USED	KP1025013	61		NOT USED	KP1025061
14	130432	ROLLER	KP1025014	62	131153	END CAP	KP1025062
15	130433	SHAFT	KP1025015	63	220021	LOCKWASHER	KP0525071
16	140339	LINK	KP1025016	64	210064	CAPSCREW	KP1025064
17	141043	LINK	KP1025017	65	111133	TERMINAL BOX ASSEMBLY	KP1025065
18	141044	LINK	KP1025018	66	220031	LOCKWASHER	KP0525030
19	210108	CAPSCREW	KP1025019	67	220023	LOCKWASHER	KP0825071
20	282010	LOCTITE 277	KP0525020	68	200040	SLOTTED NUT	KP1025011
21	200017	HEX NUT	KP1025021	69	232023	SPRING PIN	KP0525069
22	210109	CAPSCREW	KP1025022	70	220283	WASHER	KP1025070
23	220010	WASHER	KP1025023	71	220023	LOCKWASHER	KP0825071
24	130437	PIVOT BLOCK	KP1025024	72	220020	LOCKWASHER	KP0525067
25	141045	LINK	KP1025025	73	230071	COTTER PIN	KP1025073
26	141046	LINK	KP1025026	74		NOT USED	
27	141047	END WALL	KP1025027	75		NOT USED	
28	140348	COVER	KP1025028	76		NOT USED	
29	210070	PAN HEAD SCREW	KP0525029	77		NOT USED	
30	220031	LOCKWASHER	KP0525030	78		NOT USED	
31	140342	SPACER	KP1025031	79		NOT USED	
32	141048	END WALL	KP1025032				
33	130434	STOP	KP1025033				
34	230023	SPRING PIN	KP1025034				
35	210111	CAPSCREW	KP1025035				
36	140344	SIDE WALL	KP1025036				
37	110062	BRAKE SHOE ASS'Y	KP1025037				
38	240051	SPRING	KP1025038				
39	210187	CAPSCREW	KP1025039				
40	130435	BAR	KP1025040				
41	210112	CAPSCREW	KP1025041				
42	130436	SPACER	KP1025042				
43	150046	ARMATURE	KP1025043				
44	210113	BOLT	KP1025044				
45	200040	SLOTTED NUT	KP1025011				
46	220055	BELLEVILLE WASHER	KP1025046				
47	220008	WASHER	KP1025047				
48	240052	TORQUE SPRING	KP1025048				

Replacement Parts for:

13" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	130416	BRAKE ROD	KP1325001	49	130426	SPRING SEAT, TORQUE SPRING	KP1325049
2	200056	JAM NUT	KP1325002	50	210102	CAPSCREW	KP1325050
3	130417	PIVOT LINK	KP1325003	51	120136	BASE	KP1325051
4	111893	ASSY,BUSHING,BT-BE,13	KP1325004	52	200043	NUT	KP1325052
5	130418	SHAFT	KP1325005	53	210106	BOLT, SPRING ADJUSTING	KP1325053
6	130419	SPACER	KP1325006	54	210244	BOLT, ARMATURE	KP1325054
7	111894	ASSY,BUSHING,BE,13	KP1325007	55	140143	SPACER, ARMATURE	KP1325055
8	120154	SHOE HOLDER	KP1325008	56	350007	STATIC COIL	KP1325056
9	210092	BOLT, SHOE HOLDER	KP1325009	57	260008	O-RING	KP1325057
10	220035	BELLEVILLE WASHER	KP1325010	58	150055	MAGNET CASE	KP1325058
11	200041	SLOTTED NUT	KP1325011	59	210015	CAPSCREW	KP1325059
12	220123	PLAIN WASHER	KP0825077	60	210321	SOCKET SCREW	KP1325060
13	220141	PLAIN WASHER	KP1325013	61	0	NOT USED	
14	130420	ROLLER	KP1325014	62	131154	END CAP	KP1325062
15	130421	SHAFT	KP1325015	63	220023	LOCKWASHER	KP0825071
16	140137	LINK	KP1325016	64	210063	BOLT, SHOE HOLDER PIVOT	KP1325064
17	140138	LINK	KP1325017	65	111134	TERMINAL BOX ASSEMBLY	KP1325065
18	140138	LINK	KP1325017	66	220019	LOCKWASHER	KP0525063
19	210320	CAPSCREW	KP1325019	67	220023	LOCKWASHER	KP0825071
20	282010	LOCTITE 277	KP0525020	68	200041	HEX SLOTTED NUT	KP1325011
21	200192	NUT	KP1325021	69	232023	SPRING PIN	KP0525069
22	210062	CAPSCREW	KP1325022	70	220290	PLAIN WASHER	KP1325070
23	220117	PLAIN WASHER	KP1325023	71	220025	LOCKWASHER	KP1325071
24	130422	PIVOT BLOCK	KP1325024	72	220021	LOCKWASHER	KP0525071
25	141051	LINK	KP1325025	73	230076	COTTER PIN	KP1325073
26	141052	LINK , M/C	KP1325026	74	0	NOT USED	
27	141053	END WALL, SPACER HOUSING	KP1325027	75	0	NOT USED	
28	140141	COVER, SPACER HOUSING	KP1325028	76	0	NOT USED	
29	210070	PAN HEAD SCREW	KP0525029	77	0	NOT USED	
30	220031	LOCKWASHER	KP0525030	78	0	NOT USED	
31	140142	SPACER	KP1325031	79	0	NOT USED	
32	141054	END WALL, SPACER HOUSING	KP1325032				
33	130423	STOP, BRAKE ROD	KP1325033				
34	230021	SPRING PIN	KP1325034				
35	210098	SCREW	KP1325035				
36	140198	SIDE WALL, SPACER HOUSING	KP1325036				
37	110063	BRAKE SHOE	KP1325037				
38	240049	SPRING, BRAKE ROD	KP1325038				
39	210099	CAPSCREW	KP1325039				
40	130424	BAR	KP1325040				
41	210100	CAPSCREW	KP1325041				
42	130425	SPACER , ARMATURE	KP1325042				
43	150047	ARMATURE	KP1325043				
44	210250	BOLT, BASE FRIC, STOP	KP1325044				
45	200041	NUT	KP1325011				
46	220083	BELLEVILLE WASHER	KP1325046				
47	220123	PLAIN WASHER	KP0825077				
48	240050	TORQUE SPRING	KP1325048				

Replacement Parts for:

16" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	130479	BRAKE ROD	KP1625001	50	210141	CAPSCREW	KP1625049
2	200024	JAM NUT	KP1625002	51	120194	BASE	KP1625050
3	130480	PIVOT LINK	KP1625003	52	200022	HEX NUT	KP1625051
4	111895	BUSHING	KP1625004	53	210142	BOLT	KP1625052
5	130481	SHAFT	KP1625005	54	210251	BOLT	KP1625053
6	130482	SPACER	KP1625006	55	140393	SPACER	KP1625054
7	111895	BUSHING	KP1625004	56	350009	STATIC COIL	KP1625055
8	120155	SHOE HOLDER	KP1625008	57	260012	O-RING	KP1625056
9	210096	BOLT	KP1625009	58	150056	MAGNET CASE	KP1625057
10	220036	SPRING	KP1625010	59	210024	CAPSCREW	KP1625058
11	200042	SLOTTED NUT	KP1625011	60	210125	CAPSCREW	KP1625059
12	220010	PLAIN WASHER	KP1025023	61	220309	LOCKWASHER	KP1625060
14	130483	ROLLER	KP1625013	62	131155	END CAP	KP1625061
15	130484	SHAFT	KP1625014	63	220025	LOCKWASHER	KP1325071
16	140385	LINK	KP1625015	64	210094	BOLT	KP1625063
17	140386	LINK	KP1625016	65	111135	TERMINAL BOX ASS'Y	KP1625064
18	140387	LINK	KP1625017	66	220019	LOCKWASHER	KP0525063
19	210136	CAPSCREW	KP1625018	67	220025	LOCKWASHER	KP1325071
20	282010	LOCTITE 277	KP0525020	68	200042	SLOTTED NUT	KP1625011
21	200026	HEX NUT	KP1625020	69	232023	SPRING PIN	KP0525069
22	210313	CAPSCREW	KP1625021	70	220284	PLAIN WASHER	KP1625069
23	220119	PLAIN WASHER	KP1625022	71	220026	LOCKWASHER	KP1625070
24	130485	PIVOT BLOCK	KP1625023	72	220023	LOCKWASHER	KP0825071
25	141030	LINK	KP1625024	73	230073	COTTER PIN	KP1625072
26	141030	LINK	KP1625024	78	0	NOT USED	
27	141055	END WALL	KP1625026	79	0	NOT USED	
28	140389	COVER	KP1625027				
29	210070	PAN HEAD SCREW	KP0525029				
30	220031	LOCKWASHER	KP0525030				
31	140390	SPACER	KP1625030				
32	141056	END WALL	KP1625031				
33	130486	STOP	KP1625032				
34	230026	SPRING PIN	KP1625033				
35	210192	CAPSCREW	KP1625034				
36	140392	SIDE WALL	KP1625035				
37	110064	BRAKE SHOE ASS'Y	KP1625036				
38	240054	BRAKE ROD SPRING	KP1625037				
39	210138	CAPSCREW	KP1625038				
40	130487	BAR	KP1625039				
41	210139	CAPSCREW	KP1625040				
42	130488	SPACER	KP1625041				
43	150048	ARMATURE	KP1625042				
44	210241	BOLT	KP1625043				
45	200042	SLOTTED NUT	KP1625011				
46	220066	SPRING	KP1625045				
47	220040	PLAIN WASHER	KP1625046				
48	240055	TORQUE SPRING	KP1625047				
49	130489	TORQUE SPRING SEAT	KP1625048				

Replacement Parts for:

19" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	130513	BRAKE ROD	KP1925001	49	130524	SPRING SEAT	KP1925049
2	200049	JAM NUT	KP1925002	50	210165	CAPSCREW	KP1925050
3	130514	PIVOT LINK	KP1925003	51	120219	BASE	KP1925051
4	111896	BUSHING	KP1925004	52	200192	HEX NUT	KP1325021
5	130515	SHAFT	KP1925005	53	210167	ADJUSTING BOLT	KP1925053
6	130516	SPACER	KP1925006	54	210252	BOLT	KP1925054
7	111896	BUSHING	KP1925004	55	110237	SPACER	KP1925055
8	120156	SHOE HOLDER	KP1925008	56	350011	STATIC COIL	KP1925056
9	210160	BOLT	KP1925009	57	260021	O-RING	KP1925057
10	220068	SPRING	KP1925010	58	150057	MAGNET CASE	KP1925058
11	200058	SLOTTED NUT	KP1925011	59	210169	CAPSCREW	KP1925059
12	220308	WASHER	KP1925012	60	210182	CAPSCREW	KP1925060
13	0	NOT USED		61	220129	LOCKWASHER	KP1925061
14	130517	ROLLER	KP1925014	62	131156	END CAP	KP1925062
15	130518	SHAFT	KP1925015	63	220026	LOCKWASHER	KP1625070
16	140435	LINK	KP1925016	64	210131	BOLT	KP1925064
17	141058	LINK	KP1925017	65	111135	TERMINAL BOX ASS'Y	KP1625064
18	141057	LINK	KP1925018	66	220020	LOCKWASHER	KP0525067
19	210324	CAPSCREW	KP1925019	67	220025	LOCKWASHER	KP1325071
20	282010	LOCTITE 277	KP0525020	68	200058	SLOTTED NUT	KP1925011
21	200046	HEX NUT	KP1925021	69	232023	SPRING PIN	KP0525069
22	212116	CAPSCREW	KP1925022	70	220120	PLAIN WASHER	KP1925070
23	220114	PLAIN WASHER	KP1925023	71	220026	LOCKWASHER	KP1625070
24	130519	PIVOT BLOCK	KP1925024	72	220025	LOCKWASHER	KP1325071
25	140437	LINK	KP1925025	73	230017	COTTER PIN	KP1925073
26	140437	LINK	KP1925025	74	0	NOT USED	
27	141059	END WALL	KP1925027	75	0	NOT USED	
28	140439	COVER	KP1925028	76	0	NOT USED	
29	210070	SCREW	KP0525029	77	0	NOT USED	
30	220031	LOCKWASHER	KP0525030	78	0	NOT USED	
31	140440	SPACER	KP1925031	79	0	NOT USED	
32	141060	END WALL	KP1925032				
33	130520	STOP	KP1925033				
34	230031	SPRING PIN	KP1925034				
35	210110	SCREW	KP1925035				
36	140441	SIDE WALL	KP1925036				
37	110165	BRAKE SHOE ASS'Y	KP1925037				
38	240060	SPRING	KP1925038				
39	210163	CAPSCREW	KP1925039				
40	130521	BAR	KP1925040				
41	210164	CAPSCREW	KP1925041				
42	130522	SPACER	KP1925042				
43	150049	ARMATURE	KP1925043				
44	130523	BOLT	KP1925044				
45	200055	SLOTTED NUT	KP1925045				
46	220062	SPRING	KP1925046				
47	220115	PLAIN WASHER	KP1925047				
48	240061	TORQUE SPRING	KP1925048				

Replacement Parts for:

23" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	130551	BRAKE ROD	KP2325001	49	130561	SPRING SEAT	KP2325049
2	200049	JAM NUT	KP1925002	50	210175	CAPSCREW	KP2325050
3	130552	PIVOT LINK	KP2325003	51	120161	BASE	KP2325051
4	111897	BUSHING	KP2325004	52	200192	HEX NUT	KP1325021
5	130553	SHAFT	KP2325005	53	210176	SPRING ADJUSTING	KP2325053
6	130554	SPACER	KP2325006	54	210383	BOLT	KP2325054
7	111897	BUSHING	KP2325004	55	140494	SPACER	KP2325055
8	143671	SHOE HOLDER	KP2325008	56	350013	STATIC COIL	KP2325056
9	210170	BOLT	KP2325009	57	260021	O-RING	KP1925057
10	220062	SPRING	KP1925046	58	150058	MAGNET CASE	KP2325058
11	200055	SLOTTED NUT	KP1925045	59	210460	CAPSCREW	KP2325059
12	220120	WASHER	KP1925070	60	210177	CAPSCREW	KP2325060
13	0	NOT USED		61	220305	NOT USED	KP2325061
14	130555	ROLLER	KP2325014	62	131157	END CAP	KP2325062
15	130556	SHAFT	KP2325015	63	220028	LOCKWASHER	KP2325063
16	140487	LINK	KP2325016	64	200020	BOLT	KP1025002
17	141061	LINK	KP2325017	65	111135	TERMINAL BOX ASSEMBLY	KP1625064
18	141062	LINK	KP2325018	66	220020	LOCKWASHER	KP0525067
19	210171	CAPSCREW	KP2325019	67	220026	LOCKWASHER	KP1625070
20	282010	LOCTITE 277	KP0525020	68	200055	SLOTTED NUT	KP1925045
21	200137	HEX NUT	KP2325021	69	232023	SPRING PIN	KP0525069
22	210128	CAPSCREW	KP2325022	70	220117	WASHER	KP1325023
23	220071	WASHER	KP2325023	71	220129	LOCKWASHER	KP1925061
24	130557	PIVOT BLOCK	KP2325024	72	220026	LOCKWASHER	KP1625070
25	140489	LINK	KP2325025	73	232022	COTTER PIN	KP2325073
26	140489	LINK	KP2325025	74	0	NOT USED	
27	141059	END WALL	KP1925027	75	0	NOT USED	
28	140439	COVER	KP1925028	76	0	NOT USED	
29	210070	SCREW	KP0525029	77	0	NOT USED	
30	220031	LOCKWASHER	KP0525030	78	220071	WASHER	KP2325023
31	140440	SPACER	KP1925031	79	0	NOT USED	
32	141060	END WALL	KP1925032				
33	130520	STOP	KP1925033				
34	230031	SPRING PIN	KP1925034				
35	210110	PAN HEAD SCREW	KP1925035				
36	140441	SIDE WALL	KP1925036				
37	110163	BRAKE SHOE ASS'Y	KP2325037				
38	240063	SPRING	KP2325038				
39	210245	CAPSCREW	KP2325039				
40	130559	BAR	KP2325040				
41	210174	CAPSCREW	KP2325041				
42	130560	SPACER	KP2325042				
43	150050	ARMATURE	KP2325043				
44	130576	BOLT	KP2325044				
45	200110	SLOTTED NUT	KP2325045				
46	220073	SPRING	KP2325046				
47	220115	WASHER	KP1925047				
48	240064	TORQUE SPRING	KP2325048				

Replacement Parts for:

30" MBE Shoe Brake

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	130563	ROD,BE,30,AA	KP3025001	49	130573	SEAT,TS,BE,30	KP3025049
2	200052	NUT,JAM 2-12NF	KP3025002	50	210182	HHCS,1NC x 3.5LG	KP1925060
3	130564	LINK,BE,30	KP3025003	51	120165	BASE,BE,30,MC	KP3025051
4	310016	SPECIAL SEALED BEARING AS	KP3025004	52	200192	NUT,1-14UNS	KP1325021
5	130565	SHAFT,BE,30	KP3025005	53	210246	SAB 1NC x 5-1/2LG	KP3025053
6	130566	SPACER,BE,30	KP3025006	54	210247	SHB 1NC x 21.0LG	KP3025054
7	310016	SPECIAL SEALED BEARING AS	KP3025004	55	140494	SPACER,ARMATURE,BE,23	KP2325055
8	120158	SHOE HOLDER,BE-BT,30,MC	KP3025008	56	350637	COIL,BE,30,SHUNT,D8	KP3025056
9	210105	BOLT,SHOE HOLDER,30BE/BT	KP3025009	57	260027	30"BE O-RING	KP3025057
10	220076	WASHER,BELLEVILLE 1.4 DIA	KP3025010	58	150059	MAGNET CASE,BE,30,M/C	KP3025058
11	200053	NUT,CASTLE 1 3/8-6NC	KP3025011	59	210329	CAPSCREW	KP3025059
12	220122	WASHER,2.185",SPC	KP3025012	60	210330	CAPSCREW	KP3025060
13		NOT USED		61	220078	WASHER,LOCK 1 1/2 DIA	KP3025061
14	130567	ROLLER,BE,30	KP3025014	62	131158	END CAP,BE,30	KP3025062
15	130568	SHAFT,BE,30	KP3025015	63	220305	WASHER,FLAT,1 1/4 DIA	KP2325061
16	140497	IT16-30"BE LINK	KP3025016	64	210101	HHCS,1 3/8NC x 4 1/2 GR5	KP3025064
17	141063	IT17-30"LINK	KP3025017	65	111138	ASSY,TERMINAL BOX,BE,30	KP3025065
18	141064	IT18-30"BE LINK	KP3025018	66	220020	WASHER,LOCK,5/16 DIA	KP0525067
19	210178	HHCS,2NC x 13LG. GR5	KP3025019	67	220026	WASHER,LOCK,3/4 DIA	KP1625070
20	282010	LOCTITE 277, 50ML	KP0525020	68	200055	NUT,CASTLE 1-8NC	KP1925045
21	200054	NUT,2-12NF	KP3025021	69	230022	PIN,SPRING,BE,5-30,HR	KP3025069
22	210332	HHCS,2-NF x 4LG	KP3025022	70	220117	WASHER,1 DIA,SAE	KP1325023
23	220075	WASHER,FLAT	KP3025023	71	220029	WASHER,LOCK,1,TOOTH	KP3025071
24	130569	BLOCK,PIVOT,BE,30	KP3025024	72	220029	WASHER,LOCK,1,TOOTH	KP3025071
25	140499	IT25/26-30"BE LINK	KP3025025	73	230077	PIN,COTTER 5/16 x 2 1/2	KP3025073
26	140499	IT25/26-30"BE LINK	KP3025025	74	230074	PIN,COTTER 1/4 x 2	KP3025074
27	141065	IT27-30"END WALL	KP3025027	75		NOT USED	
28	140501	IT28-30"COVER	KP3025028	76		NOT USED	
29	210070	RHMS,#10-24UNC x1/2LG	KP0525029	77		NOT USED	
30	220031	WASHER,LOCK #10	KP0525030	78		NOT USED	
31	140503	SPACER	KP3025031	79		NOT USED	
32	141066	IT32-30"END WALL	KP3025032				
33	130570	STOP,BE,30	KP3025033				
34	230033	PIN,SPRING 1/2 x 2LG	KP3025034				
35	210110	HHCS,5/16NC x 3.25LG	KP1925035				
36	140502	IT36-30"SIDE WALL	KP3025036				
37	110164	ASSY,SHOE,MBE,30	KP3025037				
38	240065	SPRING,BRAKE ROD,BE,30	KP3025038				
39	130578	HHCS,2NFx18.5LG,SPC	KP3025039				
40	130571	BAR,BE,30	KP3025040				
41	210181	HHCS,3/4NC x 7 1/2 GR5	KP3025041				
42	130572	SPACER,ARMATURE,BE,30	KP3025042				
43	150051	ARMATURE,BE,30,M/C	KP3025043				
44	130575	ROD,BE,30	KP3025044				
45	200053	NUT,CASTLE 1 3/8-6NC	KP3025011				
46	220076	WASHER,BELLEVILLE 1.4 DIA	KP3025010				
47	220122	WASHER,2.185",SPC	KP3025012				
48	240066	SPRING,TORQUE,BE,30	KP3025048				



Phone: 847-680-0999 - Fax: 847-680-0283 - www.Kor-Pak.com - Sales@Kor-Pak.com

Replacement Parts Catalog for

WAGNER


Table of Contents

TYPE H, DC MAGNETIC BRAKES

10 X 4 TYPE H BRAKE, J-2926 (New Style).....	258
10 X 4 TYPE H BRAKE, J-2926 (Old Style).....	259
14 X 6 TYPE H BRAKE, J-929 (New Style).....	260
14 X 6 TYPE H BRAKE, J-929 (Old Style).....	261
18 X 8 TYPE H BRAKE, J-2932 (New Style).....	262
18 X 8 TYPE H BRAKE, J-2932 (Old Style).....	263


If you are unable to locate the part you need, call our sales department and they can further assist you.
Wagner is a registered trademark of Sylvania Electrical Control.

Replacement Parts for: 10 X 4 TYPE H BRAKE, J-2926 (New Style)

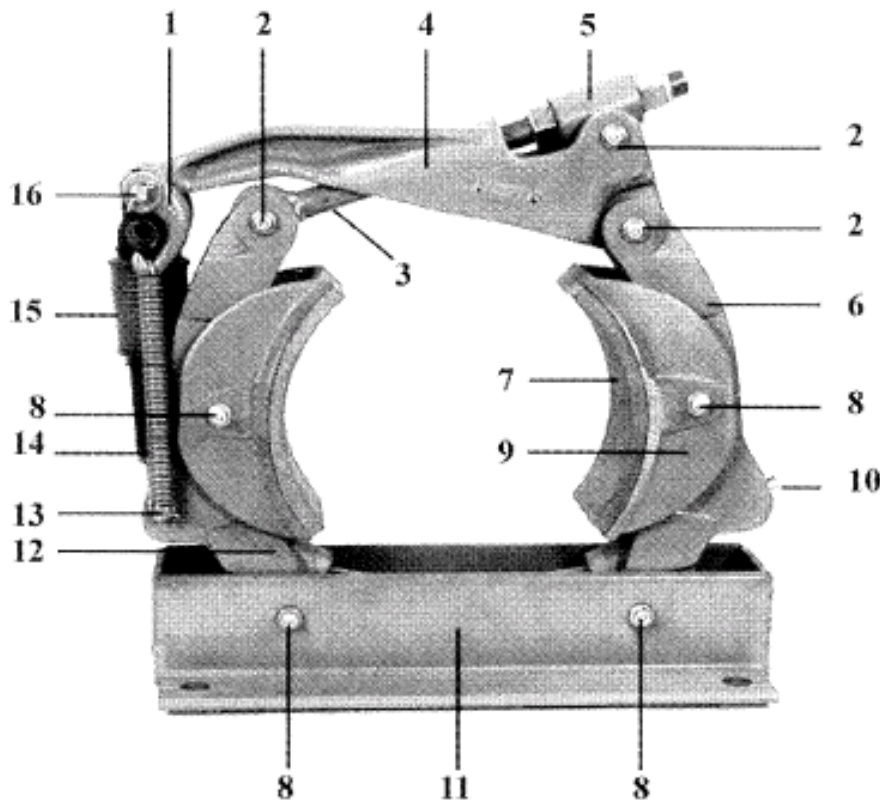


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	J-6944	Spring Hook	KP1041001	*	J-8120	Shoe Centering Spring Arm	KP1041019
*	J-6945	Spring Hook	KP1041002	11	J-2680	Base	KP1042020
2	J-73926	Pin	KP1042003	12	J-2682	Shoe Arm	KP1042021
3	J-10069	Eye Bolt & Bushing	KP1041004	13	J-6946	Pin	KP1041022
*	J-6940	Eye Bolt Bushing	KP1041005	14	J-8134	Return Spring	KP1041023
4	J-10070	Lever & Bushing	KP1042006	15	J-7905	1-118 Actuating Cylinder	KP1842009
*	J-6941	Lever Bushing	KP1041007	16	J-6953	Pin	KP1041025
5	J-10071	Knuckle & Bushing	KP1041008	*not pictured			
*	J-6941	Knuckle Bushing	KP1041007				
6	J-2681	Arm	KP1042010				
*	J-6314	Friction Plug	KP1041011				
*	J-6528	Friction Plug Spring	KP1842019				
7	J-4954	Undrilled Lining	KP1042013				
8	J-73925	Pin	KP1042014				
9	J-6110	Shoe & Bonded Lining	KP1042015				
*	J-107076	Shoe & Bolted on Lining	KP1042016				
10	J-87249	Shoe Centering Lock Kit	KP1842016				
*	J-8122	Shoe Centering Spring	KP1041018				

Replacement Parts for: 10 X 4 TYPE H BRAKE, J-2926 (Old Style)

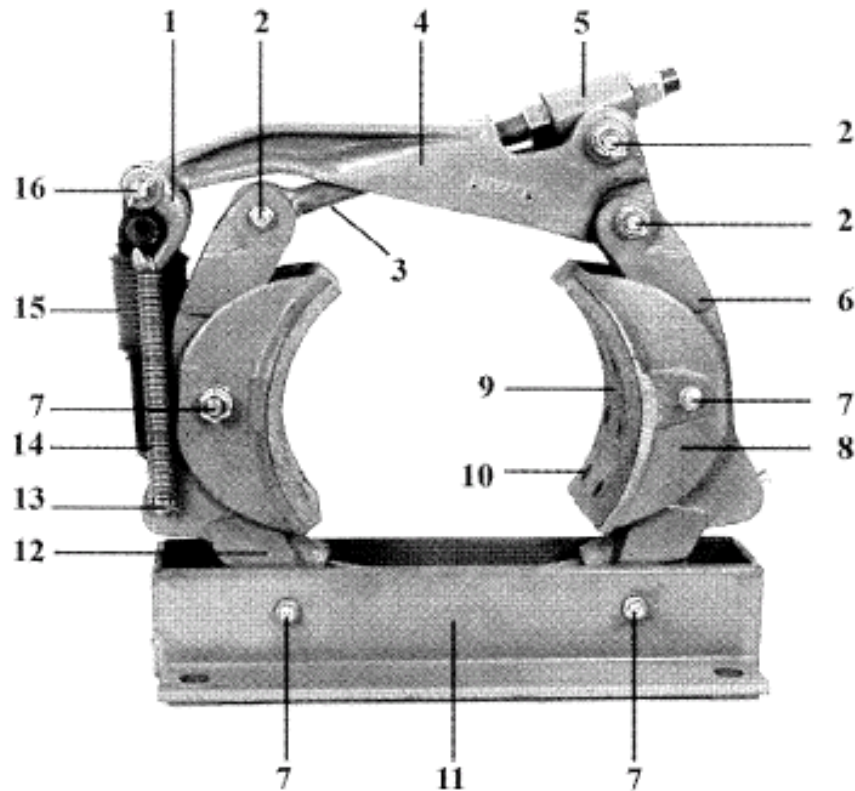


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	J-6944	Spring Hook	KP1041001	*	J-8120	Shoe Centering Spring Arm	KP1041019
*	J-6945	Spring Hook	KP1041002	11	J-2680	Base	KP1041020
2	J-73926	Pin	KP1041003	12	J-2682	Shoe Arm	KP1041021
3	J-10069	Eye Bolt & Bushing	KP1041004	13	J-6946	Pin	KP1041022
*	J-6940	Eye Bolt Bushing	KP1041005	14	J-8134	Return Spring	KP1041023
4	J-10070	Lever & Bushing	KP1041006	15	J-7905	1-118 Actuating Cylinder	KP1842009
*	J-6941	Lever Bushing	KP1041007	16	J-6953	Pin	KP1041025
5	J-10071	Knuckle & Bushing	KP1041008	*not pictured			
*	J-6941	Knuckle Bushing	KP1041007				
6	J-2681	Arm	KP1041010				
*	J-6314	Friction Plug	KP1041011				
*	J-6528	Friction Plug Spring	KP1842019				
7	J-4954	Undrilled Lining	KP1041013				
8	J-73925	Pin	KP1041014				
9	J-6110	Shoe & Bonded Lining	KP1041015				
10	J-107076	Shoe & Bolted on Lining	KP1041016				
*	J-87249	Shoe Centering Lock Kit	KP1842016				
*	J-8122	Shoe Centering Spring	KP1041018				

Replacement Parts for: 14 X 6 TYPE H BRAKE, J-929 (New Style)

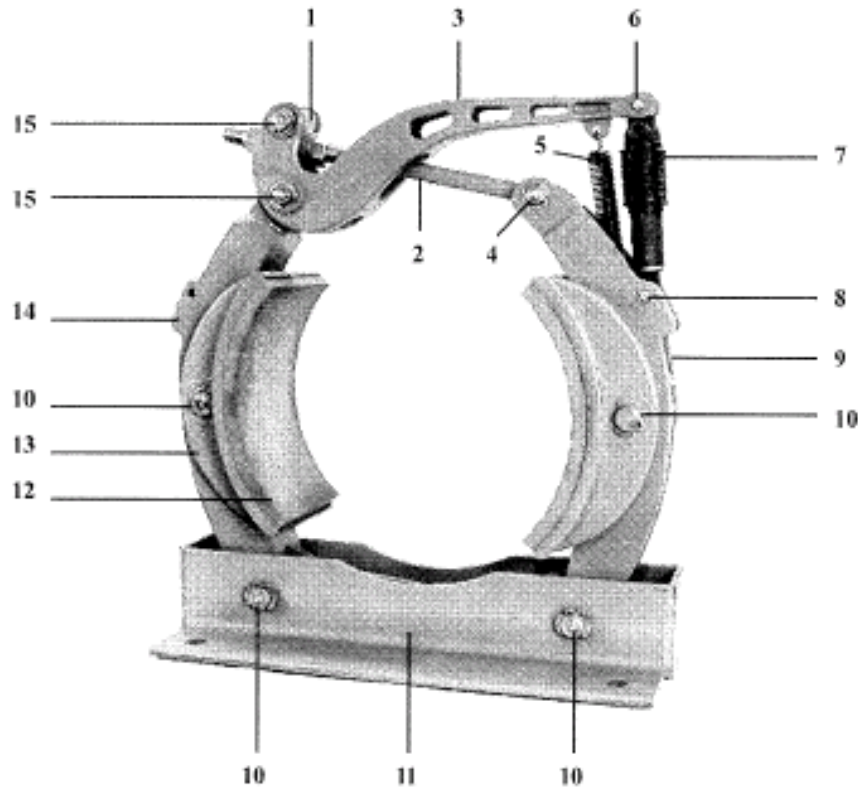


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	J-9637	Knuckle & Bushing	KP1842001	*	J-6528	Friction Plug Spring	KP1842019
*	J-6693	Knuckle Bushing	KP1842002	*	J-6689	Friction Plug	KP1441020
2	J-10068	Eye Bolt & Bushing	KP1842005	14	J-2684	Shoe Arm	KP1441022
*	J-6694	Eye Bolt Bushing	KP1842004	15	J-73928	Pin Kit	KP1842022
3	J-1768	Lever	KP1842005	*not pictured			
4	J73929	Pin	KP1842006				
5	J-8135	Return Spring	KP1842007				
6	J-6696	Pin	KP1842008				
7	J-7905	1-1/8 Actuating Cylinder	KP1842009				
8	J-6873	Pin	KP1842010				
9	J-2685	Shoe Arm	KP1442011				
10	J-73927	Pin Kit	KP1442012				
11	J-2683	Base	KP1442013				
*	J-8126	Shoe Centering Spring	KP1441014				
*	J-8124	Centering Spring Arm	KP1441013				
*	J-87249	Shoe Centering Lock Kit	KP1842016				
12	J-1234	Undrilled Lining	KP1442017				
13	J-1235	Shoe with Bonded Lining	KP1442018				

Replacement Parts for: 14 X 6 TYPE H BRAKE, J-929 (Old Style)

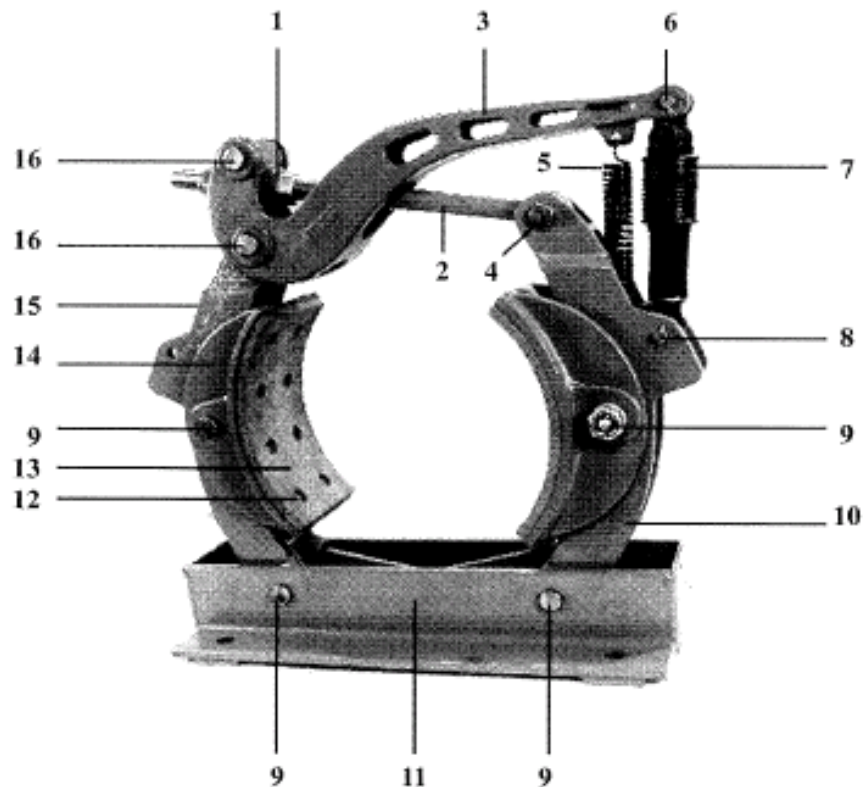


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	J-9637	Knuckle and Bushing	KP1842001	*	J-6528	Friction Plug Spring	KP1842019
*	J-6693	Knuckle Bushing	KP1842002	*	J-6689	Friction Plug	KP1441020
2	J-10068	Eye Bolt and Bushing	KP1842004	14	J-1235	Shoe with Lining	KP1441021
*	J-6694	Eye bolt Bushing	KP1842004	15	J-2684	Shoe Arm	KP1441022
3	J-1768	Lever	KP1441005	16	J-6817	Pin	KP1441023
4	J-6818	Pin	KP1441006	*not pictured			
5	J-8135	Return Spring	KP1842007				
6	J-6696	Pin	KP1842008				
7	J-7905	1-1/8 Actuator	KP1842009				
8	J-6873	Pin	KP1842010				
9	J-6816	Pin	KP1441011				
10	J-2685	Shoe Arm	KP1441012				
*	J-8124	Ccentering Spring Arm	KP1441013				
*	J-8126	Shoe Centering Spring	KP1441014				
11	J-2683	Base	KP1441015				
*	J-87249	Shoe Centering Lock Kit	KP1842016				
12	J-363	Bolt and Locking Nut	KP1441017				
13	J-1234	14" Drilled Lining	KP1441018				

Replacement Parts for: 18 X 8 TYPE H BRAKE, J-2932 (New Style)

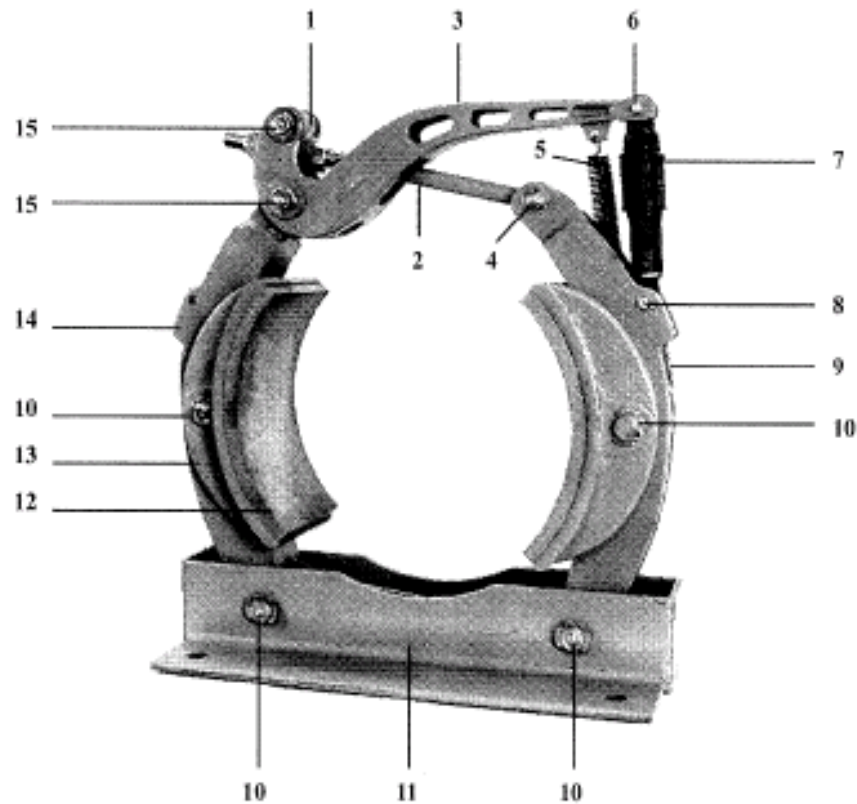

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	J-9637	Knuckle and Bushing	KP1842001	*	J-6528	Friction Plug Spring	KP1842019
*	J-6693	Knuckle Bushing	KP1842002	*	J-6876	Friction Plug	KP1842020
2	J-10068	Eye Bolt and Bushing	KP1842003	14	J-2936	Shoe Arm	KP1842021
*	J-6694	Eye Bolt Bushing	KP1842004	15	J-73928	Pin Kit	KP1842022
3	J-1768	Lever	KP1842005	*not pictured			
4	J-73929	Pin	KP1842006				
5	J-8135	Return Spring	KP1842007				
6	J-6696	Pin	KP1842008				
7	J-7905	1-1/18 Actuating Cylinder	KP1842009				
8	J-6873	Pin	KP1842010				
9	J-2937	Shoe Arm	KP1842011				
10	J-73930	Pin Kit	KP1842012				
11	J-2935	Base	KP1842013				
*	J-2686	Shoe Centering Spring	KP1842014				
*	J-8128	Centering Spring Arm	KP1842015				
*	J-87249	Shoe Centering Lock Kit	KP1842016				
12	J-1276	Undrilled Lining	KP1842017				
13	J-1803	Shoe with Bonded Lining	KP1842018				

Replacement Parts for: 18 X 8 TYPE H BRAKE, J-2932 (Old Style)

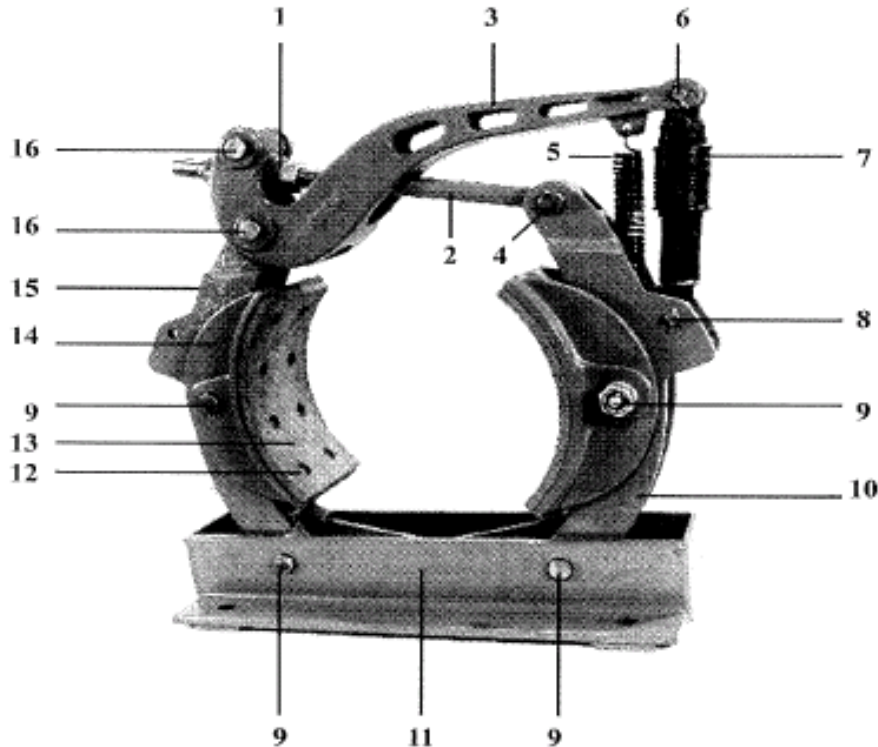

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	J-9637	Knuckle and Bushing	KP1842001	*	J-6528	Friction Plug Spring	KP1842019
*	J-6693	Knuckle Bushing	KP1842002	*	J-6876	Friction Plug	KP1842020
2	J-10068	Eye Bolt and Bushing	KP1842006	14	J-1803	Shoe with Lining	KP1842022
*	J-6694	Eye Bolt Bushing	KP1842004	15	J-2936	Shoe Arm	KP1840223
3	J-1768	Lever	KP1441005	16	J-6817	Pin	KP1441023
4	J-6818	Pin	KP1441006	*not pictured			
5	J-8135	Return Spring	KP1842007				
6	J-6696	Pin	KP1842008				
7	J-7905	1-1/8 Actuator	KP1842009				
8	J-6873	Pin	KP1842010				
9	J-6874	Pin	KP1842011				
10	J-2937	Shoe Arm	KP1842012				
*	J-8128	Centering Spring Arm	KP1842015				
*	J-2686	Shoe Centering Spring	KP1842014				
11	J-2935	Base	KP1842018				
*	J-87249	Shoe Centering Lock Kit	KP1842016				
12	J-363	Bolt and Locking Nut	KP1441017				
13	J-1276	18" Drilled Lining	KP1842021				

Replacement Parts Catalog for

WESTINGHOUSE

Table of Contents

DJ BRAKES

TYPE DI 062-F MAGNETIC BRAKE.....	265
TYPE DI 104-F MAGNETIC BRAKE.....	266
TYPE DI 135-F MAGNETIC BRAKE.....	267
TYPE DI 167-F MAGNETIC BRAKE.....	268
TYPE DI 198-F MAGNETIC BRAKE.....	269
TYPE DI 239-F MAGNETIC BRAKE.....	270


TM BRAKES

TYPE TM-83 MAGNETIC SHOE BRAKE.....	271
TYPE TM-1035 MAGNETIC SHOE BRAKE.....	272
TYPE TM-1355 MAGNETIC SHOE BRAKE.....	273
TYPE TM-1665 MAGNETIC SHOE BRAKE.....	274
TYPE TM-1985 MAGNETIC SHOE BRAKE.....	275
TYPE TM-2311 MAGNETIC SHOE BRAKE.....	276
TYPE TM-3014 MAGNETIC SHOE BRAKE.....	277

CONTACTORS


TYPE M FRAME 301 DC MAGNETIC CONTACTOR.....	278
TYPE M FRAME 401 DC MAGNETIC CONTACTOR.....	279
TYPE M FRAME 501 DC MAGNETIC CONTACTOR.....	280
TYPE M FRAME 601 DC MAGNETIC CONTACTOR.....	281
TYPE M FRAME 701 DC MAGNETIC CONTACTOR.....	282
TYPE MD FRAME 301 DC MAGNETIC CONTACTOR.....	283
TYPE MD FRAME 401 DC MAGNETIC CONTACTOR.....	284
TYPE MD FRAME 501 DC MAGNETIC CONTACTOR.....	285
TYPE MD FRAME 601 DC MAGNETIC CONTACTOR.....	286
TYPE MD FRAME 701 DC MAGNETIC CONTACTOR.....	287

Replacement Parts for: Type DI 062-F Magnetic Brake

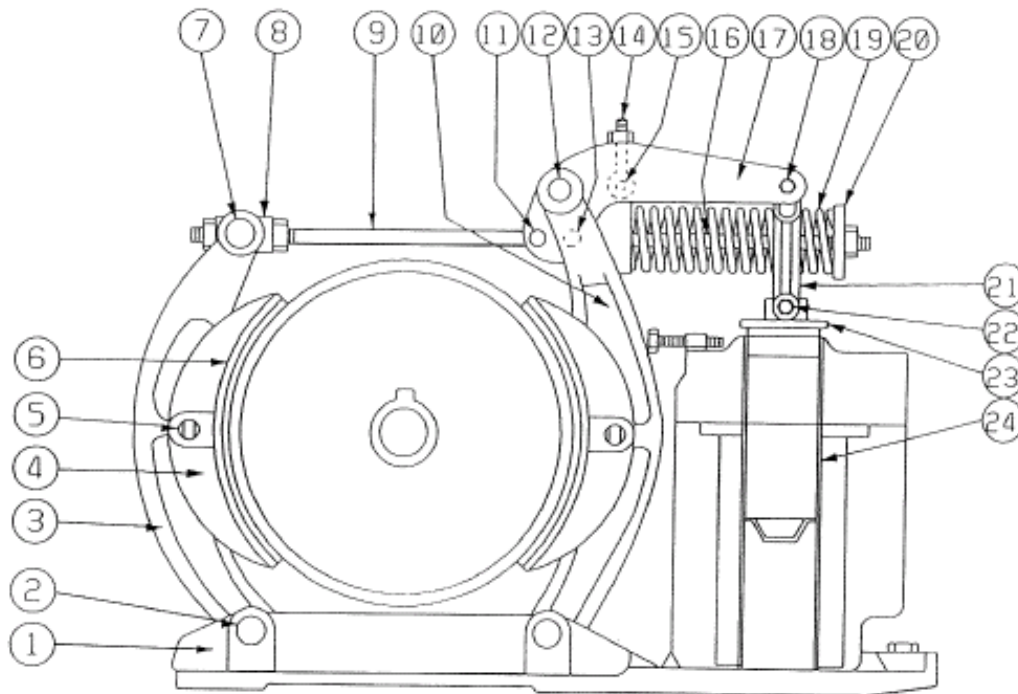


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1496814	Base	KP3535001	18	1312728	Link Pin-Upper	KP3535018
2	1312725	Brake Arm Pin-Lower	KP3535002	19	429733	Spring	KP3535019
3	1397940	Brake Arm-Front	KP3535003	20	492901	Spring Seat	KP3535020
4	573570	Brake Shoe w/ Lining	KP3535004	21	531025	Connecting Link	KP3535021
5	578840	Brake Shoe Pivot Bolt	KP3535005	22	1312729	Link Pin-Lower	KP3535022
6	573571	Lining	KP3535006	23	573574	Plunger	KP3535023
7	1289982	Brake Arm Pin-Upper	KP3535007	24	573575	Plunger Guide Bushing	KP3535024
8	578839	Hinge-Block	KP3535008	*	1216275	Rod Bushing	KP3535025
9	573566	Connecting Rod	KP3535009	*	1216271	Front Arm Bushing-Upper	KP3535026
10	1397941	Brake Arm-Rear	KP3535010	*	1216274	Pivot Bushing	KP3535027
11	1312727	Connecting Rod Pin	KP3535011	*	1216273	Rear Arm Bushing-Upper	KP3535028
12	1312724	Brake Lever Pivot Pin	KP3535012	*	1216272	Arm Bushing-Lower	KP3535029
13	487727	Spring Rod Pin	KP3535013	*	573576	Air Gap Spacer	KP3535030
14	578841	Hand Release Rod	KP3535014	* Not Pictured			
15	1312726	Hand Release Rod Pin	KP3535015				
16	573573	Spring Rod	KP3535016				
17	1397939	Brake Lever	KP3535017				

Replacement Parts for: Type DI 104-F Magnetic Brake

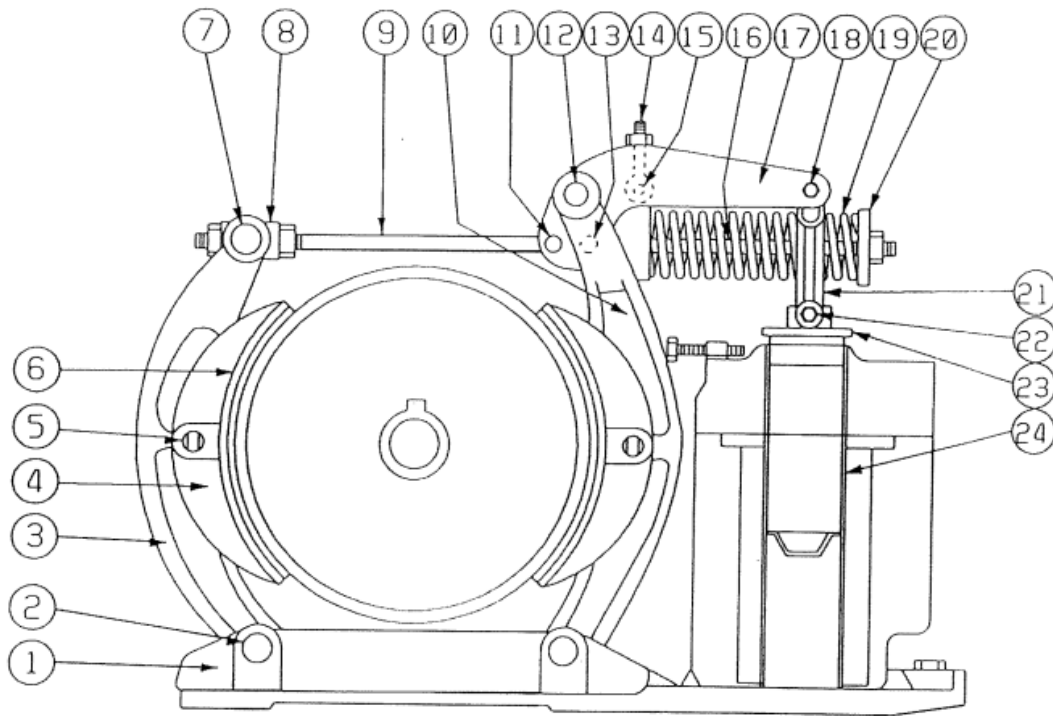


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1496813	Base	KP3635001	18	1303367	Link Pin, Upper	KP3635019
2	1303366	Brake Arm Pin, Lower	KP3635002	19	429730	Spring	KP3635020
3	1397945	Brake Arm, Front	KP3635003	20	492907	Spring Seat	KP3635021
4	492908	Brake Shoe w/Lining	KP3635004	21	550882	Connecting Link	KP3635022
5	822258	Brake Shoe Pivot Bolt	KP3635005	22	1303368	Link Pin, Lower	KP3635023
6	487566	Lining	KP3635006	23	575652	Plunger	KP3635024
7	1303371	Brake Arm Pin, Upper	KP3635007	24	518901	Plunger Guide Bushing	KP3635025
8	766192	Hinge Block	KP3635008	*	486339	Operating Magnet	KP3635026
9	487642	Connecting Rod	KP3635009	*	486346	Air Gap Spacer	KP3635027
10	1397946	Brake Arm, Rear	KP3635010	*	831523	Operating Magnet	KP3635028
11	1303365	Connecting Rod Pin	KP3635011	*	1303359	Bushing, Upper	KP3635029
12	1303366	Brake Lever Pivot Pin	KP3635002	*	1303360	Bushing, Lower	KP3635030
13	1303369	Spring Rod Pin	KP3635013	*	1303361	Bushing, Upper	KP3635031
14	487657	Hand Release Rod	KP3635014	*	1303362	Pivot Bushing	KP3635032
15	487663	Hand Release Rod Pin	KP3635015	*	1303363	Rod Bushing	KP3635033
16	487655	Spring Rod	KP3635016	*	1303364	Bushing	KP3635034
17	1397947	Brake Lever	KP3635017	*	1312809	Bushing	KP3635035
* Not Pictured							

Replacement Parts for: Type DI 135-F Magnetic Brake

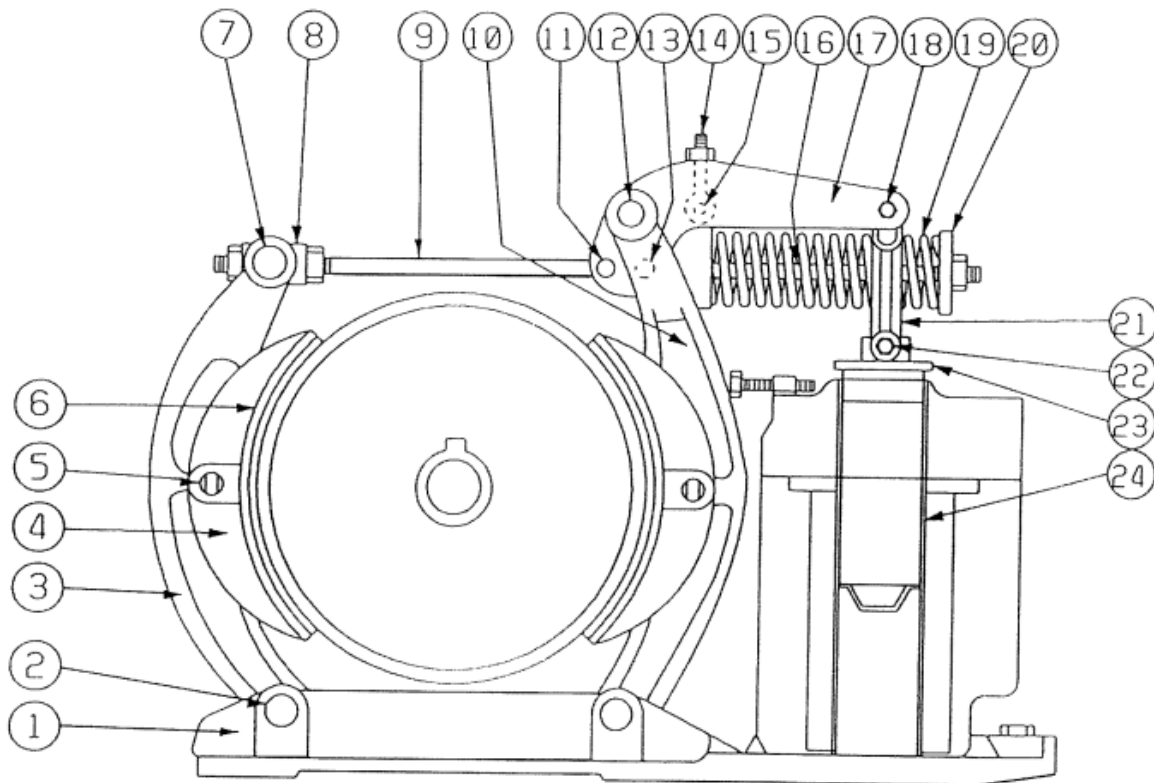


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1496818	Base	KP3735001	19	486361	Spring	KP3735019
2	1303450	Brake Arm Pin-Lower	KP3735002	20	492909	Spring Seat	KP3735020
3	1397948	Brake Arm-Front	KP3735003	21	532049	Connecting Link	KP3735021
4	490362	Brake Shoe w/ Lining	KP3735004	22	1303455	Link Pin-Lower	KP3735022
5	514509	Brake Shoe Pivot Bolt	KP3735005	23	575646	Plunger	KP3735023
6	514510	Lining	KP3735006	24	518904	Plunger Guide Bushing	KP3735024
7	1254392	Brake Arm Pin-Upper	KP3735007	*	1216263	Rod Bushing	KP3735025
8	766652	Hinge-Block	KP3735008	*	1216264	Base Bushing	KP3735026
9	1197660	Connecting Rod	KP3735009	*	487546	Air Gap Spacer	KP3735027
10	1397949	Brake Arm-Rear	KP3735010	*	1216262	Pivot Bushing	KP3735028
11	1303451	Connecting Rod Pin	KP3735011	*	1216261	Arm Bushing-Lower	KP3735029
12	1303449	Brake Lever Pivot Pin	KP3735012	*	486360	Type DI-Opert Mag w/out Coil	KP3735030
13	1303451	Spring Rod Pin	KP3735011	*	1216259	Front Arm Bushing-Upper	KP3735031
14	487741	Hand Release Rod	KP3735014	*	1216260	Rear Arm Bushing-Upper	KP3735032
15	487663	Hand Release Rod Pin	KP3635015	*	13033	Brake Lever Pivot Pin	KP3735033
16	1197661	Spring Rod	KP3735016	* Not Pictured			
17	1397950	Brake Lever	KP3735017				
18	1303454	Link Pin-Upper	KP3735018				

Replacement Parts for: Type DI 167-F Magnetic Brake

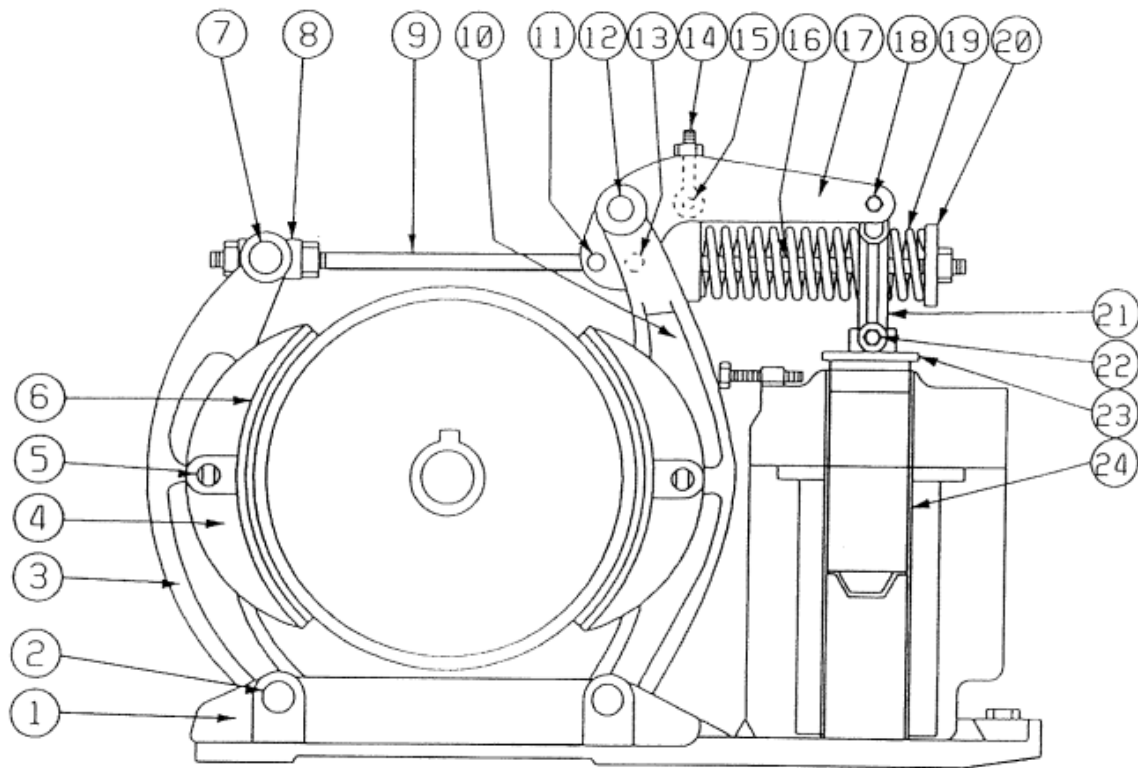


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1496819	Base	KP3835001	18	1303457	Link Pin-Upper	KP3835019
2	1303452	Brake Lever Pivot Pin	KP3835002	19	502833	Spring	KP3835020
3	1397960	Brake Arm-Front	KP3835003	20	502844	Spring Seat	KP3835021
4	502832	Brake Shoe with Lining	KP3835004	21	532213	Connecting Link	KP3835022
5	502843	Brake Shoe Pivot Bolt	KP3835005	22	1303456	Link Pin-Lower	KP3835023
6	487562	Lining	KP3835006	23	884839	Plunger	KP3835024
7	1254393	Brake Arm Pin-Upper	KP3835007	24	575654	Plunger Guide Bushing	KP3835025
8	766658	Hinge-Block	KP3835008	*	1216268	Pivot Bushing	KP3835026
9	1197662	Connecting Rod	KP3835009	*	1216269	Rod Bushing	KP3835027
10	1397961	Brake Arm-Rear	KP3835010	*	1216270	Rear Arm Bushing-Upper	KP3835028
11	1303453	Connecting Rod Pin	KP3835011	*	104213	Brake Arm Adjusting Assembly	KP3835029
12	1303452	Brake Arm Pin-Lower	KP3835002	*	1216267	Arm Bushing-Lower	KP3835030
13	1303453	Spring Rod Pin	KP3835011	*	502847	Air Gap Spacer	KP3835031
14	502836	Hand Release Rod	KP3835014	*	1216266	Front Arm Bushing-Upper	KP3835032
15	502841	Hand Release Rod Pin	KP3835015	*	501539	Type DI-Opert Mag w/out Coil	KP3835033
16	1197663	Spring Rod	KP3835016	*	1216265	Base Bushing	KP3835034
17	1397962	Brake Lever	KP3835017				
* Not Pictured							

Replacement Parts for: Type DI 198-F Magnetic Brake

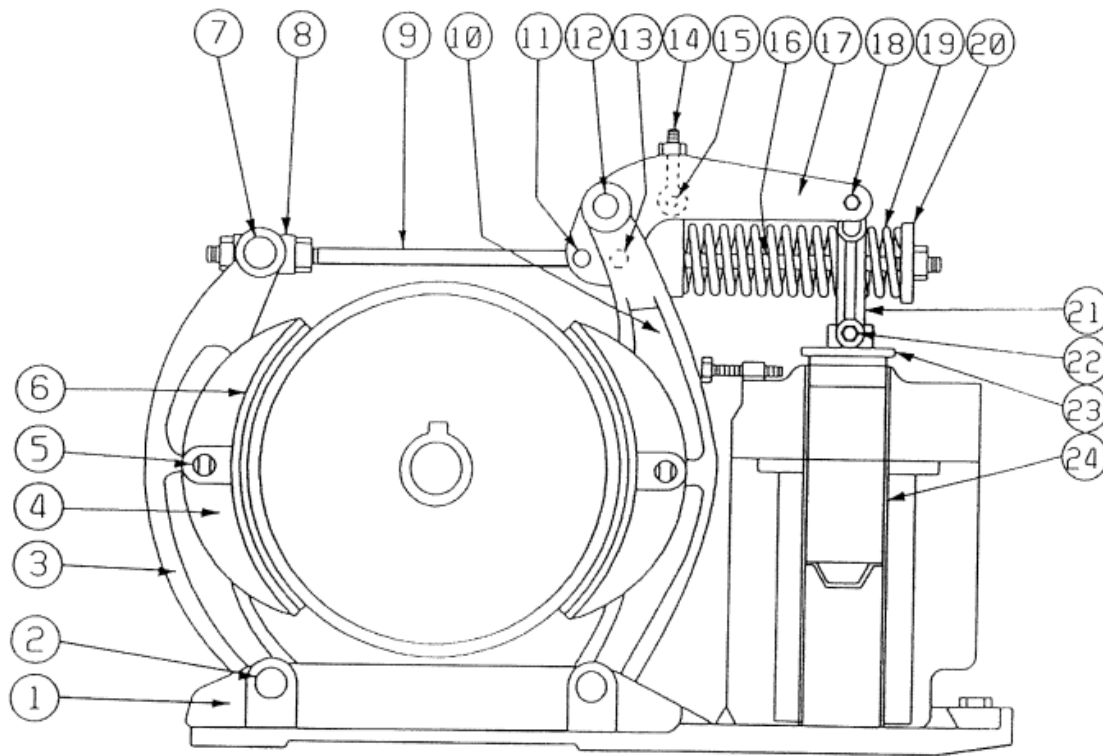


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1496364	Base	KP3935001	20	502861	Spring Seat	KP3935020
2	1450523	Brake Arm Pin-Lower	KP3935002	21	529768	Connecting Link	KP3935021
3	1397951	Brake Arm-Front	KP3935003	22	1439191	Link Pin-Lower	KP3935022
4	502848	Brake Shoe w/ Lining	KP3935004	23	575655	Plunger	KP3935023
5	502860	Brake Shoe Pivot Bolt	KP3935005	24	575656	Plunger Guide Bushing	KP3935024
6	487563	Lining	KP3935006	*	1397973	Pivot Bushing	KP3935025
7	1450522	Brake Arm Pin-Upper	KP3935007	*	1397972	Rod Bushing	KP3935026
8	808771	Hinge-Block	KP3935008	*	501545	Type DI-Opert Mag w/out Coil	KP3935027
9	502850	Connecting Rod	KP3935009	*	502863	Air Gap Spacer	KP3935028
10	1397952	Brake Arm-Rear	KP3935010	*	104214	Brake Arm Adjusting Assembly	KP3935029
11	1450521	Connecting Rod Pin	KP3935011	*	1397971	Rear Arm Bushing-Upper	KP3935030
12	1450524	Brake Lever Pivot Pin	KP3935012	*	897925	Coil	KP3935031
13	1450521	Spring Rod Pin	KP3935011	*	1397970	Arm Bushing-Lower	KP3935032
14	502852	Hand Release Rod	KP3935014	*	1397933	Base Bushing	KP3935033
15	502858	Hand Release Rod Pin	KP3935015	*	1397969	Front Arm Bushing-Upper	KP3935034
16	502851	Spring Rod	KP3935016				
17	1397953	Brake Lever	KP3935017	* Not Pictured			
18	1439190	Link Pin-Upper	KP3935018				
19	502849	Spring	KP3935019				

Replacement Parts for: Type DI 239-F Magnetic Brake

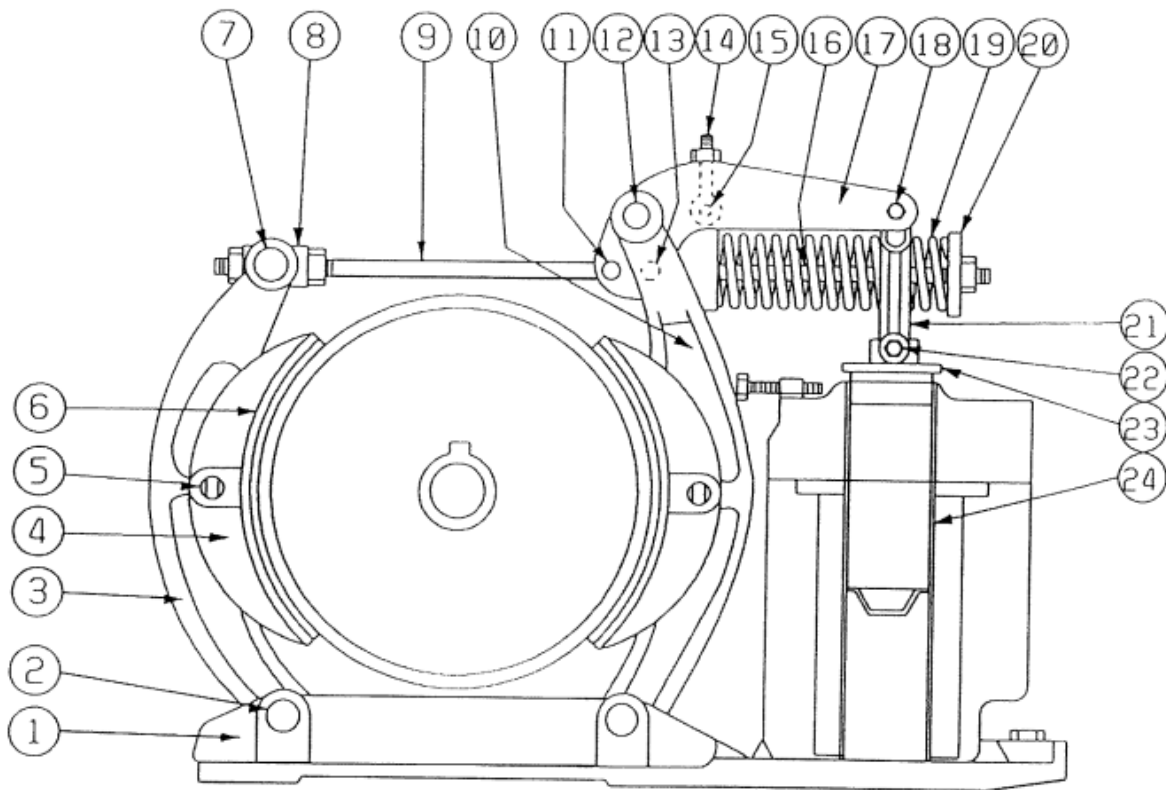


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1496318	Base	KP4035001	18	1494549	Link Pin-Upper	KP4035019
2	1397987	Brake Arm Pin-Lower	KP4035002	19	599258	Spring	KP4035020
3	1397954	Brake Arm-Front	KP4035003	20	599259	Spring Seat	KP4035021
4	599242	Brake Shoe w/ Lining	KP4035004	21	599253	Connecting Link	KP4035022
5	599244	Brake Shoe Pivot Bolt	KP4035005	22	1496317	Link Pin-Lower	KP4035023
6	599243	Lining	KP4035006	23	599261	Plunger	KP4035024
7	1397993	Brake Arm Pin-Upper	KP4035007	*	568578	Type DI-Opert Mag w/our Coil	KP4035025
8	822228	Hinge-Block	KP4035008	*	1397978	Rod Bushing	KP4035026
9	599249	Connecting Rod	KP4035009	*	599262	Air Gap Spacer	KP4035027
10	1397955	Brake Arm-Rear	KP4035010	*	760344	Shunt Coil	KP4035028
11	1397988	Connecting Rod Pin	KP4035011	*	1397932	Base Bushing	KP4035029
12	1397989	Brake Lever Pivot Pin	KP4035012	*	1397977	Pivot Bushing	KP4035030
13	1397988	Spring Rod Pin	KP4035011	*	822229	Plunger Guide Bushing	KP4035031
14	599255	Hand Release Rod	KP4035014	*	1397974	Front Arm Bushing-Upper	KP4035032
15	599256	Hand Release Rod Pin	KP4035015	*	1397975	Arm Bushing-Lower	KP4035033
16	599257	Spring Rod	KP4035016	*	1397976	Rear Arm Bushing-Upper	KP4035034
17	1397956	Brake Lever	KP4035017				
* Not Pictured			KP4035018				

Replacement Parts for: Type TM-83 Magnetic Shoe Brake

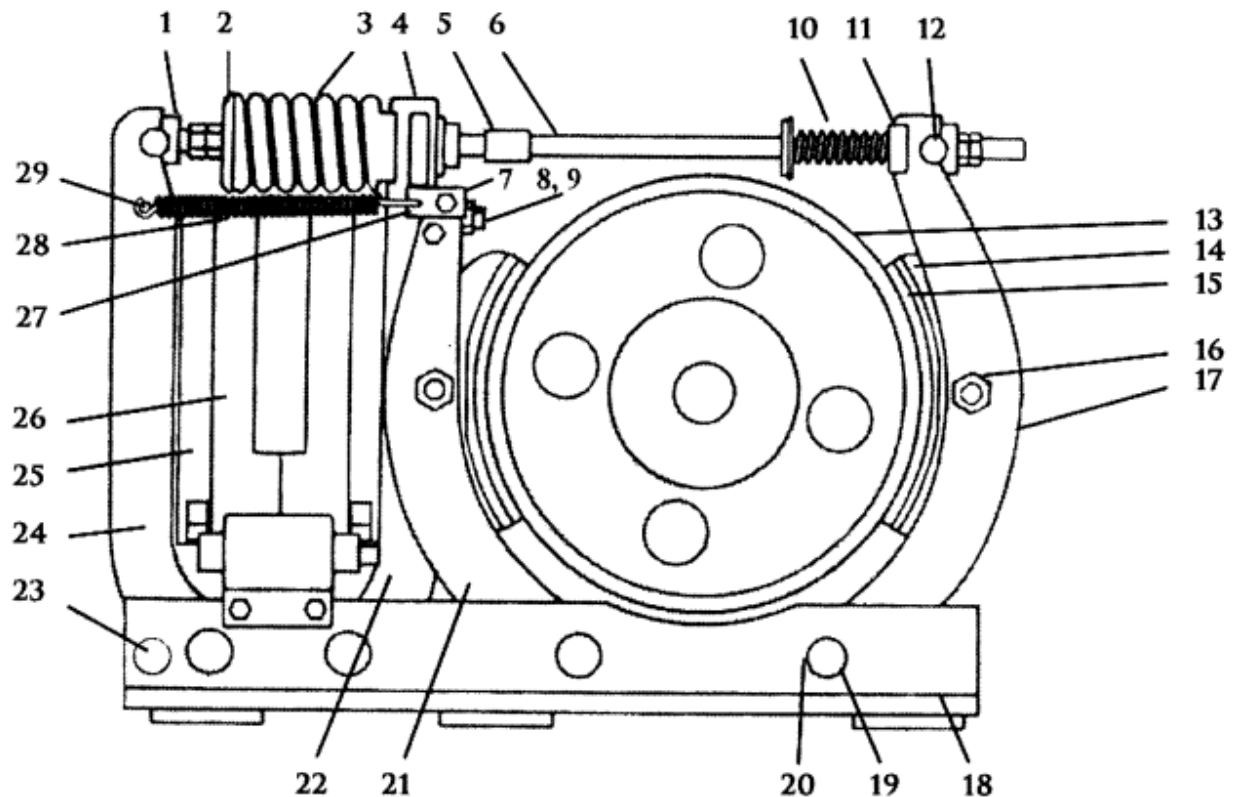


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	318B788H03	Block	KP5135001	18	439C330G01	Base	KP5135017
2	318B795H02	Spring Retain	KP5135002	19	31D4114H04	Bushing	KP5135018
3	438A072H13	Spring	KP5135003	20	318B789H03	Pin	KP5135019
4	318B791H02	Block	KP5135004	21	E008060	Inner Brake Shoe Arm	KP5135020
5	318B792H02	Release BSNG	KP5135005	22	439C324G01	Clapper & Arm	KP5135021
6	635C104G02	Tie Rod	KP5135006	23	318B571H03	Pin	KP5135022
7	438A502H01	Block	KP5135007	24	E008062	Clapper Arm	KP5135023
8	318B793H02	Adj. Screw	KP5135008	25	318B634G01	Clapper	KP5135024
10	438A070H13	Spring	KP5135009	26		Coil	
11	318B777H02	Spring Plate	KP5135010	27	318B778H02	Spring Clip	KP5135026
12	318B787H03	Block	KP5135011	28	438A411H04	Spring	KP5135027
13		Brake Wheel		29	318B790H03	Pin	KP5135028
14	439C314G01	Shoe & Lining	KP5135013	*	318B917H02	Seal	KP5135029
15	861C691G16	Lining Kit	KP5135014	*	31D4118H04	Bushing	KP5135018
16	27D7221H14	Bolt	KP5135015				
17	E008058	Outer Brake Shoe Arm	KP5135016				

Replacement Parts for: Type TM-1035 Magnetic Shoe Brake

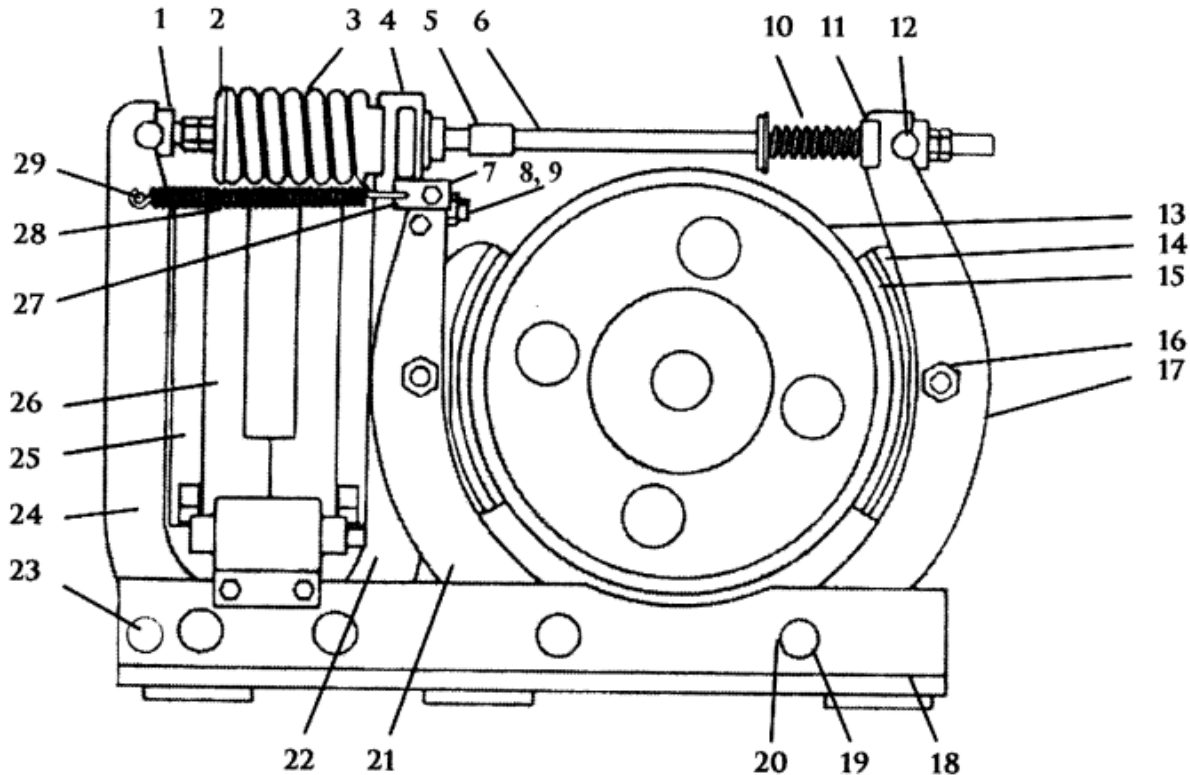

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	318B788H03	Block	KP5135001	18	635C300G01	Base	KP5235017
2	318B795H03	Spring Retain	KP5235002	19	31D4118H04	Bushing	KP5135018
3	438A072H11	Spring	KP5235003	20	318B789H03	Pin	KP5135019
4	E010074	Inner Hinge Block	KP5235004	21	635C306G02	Shoe Arm	KP5235020
5	318B792H02	Release BSNG	KP5135005	22	635C317G01	Clapper & Arm	KP5235021
6	635C104G03	Tie Rod	KP5235006	23	318B571H03	Pin	KP5135022
7	438A217H01	Block	KP5235007	24	635C308G01	Clapper Arm	KP5235023
8	318B793H02	Adj. Screw	KP5135008	25	318B988G01	Clapper	KP5235024
10	438A070H13	Spring	KP5135009	26		Coil	
11	318B777H02	Spring Plate	KP5135010	27	318B778H02	Spring Clip	KP5135026
12	318B787H03	Block	KP5135011	28	438A411H03	Spring	KP5235027
13		Brake Wheel		29	318B790H03	Pin	KP5135028
14	635C292G01	Shoe & Lining	KP5235013	*	31D4114H11	Bushing	KP5235029
15	861C691G17	Lining Kit	KP5235014	*	318B917H03	Seal	KP5235030
16	27D7221H14	Bolt	KP5135015				
17	635C306G01	Shoe Arm	KP5235016				


Replacement Parts for: Type TM-1355 Magnetic Shoe Brake

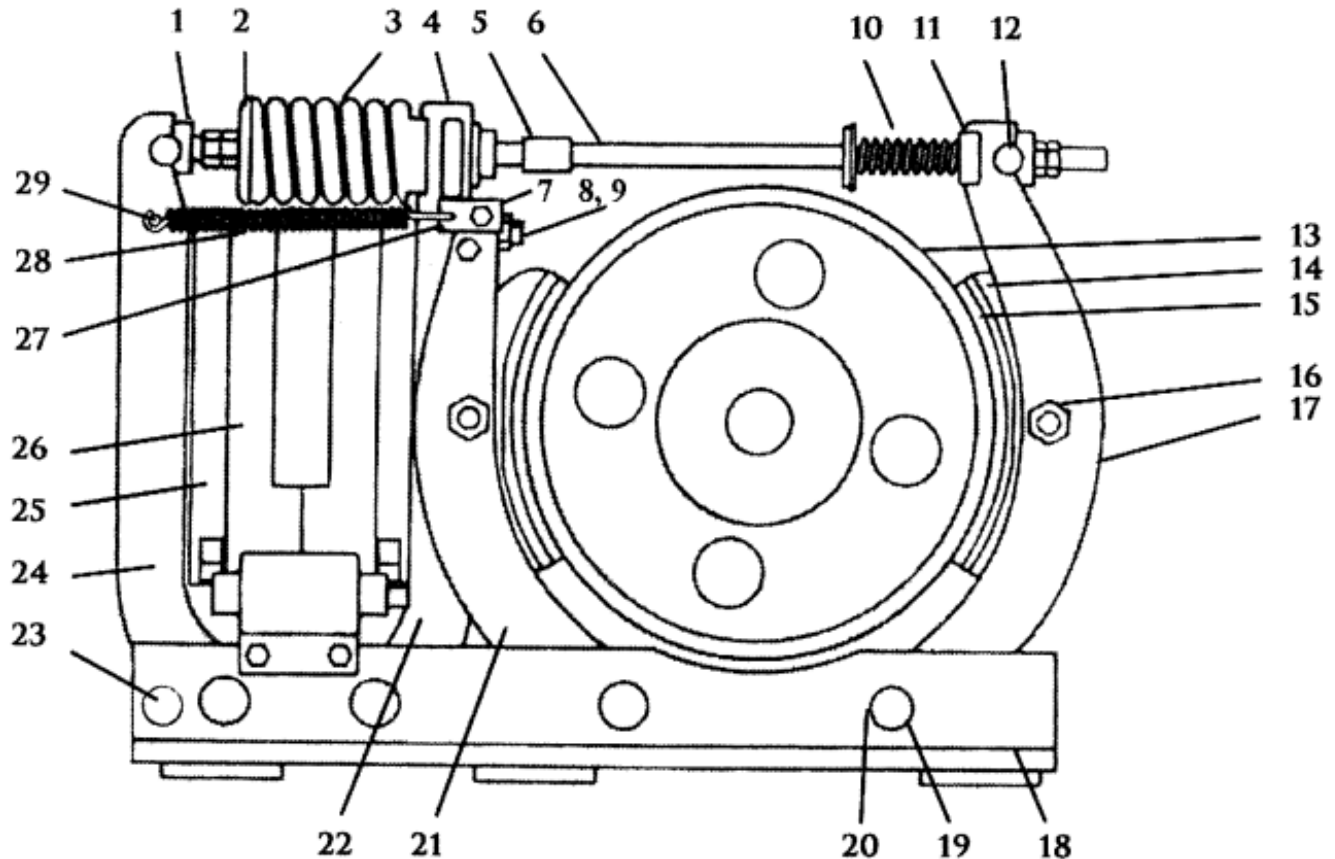

1	318B788H04	Block	KP5335001
2	318B795H04	Spring Retain	KP5335002
3	438A072H09	Spring	KP5335003
4	318B791H04	Block	KP5335004
5	318B792H04	Release BSNG	KP5335005
6	635C104G04	Tie Rod	KP5335006
7	438A456H01	Block	KP5335007
8	318B793H04	Adj. Screw	KP5335008
10	438A070H09	Spring	KP5335009
11	318B777H04	Spring Plate	KP5335010
12	318B787H05	Block	KP5335011
14	439C201G01	Shoe & Lining	KP5335012
15	861C691G18	Lining Kit	KP5335013
16	24D6387G04	Bolt	KP5335014
17	439C192G05	Shoe Arm	KP5335015


18	439C204G01	Base	KP5335016
19	31D4118H06	Bushing	KP5335017
20	318B789H04	Pin	KP5335018
21	439C192G06	Shoe Arm	KP5335019
22	439C202G01	Clapper & Arm	KP5335020
23	318B571H04	Pin	KP5335021
24	439C203G01	Clapper Arm	KP5335022
25	318B560G01	Clapper	KP5335023
26		Coil	
27	318B778H04	Spring Clip	KP5335025
28	438A411H05	Spring	KP5335026
29	318B790H04	Pin	KP5335027
*	318B917H04	Seal	KP5335028
*	31D4114H12	Bushing	KP5335029

Replacement Parts for: Type TM-1665 Magnetic Shoe Brake

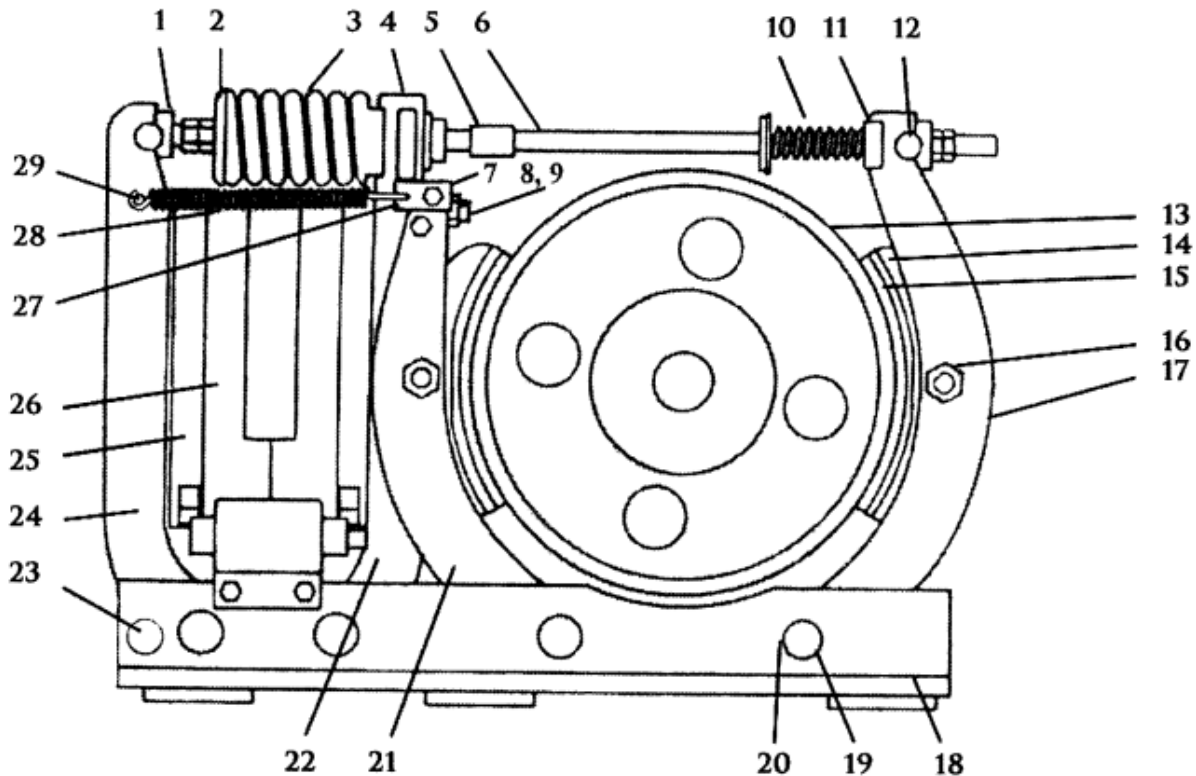


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	318B788H05	Block	KP5435001	18	635C235G01	Base	KP5435017
2	318B795H05	Spring Retain	KP5435002	19	31D4118H06	Bushing	KP5335017
3	438A072H07	Spring	KP5435003	20	318B789H05	Pin	KP5435019
4	318B791H05	Block	KP5435004	21	635C240G02	Shoe Arm	KP5435020
5	318B792H04	Release BSNG	KP5335005	22	635C236G01	Clapper & Arm	KP5435021
6	635C104G05	Tie Rod	KP5435006	23	318B571H05	Pin	KP5435022
7	438A352H01	Block	KP5435007	24	635C238G01	Clapper Arm	KP5435023
8	318B793H04	Adj. Screw	KP5335008	25	318B907G01	Clapper	KP5435024
10	E016207	Wheel End Spring	KP5435009	26		Coil	KP5435025
11	318B777H04	Spring Plate	KP5435010	27	318B778H05	Spring Clip	KP5435026
12	E016205	Wheel End Hinge Block	KP5435011	28	438A411H05	Spring	KP5335026
13		Brake Wheel		29	318B790H05	Pin	KP5435028
14	635C227G01	Shoe & Lining	KP5435013	*	31D4114H12	Bushing	KP5335029
15	861C691G19	Lining Kit	KP5435014	*	318B917H05	Seal	KP5435030
16	24D6387G03	Bolt	KP5435015				
17	635C240G01	Shoe Arm	KP5435016				

Replacement Parts for: Type TM-1985 Magnetic Shoe Brake

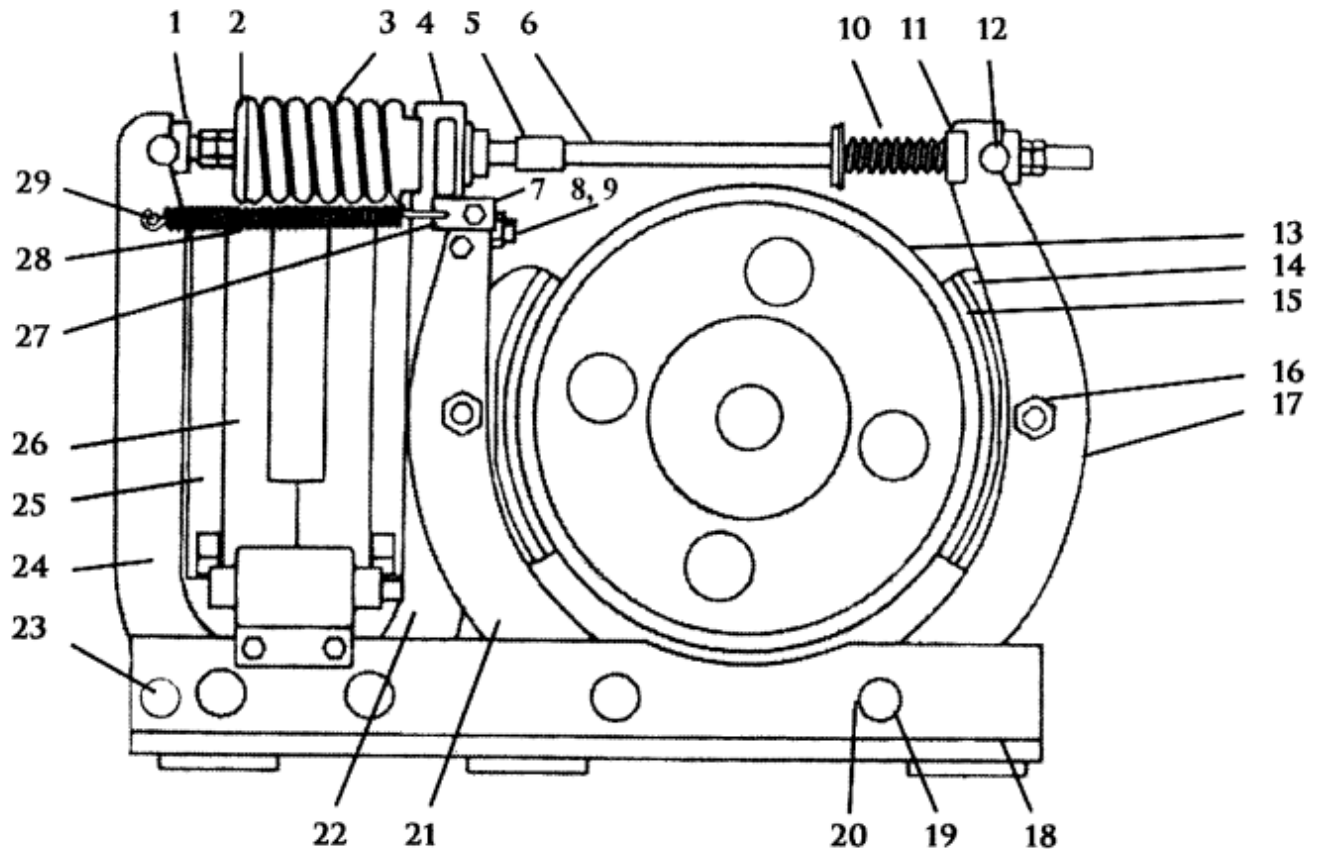


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	318B788H06	Block	KP5535001	18	439C399G01	Base	KP5535017
2	318B795H06	Spring Retain	KP5535002	19	31D4118H19	Bushing	KP5535018
3	438A072H05	Spring	KP5535003	20	318B789H06	Pin	KP5535019
4	318B791H06	Block	KP5535004	21	439C395G02	Shoe Arm	KP5535020
5	318B792H06	Release BSNG	KP5535005	22	493C397G01	Clapper & Arm	KP5535021
6	635C104G06	Tie Rod	KP5535006	23	138B571H06	Pin	KP5535022
8	318B793H06	Adj. Screw	KP5535007	24	439C398G03	Clapper Arm	KP5535023
9		Flex Locknut		25	318B670G01	Clapper	KP5535024
10	24D5096H11	Spring	KP5535009	26		Coil	
11	318B777H06	Spring Plate	KP5535010	27	318B778H06	Spring Clip	KP5535026
12	318B787H06	Block	KP5535011	28	438A069H05	Spring	KP5535027
13		Brake Wheel		29	318B790H06	Pin	KP5535028
14	439C394G01	Shoe & Lining	KP5535013	*	318B917H06	Seal	KP5535029
15	861C691G20	Lining Kit	KP5535014	*	31D4114H20	Bushing	KP5535030
16	24D6387G01	Bolt	KP5535015				
17	439C395G01	Shoe Arm	KP5535016				

Replacement Parts for: Type TM-2311 Magnetic Shoe Brake

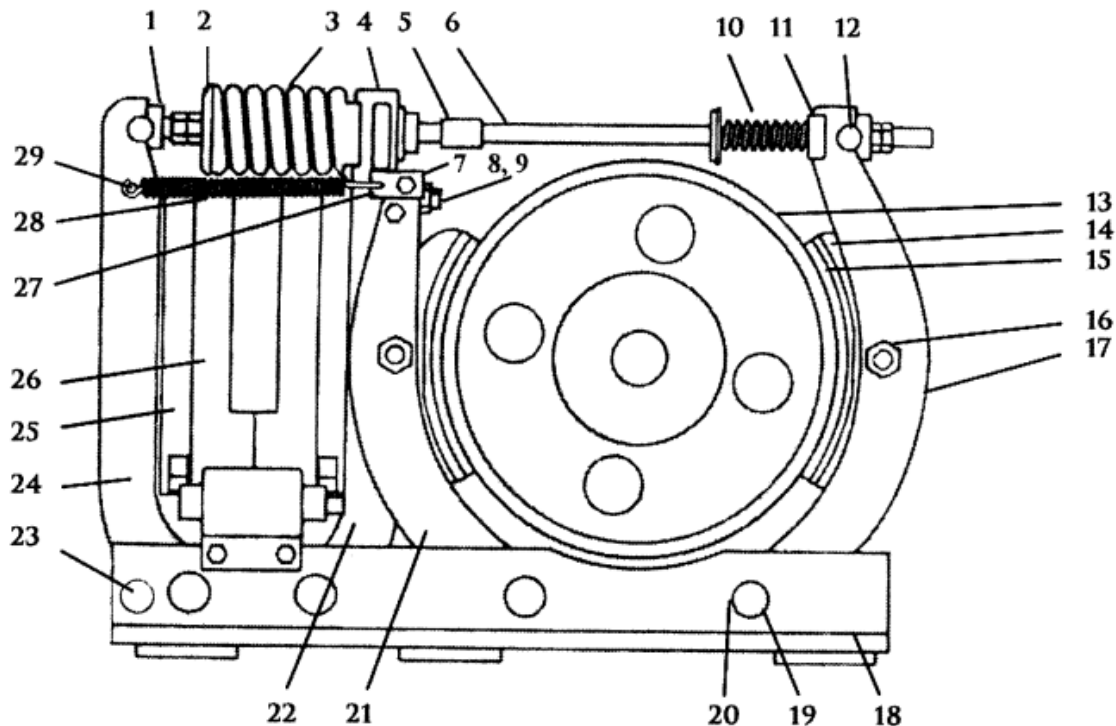


REF	OEI#	DESCRIPTION	KOR-PAK PN	REF	OEI#	DESCRIPTION	KOR-PAK PN
1	318B788H07	Block	KP5635001	14	635C316G01	Shoe & Lining	KP5635014
2	318B795H07	Spring Retain	KP5635002	15	861C691G21	Lining Kit	KP5635015
3	438A072H03	Spring	KP5635003	16	24D6387G02	Bolt	KP5635016
4	318B791H07	Block	KP5635004	17	637C324G01	Shoe Arm	KP5635017
5	318B792H06	Release BSNG	KP5535005	18	434C392G01	Base	KP5635018
6	635C104G07	Tie Rod	KP5635006	19	31D4118H19	Bushing	KP5535018
7	438A429H01	Block	KP5635007	20	318B789H07	Pin	KP5635026
8	318B793H06	Adj. Screw	KP5535007	21	637C324G02	Shoe Arm	KP5635027
9		Flex Locknut	KP5635009	22	637C343G01	Clapper & Arm	KP5635028
10	24D5096H11	Spring	KP5535009	23	138B571H07	Pin	KP5635029
11	318B777H07	Spring Plate	KP5635011	24	637C362G01	Clapper Arm	KP5635030
12	318B787H07	Block	KP5635012	25	319B098G01	Clapper	KP5635031
13		Brake Wheel		26		Coil	
14	635C316G01	Shoe & Lining	KP5635014	27	318B778H07	Spring Clip	KP5635033
15	861C691G21	Lining Kit	KP5635015	28	438A069H05	Spring	KP5535027
16	24D6387G02	Bolt	KP5635016	29	318B790H07	Pin	KP5635035
17	637C324G01	Shoe Arm	KP5635017	*	31D4114H20	Bushing	KP5535030
18	434C392G01	Base	KP5635018	*	318B917H07	Seal	KP5635037
19	31D4118H19	Bushing	KP5535018				

Replacement Parts for: Type TM-3014 Magnetic Shoe Brake

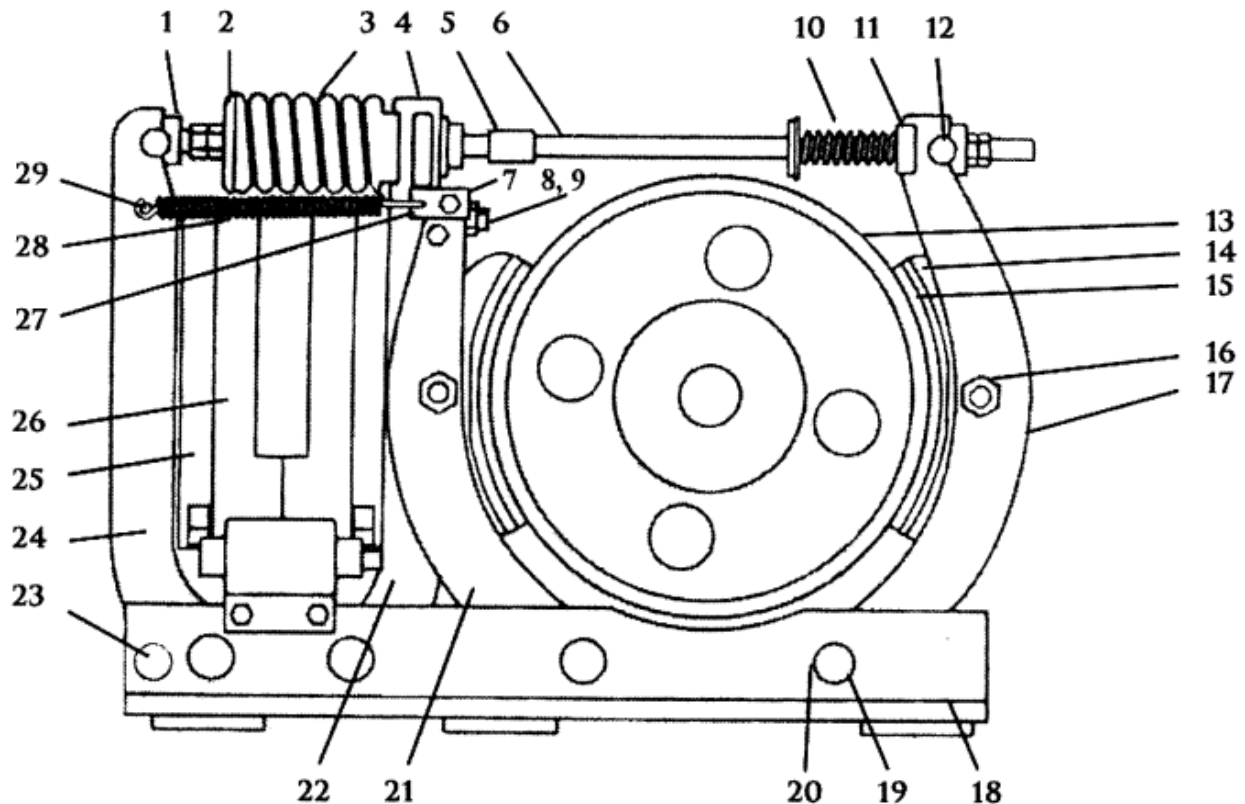


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	318B788H08	Block	KP5735001	17	641C782G01	Shoe Arm	KP5735017
2	318B795H08	Spring Retain	KP5735002	18	641C808G01	Base	KP5735018
3	438A072H01	Spring	KP5735003	19	31D4118H20	Bushing	KP5735019
4	318B791H08	Block	KP5735004	20	318B789H08	Pin	KP5735020
5	318B792H08	Release BSNG	KP5735005	21	641C782G02	Shoe Arm	KP5735021
6	635C104G08	Tie Rod	KP5735006	22	641C792G01	Clapper & Arm	KP5735022
7	450A849H01	Block	KP5735007	23	318B571H08	Pin	KP5735023
8	318B793H08	Adj. Screw	KP5735008	24	641C801G01	Clapper Arm	KP5735024
9		Flex Locknut		25	473B166G01	Clapper	KP5735025
10	24D5096H11	Spring	KP5535009	26		Coil	KP5735026
11	318B777H08	Spring Plate	KP5735011	27	318B778H08	Spring Clip	KP5735027
12	318B787H08	Block	KP5735012	28	438A411H08	Spring	KP5735028
13		Brake Wheel		29	318B790H08	Pin	KP5735029
14	426C041G01	Shoe & Lining	KP5735014	*	318B917H08	Seal	KP5735030
15	861C691G22	Lining Kit	KP5735015				
16	450A869G01	Bolt	KP5735016				

Replacement Parts for: Type M Frame 301 DC Magnetic Contactor

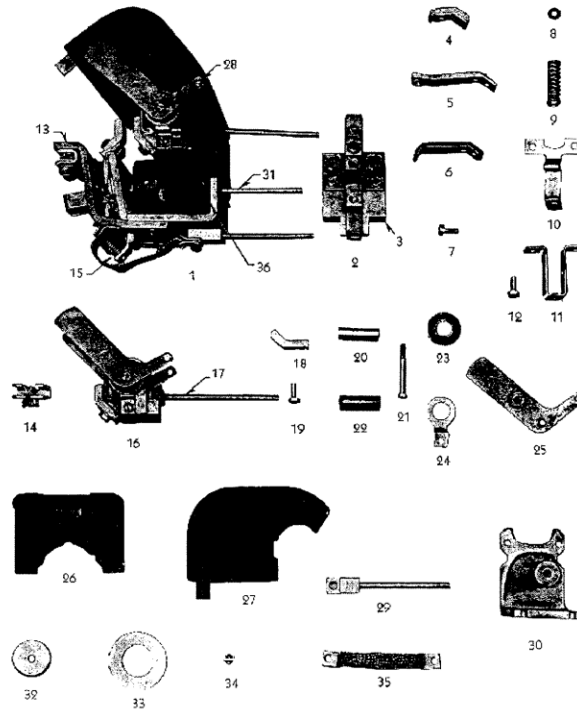


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1486982	Mechanical Parts-Rear Connected	KP4135001	27	1486742	Pole Piece, Left Hand	KP4135028
1	1490229	M-301 Contactor	KP4135002	27	1486743	Pole Piece, Right Hand	KP4135029
2	1490295	Armature Complete	KP4135003	28	1486688	Base	KP4135030
3	1486827	Bare Armature	KP4135004	29	1486648	Arc Box Complete	KP4135031
4	1486802	Contact	KP4135005	30	716666	Arc Box Retaining Bolt	KP4135032
5	1486844	Connector	KP4135006	31	1486851	Copper Sleeve	KP4135033
6	1486840	Contact Support	KP4135007	32	1486865	Shunt Stud	KP4135034
7	106149	Contact Bolt	KP4135008	33	1486799	Frame w/Core	KP4135035
8	1490289	Spring Shim	KP4135009	34	1486797	Upper Frame	KP4135036
9	1486859	Moving Contact Spring	KP4135010	35	1486798	Lower Frame	KP4135037
10	1486828	Auxiliary Bearing Bracket	KP4135011	36	559401	Mounting Stud	KP4135038
11	1486820	Moving Contact Spring Support	KP4135012	37	1486833	Pole Face	KP4135039
12	288683	Spring Support Bolt	KP4135013	38	1486996	Coil Washer	KP4135040
13	1745045	Armature Spring Bracket, Complete	KP4135014	39	1437659	Coil Terminal	KP4135041
14	1486695	Arc Switch	KP4135015	40	106149	Contact Bolt	KP4135008
15	1486703	Armature Spring	KP4135016	40	1486867	Shunt	KP4135043
16	1486830	Adjusting Bar	KP4135017	41	1754375	Operating Coil, 250 Volt	KP4135044
17	1619510	Adjusting Bar Screw	KP4135018	41	1419545	Operating Coil, 230 Volt	KP4135045
18	1490287	Stationary Contact w/Blowout Coil	KP4135019	41	30B4375G25	Operating Coil, 125 Volt	KP4135046
19	1486767	Blowout Coil	KP4135020	41	1419544	Operating Coil, 115 Volt	KP4135047
20	1486802	Contact	KP4135005	41	1419546	Operating Coil, 550 Volt	KP4135048
21	106149	Contact Bolt	KP4135008	*	1745057	Contact Kit	KP4135049
22	1486748	Blowout Coil Core	KP4135023	*	30B4375G11	Coil, 250 VDC	KP4135050
23	442007	Blowout Coil Core Bolt	KP4135024	*	657C900G03	Coil 230 VDC	KP4135051
24	1486756	Insulating Tube	KP4135025	*	26D2610G21	Contact Kit	KP4135052
25	1486760	Insulating Washer	KP4135026				
26	1486752	Spring Washer	KP4135027				

Replacement Parts for: Type M Frame 401 DC Magnetic Contactor

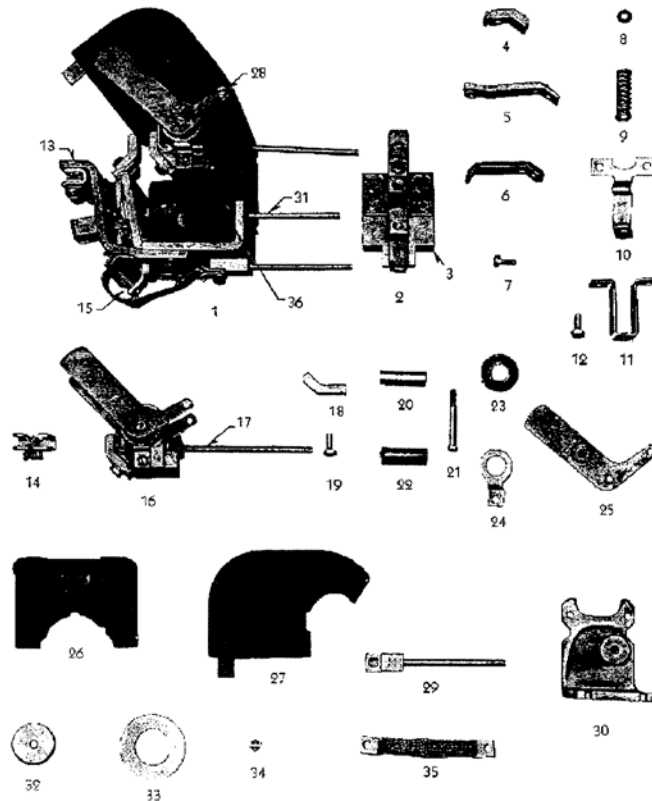


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	1490295	Armature Complete	KP4135003	26	1486752	Spring Washer	KP4135027
3	1486827	Bare Armature	KP4135004	27	1486742	Pole Piece, Left Hand	KP4135028
4	1486802	Contact	KP4135005	*	1486743	Pole Piece, Right Hand	KP4135029
5	1486844	Connector	KP4135006	28	1486688	Base	KP4135030
6	1486840	Contact Support	KP4135007	29	1486648	Arc Box Complete	KP4135031
7	106149	Contact Bolt	KP4135008	30	716666	Arc Box Retaining Bolt	KP4135032
8	1490289	Spring Shim	KP4135009	31	1486851	Copper Sleeve	KP4135033
9	1486859	Moving Contact Spring	KP4135010	33	1486799	Frame w/Core	KP4135035
10	1486828	Auxiliary Bearing Bracket	KP4135011	34	1486797	Upper Frame	KP4135036
11	1486820	Moving Contact Spring Support	KP4135012	35	1486798	Lower Frame	KP4135037
12	288683	Spring Support Bolt	KP4135013	36	55940 I	Mounting Stud	KP4135038
14	1486695	Arc Switch	KP4135015	37	1486833	Pole Face	KP4135039
15	1486704	Armature Spring	KP4235013	38	1486996	Coil Washer	KP4135040
16	1486830	Adjusting Bar	KP4135017	39	1437659	Coil Terminal	KP4135041
17	1619510	Adjusting Bar Screw	KP4135018	41	1419546	Operating Coil, 550Volt	KP4135048
18	1490288	Stationary Contact w/Blowout Coil	KP4235016	41	1754375	Operating Coil, 250Volt	KP4135044
19	1486774	Blowout Coil	KP4235017	41	30B4375G25	Operating Coil, 125 Volt	KP4135046
20	1486802	Contact	KP4135005	41	1419544	Operating Coil, 115 Volt	KP4135047
21	106149	Contact Bolt	KP4135008	41	1419545	Operating Coil, 230 Volt	KP4135045
22	1486748	Blowout Coil Core	KP4135023	*	1754375	Operating Coil, 250Volt	KP4135044
23	442007	Blowout Coil Core Bolt	KP4135024	*	106149	Contact Bolt	KP4135008
24	1486756	Insulating Tube	KP4135025	*	1745057	Contact Kit	KP4135049
25	1486760	Insulating Washer	KP4135026				

Replacement Parts for: Type M Frame 501 DC Magnetic Contactor

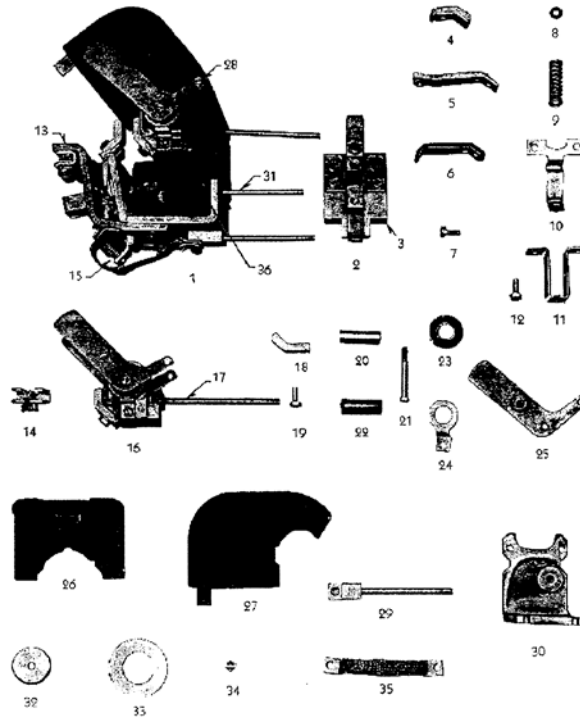


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1490231	M501 Contactor, Front Connected	KP4335001	28	1486689	Base	KP4335027
2	1490301	Armature Complete	KP4335002	29	1486651	Arc Box Complete	KP4335028
3	1486929	Bare Armature	KP4335003	30	1449819	Arc Box Retaining Bolt	KP4335029
5	1486945	Connector	KP4335004	31	1486852	Copper Sleeve	KP4335030
6	1486941	Contact Support	KP4335005	32	1486951	Shunt Stud	KP4335031
7	401234	Bolt	KP4335006	33	1486959	Frame w/Core	KP4335032
8	1490290	Spring Shim	KP4335007	34	1486957	Upper Frame	KP4335033
9	1486860	Moving Contact Spring	KP4335008	35	1486958	Lower Frame	KP4335034
10	1486930	Aux Bearing Bracket	KP4335009	36	559402	Mounting Stud	KP4335035
11	1486937	Moving Contact Spring Support	KP4335010	37	1486834	Pole Face	KP4335036
12	318615	Spring Support Bolt	KP4335011	38	1486997	Coil Washer	KP4335037
13	1745047	Armature Spring Bracket Comp	KP4335012	39	1437659	Coil Terminal	KP4135041
14	1486695	Arc Switch	KP4135015	40	1486952	Shunt	KP4335039
15	1486704	Armature Spring	KP4235013	41	1419552	Operating Coil 115V	KP4335040
16	1486933	Adjusting Bar	KP4335015	41	1754376	Operating Coil 250V	KP4335041
17	1619511	Adjusting Bar Screw	KP4335016	41	1419554	Operating Coil 550V	KP4335042
18	1490299	Stationary Contact w/BO Coil	KP4335017	41	1419553	Operating Coil 230V	KP4335043
19	1486780	Blowout Coil	KP4335018	42	30B4375G24	Operating Coil 125V	KP4335044
21	401234	Bolt	KP4335006	*	25A1649G05	Armature Kit	KP4335045
22	1486749	Blowout Coil Core	KP4335020	*	30B4375G06	Coil, 550 VDC	KP4335046
23	441891	Blowout Coil Core Bolt	KP4335021	*	30B4375G05	Coil, 230 VDC	KP4335047
24	1486757	Insulating Tube	KP4335022	*	30B4375G04	Coil, 115 VDC	KP4335048
25	1486761	Insulating Washer	KP4335023	*	30B4375G12	Coil, 250 VDC	KP4335049
26	1486753	Spring Washer	KP4335024	*	1745058	Contact Kit	KP4335050
27	1486745	Pole Piece, RH	KP4335025				
27	1486744	Pole Piece, LH	KP4335026				

Replacement Parts for: Type M Frame 601 DC Magnetic Contactor

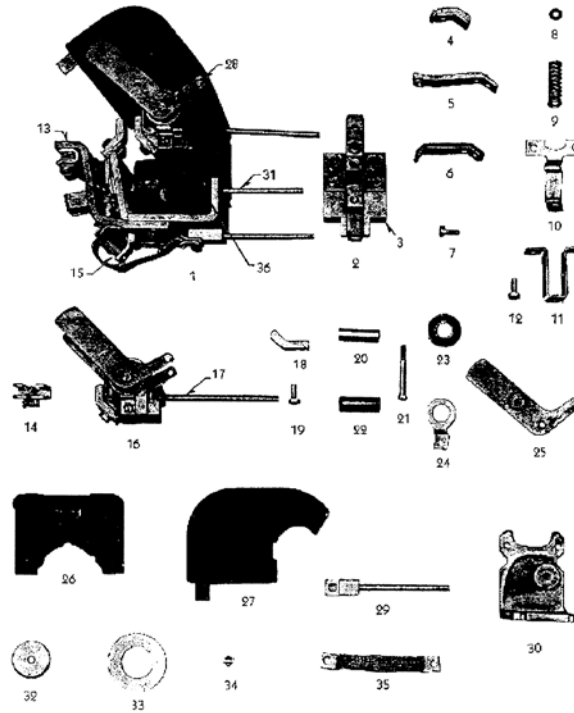


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
1	1490232	Mechanical Parts - Front Connected	KP4435001	27	1486746	Pole Piece Left Hand	KP4435029
2	1486928	Armature Complete	KP4435002	28	1486690	Base	KP4435030
3	1486917	Bare Armature	KP4435003	29	1486654	Arc Box Complete	KP4435031
4	1486804	Contact	KP4435004	30	1449957	Arc Box Retaining Bolt	KP4435032
5	1486914	Connector	KP4435005	31	1486853	Copper Sleeve	KP4435033
6	1486911	Contact Support	KP4435006	32	1486923	Shunt Stud	KP4435034
7	289960	Contact Bolt	KP4435007	33	1486903	Frame w/Core	KP4435035
8	1490291	Moving Contact Spring Shim	KP4435008	34	1496906	Upper Frame	KP4435036
8	816395	Moving Contact Spring Washer	KP4435009	36	59-359	Mounting Stud	KP4435037
9	1486862	Moving Contact Spring	KP4435010	35	1486905	Lower Frame	KP4435038
10	1486918	Aux Bearing Bracket	KP4435011	37	1625814	Pole Face	KP4435039
11	1486912	Moving Contact Spring Support	KP4435012	38	1625816	Coil Washer	KP4435040
12	164954	Spring Support Bolt	KP4435013	39	1437659	Coil Terminal	KP4135041
13	1745048	Armature Spring Bracket Complete	KP4435014	40	1486926	Shunt	KP4435042
14	1486696	Arc Switch	KP4435015	41	30B4377G08	Coil, 550 VOC	KP4435043
15	1486705	Armature Spring	KP4435016	41	30B4377G02	Coil, 230VOC	KP4435044
16	1486920	Adjusting Bar	KP4435017	41	1419564	Coil, 115 VOC	KP4435045
17	1619512	Adj Bar Screw	KP4435018	41	30B4377G25	Coil	KP4435046
18	1486784	Stationary Contact w/Blowout Coil	KP4435019	41	1419566	Coil	KP4435047
18	1486804	Contact	KP4435004	41	30B4377G13	Coil	KP4435048
19	1486886	Blowout Coil	KP4435021	41	1419565	Coil	KP4435049
21	289960	Contact Bolt	KP4435007	41	30B4377G23	Coil	KP4435050
22	1486750	Blowout Coil Core	KP4435023	41	30B4377G24	Coil	KP4435051
23	968986	Blowout Coil Core Bolt	KP4435024	*	1745060	Contact Kit	KP4435052
24	1486758	Insulating Tube	KP4435025	*	1486747	Pole Piece Right Hand	KP4435053
25	1490236	Insulating Washer	KP4435026	*	658C256G03	Coil	KP4435054
25	1486762	Insulating Washer	KP4435027				
26	1486754	Spring Washer	KP4435028				

Replacement Parts for: Type M Frame 701 DC Magnetic Contactor

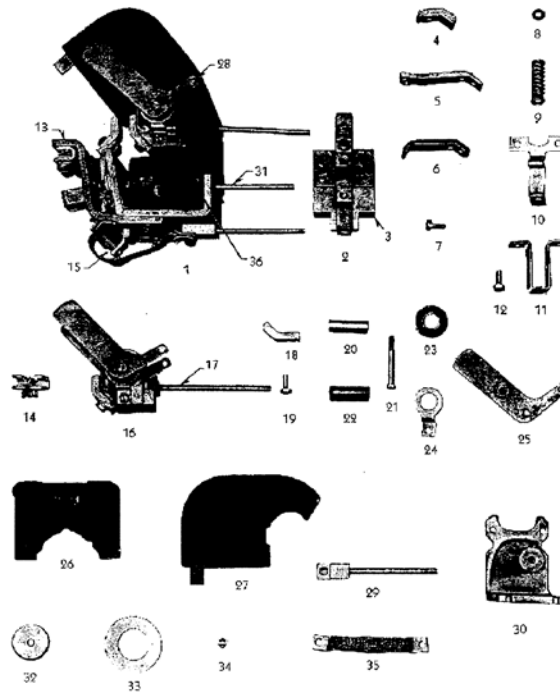


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	1486928	Armature Complete	KP4435002	27	1486746	Pole Piece Left Hand	KP4435029
3	1486914	Connector	KP4435005	28	1486690	Base	KP4435030
4	1486804	Contact	KP4435004	29	1486654	Arc Box Complete	KP4435031
5	1486914	Connector	KP4435005	30	1449957	Arc Box Retaining Bolt	KP4435032
6	1486911	Contact Support	KP4435006	31	1486853	Copper Sleeve	KP4435033
7	289960	Contact Bolt	KP4435007	33	1486903	Frame w/Core	KP4435035
8	1490291	Moving Contact Spring Shim	KP4435008	35	1486905	Lower Frame	KP4435038
8	816395	Moving Contact Spring Washer	KP4435009	36	59-359	Mounting Stud	KP4435037
9	1486862	Moving Contact Spring	KP4435010	37	1625814	Pole Face	KP4435039
10	1486918	Aux Bearing Bracket	KP4435011	38	1625816	Coil Washer	KP4435040
11	1486912	Moving Contact Spring Support	KP4435012	39	1437659	Coil Terminal	KP4135041
12	164954	Spring Support Bolt	KP4435013	40	1486926	Shunt	KP4435042
14	1486696	Arc Switch	KP4435015	41	30B4377G23	Coil	KP4435050
15	1486705	Armature Spring	KP4435016	41	30B4377G02	Coil, 230 VDC	KP4435044
16	1486920	Adjusting Bar	KP4435017	41	1754336	Coil	KP4535041
17	1619512	Adj Bar Screw	KP4435018	41	30B4377G24	Coil	KP4435051
18	1486785	Stationary Contact W/BO Coil	KP4535017	41	30B4377G13	Coil	KP4435048
19	1486889	Blowout Coil	KP4535018	41	1419566	Coil	KP4435047
20	1486804	Contact	KP4435004	41	1419565	Coil	KP4435049
22	289960	Contact Bolt	KP4435007	41	1419564	Coil, 115 VDC	KP4435045
22	1486750	Blowout Coil Core	KP4435023	41	30B4377G08	Coil, 550 VDC	KP4435043
23	968986	Blowout Coil Core Bolt	KP4435024	41	30B4377G25	Coil	KP4435046
24	1486758	Insulating Tube	KP4435025	*	1486747	Pole Piece Right Hand	KP4435053
25	1486762	Insulating Washer	KP4435027	*	1745060	Contact Kit	KP4435052
25	1490236	Insulating Washer	KP4435026				
26	1486754	Spring Washer	KP4435028				

Replacement Parts for: Type MD Frame 301 DC Magnetic Contactor

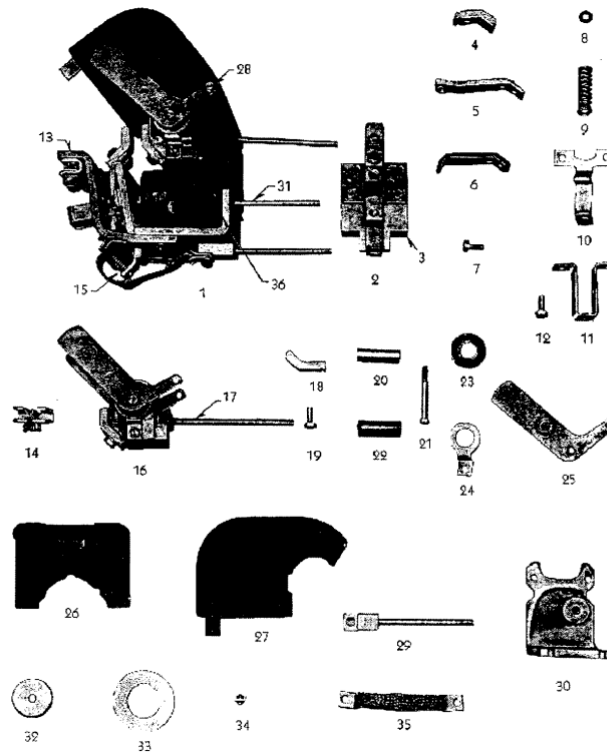


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	1490295	Armature Complete	KP4135003	26	1486752	Spring Washer	KP4135027
3	1486827	Bare Armature	KP4135004	27	1486742	Pole Piece, Left Hand	KP4135028
4	1486802	Contact	KP4135005	*	1486743	Pole Piece, Right Hand	KP4135029
5	1486844	Connector	KP4135006	29	1486648	Arc Box Complete	KP4135031
6	1486840	Contact Support	KP4135007	31	1486851	Copper Sleeve	KP4135033
7	106149	Contact Bolt	KP4135008	33	1486799	Frame w/Core	KP4135035
8	1490289	Spring Shim	KP4135009	34	1486797	Upper Frame	KP4135036
9	1486859	Moving Contact Spring	KP4135010	35	1486798	Lower Frame	KP4135037
10	1486828	Auxiliary Bearing Bracket	KP4135011	37	1486833	Pole Face	KP4135039
11	1486820	Moving Contact Spring Support	KP4135012	38	1486996	Coil Washer	KP4135040
12	288683	Spring Support Bolt	KP4135013	39	1437659	Coil Terminal	KP4135041
14	1486695	Arc Switch	KP4135015	40	1486867	Shunt	KP4135043
15	1486703	Armature Spring	KP4135016	41	1419545	Operating Coil, 230 Volt	KP4135045
16	1486830	Adjusting Bar	KP4135017	41	30B4375G25	Operating Coil, 125 Volt	KP4135046
17	1619510	Adjusting Bar Screw	KP4135018	41	1419546	Operating Coil, 550 Volt	KP4135048
20	1486802	Contact	KP4135005	41	1754375	Operating Coil, 250 Volt	KP4135044
21	106149	Contact Bolt	KP4135008	41	1419544	Operating Coil, 115 Volt	KP4135047
22	1486748	Blowout Coil Core	KP4135023	*	1745057	Contact Kit	KP4135049
23	442007	Blowout Coil Core Bolt	KP4135024				
24	1486756	Insulating Tube	KP4135025				
25	1486760	Insulating Washer	KP4135026				

Replacement Parts for: Type MD Frame 401 DC Magnetic Contactor

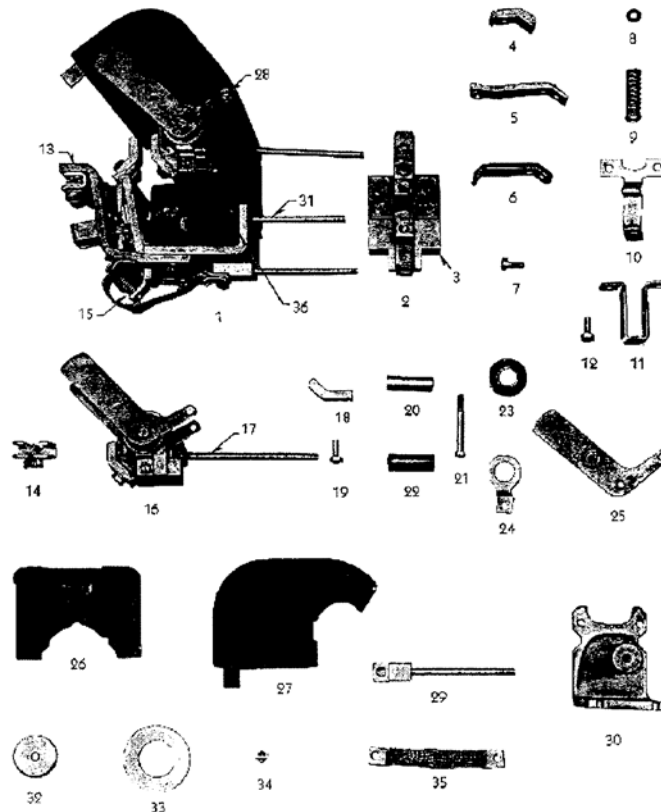


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	1490295	Armature Complete	KP4135003	25	1486760	Insulating Washer	KP4135026
3	1486827	Bare Armature	KP4135004	26	1486752	Spring Washer	KP4135027
4	1486802	Contact	KP4135005	27	1486742	Pole Piece, Left Hand	KP4135028
5	1486844	Connector	KP4135006	*	1486743	Pole Piece, Right Hand	KP4135029
6	1486840	Contact Support	KP4135007	29	1486648	Arc Box Complete	KP4135031
7	106149	Contact Bolt	KP4135008	31	1486851	Copper Sleeve	KP4135033
8	1490289	Spring Shim	KP4135009	33	1486799	Frame w/Core	KP4135035
9	1486859	Moving Contact Spring	KP4135010	34	1486797	Upper Frame	KP4135036
10	1486828	Auxiliary Bearing Bracket	KP4135011	35	1486798	Lower Frame	KP4135037
11	1486820	Moving Contact Spring Support	KP4135012	37	1486833	Pole Face	KP4135039
12	288683	Spring Support Bolt	KP4135013	38	1486996	Coil Washer	KP4135040
14	1486695	Arc Switch	KP4135015	39	1437659	Coil Terminal	KP4135041
15	1486703	Armature Spring	KP4135016	41	1419545	Operating Coil, 230 Volt	KP4135045
16	1486830	Adjusting Bar	KP4135017	41	30B4375G25	Operating Coil, 125 Volt	KP4135046
17	1619510	Adjusting Bar Screw	KP4135018	41	1419546	Operating Coil, 550 Volt	KP4135048
20	1486802	Contact	KP4135005	41	1754375	Operating Coil, 250 Volt	KP4135044
21	106149	Contact Bolt	KP4135008	41	1419544	Operating Coil, 115Volt	KP4135047
22	1486748	Blowout Coil Core	KP4135023	*	1745057	Contact Kit	KP4135049
23	442007	Blowout Coil Core Bolt	KP4135024				
24	1486756	Insulating Tube	KP4135025				

Replacement Parts for: Type MD Frame 501 DC Magnetic Contactor

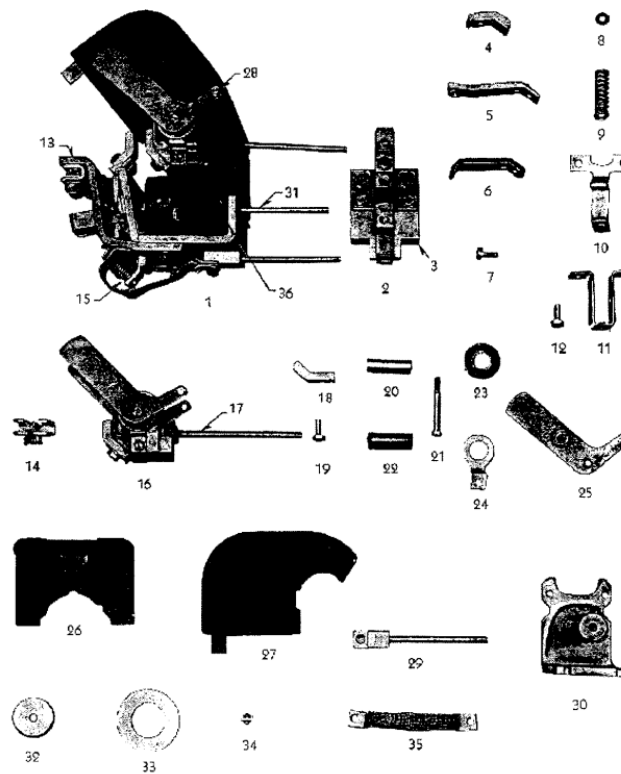


REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	1490301	Armature Complete	KP4335002	25	1486761	Insulating Washer	KP4335023
3	1486929	Bare Armature	KP4335003	26	1486753	Spring Washer	KP4335024
4	1486803	Contact	KP4835003	27	1486744	Pole Piece, LH	KP4335026
5	1486945	Connector	KP4335004	*	1486745	Pole Piece, RH	KP4335025
6	1486941	Contact Support	KP4335005	29	1486651	Arc Box Complete	KP4335028
7	401234	Bolt	KP4335006	31	1486852	Copper Sleeve	KP4335030
8	1490290	Spring Shim	KP4335007	33	1486959	Frame w/Core	KP4335032
9	1486860	Moving Contact Spring	KP4335008	34	1486957	Upper Frame	KP4335033
10	1486930	Aux Bearing Bracket	KP4335009	35	1486958	Lower Frame	KP4335034
11	1486937	Moving Contact Spring Support	KP4335010	37	1486834	Pole Face	KP4335036
12	318615	Spring Support Bolt	KP4335011	38	1486997	Coil Washer	KP4335037
14	1486695	Arc Switch	KP4135015	39	1437659	Coil Terminal	KP4135041
15	1486704	Armature Spring	KP4235013	40	1486952	Shunt	KP4335039
16	1486933	Adjusting Bar	KP4335015	41	1419554	Operating Coil 550V	KP4335042
17	1619511	Adjusting Bar Screw	KP4335016	41	1419552	Operating Coil 115V	KP4335040
20	1486803	Contact	KP4835003	41	1419553	Operating Coil 230V	KP4335043
21	401234	Bolt	KP4335006	41	30B4375G24	Operating Coil 125V	KP4335044
22	1486749	Blowout Coil Core	KP4335020	41	1754376	Operating Coil 250V	KP4335041
23	441891	Blowout Coil Core Bolt	KP4335021	*	1745058	Contact Kit	KP4335050
24	1486757	Insulating Tube	KP4335022				

Replacement Parts for: Type MD Frame 601 DC Magnetic Contactor

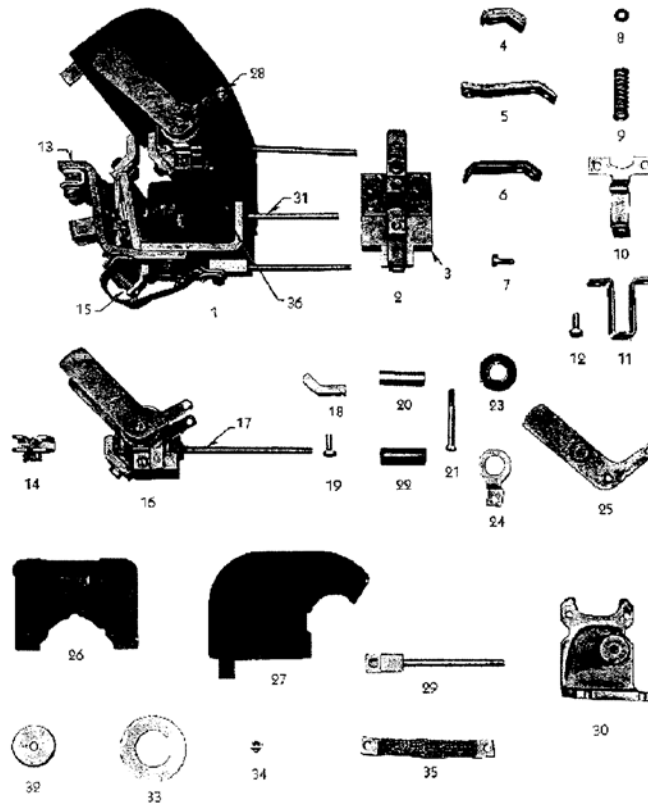

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	1486928	Armature Complete	KP4435002	25	1490236	Insulating Washer	KP4435026
3	1486917	Bare Armature	KP4435003	25	1486762	Insulating Washer	KP4935022
4	1486804	Contact	KP4435004	26	1486754	Spring Washer	KP4435028
5	1486914	Connector	KP4435005	27	1486746	Pole Piece Left Hand	KP4435029
6	1486911	Contact Support	KP4435006	*	1486747	Pole Piece Right Hand	KP4435053
7	289960	Contact Bolt	KP4435007	29	1486654	Arc Box Complete	KP4435031
8	816395	Moving Contact Spring Washer	KP4435009	31	1486853	Copper Sleeve	KP4435033
8	1490291	Moving Contact Spring Shim	KP4435008	33	1486903	Frame w/Core	KP4435035
9	1486862	Moving Contact Spring	KP4435010	34	1496906	Upper Frame	KP4435036
10	1486918	Aux Bearing Bracket	KP4435011	35	1486905	Lower Frame	KP4435038
11	1486912	Moving Contact Spring Support	KP4435012	37	1625814	Pole Face	KP4435039
12	164954	Spring Support Bolt	KP4435013	38	1625816	Coil Washer	KP4435040
14	1486696	Arc Switch	KP4435015	39	1437659	Coil Terminal	KP4135041
15	1486705	Armature Spring	KP4435016	41	1419564	Coil, 115VDC	KP4435045
16	1486920	Adjusting Bar	KP4435017	41	1419565	Coil	KP4435049
17	1619512	Adj. Bar Screw	KP4435018	41	1419566	Coil	KP4435047
20	1486804	Contact	KP4435004	41	30B4377G13	Coil	KP4435048
21	289960	Contact Bolt	KP4435007	41	1754336	Coil	KP4535041
22	968986	Blowout Coil Core Bolt	KP4435024	*	1745060	Contact Kit	KP4435052
24	1486758	Insulating Tube	KP4435025				

Replacement Parts for: Type MD Frame 701 DC Magnetic Contactor

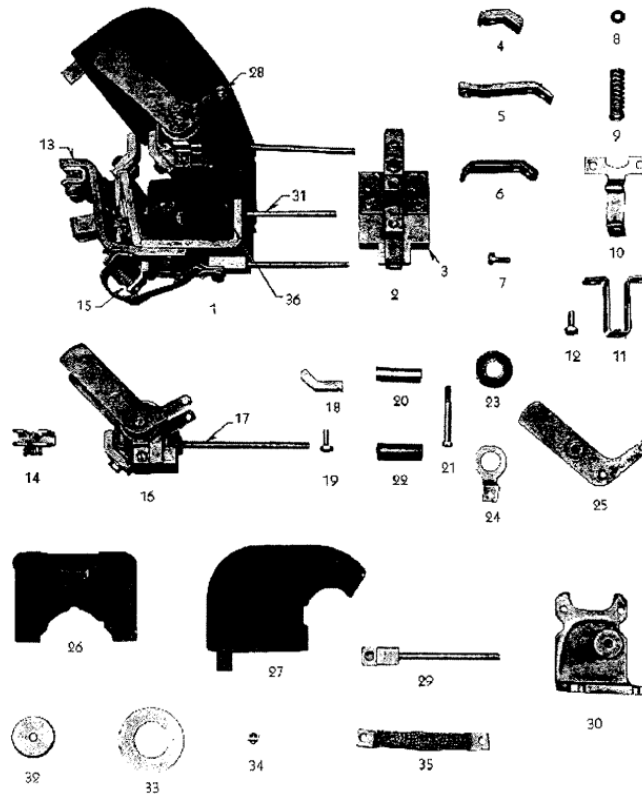

REF	OEM PN	DESCRIPTION	KOR-PAK PN	REF	OEM PN	DESCRIPTION	KOR-PAK PN
2	1486928	Armature Complete	KP4435002	25	1490236	Insulating Washer	KP4435026
3	1486917	Bare Armature	KP4435003	25	1486762	Insulating Washer	KP4935022
4	1486804	Contact	KP4435004	26	1486754	Spring Washer	KP4435028
5	1486914	Connector	KP4435005	27	1486746	Pole Piece Left Hand	KP4435029
6	1486911	Contact Support	KP4435006	*	1486747	Pole Piece Right Hand	KP4435053
7	289960	Contact Bolt	KP4435007	29	1486654	Arc Box Complete	KP4435031
8	816395	Moving Contact Spring Washer	KP4435009	31	1486853	Copper Sleeve	KP4435033
8	1490291	Moving Contact Spring Shim	KP4435008	33	1486903	Frame w/Core	KP4435035
9	1486862	Moving Contact Spring	KP4435010	35	1486905	Lower Frame	KP4435038
10	1486918	Aux Bearing Bracket	KP4435011	37	1625814	Pole Face	KP4435039
11	1486912	Moving Contact Spring Support	KP4435012	38	1625816	Coil Washer	KP4435040
12	164954	Spring Support Bolt	KP4435013	39	1437659	Coil Terminal	KP4135041
14	1486696	Arc Switch	KP4435015	40	1486926	Shunt	KP4435042
15	1486705	Armature Spring	KP4435016	41	1419564	Coil, 115VDC	KP4435045
16	1486920	Adjusting Bar	KP4435017	41	1419565	Coil	KP4435049
17	1619512	Adj Bar Screw	KP4435018	41	1419566	Coil	KP4435047
20	1486804	Contact	KP4435004	41	30B4377G13	Coil	KP4435048
21	289960	Contact Bolt	KP4435007	41	1754336	Coil	KP4535041
22	1486750	Blowout Coil Core	KP4435023	*	1745060	Contact Kit	KP4435052
23	968986	Blowout Coil Core Bolt	KP4435024				
24	1486758	Insulating Tube	KP4435025				